







MANUAL MOTOR STARTERS MAGNETIC CONTACTORS

















Advanced Motor Protection and Control — Fuji DUO series

Fuji's new motor control system for the international market.

The DUO series adds a new family of compact, high-performance combination starters to manual motor starters BM3 series, magnetic contactors SC-M and SC-E series and thermal overload relays TK-E series to form a complete line-up of motor control products.

Responding to today's market needs, Fuji DUO series was designed to provide various distinctive features.

ULTIMATE COST SAVING SOLUTION

- The number of components like Circuit Breakers can be reduced. (See page 4 to 7 for detail.)
- Combination starters combined with manual motor starters and contactors, provides 52% reduction for monting space and 90% reduction for wiring work to make a control panel.

RESPONSE TO THE INTERNATIONAL MARKET

- Short-circuit protective coordination between protective devices and the equipment to be protected.
- Conformance to UL including Type E, Type F, CSA, IEC and other international standards.

SAFETY AND ECOLOGICAL CONSIDERATION

- Application of international standards in safety features such as terminals with finger protection.
- Use of recycled materials to help conserve the environment and save resources.

FUJI meets emerging needs with a new form of motor protection. **DUO SERIES**

Manual motor starters (MMS)

BM3 series





Manual Motor Starters that provide optimal protection by integrating the functions of a molded case circuit breaker and thermal overload relay into a highly compact unit.

Rated current: 0.16 to 32A, 10 to 63A Short circuit current rating : 22, 50kA 480VAC Width: 45mm, 55mm

Contactors and thermal overload relays

SC-M series



SC-E series

TK-E series





Compact magnetic contactors and small capacity motor control for 3 to 5HP, 480VAC.

Rated capacity: AC-3 3 to 5HP, 480VAC Width: 45mm

Magnetic contactors and thermal overload relays featuring terminals with finger protection for 5 to 100HP.

Rated capacity: AC-3 5 to 100HP Width: 43,54,67mm (5 to 50HP) 88,100,115mm (60 to 100HP)

Combination starters

Provide the ability to configure combination starters for compact, reliable motor protection by combining a manual motor starter and a magnetic contactor.





Manual motor starters BM3 series

Conforming to international standards and combining compactness with high breaking performance, this versatile series features leading-edge motor protection.

Molded case circuit breaker and thermal overload relay functions integrated into a highly compact unit.

Circuit breaker functions

- · Short-circuit protection
- Overcurrent protection
- · Line protection





Thermal overload relay functions

- · Overload protection
- · Phase-loss protection
- Rated current adjustment
- Ambient temperature compensation



Manual motor starter advantages



Compactness

Mounting space: MCCB + Ther

MCCB + Thermal overload relay: 100%

MMS: 43% (57% reduction)

Reduction in wiring work MCCB + Contactor + Thermal overload relay: 100%

MMS + Contactor: 50% (50% reduction)

• IEC 60947-1, 60947-2, 60947-4-1, UL 508, CSA C22.2 No.14

Approved • cUL (File No. E163944, E211710), TÜV (R205062B)


Ecological design • Recyclable thermoplastic resin used in plastic parts


- Indication of materials used
- Cadmium-free contacts

Magnetic contactors SC-M and SC-E series

A full line-up consisting of the mini-contactor SC-M series for 3 to 5HP, 480VAC use and the SC-E series for 5 to 100HP 480VAC use.

· Finger protection standard · Lug terminal

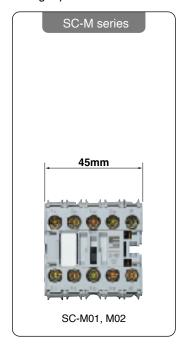


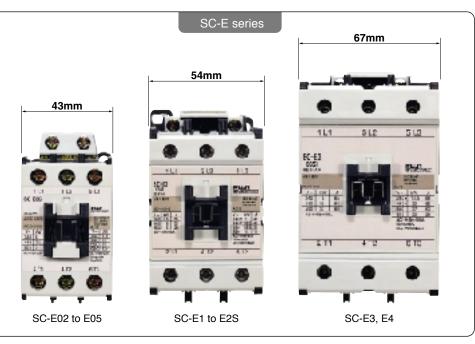


Combination of manual motor starters and magnetic contactors

A line-up that aims to set a new world standard for compactness, high performance, and utility in combination starters.

Space-saving, reliable motor protection achieved by combining a manual motor starter and magnetic contactor.

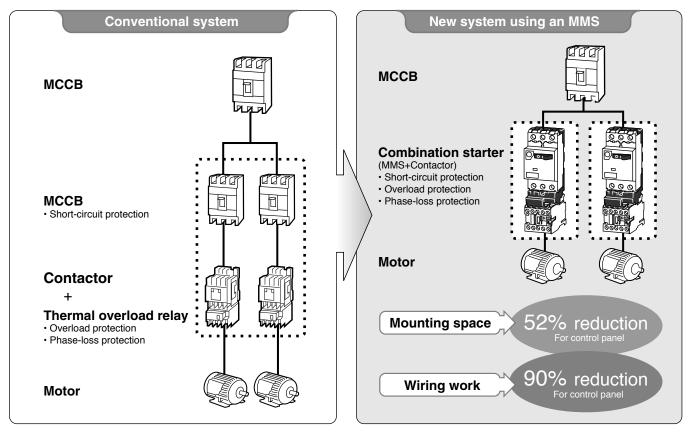

Combination starters can be easily configured with a manual motor starter, magnetic contactor and other parts.

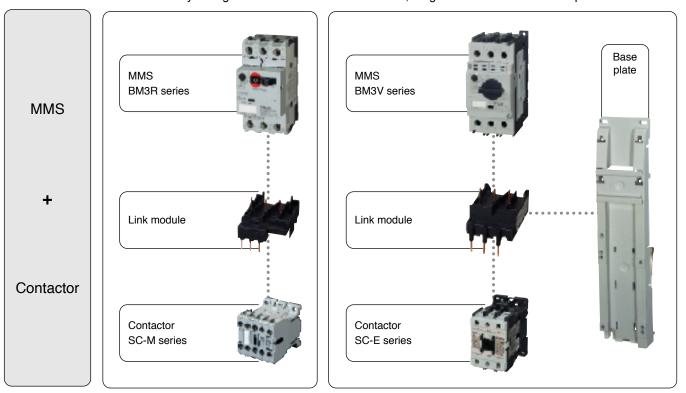

Fuji proposes ultimate cost saving solution with DUO series

Fuji Manual Motor Starter (MMS) intends to apply for manual motor starting application.

As UL listed manual motor controller per UL508, they provide overload protection but are required to be installed with short circuit protection devices (Fuses or Circuit Breakers) on the upstream.

However, according to National Electrical Code (NEC), you can save the cost of short circuit protection devices and can make a smaller panel using DUO series.

The following are case studies for the cost saving use of Fuji DUO series.

Case study 1 : Group Motor Installation


Per NEC430-52 and -53, the combination with a specific rated Fuse or Circuit Breaker allows several motors in a circuit composition.

Fuji MMS are cUL listed per group installation regulations of NEC.

Two or more motors can be connected to one branch circuit when the MMS is used with a specific current rated branch circuit protection device (see remarks below).

The advantages of Group Installation are as follows.

- The number of components like Circuit Breakers can be reduced
- The wire size can be reduced by 1/3 1/10 under certain conditions
- The area inside the control panel can be minimized

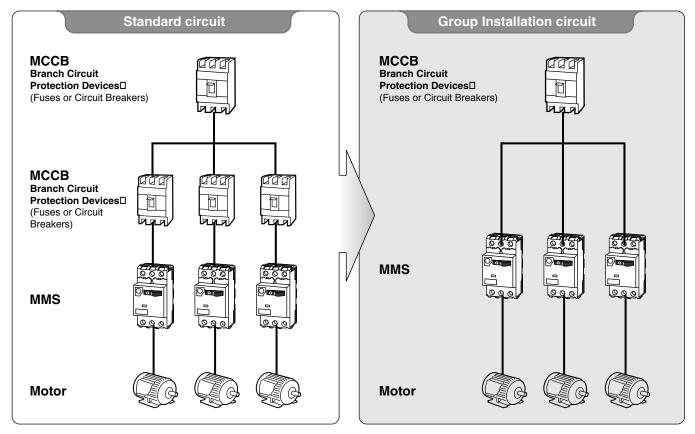

Remarks:

Per NEC regulations, to connect several motors on one branch circuit protection device, note the following conditions (A) or (B) or (C) and condition (D) listed NEC article 430.53 must be complied.

- (A): Not over 1 horsepower
- (B): If smallest rated motor protected
- (C): Other group installation
- (D): Single motor taps.

For complete details, please refer to NEC book.

Case study 2: Self-Protected Combination Motor Controller / TYPE E and TYPE F

Fuji MMS are cUL listed as a Self-Protected Combination Controller such as Type E and Type F.

To apply MMS as Self-Protected Combination Controller, MMS must be attached to short circuit alarm contact block (**BZ0TKUAB**).

32A frame type, BM3R series must also be attached to the line side terminal cover (**BZ0TCRE**) because the Self-Protected Combination Controller has the clearance and creepage distance requirements as UL489 regulation.

(63A frame type, BM3V series complies with their regulation without terminal cover.)

- (1) Combination motor controller, **Type E**, when only MMS is used. (Manual Self-Protected Combination Motor Controller according to UL508)
- (2) Combination motor controller, **Type F**, when MMS is used with Fuji SC-E, SC-M contactor. (Manual Self-Protected Combination Motor Controller + Magnetic contactor according to UL508)

The advantage of a Self-Protected Combination Motor Controller is that it can replace a **UL489 Circuit Breaker**.


This means that in a motor branch circuit, the UL489 Circuit Breaker upstream can be eliminated.

MMS has a trip function like a Circuit Breaker for the purpose of protection against short-circuit.

Therefore, the number of components can be reduced and will result in saving more space than the ordinary Group Installation.

* The self-protected combination motor controller can be used as branch circuit protection in *Motor Circuit only*. They cannot be applied to any other loads such as resistance load.


Example of Type E application

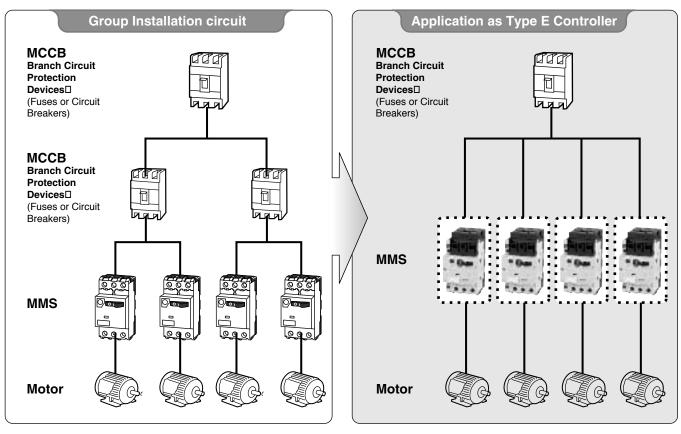

Requirements for Type E construction

- Terminal cover (BZ0TCRE) except for BM3V series.□
- Short-circuit alarm contact block (BZ0TKUAB) for all MMS.

Example of Type F application

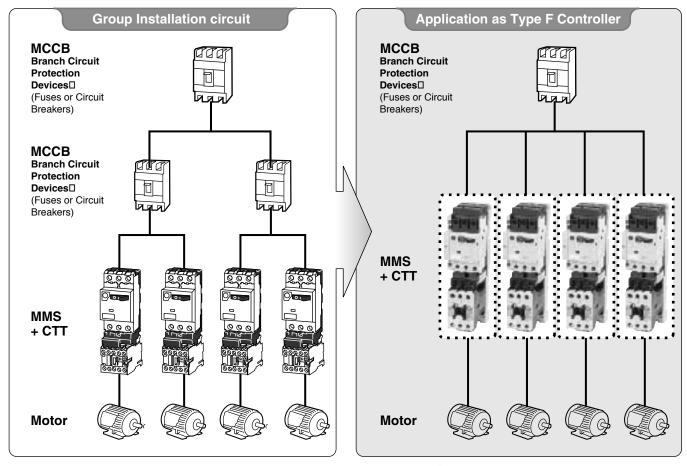



Requirements for Type F construction $\!\Box$

- Must be used with contactor for motor control fuction. $\hspace{-0.5cm}\Box$
- Terminal cover (BZ0TCRE) except for BM3V series.□
- Short-circuit alarm contact block (BZ0TKUAB) for all MMS.


Case study 3: Motor Disconnecting Means

Per NEC 430.102, a disconnecting means must be applied to each controller.

Fuji MMS are also cUL listed as "Suitable as Motor disconnect" and can be applied as a Motor disconnect.

The advantage of using MMS for disconnect means :

- An extra component will not be needed because the MMS has a dual function, which will lead to smaller space requirement and less components.

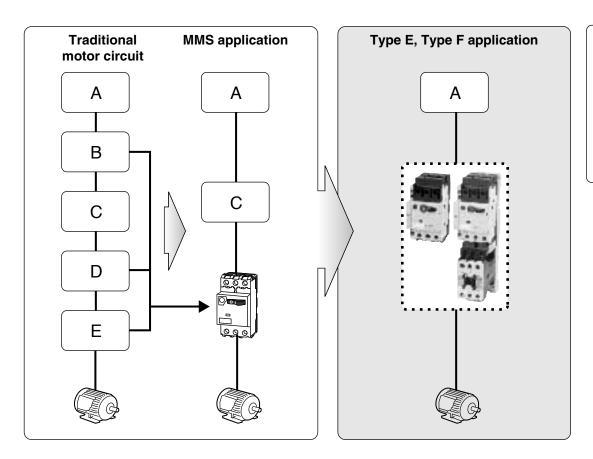

- A: Motor Feeder shortcircuit and groundfault protection□
- B: Motor disconnecting means□
- C: Motor branch-circuit short-circuit and ground-fault protection□
- D: Motor controller□
- E: Motor overload protection



CONTENTS

Manual Motor Starters	Page
Quick reference guide	9
Type E ratings	
Ordering information and Characteristics	
Optional accessories	
Dimensions	21
Instructions	
Busbar systems	26
Enclosures	29
Contactors SC-M and SC-E series	
General information	
Quick reference guide	
Ordering information and Characteristics	
Optional accessories	
Dimensions	
Instructions	48
Thermal overload relays TK-E series	
Quick reference guide and Ordering information	49
Characteristics	
Optional accessories	
Dimensions	
Instructions	54
Combination Starters	
Quick reference guide	55
Optional accessories	58
Dimensions	60
List price	
For BM3 Series Manual Motor Starters	72
For BM3 Series Manual Motor Starters accessories	73
For SC-M and SC-E series Contactors and	
TK-E series Overload Relay and accessories	75
For Combination Starters accessories	77
Appendix	
Appendix 1 : Construction of combination motor controllers	78
Appendix 2 : Short circuit coordination comparison	
Terms and conditions of sale	81

Quick reference guide

■ 32A Frame types and ratings

Adjustable the	ermal-magnetic trip type	Standa BM3RS		king cap	pacity			KK01-317			
Number of pol	les	3									
Handle type		Rocker									
Rated current	le (A)	0.16 to	32								
	onal voltage Ue (V)	200 to 6	00 to 690								
Rated frequen		50/60									
Rated insulation		690									
	withstand voltage Uimp (kV)	6									
Utilization category	IEC 60947-2 Circuit breaker IEC 60947-4-1 Motor starter	Cat. A AC-3									
Trip class IEC		10									
	s trip characteristic	13 × le	max.								
Power loss (to	•			25A 8	5W: In=3	32A					
,	urability (operations)					0: In=32A					
	ability (operations)					0: In=32A					
	ns per hour (motor start-up)	25	J. III—0. I	10 10 207	. 70,00	0.111-027					
Phase-loss pro	Provided										
Trip indicator	Provided										
Test trip function		Provided									
Adjustable cur			HP rating	(HP) *2	Instantaneous trip current (A)		Short circu		Maximum listed branch circuit protection *3		
Code *1			220- 240VAC	440- 480VAC	550- 600VAC	. , ,	240VAC	480VAC	600VAC	Fuse or MCCB (A)	
P16	0.1–0.16				1	2.1	100	50	10	500	
P25	0.16–0.25	ر ما	aggerda	nce with		3.3	100	50	10	500	
P40	0.25-0.4			oad curr	ont	5.2	100	50	10	500	
P63	0.4–0.63	IVIO	itor ruir i	oau cum	5111	8.2	100	50	10	500	
001	0.63–1				1/2	13	100	50	10	500	
1P6	1–1.6			3/4	3/4	20.8	100	50	10	500	
2P5	1.6–2.5	1/2	1/2	1	1-1/2	32.5	100	50	10	500	
004	2.5–4	3/4	3/4	2	3	52	100	50	10	500	
6P3	4–6.3	1	1-1/2	3	5	81.9	100	50	10	500	
010	6.3–10	2	3	5	7-1/2	130	100	22	10	500	
013	9–13	3	3	7-1/2	10	169	100	22	10	500	
016	11–16	3	5	10	10	208	100	22	10	500	
020	14–20	5	5	10	15	260	50	22	10	500	
025	19–25	7-1/2	7-1/2	15	20	325	50	22	10	500	
032	24–32	10	10	20	30	416	50	22	10	500	
Dimensions (n	nm) W X H X D	45 X 90	X 66								
Mass (g)	T	350									
Optional	Auxiliary contact block Alarm contact block	0									
accessory	Auxiliary and alarm contact block	1									
	Short-circuit alarm contact block	1 -									
	Shunt trip device										
	Undervoltage trip device External operating handle	0									

Notes: *1 Replace the ☐ mark in the part number by current range codes.

*2 The BM3RSB is cUL listed as HP rated motor controllers.

*3 The BM3RSB is cUL listed for group Installation as per NEC430-53(C).

O Available

■ 32A Frame types and ratings

Adjustable th	ermal-magnetic trip type	High b	_	capacit	у		A STATE OF THE STA	AF01-42					
Number of po	oles	3											
Handle type		Rotary											
Rated curren	t le (A)	0.16 to	32										
	ional voltage Ue (V)	200 to (
Rated freque		50/60											
	ion voltage Ui (V)	690											
	e withstand voltage Uimp (kV)	6											
Utilization category	IEC 60947-2 Circuit breaker IEC 60947-4-1 Motor starter	Cat. A AC-3											
Trip class IE		10											
	s trip characteristic	13 × le	mav										
	otal of 3-pole)			25A P	5W: In=	324							
	lurability (operations)					00: In=32A							
	ability (operations)					0: In=32A							
			J. III=U.	10 10 237	70,00	0. III=32A							
	Max. operations per hour (motor start-up) Phase-loss protection			Provided									
Trip indicator	Provide												
	Provide												
Test trip funct				UD roting	/LID\ *2	Instantaneous	III /CCA	Short circu	.;+	Maximum listed branch			
Adjustable cu	irrent range	UL/CSA 3phase HP rating (HP) *2								circuit protection *3			
Code *1	le: MinMax. (A)		220- 240VAC	440- 480VAC	550- 600VAC	trip current (A)	240VAC	480VAC	600VAC	Fuse or MCCB (A)			
P16	0.1–0.16			1.00	10001110	2.1	100	50	10	500			
P25	0.16–0.25					3.3	100	50	10	500			
P40	0.25–0.4			nce with		5.2	100	50	10	500			
P63	0.4–0.63	Mo	tor full l	oad curr	ent	8.2	100	50	10	500			
001	0.63–1	-			1/2	13	100	50	10	500			
1P6	1–1.6			3/4	3/4	20.8	100	50	10	500			
2P5	1.6–2.5	1/2	1/2	1	1-1/2	32.5	100	50	10	500			
004	2.5–4	3/4	3/4	2	3	52.5	100	50	10	500			
6P3	4–6.3	1	1-1/2	3	5	81.9	100	50	10	500			
010	6.3–10	2	3	5	7-1/2	130	100	50	10	500			
013	9–13	3	3	7-1/2	10	169	100	50	10	500			
016	11–16	3	5	10	10	208	100	50	10	500			
020	14–20	5	5	10	15	260	100	50	10	500			
025	19–25	7-1/2	7-1/2	15	20	325	100	50	10	500			
032	24–32	10	10	20	30	416	100	50	10	500			
Dimensions (45 X 90		1	1	1				1 - 3 0			
Mass (g)	,	370											
Optional	Auxiliary contact block	0											
accessory	Alarm contact block	Ŏ											
	Auxiliary and alarm contact block												
	Short-circuit alarm contact block												
	Shunt trip device	Ŏ											
	Undervoltage trip device												
	- ·	lŏ											
Standard		IEC 609	947-1. 6	60947-2	60947-	4-1. UL 508 (CSA C22	2 No.14					
Standard	External operating handle	IEC 609	947-1, (60947-2,	60947-	4-1, UL 508, (CSA C22.	2 No.14					

Notes: *1 Replace the ☐ mark in the part number by current range codes.

*2 The BM3RHB is cUL listed as HP rated motor controllers.

*3 The BM3RHB is cUL listed for group Installation as per NEC430-53(C).

O Available

Quick reference guide

■ 63A Frame types and ratings

Adjustable the	rmal magnetic trip type	Standa BM3VS		king cap	acity	shulk				
Adjustable the	rmal-magnetic trip type	DIVISVS	96-□				•	AF01-47		
Number of pol	es	3								
Handle type		Rotary								
Rated current	le (A)	10 to 60	3							
Rated operation	onal voltage Ue (V)	200 to 6	590							
Rated frequen	cy (Hz)	50/60								
Rated insulation	on voltage Ui (V)	1000								
Rated impulse	withstand voltage Uimp (kV)	8								
Utilization	IEC 60947-2 Circuit breaker	Cat. A								
category	IEC 60947-4-1 Motor starter	AC-3								
Trip class IEC	60947-4-1	10								
Instantaneous	trip characteristic	13 x le	max.							
Power loss (to	tal of 3-pole)	11W: Ir	=10 to 3	32A 15	W: In=40	to 50A 17W	: In=63A			
Mechanical du	50,000									
Electrical dura	25,000									
Max. operation	ns per hour (motor start-up)	25								
Phase-loss pro	otection	Provide	d							
Trip indicator		Provide	d							
Test trip function	on	Provide	d							
Adjustable cur	rent range	UL/CSA 3phase HP rating (HP) *2				Instantaneous trip current (A)		Short circuating (kA)		Maximum listed branch circuit protection *3
Code *1			220- 240VAC	440- 480VAC	550- 600VAC		240VAC	480VAC	600VAC	Fuse or MCCB (A)
010	6.3–10	2	3	5	7-1/2	130	100	22	10	600
013	9–13	3	3	7-1/2	10	169	100	22	10	600
016	11–16	3	5	10	10	208	100	22	10	600
020	14–20	5	5	10	15	260	100	22	10	600
025	19-25	7-1/2	7-1/2	15	20	325	100	22	10	600
032	24-32	10	10	20	30	416	100	22	10	600
040	28-40	10	10	30	30	520	100	22	10	600
050	35-50	15	15	30	40	650	100	22	10	600
063	45-63	20	20	40	60	819	100	22	10	600
Dimensions (n	nm) W X H X D	55 X 11	0 x 96							
Mass (g)		780								
Optional	Auxiliary contact block	0								
accessory	Alarm contact block	0								
	Auxiliary and alarm contact block	0								
	Short-circuit alarm contact block	0								
	Shunt trip device	Ö								
	Undervoltage trip device	Ö								
	External operating handle	lŏ								
Standard		IFC 609	947-1 6	0947-2	60947-	4-1, UL 508, (CSA C22	2 No 14		

O Available

Notes: *1 Replace the \square mark in the part number by current range codes.
*2 The BM3VSB is cUL listed as HP rated motor controllers.
*3 The BM3VSB is cUL listed for group Installation as per NEC430-53(C).

■ 63A Frame types and ratings

Adjustable th	nermal-magnetic trip type	High bi	_	capacit	у			AF01-43		
Number of po	oles	3								
Handle type		Rotary								
Rated curren	it le (A)	10 to 63	3							
Rated operat	tional voltage Ue (V)	200 to 6	590							
Rated freque	ency (Hz)	50/60								
Rated insula	tion voltage Ui (V)	1000								
Rated impuls	se withstand voltage Uimp (kV)	8								
Utilization	IEC 60947-2 Circuit breaker	Cat. A								
category	IEC 60947-4-1 Motor starter	AC-3								
Trip class IE	C 60947-4-1	10								
Instantaneou	s trip characteristic	13 x le	max.							
Power loss (1	total of 3-pole)	11W: In	=10 to 3	32A 15	W: In=40	to 50A 17W	: In=63A			
Mechanical o	durability (operations)	50,000								
Electrical dur	rability (operations)	25,000								
Max. operation	ons per hour (motor start-up)	25								
Phase-loss p	protection	Provide	ed							
Trip indicator	•	Provide	ed							
Test trip func	tion	Provide	ed							
Adjustable cu	urrent range	UL/CSA 3phase HP rating (HP) *2				Instantaneous trip current (A)	UL/CSA Short circuit current rating (kA) *3			Maximum listed branch circuit protection *3
Code *1	le: MinMax. (A)	200- 208VAC	220- 240VAC	440- 480VAC	550- 600VAC		240VAC	480VAC	600VAC	Fuse or MCCB (A)
010	6.3–10	2	3	5	7-1/2	130	100	50	10	600
013	9–13	3	3	7-1/2	10	169	100	50	10	600
016	11–16	3	5	10	10	208	100	50	10	600
020	14–20	5	5	10	15	260	100	50	10	600
025	19-25	7-1/2	7-1/2	15	20	325	100	50	10	600
032	24-32	10	10	20	30	416	100	50	10	600
040	28-40	10	10	30	30	520	100	50	10	600
050	35-50	15	15	30	40	650	100	50	10	600
063	45-63	20	20	40	60	819	100	50	10	600
Dimensions	(mm) W X H X D	55 X 11	0 x 96							
Mass (g)		780								
Optional	Auxiliary contact block	\circ								
accessory	Alarm contact block	0								
	Auxiliary and alarm contact block	\circ								
	Short-circuit alarm contact block	\circ								
	Shunt trip device	\circ								
	Undervoltage trip device	\circ								
	External operating handle	\bigcirc								
Standard		IEC 609	247-1 6	ng47-2	60947-	4-1, UL 508, C	2SA C22	2 No 14		

Notes: *1 Replace the \square mark in the part number by current range codes.
*2 The BM3VHB is cUL listed as HP rated motor controllers.
*3 The BM3VHB is cUL listed for group Installation as per NEC430-53(C).

Type E ratings

• BM3RSB (Type E ratings)

Manual mo	otor starters	3 phase	e motor	Short circu	it rating(kA)
Code	le; Min-Max.□	Rated capacity (HP)	Rated capacity (HP)	up to 240V AC	up to 480/277V AC
	(A)	220-240V AC	440-480V AC		
P16	0.1-0.16			100	50
P25	0.16-0.25			100	50
P40	0.25-0.4	In accordance with M	lotor full load current	100	50
P63	0.4-0.63			100	50
001	0.63-1.0			100	50
1P6	1-1.6		3/4	100	50
2P5	1.6-2.5	1/2	1	100	50
004	2.5-4	3/4	2	100	50
6P3	4-6.3	1-1/2	3	100	50
010	6.3-10	3	5	100	22
013	9-13	3	7-1/2	100	22
016	11-16	5	10	100	22
020	14-20	5	10	100	22
025	19-25	7-1/2	15	50	22
032	24-32a	10	20	50	22

To make an application for use with Type E controller, you need to prepare BZ0TCRE and BZ0TKUAB accessories for BM3RSB separately.

• BM3RHB (Type E ratings)

Manual mo	otor starters	3 phase	e motor	Short circu	it rating(kA)
Code	le; Min-Max.□ (A)	Rated capacity (HP) 220-240V AC	Rated capacity (HP) 440-480V AC	up to 240V AC	up to 480/277V AC
P16	0.1-0.16			100	50
P25	0.16-0.25			100	50
P40	0.25-0.4	In accordance with M	Notor full load current	100	50
P63	0.4-0.63	in accordance with it	iotor ian ioaa carroni	100	50
001	0.63-1.0			100	50
1P6	1-1.6		3/4	100	50
2P5	1.6-2.5	1/2	1	100	50
004	2.5-4	3/4	2	100	50
6P3	4-6.3	1-1/2	3	100	50
010	6.3-10	3	5	100	50
013	9-13	3	7-1/2	100	50
016	11-16	5	10	100	50
020	14-20	5	10	100	50
025	19-25	7-1/2	15	100	50
032	24-32	10	20	100	50

To make an application for use with Type E controller, you need to prepare BZ0TCRE and BZ0TKUAB accessories for BM3RHB separately.

• BM3VSB (Type E ratings)

Manual m	otor starters	3 phase	motor	Short circu	it rating(kA)
Code	le; Min-Max.□ (A)	Rated capacity (HP) 220-240V AC	Rated capacity (HP) 440-480V AC	up to 240V AC	up to 480/277V AC
010	6.3-10	3	5	100	22
013	9-13	3	7-1/2	100	22
016	11-16	5	10	100	22
020	14-20	5	10	100	22
025	19-25	7-1/2	15	100	22
032	24-32	10	20	100	22
040	28-40	10	30	100	22
050	35-50	15	30	100	22
063	45-63	20	40	100	22

To make an application for use with Type E controller, you need to prepare BZ0TKUAB accessories for BM3VSB separately.

• BM3VHB (Type E ratings)


Manual mo	tor starters	3 phase	e motor	Short circu	it rating(kA)
Code	le; Min-Max.□ (A)	Rated capacity (HP) 220-240V AC	Rated capacity (HP) 440-480V AC	up to 240V AC	up to 480/277V AC
010	6.3-10	3	5	100	50
013	9-13	3	7-1/2	100	50
016	11-16	5	10	100	50
020	14-20	5	10	100	50
025	19-25	7-1/2	15	100	50
032	24-32	10	20	100	50
040	28-40	10	30	100	50
050	35-50	15	30	100	50
063	45-63	20	40	100	50

To make an application for use with Type E controller, you need to prepare BZ0TKUAB accessories for BM3VHB separately.

Ordering information


Specify the following:

- 1. Part number
- 2. Accessories if required

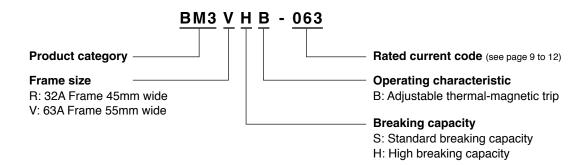


■ Characteristic curves

• BM3RSB, RHB

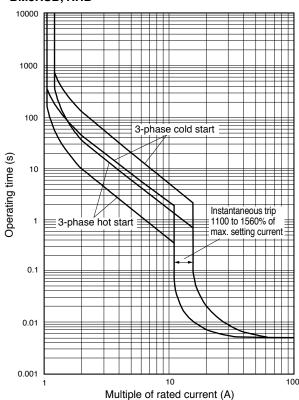


• BM3VSB, VHB

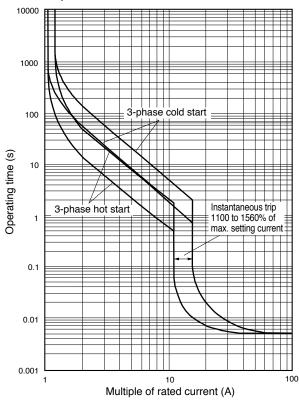

Optional accessories

Features

- All accessories can be used with BM3R (45mm wide) and BM3V (55mm wide) frames.
- · Accessories are easily mounted.
- Internal auxiliary contact blocks and alarm contact blocks can be mounted on front side.
- External auxiliary contact blocks can be mounted on either the right or left side.
- Shunt trip and undervoltage trip devices are available in a wide range of operating voltages.
- Standard and emergency external handles are available.
- IP20 terminal cover prevents accidental contact to electrically charged parts.

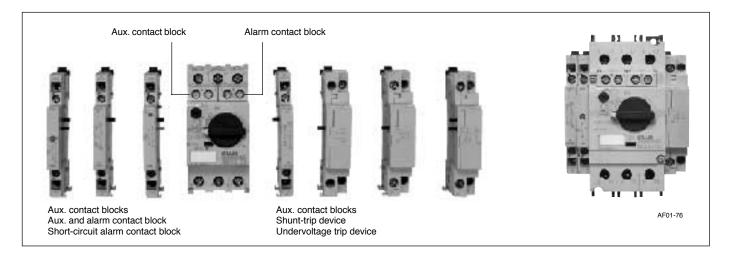

■ Part number and ratings

• Auxiliary contact blocks (W)

Description		Starter	Mounting	Contact	Part number	Mass
		type		arrangement		(g)
00	These blocks are linked to the ON/OFF operation of the MMS. Up to two contact blocks can be mounted to the right/left front, and up to two contact blocks can be mounted to the right/left gides.	BM3R BM3V	Front	1NO 1NC	BZ0WIA BZ0WIB	9
AF01-60L	AF01-60L be mounted to the right/left sides.		Left side	2NO 1NO+1NC 2NC	BZ0WUAAL BZ0WUABL BZ0WUBBL	45
AF01-59, 01-58			Right side	2NO 1NO+1NC 2NC	BZ0WUAAR BZ0WUABR BZ0WUBBR	45

• Alarm contact blocks (K)

Description		Starter	Mounting	Contact	Part number	Mass
		type		arrangement		(g)
00	This block operates when the MMS trips due to overload, phase-loss, or short-circuit. It is not linked to the ON/OFF operation of the MMS. Note: Operation can be checked with the test trip function.	BM3R BM3V	Front (Right side only)	1NO 1NC	BZ0KIA BZ0KIB	9
AF01-60R	Note: Operation can be checked with the test trip function.					

• Auxiliary and alarm contact blocks (WK)

Description		Starter type	Mounting	Contact arrangement	Part number	Mass (g)
	This contact block combines auxiliary contact and alarm contact that operate in the event of an overload, phase loss, or short-circuit. Alarm contact is not linked to the ON/OFF operation of the MMS. An alarm is displayed in the contact block's indicator when	BM3R BM3V	Left	1NO (Aux.)+ 1NO (Alarm) 1NC (Aux.)+ 1NO (Alarm)	BZ0WKUAA BZ0WKUBA	45
	the alarm contact operates.			1NO (Aux.)+ 1NC (Alarm)	BZ0WKUAB	
AF01-57	Note: Operation can be checked with the test trip function.			1NC (Aux.)+ 1NC (Alarm)	BZ0WKUBB	

• Short-circuit alarm contact block (KI)

Description		Starter type	Mounting	Contact arrangement	Part number	Mass (g)
AF01-56	 The contacts operate only when the MMS has tripped due to a short-circuit. When these contacts operate, the blue reset button extends out, and a trip indication is displayed. The power to the MMS can be turned ON after pressing the reset button. Note: Operation can not be checked with the test trip function. Be sure to press the reset button before mounting to the MMS. 	BM3R BM3V	Left	1NO+1NC	BZ0TKUAB	45

• Shunt trip devices (F)

Description	Starter type	Mounting	Coil voltage	Part number	Mass (g)
This device is used to remotely trip Notes: • This device cannot be used together v undervoltage trip device. • When the MMS has been tripped with trip device, press the reset button befor ON the power. AF01-55	the MMS. BM3R BM3V with an the shunt	Right	24VAC 50/60Hz 48VAC 60Hz 48VAC 50Hz/60VAC 60Hz 100VAC 50Hz/100–110VAC 60Hz 110–127VAC 50Hz/120VAC 60Hz 200VAC 50Hz/200–220VAC 60Hz 220–230VAC 50Hz/240–260VAC 60Hz 240VAC 50Hz/277VAC 60Hz 380–400VAC 50Hz/400–440VAC 60Hz 415–440VAC 50Hz/460–480VAC 60Hz 500VAC 50Hz/600VAC 60Hz 24–60V DC * 110-240V DC *	BZ0FGZU BZ0FHZU	115

Note: * The time rating of coil is 5s.

• Undervoltage trip devices (R)

Description	Starter type		ng Coil voltage	Part number	Mass (g)
R types This device automatically trips when the control circuit voltage the specified value. Notes: • This device cannot be used togeth trip device. • When the MMS has been tripped undervoltage trip device, press the before turning ON the power.	the MMS BM3R BM3V drops below her with a shunt with the	M3R Right	24VAC 50Hz 24VAC 60Hz 48VAC 50Hz 48VAC 60Hz 100VAC 50Hz/100–110VAC 6 110–127VAC 50Hz/120VAC 6 200VAC 50Hz/200–220VAC 6 220–230VAC 50Hz/240–260V 240VAC 50Hz/277VAC 60Hz 380–400VAC 50Hz/400–440V 415–440VAC 50Hz/460–480V 500VAC 50Hz/600VAC 60Hz	OHZ OHZ OHZ AC 60HZ BZOREZU BZORFZU BZORGZU AC 60HZ BZORHZU	115

Optional accessories

• External operating handles

Description		Starter type	Handle type	Part number	Mass (g)
KK02-305	 Used to operate an MMS installed inside a panel, from the outside of the panel. Equipped with an interlock mechanism that prevents someone from mistakenly opening the panel door when the MMS is in the ON state. The shaft can be cut to match the distance between the MMS and the panel door. 	BM3RH	Standard (black) Emergency (red/yellow)	BZ0VBBL BZ0VYRL	160
*	 Door interlock function OFF lock function Can be locked OFF with up to three padlocks. Note: Padlocks not included. 	BM3V	Standard (black)	BZ0VBBM	160
KK02-306	 Release screw allows the door to be opened with the handle in the ON position. IP54 enclosure 		Emergency (red/yellow)	BZ0VYRM	160

• Line side terminal cover

Description		Starter	Part number	Mass
		type		(g)
1	Used for making Type E or Type F condition	вмзя	BZ0TCRE	30

Others

Description		Starter type	Part number	Mass (g)
Push-in lug	Used for screw mounting. 10 pcs/pack	BM3R	BZ0SET	2.0
Terminal cover for IP20	Prevents accidental contact to charged parts. 6 pcs/pack	BM3V	BZ0TCV	0.6
Dummy cover	 Used to cover the open space if an internally mounted accessory should become unnecessary. Mounts to either the left-front or right-front position. 10 pcs/pack 	BM3R BM3V	BZ0CFG	1.4

Manual Motor Starters Optional accessories

■ Ratings of accessories


Accessory type	Auxiliary contact block/front	Auxiliary contact block/side	Alarm contact block	Aux. and alarm contact block	Short-circuit alarm contact block				
Part number	BZ0WI	BZ0WU	BZ0KI	BZ0WKU	BZ0TKUAB				
Standard	IEC 60947-5-1, UI	EC 60947-5-1, UL 508							
Rated operational current	48V.AC AC-15	5	6	5	6	6			
(A)	125V AC	3	4	3	4	4			
	230V AC	1.5	4	1.5	4	4			
	400V AC	_	2.2	_	2.2	2.2			
	500V AC	_	1.5	_	1.5	1.5			
	690V AC	_	0.6	_	0.6	0.6			
	48V.DC DC-13	1.38	5	1.38	5	5			
	110V.DC	0.55	1.3	0.55	1.3	1.3			
	220V.DC	0.27	0.5	0.27	0.5	0.5			
Contact rating code UL 508		B300	A600	B300	A600	A600			
		Q300	P300	Q300	P300	P300			
Min. voltage and current		17V 5mA							

Accessory type		Shunt trip device	Undervoltage device				
Part number		BZ0F	BZ0R				
Standard		IEC 60947-1, UL 508	IEC 60947-1, UL 508				
Rated insulation voltage	IEC 60947	690					
(V AC)	UL 508	600					
No. of ON-OFF operations		5000					
Operating time (ms)		20	20				
Power consumption	Inrush (VA/W)	21/12	21/12				
	Sealed (VA/W)	8/1.2					
Voltage range	Tripping voltage (V)	0.7 to 1.1Ue	0.35 to 0.7Ue				
	Closing voltage (V)	_	0.85 to 1.1Ue				
Time rating of coil (s)		AC: Continuous	AC: Continuous				
		DC:5					

Note: Ue: Rated Voltage


Optional accessories

Available accessory configuration

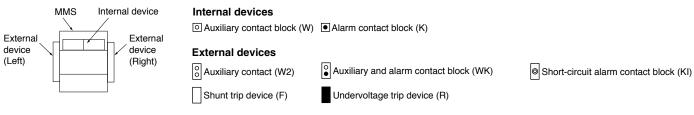

		_						 					
Adj. thermal-magnetic	trip type MMS	BM3RS	B, BM3I	RHB	1	1	1	BM3VS	B, BM3	/HB		1	
Internal accessory			w	w	К	W+W	W+K		w	w	К	W+W	Ø● W+K
External accessory	W2 (Left)	© □ 0 0 W2	© O W2W	o □o o W2W	© □ W2K	o oo o w2ww	o o● e W2WK	W2	© O O W2W	o □o o W2W	W2K	o oo o w2ww	o o o o o o
	W2 (Right)		W2W	W2W	W2K	©© © W2WW	© © O O O	W2	W2W	W2W	W2K	© O O O	W2WK
	WK (Left)	wk	wkw	wkw	WKK	o oo wkww	© O● WKWK	wk	wkw	wkw	wkk	o oo wkww	wkwk
	KI (Left)	КІ	KIW	KIW	KIK	KIWW	KIWK	€ □ KI	€ O KIW	© □ KIW	KIK	KIWW	® O•
	F (Right)	F	WF	WF	KF	WWF	Ø ● WKF	F	WF	WF	KF	WWF	₩KF
	R (Right)	R	WR	WR	KR	WWR	Ø● WKR	R	WR	WR	KR	wwr.	Ø● WKR
	W2 (Left)+F	W2F	W2WF	W2WF	W2KF	w2wwF	W2WKF	W2F	W2WF	W2WF	W2KF	w2wwF	W2WKF
	W2 (Left)+R	W2R	W2WR	W2WR	W2KR	W2WWR	W2WKR	W2R	W2WR	W2WR	W2KR	© © © W2WWR	w2wkr
	WK+F	WKF	WKWF	WKWF	WKKF	wkwwf	WKWKF	WKF	WKWF	WKWF	WKKF	wkwwf	WKWKF
	WK+R	WKR	WKWR	© □ □ WKWR	WKKR	o oo wkwwr	©	WKR	WKWR	WKWR	WKKR	o oo wkwwr	o o o
	KI+F	KIF	KIWF	KIWF	KIKF	® OO KIWWF	8 00 KIWKF	8 SIF	KIWF	€ □ KIWF	8 III	KIWWF	KIWKF
	KI+R	KIR	KIWR	KIWR	® □• KIKR	® OO KIWWR	® O● KIWKR	8 SIR	KIWR	® □ N	KIKR	8 OO KIWWR	KIWKR
	W2 (Left)+ W2 (Left)	000	00 0 0 W2W2W	00	W2W2K	wwwww	oo oo oo w2w2wK	00	00 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	W2W2W	W2W2K	00 00 00 W2W2WW	oo oo oo waxay
	W2 (Left)+ W2 (Right)	W2W2	wzwzw	w2w2w	W2W2K	w2w2ww	W2W2WK	W2W2	w2w2w	w2w2w	W2W2K	w2w2ww	W2W2WK

■ Available accessory configuration (continued)

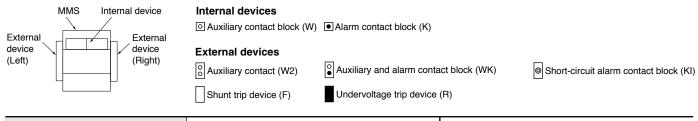



Adj. thermal-magnetic	trip type MMS	BM3RS	B, BM3F	RHB				BM3VS	SB, BM3\	/НВ			
Internal accessory			w	w	K	W+W	Ø• W+K		w	w	Г • К	W+W	Ø• W+K
External accessory	W2 (Right)+ W2 (Right)	W2W2	© 00 00 W2W2W	W2W2W	W2W2K	OO OO OO W2W2WW	© oo oo w2w2wK	00 00 W2W2	0 00 00 W2W2W	W2W2W	W2W2K	wzwzww	Ø 00 00 00 W2W2WK
	W2 (Left)+ WK	W2WK	w2wkw	W2WKW	W2WKK	W2WKWW	W2WKWK	oo o• W2WK	oo o o o o o o o o o o o o o o o o o o	www.w	W2WKK	oo oo oo waxaa wa	W2WKWK
	W2 (Right)+ WK	W2WK	W2WKW	W2WKW	W2WKK	© OO	© O O O O O O O O O O O O O O O O O O O	W2WK	w2wkw	W2WKW	W2WKK	w2wkww	W2WKWK
	W2 (Left)+ KI	W2KI	W2KIW	W2KIW	W2KIK	W2KIWW	W2KIWK	W2KI	W2KIW	W2KIW	W2KIK	W2KIWW	o o o w2kiwk
	W2 (Right)+ KI	W2KI	w2KIW	w2KIW	W2KIK	W2KIWW	© O O O O	W2KI	W2KIW	W2KIW	W2KIK	W2KIWW	W2KIWK
	KI+WK	KIWK	KIWKW	KIWKW	KIWKK	KIWKWW	KIWKWK	KIWK	KIWKW	KIWKW	KIWKK	KIWKWW	KIWKWK
	W2 (Left)+ W2 (Left)+F	00	W2W2WF	00 00 00 W2W2WF	W2W2KF	W2W2WWF	00 0● 00 W2W2WKF	W2W2F	W2W2WF	W2W2WF	W2W2KF	00 00 00 W2W2WWF	W2W2WKF
	W2 (Left)+ W2 (Left)+R	W2W2R	oo o o waxaa	w2w2wR	W2W2KR	W2W2WWR	oo oo oo waxaa wa	w2w2R	oo oo waxaa	w2w2wR	W2W2KR	W2W2WWR	oo oo oo w2w2wKR
	W2 (Left)+ WK+F	W2WKF	W2WKWF	W2WKWF	W2WKKF	W2WKWWF	W2WKWKF	W2WKF	W2WKWF	W2WKWF	W2WKKF	00 00 00 W2WKWWF	00 0● 00 W2WKWKF
	W2 (Left)+ WK+R	W2WKR	oo o o o	oo o• W2WKWR	W2WKKR	w2wkwwr	W2WKWKR	oo o• W2WKR	oo o o o	W2WKWR	w2wkkr	00 00 00 W2WKWWR	00 00 00 W2WKWKR
	W2 (Left)+ KI+F	W2KIF	W2KIWF	W2KIWF	W2KIKF	W2KIWWF	W2KIWKF	W2KIF	W2KIWF	W2KIWF	W2KIKF	W2KIWWF	W2KIWKF
	W2 (Left)+ KI+R	W2KIR	W2KIWR	W2KIWR	W2KIKR	W2KIWWR	o o o o o o o o o o o o o o o o o o o	W2KIR	W2KIWR	W2KIWR	W2KIKR	0 0 W2KIWWR	W2KIWKR
	KI+WK+F	KIWKF	KIWKWF	KIWKWF	KIWKKF	KIWKWWF	KIWKWKF	KIWKF	KIWKWF	KIWKWF	KIWKKF	KIWKWWF	KIWKWKF
	KI+WK+R	KIWKR	KIWKWR	KIWKWR	KIWKKR	KIWKWWR	KIWKWKR	KIWKR	KIWKWR	NIWKWR	KIWKKR	KIWKWWR	KIWKWKR

Dimensions


■ Dimensions, mm


Rocker handle types BM3RSB

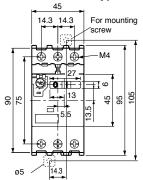

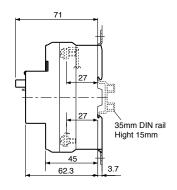



• Rotary handle types BM3RHB

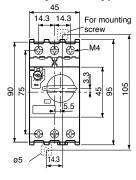

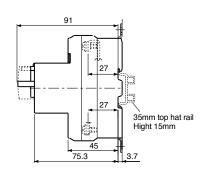


• Rotary handle types BM3VSB, BM3VHB

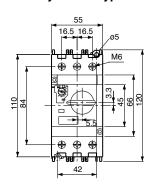


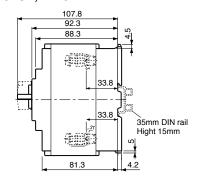


Accessories

Auxiliary contact blocks, front mounting BZ0WI

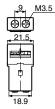


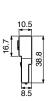


Auxiliary contact blocks, side mounting BZ0WU

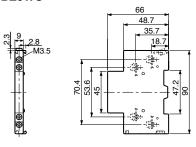


Alarm contact blocks, front mounting BZ0KI

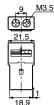

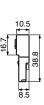


Auxiliary and alarm contact blocks BZ0WKU

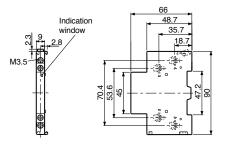


■ Dimensions, mm

Accessories


• Short-circuit alarm contact block **BZ0TKUAB**

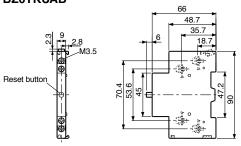


• BZ0TCRE

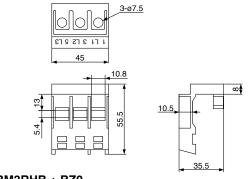


• BM3RHB + BZ0

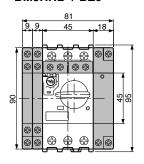

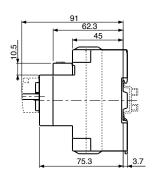


Type E construction

• BM3RSB

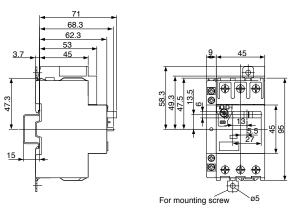


MMS	Line side terminal cover	Short-circuit alarm contact block	Mass (g)
BM3RSB	BZ0TCRE	BZ0TKUAB	425


• Shunt trip devices BZ0F Undervoltage trip devices BZ0R

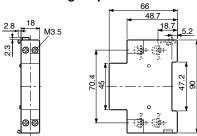


MMS with accessories


• BM3RSB + BZ0

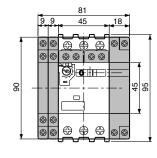

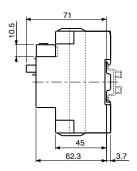



• BM3V□B + BZ0

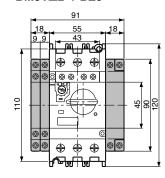

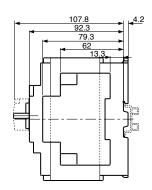

• BM3RHB

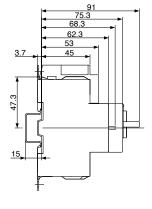

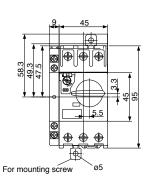


MMS	Line side terminal cover	Short-circuit alarm contact block	Mass (g)
BM3RHB	BZ0TCRE	BZ0TKUAB	445

Dimensions

■ Dimensions, mm


Type E construction


• BM3VSB, BM3VHB

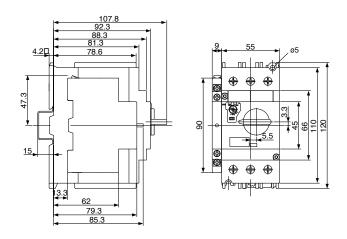


MMS	Line side terminal cover	Short-circuit alarm contact block	Mass (g)
BM3VSB,VHB	-	BZ0TKUAB	825

External operation handle BZ0V

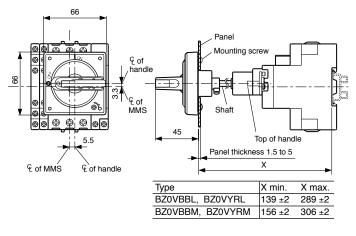

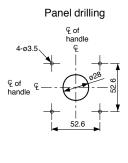


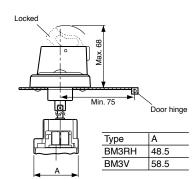

Dimensions

■ Wiring diagrams

• MMS

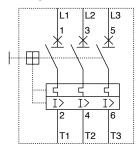

Auxiliary contact blocks

Front mounting

BZ0WIB







43(143)

63(163)

33(133)

34(134)

BZ0WUAAL

Side mounting

BZ0WUABL


BZ0WUBBL




51(151)

63(163)

64(164)

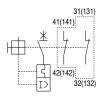


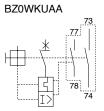

Alarm contact blocks

Front mounting

BZ0KIA

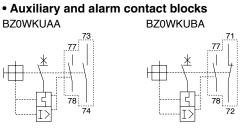

BZ0WUAAR


-I>

BZ0WUABR

BZ0WUBBR


51(151) 61(161) 5 62(162)

BZ0WKUAB

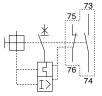


BZ0WKUBB

BZ0KIB

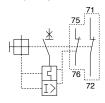


Short-circuit alarm contact blocks

BZ0TKUAB

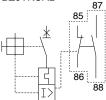


Shunt trip devices

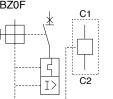

• Undervoltage trip devices

BZ0R

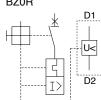

Instructions

Standard operating conditions

Ambient	Operating: -5 to +55°C	No sudden temperature
temperature	Storage: -40 to +65°C	changes resulting in
Humidity	45 to 85%RH	condensation or icing.
Altitude	2000m or lower	
Atmosphere	No excessive dust, smoke gases, steam or salt.	, corrosive gases, flammable
Vibration	10 to 55Hz 15m/s ²	No abnormal shock or
Shock	50m/s ²	vibration


■ Mountings

Rail mounting

The MMS can be mounted to a 35mm DIN rail. Secure the rail with screws at mounting pitch of less than 400mm for the BM3R type and less than 300mm for the BM3V type. Applicable rail:


Use a 15mm-high TH35-15 (FUJI model TH35-15AL) rail conforming to EN-50022 and IEC715.

The standard rail mounting direction is horizontal. When using the MMS on a vertically mounted rail, use FUJI end clamp kits.

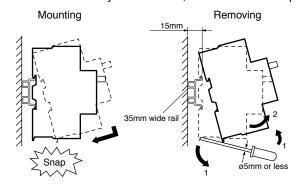

Screw mounting


The separately sold push-in lug (BZ0SET) is required for screw mounting the BM3R frame. The BM3V frame can be screw mounted directly to the panel.

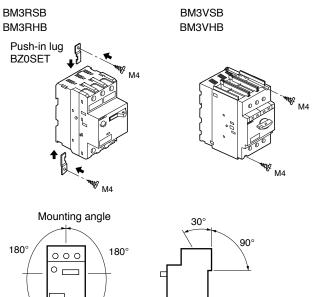

Arc space

The arc space required when mounting is shown in the table below

Туре	Rated operational voltage Ue	Min. distance metal (mm)	to grounded
	(V)	A, B	C, D
BM3RS	Up to 460	15	20
	500	15	30
	Up to 690	40	40
BM3RH	Up to 500	15	30
	Up to 690	40	50
BM3V	Up to 500	15	40
	Up to 690	40	50

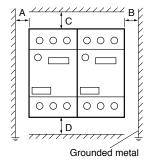

When frames are mounted side-byside, operating conditions such as a high ambient temperature or using the maximum setting for continuous current may cause slight changes in operating characteristics due to temperature rises.

Under such conditions, it is recommended that the frames be separated by at least 5mm.

Wirings

While pressing the wire with a screwdriver, tighten the screw to the specified tightening torque.

Type		BM3R	BM3V	BZ0
				Accessories
Solid wire (mm)	ø1.6 to 2.6	ø1.6 to 2.6	ø1 to 1.6
Stranded	Single-wire	1 to 10	1 to 25	0.5 to 2.5
wire (mm²)	2-wire	1 to 6	1 to 16	0.5 to 2.5
AWG	Single-wire	18 to 8	18 to 4	18 to 14
	2-wire		18 to 4	18 to 14
Sheath stri	pping	Approx.10	Approx.13	Approx.10
length (mm	1)			
, ,	<u></u>			
L				
Terminal so	rew	Pan head	Pan head	Pan head
		screw (PZ2)	screw (PZ2)	screw (PZ2)
		M4	M6	M3.5
Tightening torque		2	4	0.8
(N·m)				

Note: There is no need for a crimp terminal or any other terminal on the end of the connection wire.

000


Manual Motor Starters Busbar system

Features

- The busbar system reduces wiring time and saves floorspace.
- The busbar makes it easy to power from 2 to 5 manual motor starters – with no wiring needed.
- The 3-phase feed-in terminals are used to connect the wire for the power supply circuit.
- The busbar cover guards against accidental contact with nonconnected busbar terminals (charged parts).

<Note>

If using BZ0TCRE terminal cover with BM3R series MMS, the busbar system can not be used.

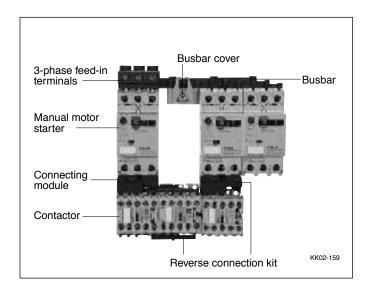

■ Part number and ratings


Description		Used with	Specification		Part number	Mass (g
Busbar		BM3R	Continuous current:	2-BM3R, modular space: 45mm	BZ0BR02A	30
			64A max.	3-BM3R, modular space: 45mm	BZ0BR03A	50
			Pin connection	4-BM3R, modular space: 45mm	BZ0BR04A	70
				5-BM3R, modular space: 45mm	BZ0BR05A	90
		BM3R+1-external		2-BM3R, modular space: 54mm	BZ0BR12A	30
		accessory, 9mm wide		3-BM3R, modular space: 54mm	BZ0BR13A	55
				4-BM3R, modular space: 54mm	BZ0BR14A	80
				5-BM3R, modular space: 54mm	BZ0BR15A	105
PERMIT		BM3R+2-external	Continuous current:	2-BM3R, modular space: 63mm	BZ0BR22A	45
		accessory, 9mm wide	64A max.	4-BM3R, modular space: 63mm	BZ0BR24A	100
THE PERSON NAMED IN		or	Fork connection			
(1111111		BM3R+1-external				
And in the last to be dead on the	7	accessory, 18mm wide				
1111111111	,	BM3V	Continuous current:	2-BM3V, modular space: 55mm	BZ0BV02A	140
THE REAL PROPERTY.	Sec.		126A max.	3-BM3V, modular space: 55mm	BZ0BV03A	240
			Pin connection	4-BM3V, modular space: 55mm	BZ0BV04A	340
		BM3V+1-external		2-BM3V, modular space: 64mm	BZ0BV12A	150
		accessory, 9mm wide		3-BM3V, modular space: 64mm	BZ0BV13A	270
KK	02-164			4-BM3V, modular space: 64mm	BZ0BV14A	380
		BM3V+2-external		2-BM3V, modular space: 73mm	BZ0BV22A	165
		accessory, 9mm wide		4-BM3V, modular space: 73mm	BZ0BV24A	425
		or				
		BM3V+1-external				
		accessory, 18mm wide				
3-phase feed-in terminal		BM3R	Continuous current: 64A ma	ax.	BZ0BFRA	40
200			Applicable cable size: 25mm	m² max.		
		BM3V	Continuous current: 126A max.		BZ0BFVA	170
AF	01-70R		Applicable cable size: 50mm	m² max.		
Busbar cover		BZ0BR	For pin connection		BZ0BCRA	10
ndedn			For fork connection		BZ0BCRB	5
AF	01-70L	BZ0BV	For pin connection		BZ0BCVA	5

Busbar system


■ Dimensions, mm

• For BM3R


BZ0BR0 Without external accessory

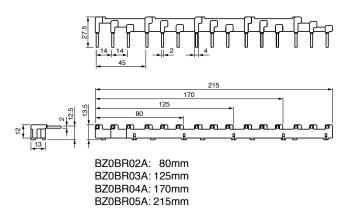


• For BM3V BZ0BV0 Without external accessory

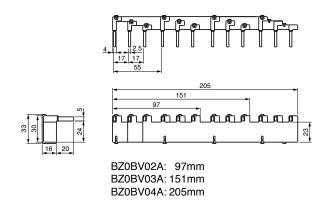


BZ0BR1 With 1-external accessory

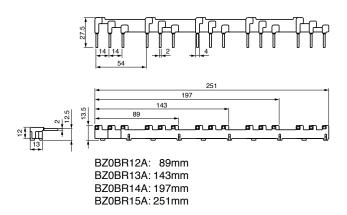


BZ0BV1 With 1-external accessory, 9mm wide

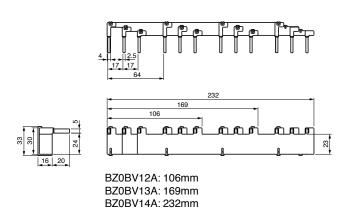

BZ0BR2 With 2-external accessory, 9mm wide With 1-external accessory, 18mm wide

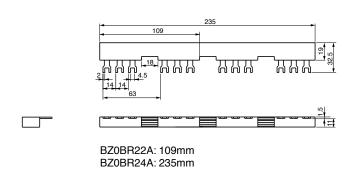

BZ0BV2 With 2-external accessory, 9mm wide With 1-external accessory, 18mm wide

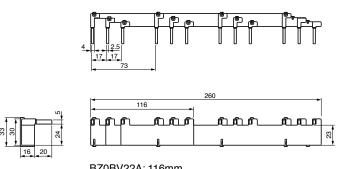


BZ0BV22A: 116mm BZ0BV24A: 260mm


Manual Motor Starters Busbar system

■ Dimensions, mm

• 3-phase feed-in terminals BZ0BFRA

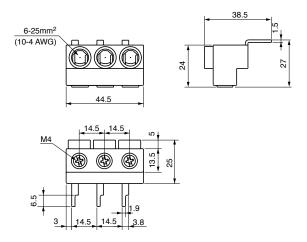

BZ0BFVA

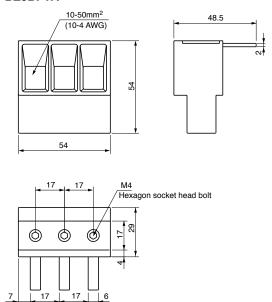

Enclosures

Features

- Accommodates a variety of manual motor starters (BM3RSB-P16 to 025). Put the manual motor starter inside an enclosure for use in harsh environments. Surface mounting and flush mounting types available.
- IP41 and IP55 enclosure protection degree available.
- Manual motor starters (BM3RSB-P16 to 025) equipped with internal accessories and the following external accessories can be used inside an enclosure.


Left side: One auxiliary contact block (W) or one auxiliary and alarm contact block (WK)

Right side: One shunt trip device (F) or one undervoltage trip device (R)

A wide variety of enclosure accessories are available.
 Padlocking device, emergency mushroom head pushbutton, conversion kit, and indicator lamps.

■ Part number and ratings Enclosures for BM3RSB-P16 to 025

Mounting	Specification	Part number	Mass (g)
Surface	IP41	BZ0CSLA	320
	IP55 (with conversion kit)	BZ0CSLB	340
Flush	IP41	BZ0CFLA	240
	IP55 (with conversion kit)	BZ0CFLB	260

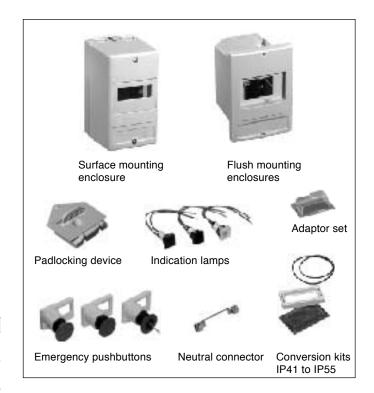

Accessories for enclosures

Description	Specification	Part number	Mass (g)
Padlocking device	OFF locking possible using up to three padlocks with a 5 to 8mm shackle diameter.	BZ0CKA	90
Emergency pushbutton	Momentary Push-lock turn reset Key operated	BZ0CPM BZ0CPL BZ0CPK	55 55 90
Conversion kit	Converts IP41 to IP55	BZ0CCA	25
Adaptor set	For BM3RS + undervoltage trip device with auxiliary contact.	BZ0CUA	20
Neutral connector	Used inside the enclosure for neutral and ground connection.	BZ0CNA	10
Indication lamp	Green, 100–120V AC Green, 200–240V AC Green, 380–440V AC Green, 480–500V AC Green, 500–600V AC	BZ0CLGA BZ0CLGB BZ0CLGC BZ0CLGD BZ0CLGE	15 15 15 15 15
	Red, 100–120V AC Red, 200–240V AC Red, 380–440V AC Red, 480–500V AC Red, 500–600V AC	BZ0CLRA BZ0CLRB BZ0CLRC BZ0CLRD BZ0CLRE	15 15 15 15
	White, 100–120V AC White, 200–240V AC White, 380–440V AC White, 480–500V AC White, 500–600V AC	BZ0CLCA BZ0CLCB BZ0CLCC BZ0CLCD BZ0CLCE	15 15 15 15 15

Notes: • The padlocking device cannot be used together with the emergency pushbutton or undervoltage trip device with auxiliary contact.


• The emergency pushbutton cannot be used together with the undervoltage trip device with auxiliary contact.

Dimensions


■ Dimensions, mm

• Surface mounting


For without accessory

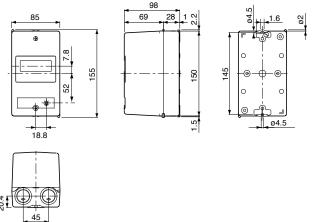


Flush mounting For without accessory

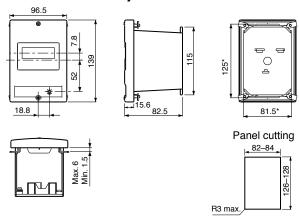


For with padlocking device

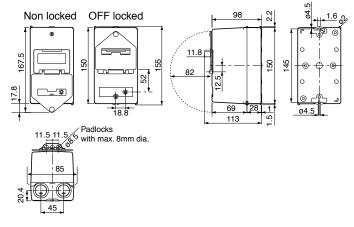



For with padlocking device

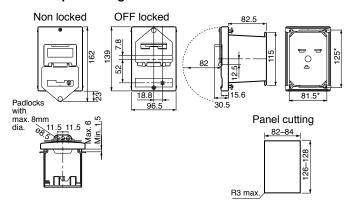


For with emergency pushbutton

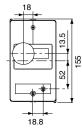

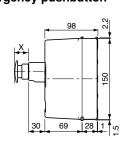


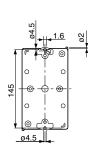


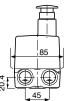



X dimensions	Push-locked	Non locked
Momentary	20	26
Push-lock turn reset	20	26
With key	39	45
Without key	19	25

For with emergency pushbutton

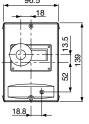

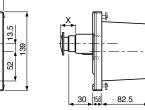

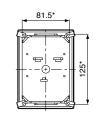

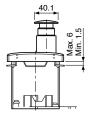

X dimensions	Push-locked	Non locked
Momentary	20	26
Push-lock turn reset	20	26
With key	39	45
Without key	19	25




General information

3 to 100HP at 480V AC

The SC-M and SC-E series further enhance the high reliability of the SC series with full conformance to International standards.

In addition to the five basic concepts of the existing SC series magnetic contactors and motor starters — international standardization, compactness, safety, utility, and ecology — the SC-M and SC-E series take the line-up to the next step in utility with a new finger protection terminal and box lug terminal construction.

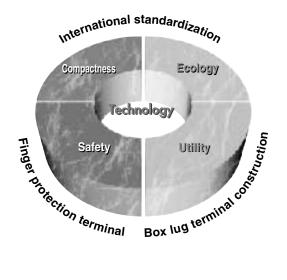

International standardization

IEC 60947-4-1, EN 60947-4-1, VDE 0660 UL 508, CSA C 22.2, JIS C 8201-4-1 [Approved cUL (File No. E42419, E44592), TÜV (R2018010, R2150072, R50013402)]

Compactness

- SC-M01, M02: 45mm wide
 SC-E02 to E05: 43mm wide, SC-E1 to E2S: 54mm wide
 SC-E3, E4: 67mm wide, SC-E5: 88mm wide
 SC-E6: 100mm wide, SC-E7: 115mm wide
- · Reducing mounting area

Safety


 Terminals with finger-touch protection (DIN 57106/ VDE 0106 Teil100)

Utility

- · Box lug terminal construction
- · Long electrical life
- · Reduction of wiring work

Ecology

- · Reducing power consumption
- · Recycled thermoplastic resin used for plastic parts.
- The names of materials are indicated on all major parts to facilitate their recycling.

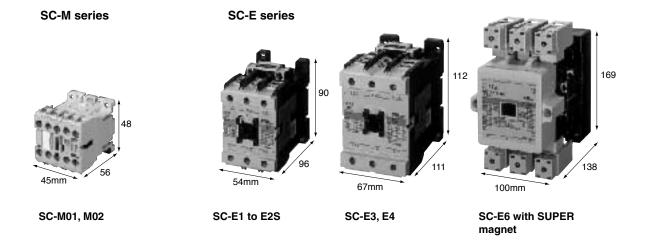

Quick reference guide

Contactor	AC operating	SC-M01	SC-M02	SC-E02	SC-E03	SC-E04	SC-E05	SC-E1
	DC operating	SC-M01/G	SC-M02/G	SC-E02/G	SC-E03/G	SC-E04/G	SC-E05/G	SC-E1/G
_ն (Մլ) _{us} 🛕	CON TIME	ED 04 2013	A P	H	9		
٠٠٠	TÜV Rheinland	KK02-292	KK02-292	AF01-12	AF01-11	AF01-10	KK01-105	AF01-8
Rating of 3-phase m 200V 220-240V 400-480V 550-600V		1-1/2 1-1/2 3 3	3 3 5 5	2 2 5 5	3 3 7 1/2 7 1/2	5 5 10 10	5 7 1/2 15 15	7 1/2 10 25 25
Rated operational co	urrent (A)		1,201	P				
200V 220-240V 400-480V 550-600V		6.9 6 4.8 0NTIN	7.6 6.1	7.8 6.8 7.6 6.1	9.6 11 9	17.5 15.2 14 11	17.5 22 21 17	25.3 28 34 27
Rated thermal curre	ent AC-1 (A)	20	20	20	20	25	32	50
Auxiliary contact		1NO, 1NC	1NO, 1NC	-	-	-	-	_
Dimensions	AC operated	45×48×56		43×80×81		•		54×90×96
W×H×D (mm)	DC operated	45×48×68		43×80×108				54×90×121.5
Standard		IEC 60947-1,	EN 60947-4-1	, VDE 0660, U	JL 508, CSA C	22.2		
Thermal overload	d relay			TK-E02	TK-E02	TK-E02	TK-E02	TK-E2
رال	US LUV Rheisland							
Ampere setting rang	je (A)	-		0.1-0.15	0.1-0.15	0.1-0.15	0.1-0.15	4–6
Ampere setting rang	je (A)			0.1-0.13	0.1-0.13	0.1-0.13	0.1-0.13	5–8
				0.15-0.24	0.15 0.2	0.15-0.24	0.15 0.2	6–9
				0.2–0.3	0.2–0.3	0.2–0.3	0.2–0.3	7–11
				0.24-0.36	0.24-0.36	0.24-0.36	0.24-0.36	9–13
				0.3–0.45	0.3–0.45	0.3-0.45	0.3–0.45	12–18
				0.36-0.54	0.36-0.54	0.36-0.54	0.36-0.54	18–26
				0.48-0.72	0.48-0.72	0.48-0.72	0.48-0.72	24–36
				0.64-0.96 0.8-1.2	0.64-0.96 0.8-1.2	0.64–0.96 0.8–1.2	0.64-0.96 0.8-1.2	
				0.95–1.45	0.0-1.2	0.95–1.45	0.0-1.2	
				1.4–2.2	1.4–2.2	1.4–2.2	1.4–2.2	
				1.7–2.6	1.7–2.6	1.7–2.6	1.7–2.6	
				2.2–3.4	2.2–3.4	2.2–3.4	2.2–3.4	
				2.8–4.2	2.8–4.2	2.8–4.2	2.8–4.2	
				4–6 5–8	4–6 5–8	4–6 5–8	4–6 5–8	
				6–9	6–9	6–9	6–9	
				7–11	7–11	7–11	7–11	
					9–13	9–13	9–13	
						12–18	12–18	
							16–22	
							20–25	<u> </u>
Dimensions W×H×	D (mm)			53×60.5×80.5		\/DE 22	U 500 05: -	54×78.5×97
Standard				ıEC 60947-1,	EN 60947-4-1	, VDE 0660, L	∪L 508, CSA C	22.2

Quick reference guide

Contactors	AC operating	SC-E2	SC-E2S	SC-E3	SC-E4			
	DC operating	SC-E2/G	SC-E2S/G	SC-E3/G	SC-E4/G	SC-E5	SC-E6	SC-E7
ூ) _{lis} $igar{igar}$			H	M		0.0	100
ف ا	TÜV Rheinland	AF01-7	AF01-6	AF01-5	AF01-4	AF01-3	AF01-2	AF01-1
Rating of 3-phase m 200V 220-240V 400-480V 550-600V Rated operational cu		10 15 30 30	15 20 30 30	20 25 50 50	25 30 50 50	30 30 60 75	40 40 75 100	50 50 100 125
200V	(71)	32.2	48.3	63.1	78.2	92	119.6	149.5
220-240V		42	54	68	80	80	104	130
400-480V		40	40	65	65	77	96	124
550-600V		32	32	52	52	77	99	125
Rated thermal currer	nt AC-1 (A)	60	65	100	105	150	150	200
	ILAC-1 (A)	 						
Auxiliary contact		_	_	_	_	2NO+2NC	2NO+2NC	2NO+2NC
Dimensions	AC operated	54×90×96		67×112×111		88×155×132	100×169×138	115×175×140
W×H×D (mm)	DC operated	54×90×121.5		67×112×130				
Standard		IEC 60947-1,	EN 60947-4-1	, VDE 0660, L	JL 508, CSA C	22.2		
Thermal overload	l relay	TK-E2	TK-E2	TK-E3	TK-E3	TK-E5	TK-E6	TK-E6
ı (ÎI)	US LOV Riveleland	KK01-88	KK01-88	KK01-87	KK01-87	KK01-85	KK01-84	KK01-84
Amporo cotting rang	ο (Δ)		4–6	7–11	7–11			45–65
Ampere setting rang	e (A)	4–6 5–8 6–9 7–11 9–13 12–18 18–26 24–36 32–42	4-6 5-8 6-9 7-11 9-13 12-18 18-26 24-36 32-42 40-50 44-54	7-11 9-13 12-18 18-26 24-36 28-40 34-50 45-65 48-68	7-11 9-13 12-18 18-26 24-36 28-40 34-50 45-65 48-68 64-80	18–26 24–36 28–40 34–50 45–65 65–95 85–105	45–65 53–80 65–95 85–125	45-65 53-80 65-95 85-125 110-160
Dimensions W×H×I	D (mm)	54×78.5×97		68×89.5×107	7.5	76.5×105×106	100×122×123	3
Standard		IEC 60947-1,	EN 60947-4-1	, VDE 0660, L	JL 508, CSA C	22.2		
		1						

Available coil

• AC coil, SC-M01 to SC-M02 and SC-E02 to SC-E4

Code	Coil operating voltage and frequency
24VAC	24V AC 50Hz / 24-26V AC 60Hz
48VAC	48V AC 50Hz / 48-52V AC 60Hz
100VAC	100V AC 50Hz / 100-110V AC 60Hz
110VAC	100-110V AC 50Hz / 110-120V AC 60Hz
120VAC	110-120V AC 50Hz / 120-130V AC 60Hz
200VAC	200V AC 50Hz / 200-220V AC 60Hz
220VAC	200-220V AC 50Hz / 220-240V AC 60Hz
400VAC	380-400V AC 50Hz / 400-440V AC 60Hz
440VAC	415-440V AC 50Hz / 440-480V AC 60Hz
500VAC	480-500V AC 50Hz / 500-550V AC 60Hz

• DC coil, SC-M01/G to SC-M02/G and SC-E02/G to SC-E4/G

Code	Coil operating voltage
12VDC	12V DC
24VDC	24V DC
48VDC	48V DC
100VDC	100V DC
110VDC	110V DC
200VDC	200V DC

• Super Magnet Coil, SC-E5 to SC-E7

Code	Coil operating voltage and frequency					
24V	24-25V AC 50/60Hz, 24V DC					
48V	48-50V AC 50/60Hz, 48V DC					
100V	100-127V AC 50/60Hz, 100-120V DC					
200V	200-250V AC 50/60Hz, 200-240V DC					
400V	380-450V AC 50/60Hz					
500V	460-575V AC 50/60Hz					

■ Coil characteristics

• AC operation

Frame size	Power consur	ower consumption (VA) Power loss (W)		(W)	Pick-up voltage (V) *1	Drop-out voltage (V) *1	Operating time (ms)	
	Inrush	Sealed					Coil ON →	Coil OFF \rightarrow
	50/60 Hz	50/60 Hz	50Hz	60Hz			Contact ON	Contact OFF
M01, M02	32/36	6/6	1.5	1.6	0.8-1.1 X US	0.35-0.55 X US	7–12	6–13
E02 to E05	90/95	9/9	2.7	2.8	0.85-1.1 X US	0.2-0.75 X US	9–20	5–16
E1 to E2S	120/135	12.7/12.4	3.6	3.8	0.85-1.1 X US	0.2-0.75 X US	10–17	6–13
E3, E4	180/190	13.3/13.4	4.5	5	0.85-1.1 X US	0.2-0.75 X US	10–18	8–18
E5	80/95	4/4.6	3.2	3.6	0.85-1.1 X US	0.2-0.75 X US	39–45	27–33
E6, E7	190/230	4.9/5.8	3.4	3.7	0.8-1.1 X US	0.1-0.65 X US	31–37	30–36

Note: *1 US: Rated coil voltage

• DC operation

Frame size	Power consumption (VA)		Time constant (ms)	Pick-up voltage (V) *1	Drop-out voltage (V) *1	*1 Operating time (m	
	Inrush	Sealed				Coil ON →	Coil OFF →
						Contact ON	Contact OFF
M01/G, M02/G	3	3	35	0.8-1.1 X US	0.2-0.4 X US	24–27	5–8
E02/G to E05/G	7	7	50	0.85-1.1 X US	0.1-0.75 X US	45–49	10–26
E1/G to E2S/G	9	9	60	0.85-1.1 X US	0.1-0.75 X US	40–50	8–17
E3/G, E4/G	12	12	70	0.85-1.1 X US	0.1-0.75 X US	60–70	14–21
E5	90	2.8	1	0.85-1.1 X US	0.1-0.75 X US	35–41	26–32
E6, E7	225	3.2	1	0.8-1.1 X US	0.1-0.65 X US	28–34	27–33

Note: *1 US: Rated coil voltage

■ Auxiliary contact ratings for UL and CSA


Frame size	Rated insulation voltage (V)	Rated thermal current (A)	Making and breaking current (A)						
			AC (rating	AC (rating code A600)			DC (rating code Q300)		
			Voltage	Making	Breaking	Voltage	Making	Breaking	
M01, M02	600	16	120V	60	6	125V	0.55	0.55	
M01/G, M02/G			240V	30	3	250V	0.27	0.27	
			480V	15	1.5	301-600V	0.1	0.1	
			600V	12	1.2				
E02 to E4, E02/G to E4/G	_	_	_	_	_	_	_	_	
E5 to E7	600	10	120V	60.	6	125	0.55	0.55	
			240V	30	3	250V	0.27	0.27	
			480V	15	1.5				
			600V	12	1.2				

Ordering information and Characteristics

Ordering information


Specify the following:

- 1. Part number
- 2. Operating coil voltage code
- 3. Auxiliary contact arrangement (SC-M series only)

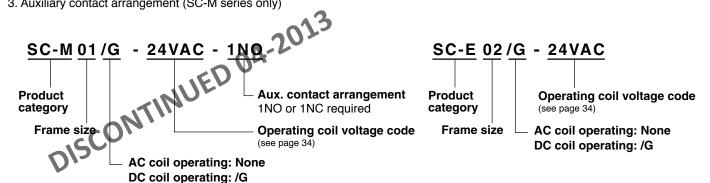


Electrical durability

• AC-1 duty / 380 to 440 V AC / SC-M

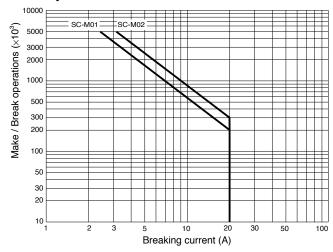


AC-3 duty / 380 to 440 V AC / SC-M

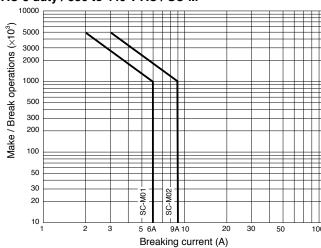


■ Electrical durability


• AC-1 duty / SC-E02 to SC-E7

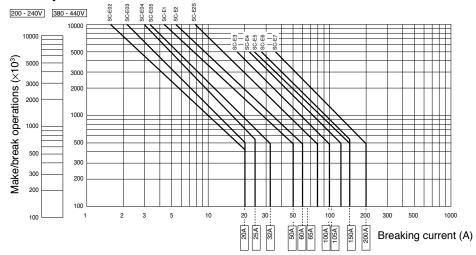

• AC-3 duty / SC-E02 to SC-E05

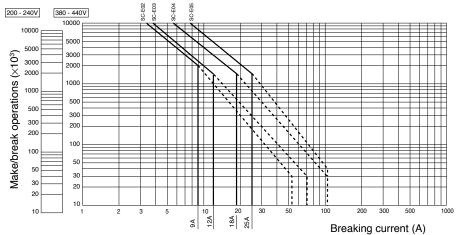


• AC-3 duty / SC-E1 to SC-E7

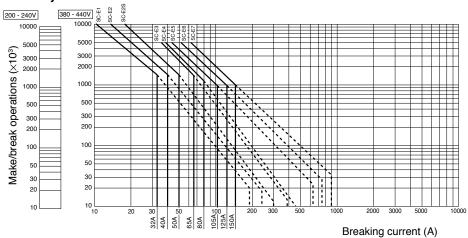

Optional accessories

• Auxliary contact blocks with terminal covers

A 1: 1.1		IN. 6		D
Applicable contactor	Mounting	No. of contacts	Contact arrangement	Part number
SC-M01, M02	Front mounting	4	4NO	SZ-MA40
SC-M01/G, M02/G			3NO+1NC	SZ-MA31
			2NO+2NC	SZ-MA22
			1NO+3NC	SZ-MA13
			4NC	SZ-MA04
		2	2NO	SZ-MA20
			1NO+1NC	SZ-MA11
			2NC	SZ-MA02
	Side mounting	1	1NO	SZ-MAS10
			1NC	SZ-MAS01
SC-E02 to E4	Front mounting	4	4NO	SZ-A40/T
SC-E02/G to E4/G			3NO+1NC	SZ-A31/T
			2NO+2NC	SZ-A22/T
		2	2NO	SZ-A20/T
			1NO+1NC	SZ-A11/T
			2NC	SZ-A02/T
	Side mounting	2	1NO+1NC	SZ-AS1/T
SC-E5, E6, E7	Side mounting	2	1NO+1NC	SZ-AS2/T

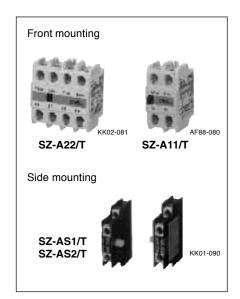

Contact ratings

· Based on UL and CSA


Rated thermal current (A)	Making and breaking current (AC (rating code A600)		(A) DC (rating code Q300)		Q300)	
	Volts	Making	Breaking	Volts	Making	Breaking
10	120V	60	6	125V	0.55	0.55
	240V	30	3	250V	0.27	0.27
	480V	15	1.5			
	600V	12	1.2			

• Main circuit surge suppression units

Applicable contactor	Mounting	Rated voltage and frequency	CR constant	Applicable 3-phase motor	Part number
SC-M01, M02,	_	_	_	_	_
M01/G, M02/G					
SC-E02 to E05	Front mounting	250V AC	C=0.22 μF	200-240V AC	SZ-ZM1E
SC-E02/G to E05/G	Side mounting	50/60Hz	R=100Ω	1-1/2-5HP	SZ-ZM2E
SC-E1 to E4	Front mounting	250V AC	C=0.33 μF	200-240V AC	SZ-ZM3E
SC-E1/G to E4/G	Side mounting	50/60Hz	R=47Ω	1-1/2-30HP	SZ-ZM4E

• Coil surge suppression units

Applicable contactor		Operating coil voltage	Device	Operation indicator	Part number
SC-M01, M02	_	12-60VAC	CR	_	SZ-MZ1
		72-250VAC		_	SZ-MZ2
_	SC-M01/G,M02/G	6-250V DC	Diode	_	SZ-MZ3
SC-E02 to E05	SC-E02/G to E05/G	24-48V AC/DC	Varistor	_	SZ-Z1
		100-250V AC/DC		_	SZ-Z2
	_	380-440V AC/DC		_	SZ-Z3
SC-E02 to E05	SC-E02/G to E05/G	24-48V AC/DC		Red LED	SZ-Z6
		100-250V AC/DC		Red LED	SZ-Z7
SC-E1 to E4	SC-E1/G to E4/G	24-48V AC/DC		_	SZ-Z31
		100-250V AC/DC		_	SZ-Z32
	_	380-440V AC/DC		_	SZ-Z33
SC-E02 to E05	SC-E02/G to E05/G	24-48V AC/DC	CR	_	SZ-Z4
		100-250V AC/DC		_	SZ-Z5
SC-E02 to E05	SC-E02/G to E05/G	24-48V AC/DC		Red LED	SZ-Z8
		100-250V AC/DC		Red LED	SZ-Z9
SC-E1 to E4	_	24-48V AC/DC		_	SZ-Z34
		100-250V AC/DC		_	SZ-Z35
_	SC-E1/G to E4/G	24-48V AC/DC		_	SZ-Z36
-		100-250V AC/DC		_	SZ-Z37

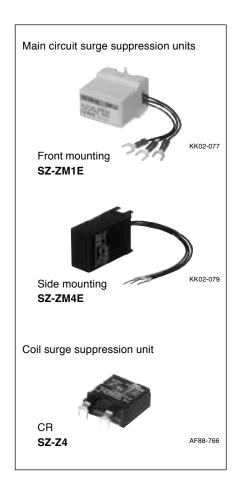

Optional accessories


• Power Connection kit for reversing for SC-M and SC-E contactor

Description	Applicable contactor	Part number	Mass (g)
Line side and load side wire kits	SC-M01, M02, M01/G, M02/G	SZ-MRWC	4.2
Line side wire kit	SC-E02 to E05	SZ-ERW1/A	19
Load side wire kit	SC-E02/G to E05/G	SZ-ERW1/B	17
Load side wire kit for the contactor		SZ-ERW1/D	13
to be connected with overload relay.			
Line side wire kit	SC-E1 to E2S,	SZ-ERW2/A	48
Load side wire kit	SC-E1/G to E2S/G,	SZ-ERW2/B	42
Load side wire kit for the contactor		SZ-ERW2/D	31
to be connected with overload relay.			
Line side wire kit	SC-E3,E4	SZ-ERW3/A	162
Load side wire kit	SC-E3/G,E4/G	SZ-ERW3/B	138
Load side wire kit for the contactor		SZ-ERW3/D	110
to be connected with overload relay.			




• Mechanical interlock unit


Description	Applicable contactor	Part number	Mass (g)
	SC-M01, M02, M01/G, M02/G	S7-MRM	3
	00 M01, M02, M0174, M0270	02	
	SC-E02 to E4	SZ-RM	27
	SC-E02/G to E4/G		

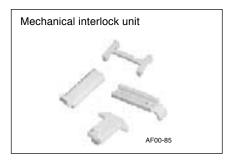

• Preparing to make a reversing contactors and motor starters.

<for contactor="" sc-m=""></for>	<for contactor="" sc-e=""></for>	<for motor="" sc-e="" starters=""></for>
1. SC-M_ x 2	1. SC-E_ x 2	1. SC-E_ x 2
2. SZ-MRWC x 1	2. SZ-ERW_/A x 1	2. TK-E_ X1
3. SZ-MRM x 1	3. SZ-ERW_/B x 1	3. SZ-ERW_/A x 1
	4. SZ-RM x 1	4. SZ-ERW_/D x 1
	5. SZA/T x 2	5. SZ-RM x 1
		6. SZA/T x 2

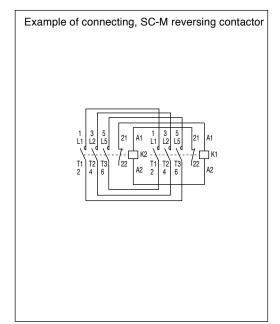

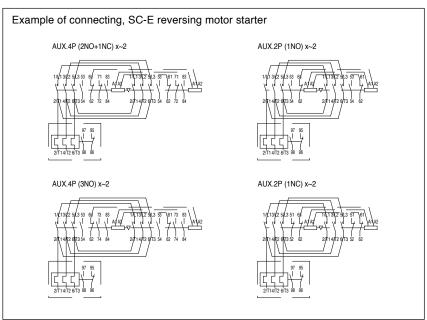

Optional accessories

■ Replacement coils

Replacement coil for SC-M series is not available Replacement coil for SC-E series, AC coil is available, DC coil is not available

Contactor part number	AC coil part number	Super magnet coil part number
SC-E02 to E05	4NC0H-#MC	N/A

Replace the # symbol with the desired code, shown in the chart below.

Code letter #	AC coil 60Hz	AC coil 50Hz
E	24-26V	24V
F	48-52V	48V
Α	100-110V	100V
1	110-120V	100-110V
G	120-130V	110-120V
В	200-220V	200V
2	220-240V	200-220V
С	400-440V	380-400V
4	440-480V	415-440V
5	550-600	500-550V

Contactor part number		Super magnet coil part number (Chart 2)
SC-E1, E2 and E2S	SZ-GM/N1-#	N/A
SC-E3 and E4	SZ-GM/N2S-#	N/A
SC-E5	N/A	SZ-GS/N5-#
SC-E6 and E7	N/A	SZ-GS/N6-#

Replace the # symbol with the desired code, shown in the charts below.

Chart 1: AC coil

Code letter #	AC coil 60Hz	AC coil 50Hz
24	24-26V	24V
48	48-52V	48V
100	100-110V	100V
110	110-120V	100-110V
120	120-130V	110-120V
200	200-220V	200V
220	220-240V	200-220V
400	400-440V	380-400V
440	440-480V	415-440V
500	500-550V	480-500V

Chart 2 : Super magnet coil


Code letter #	AC coil 50/60Hz	DC
24	24-25V	24V
48	48-50V	48V
100	100-127V	100-120V
200	200-250V	200-240V
400	380-450V	N/A
500	460-575V	N/A

Contactors SC-M and SC-E series Dimensions

Wiring diagrams

■ Dimensions, mm


Non-reversing AC operated SC-M01, SC-M02

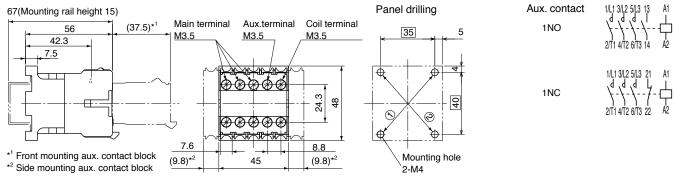

Mass: 0.17kg

Use the two mounting holes on a diagonal line 1 or 2 to mount a contactor.

Non-reversing DC operated SC-M01/G, SC-M02/G

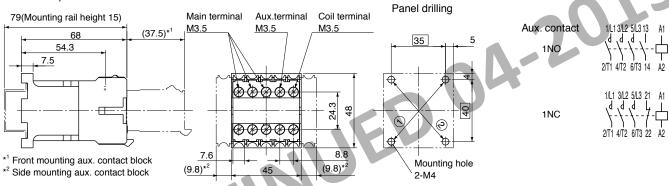


Mass: 0.23kg

Mass: 30g

Use the two mounting holes on a diagonal line 1 or 2 to mount a contactor.

Auxiliary contact blocks Front mounting


7.6

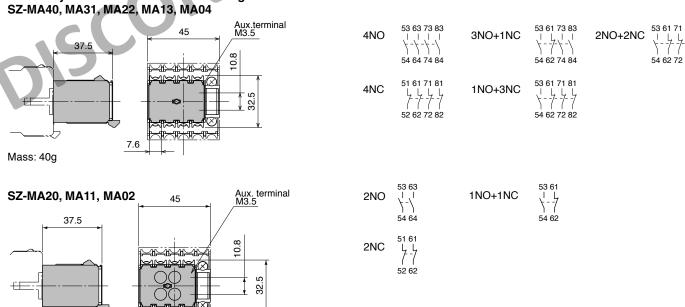

Dimensions

■ Dimensions, mm


• Aux. contact blocks (Side mounting) SZ-MAS10, MAS01

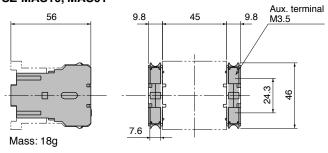


■ Wiring diagrams

Aux. contact


· Mounted on the right side

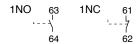

· Mounted on the left side

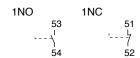


• Coil surge suppression unit SZ-MZ1, MZ2, MZ3

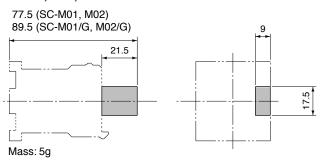


Internal circuit

Built-in CR




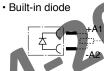

• Power Connection kit for reversing for SC-M

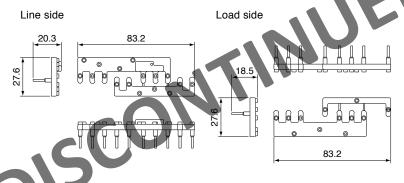

• Mechanical interlock unit

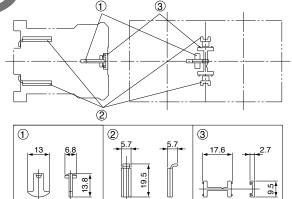

■ Standard operating conditions

Ambient temperature	Operating: –5 to 55°C No sudden temperature changes resulting in condensation or icing (The average temperature over a 24-hour period must not exceed 35°C)
Humidity	Storage: -40 to 65°C 45 to 85%RH
Altitude	2000m or lower
Atmosphere	No excessive dust, smoke, corrosive gases, flammable gases, steam, or salt.
Vibration	10 to 55Hz 15m/s ²
Shock	50m/s ²
Mounting	Screw mounting, 35mm-wide top hat rail (DIN)
Mounting angle	95 \ 30.
Standard	IEC 60947-4-1, EN 60947-4-1, VDE 0660 JIS C 8201-4-1, JEM 1038 UL 508, CSA C22.2


Wiring

Terminal screw	M3.5
Connectable wire size	1.25 to 2mm ² (ø1.2 to 2mm)
Applicable round crimp terminal	7.5mm (R2-3.5)
Tightening torque	0.8 to 1.0N·m
Tightening torque	0.8 to 1.0N·m


Dimensions

■ Dimensions, mm

• Non-reversing AC operated SC-E02, E03, E04, E05

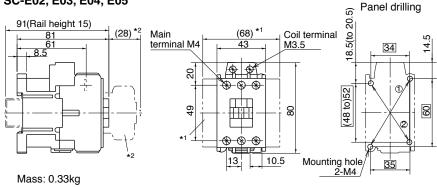

■ Wiring diagrams

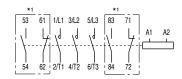


*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line ① or ② to mount contactor

1: 35 × 60 2: 35 × (48 to) 52

SC-E1, E2, E2S

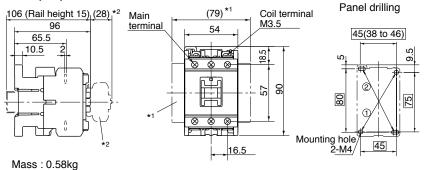




*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line ① or ② to mount contactor

①: 45×75 ②: 45 (38 to 46)×80

SC-E3, E4

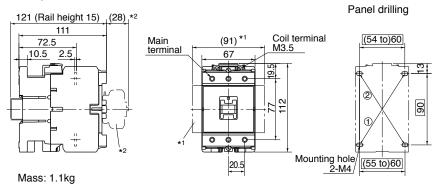

*1 *1


1/L1 3/L2 5/L3

*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line 1 or 2 to mount contactor

①: (55 to) 60 × 90 ②: (54 to) 60 × 90

SC-E5

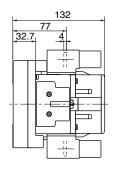



Main terminal (111) *1 M3.5

Auxiliary terminal M3.5

Auxiliary terminal M3.5

Auxiliary terminal M3.5

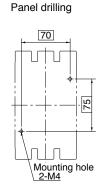

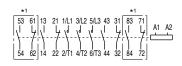

*1 In case of aux. contact 4NO+4NC

Mass: 2.0kg


^{*1} Side mounting aux. contact block


^{*2} Front mounting aux. contact block


Dimensions

■ Dimensions, mm


Non-reversing AC operated

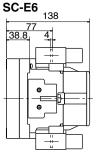

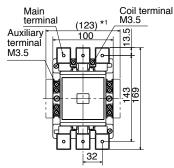

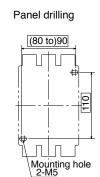


■ Wiring diagrams

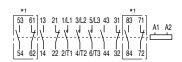



*1 In case of aux. contact 4NO+4NC



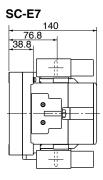


Mass: 2.9kg

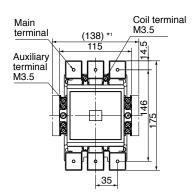

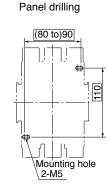


Panel drilling


9

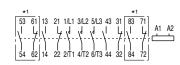


*1 In case of aux. contact 4NO+4NC

• Non-reversing DC operated SC-E02/G, E03/G, E04/G, E05/G

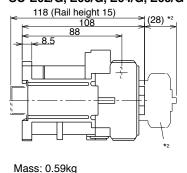

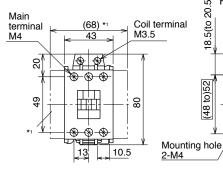


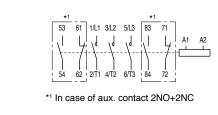


Use the two mounting holes on a diagonal line ① or ② to mount contactor


①: 35 × 60 ②: 35 × (48 to) 52


SC-E1/G, E2/G, E2S/G

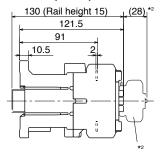



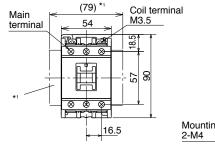

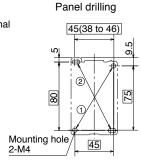

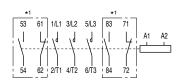

*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line 1 or 2 to mount contactor

1: 45×75 2: 45 (38 to 46)×80


^{*1} Side mounting aux. contact block


^{*2} Front mounting aux. contact block


Contactors SC-M and SC-E seriesDimensions

■ Dimensions, mm

• Non-reversing DC operated SC-E3/G, E4/G

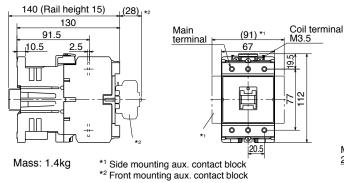

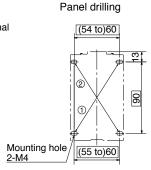


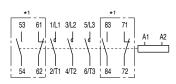


*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line ① or ② to mount contactor ①: $(55 \text{ to}) 60 \times 90$ ②: $(54 \text{ to}) 60 \times 90$


• Auxiliary contact blocks Front mounting SZ-A40/T, A31/T, A22/T, A20/T, A11/T, A02/T for SC-E02 to E4

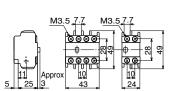

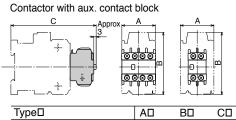


Type□	ΑП	В□	СП
SC-E02, E03, E04, E05□	43□	80□	109□
SC-E1, E2, E2S	54□	90□	124□
SC-E3, E4	67	112	139


■ Wiring diagrams

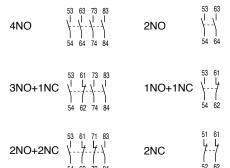

Auxiliary contact blocks Side mounting SZ-AS1/T, for SC-E02 to E4

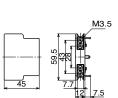



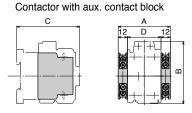


Type□	ΑП	В□	СП	D	
SC-E02, E03, E04, E05□	67	80□	81□	43	
SC-E1, E2, E2S□	78□	90	96□	54	
SC-E3, E4	91	112	111	67	
30-L3, L4	91	112	111	07	


1NO+1NC Mounted on right side

Mounted on left side

SZ-AS2/T, for SC-E5 to E7

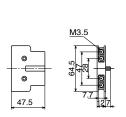


Mass: 40g

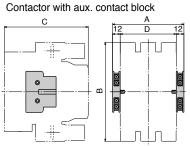

Type□	A□	В□	СП	DΠ
SC-E5□	1120	155□	132□	88□
SC-E6□	124□	169□	138□	100□
SC-F7	139	175	140	115


1NO+1NC Mounted on right side

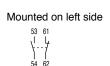


Dimensions

■ Dimensions, mm


• Main circuit surge suppression units

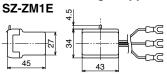

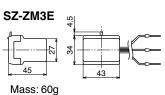


45

Contactor with surge suppression unit

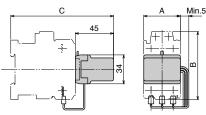



Type□	ΑП	В□	СП
SC-E02+SZ-ZM1E□	43□	80□	1210
SC-E03□			
SC-E04□			
SC-E05□			
SC-E1+SZ-ZM3E□	54□	90□	136□
SC-E2□			
SC-E2S□			
SC-E3+SZ-ZM3E□	67	112	151
SC-E4			


SZ-ZM2E

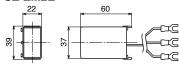



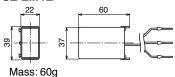


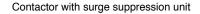

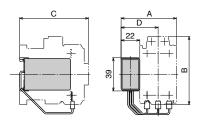


Type□	ΑП	В□	СП	DΠ
SC-E02+SZ-ZM2E	165□	800	810	143.5□
SC-E03□				
SC-E04□				
SC-E05□				
SC-E1□				
SC-E2+SZ-ZM2E□	76□	900	1 960	149□
SC-E2S□				
SC-E3+SZ-ZM2E□	89	112	111	55.5
SC-E4				

Connection diagram

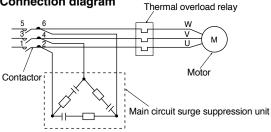


Coil surge suppression units


SZ-Z1, Z2, Z3, Z4, Z5

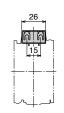

SZ-Z6, Z7, Z8, Z9

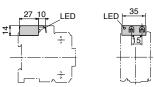

SZ-Z31, Z32, Z33, Z34, Z35, Z36, Z37

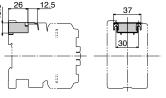

Mass: 15g

SC-E02 to E05 + SZ-Z1 to Z3 (Built-in varistor)



Mass: 14g

SC-E02 to E05 + SZ-Z6, Z7 (Built-in varistor with operating indicator)



Mass: 16g

SC-E02 to E05 + SZ-Z8, Z9 (Built-in CR with operating indicator)



SC-E1 to E4 + SZ-Z31 to Z33 (Built-in varistor)



SC-E1 to E4 + SZ-Z34, Z35 (Built-in CR) SC-E1/G to E4/G + SZ-Z36, Z37 (Built-in CR)



SC-E02 to E05 + SZ-Z4, Z5 (Built-in CR)





Dimensions

■ Dimensions, mm


• Power connection kit for reversing for SC-E


SZ-ERW1/A

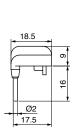

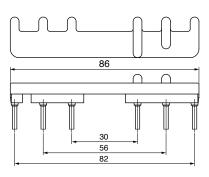



SZ-ERW1/B

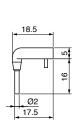

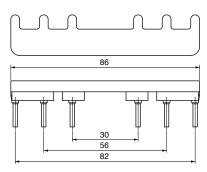



SZ-ERW1/D

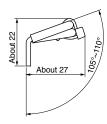

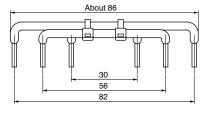



SZ-ERW2/A

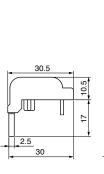

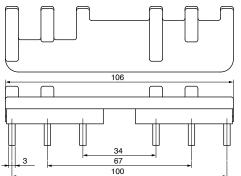


SZ-ERW2/B

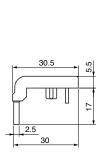

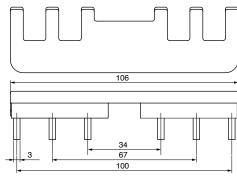

SZ-ERW2/D

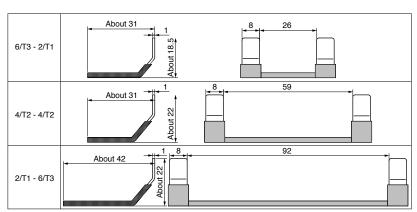


Dimensions


■ Dimensions, mm

Power connection kit for reversing for SC-E


SZ-ERW3/A

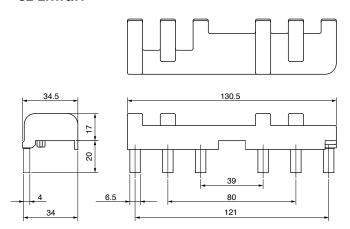

SZ-ERW3/B

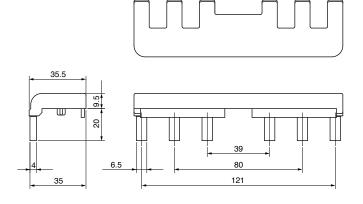

SZ-ERW3/D

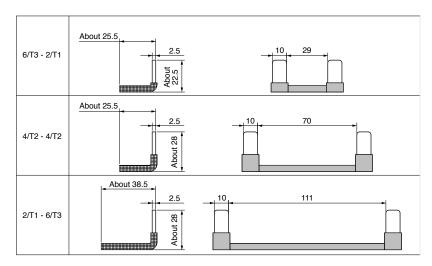

Contactors SC-M and SC-E series Instructions

Standard operating conditions

The magnetic contactors are manufactured for use in the standard operating conditions given in the table at the right. Consult FUJI before using the magnetic contactors in different conditions.

Wirings

Connection wires and terminal processing

Be sure to perform wiring correctly with reference to the connections diagram. Main terminals for models SC-E02 to SC-E7 are wired using solid wires or stranded wires. Stranded wires or flexible stranded wires can be connected by twisting them together, crimping a sleeve (ferrule) onto them before connecting.

• Tightening torque

If wires are not tightened sufficiently, they may become hot or come loose and result in a fire, short-circuit, electric shock, or some other potentially dangerous situation. Be sure to tighten the wires to the torques specified in the tables below.

Connectable wire sizes, tightening tools, tightening torques Main circuit

Contactor type		SC-E02	SC-E03	SC-E04	SC-E05	
		SC-E02/G	SC-E03/G	SC-E04/G	SC-E05/G	
Solid wire□	One	0.75 to 4		0.75 to 6		
(mm ²)	Two	1 to 4		1.5 to 6		
Stranded wire	One	0.75 to 4		0.75 to 6		
(mm ²)	Two	1 to 4		1.5 to 6		
AWG	One	12 max.		10 max.		
	Two	12 max.		10 max.		
Sheath stripping	g length	11	→			
(mm)						
Terminal screw	size	M4				
Tool		+ Phillips screwdriver, H-type, No. 2 (ISO 8764)				
		Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)				
Tightening torque (N·m)		1.2 to 1.5				

Ambient	Operating: –5 to 55°C					
temperature	No sudden temperature changes resulting in					
	condensation or icing (The average temperature over					
	a 24-hour period must not exceed 35°C)					
	Storage: –40 to 65°C					
Humidity	45 to 85%RH					
Altitude	2000m or lower					
Atmosphere	No excessive dust, smoke, corrosive gases,					
	flammable gases, steam, or salt					
Vibration	10 to 55Hz 15m/s ²					
Shock	50m/s ²					
Mounting	Screw mounting, 35mm DIN rail mounting					
	(SC-E02 to SC-E4)					
Mounting angle						
angle						
	30, 30.					
Standard	IEC 60947-4-1, EN 60947-4-1, VDE 0660					
	JIS C 8201-4-1, JEM 1038					
	UL 508, CSA C22.2					

Control circuit

Solid or stranded On	e 0.75 to 2.5 (ø1 to 1.6)
wire (mm²) Two	0.75 to 2.5
AWG On	e 18 to 14
Two	18 to 14
Sheath stripping lengt (mm)	-10-+
Fork terminal	Max. 7.7mm wide
Terminal screw size	M3.5
Tool	Phillips screwdriver, H-type, No. 2 (ISO 8764)
	☐ Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)
Tightening torque (N·n	n) 0.8 to 1
	•

* *		SC-E1, E2, E2S SC-E1/G, E2/G, E2S/G	SC-E3, E4 SC-E3/G, E4/G	SC-E5, E6	SC-E7	
Top-only	Solid or stranded wire (mm²) *1		0.75 to 35	1.5 to 70	4 to 70	4 to 120
connection	Flexible stranded wire with sleev	ve (mm²) *1	0.75 to 25	1.5 to 50	2.5 to 50	2.5 to 95
dЫ	Flexible stranded wire without sle	eeve (mm²) *1	0.75 to 25	1.5 to 50	4 to 50	4 to 95
	AWG		18 to 2	16 to 2/0	12 to 2/0	12 to 250MCM
	Solid or stripping length (mm)		15	19.5	26.5	28.5
	Single stranded wire (mm²) *1		0.75 to 25	1.5 to 50	4 to 70	4 to 120
connection	Flexible stranded wire with sleev	ve (mm²) *1	0.75 to 16	1.5 to 35	2.5 to 50	2.5 to 95
ďЪ	Flexible stranded wire without sle	eeve (mm²) *1	0.75 to 16	1.5 to 35	4 to 50	4 to 95
ППП	AWG		18 to 3	16 to 1/0	12 to 2/0	12 to 250MCM
	Sheath stripping length (mm)		12.5	16	26.5	28.5
	Solid or stranded wire (mm²) *1	Top/bottom[0.75 to 25	1.5 to 50	4 to 70	4 to 120
connection	Flexible stranded wire with sleeve (mm²) *1	Top/bottom[10.75 to 16	1.5 to 35	2.5 to 50	2.5 to 95
	Flexible stranded wire without sleeve (mm²) *1	Top/bottom	0.75 to 16	1.5 to 35	4 to 50	4 to 95
	AWG	Top/bottom	18 to 3	16 to 1/0	12 to 2/0	12 to 250MCM
Tool		⊕Phillips screwdriver, H-type, No. 2 (ISO 8764) ⊕Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)	©Hex. wrench 4 (ISO 2936)		2936)	
Tightening to	orque (N·m)		2.5	8 10		10
Self-locking	torque (N·m) *2		1	2		•

Notes: *1 Stranded wire (0 to 25mm²) consists of 7 wires or less.

Stranded wire (35 to 120mm²) consists of 19 wires or less.

Flexible stranded wire consists of more number wires than the above.

^{*2} The tightening bolt must be loosened in order to insert the wire. However, stop loosening the bolt when the anti-drop attachment on the bottom of the bolt reaches the top edge of the terminal. If a torque exceeding that given in the table is applied in this state, the retaining bracket may come loose.


Thermal overload relays TK-E series

Quick reference guide and Ordering information

TK-E series with open-phase protection device

■ Features

- This relay protects motor windings from burning due to overloads, locked rotor current, or open-phases.
- Maintenance and inspection safety has been improved by employing a finger protection mechanism to cover exposed terminals (conforms to DIN 57106, VDE 0106 Teil 100).
- A high-precision scale for the current adjustment dial enables easy and exact current setting.
- The operating status can be visually checked with ease.
- The relays can be manually tripped. A trip-free mechanism is also provided.
- Base unit can be added to enable separate-mounting types of the TK-E02, E2, and E3 models.

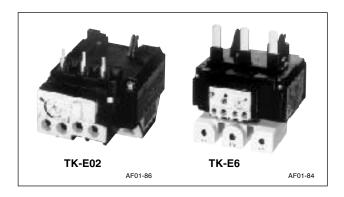

■ Part number and specification

Applicable contactor	Part	Aux.	Trip category	No. of heater	Power consumption	Provided functions
	number	contact	(JIS)	elements	per pole	
SC-E02 to E05, E02/G to E05/G	TK-E02	1NO+1NC	10A	3	2.2VA	Overload, phase-loss protection□
SC-E1 to E2S, E1/G to E2S/G	TK-E2]			3.8VA	Ambient temperature compensation□
SC-E3, E4, E3/G, E4/G	TK-E3				6.6VA	Manual or auto reset selectable□ Manual trip mechanism□
SC-E5	TK-E5				6.6VA	Trip indicator
SC-E6, E7	TK-E6]			8.0VA	•

Note: Separerate mounting type is available for TK-E6. The part number is TK-E6H.

Ampere ranges

Thermal overlo	ad relav type			
TK-E02	TK-E2	TK-E3	TK-E5	TK-E6, E6H *
0.1-0.15				,
0.13-0.2				
0.15-0.24				
0.2-0.3				
0.24-0.36				
0.36-0.54				
0.48-0.72				
0.64-0.96				
0.8–1.2				
0.95–1.45				
0.95-1.45				
1 4–2 2				
1.4-2.2 1.7-2.6				
2.2–3.4				
2.8-4.2				
4–6	4–6			
5–8	5–8			
6–9	6–9			
7–11	7–11	7–11		
9–13	0.10	9–13		
12–18	9–13 12–18	12–18		
16–22	12-10	12-10		
10-22	18–26	18–26	18–26	
20–25	10-20	10-20	10-20	
	24–36	24–36	24–36	
		28–40	28–40	
	32-42		_, .,	
		34–50	34–50	
	40–50			
	44–54			
		45–65	45–65	45–65
		48–68		
				53–80
		64–80		
			65–95	65–95
			85–105	
-				85–125
				110–160


Standards

IEC 60947-4-1, EN60947-4-1 VDE 0660, JIS C 8201-4-1 UL 508, CSA C22.2

Ordering information

Specify the following:

- 1. Part number
- 2. Ampere range

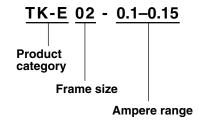

Note: * Applicable only for separate-mounting type. Not applicable for use in combination with a magnetic contactor


■ Auxiliary contact ratings

• Based on UL and CSA


Part number	Rated insulation	Rated thermal	Making and breaking current (A)					
	voltage (V)	current (A)	AC (rating code B600)			DC (rating cod	de R300)	
			Voltage (V)	Making (A)	Breaking (A)	Voltage (V)	Making (A)	Breaking (A)
TK-E02	600	5	120	30	3	120	0.22	0.22
TK-E2, E3			240	15	1.5	250	0.11	0.11
TK-E5			480	7.5	0.75			
TK-E6			600	6	0.6			

■ Operating characteristics (mean value)

•TK-E02

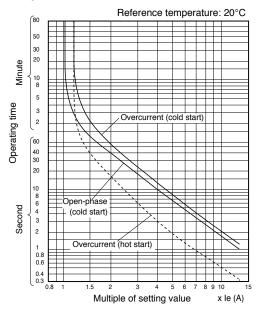

•TK-E2 to E6, E6H

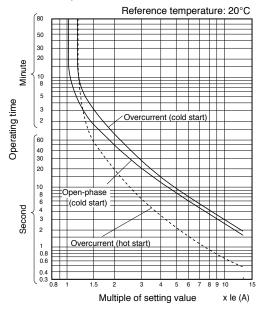

Thermal overload relays TK-E series

Optional accessories

Optional accessories for TK-E series

• Base units for separate mounting

The base unit modifies thermal overload relays to separate mounting that can be mounted to 35mm-wide IEC top hat rail or secured with screws.

Applicable thermal overload relay	Туре
TK-E02	SZ-HCE
TK-E2	SZ-HDE
TK-E3	SZ-HEE

Trip indicator

Reports any tripping action at a thermal overload relay through its LED display.

Applicable thermal overload relay	Rated voltage	Туре
TK-E02	100-110V AC, 50/60Hz	SZ-L100
	200-220V AC, 50/60Hz	SZ-L200
TK-E2 to TK-E6	100-110V AC, 50/60Hz	SZ-L100N2
	200-220V AC, 50/60Hz	SZ-L200N2

• Reset release button

Reset a thermal overload relay from the rear side of the board or a distant location.

Applicable thermal overload relay	Load length (mm)	Туре
TK-E02	300	SZ-R1
	500	SZ-R2
	700	SZ-R3
TK-E2 to TK-E6	300	SZ-R4
	500	SZ-R5
	700	SZ-R6

• Dial cover


Protects the setting current value of a thermal overload relay from being changed unintentionally.


Applicable thermal overload relay	Туре
TK-E02 to TK-E6	SZ-DA



Thermal overload relays TK-E series **Dimensions**


■ Dimensions, mm

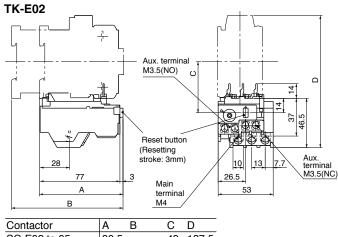

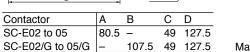


Mass: 0.13kg



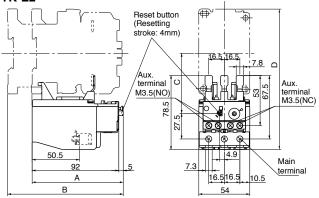


Contactor	Α	В	С	D
SC-E1 to E2S	97	_	63.5	149
SC-E1/G to E2S/G	-	123	63.5	149

Mass: 0.25kg

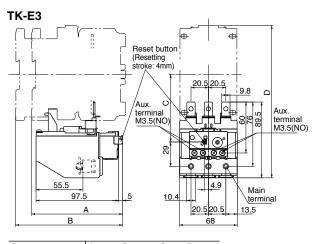


Contactor	Α	В	С	D	
SC-E3, E4	107.5	-	79.5	180	
SC-E3/, E4/G	-	126.5	79.5	180	Mass: 0.34kg

TK-E5 On-contactor mounting only

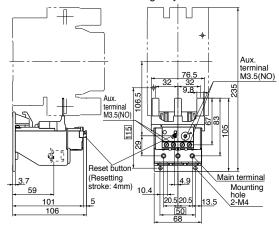


Mass: 0.37kg

TK-E6 On-contactor mounting only

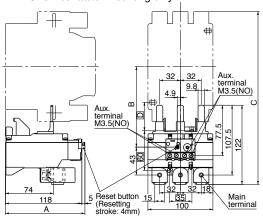

Contactor	Α	В	С	D	
SC-E6	123	124	266.5	45	
SC-E7	123	129	274	50	Mass: 0.71kg


TK-E6H For separate mounting only

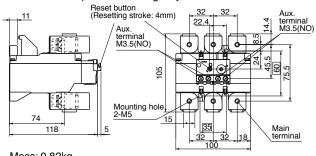

Mass: 0.82kg

Wiring diagrams

3-heater element

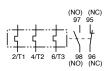



Thermal overload relays TK-E series

Dimensions

■ Dimensions, mm


• Base units for separate mounting SZ-HCE

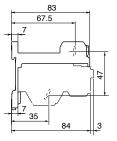


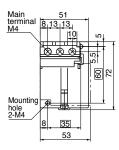

Mass: 55g


SZ-HDE

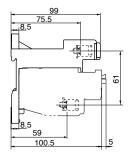


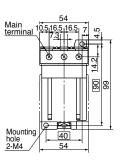

Mass: 0.1kg


SZ-HEE

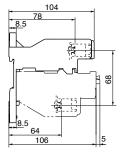

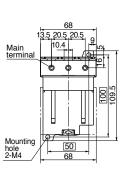


Mass: 0.15kg


Trip indicators SZ-L100, L200

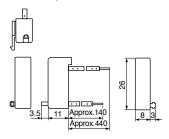

SZ-L100N2, L200N2

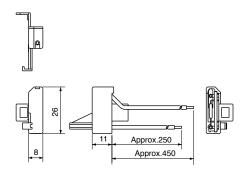


• Reset release button SZ-R1, R2, R3

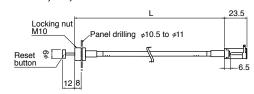


Туре	L
SZ-R1	300
SZ-R2	500
SZ-R3	700

SZ-R4, R5, R6

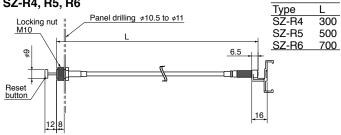

• Dial cover SZ-DA

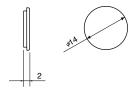

Thermal overload relays TK-E series Instructions

Standard operating conditions

The thermal overload relays are manufactured for use in the standard operating conditions given in the table at the right. Consult FUJI before using the thermal overload in different conditions.

Wiring

Connection wires and terminal processing

Be sure to perform wiring correctly referring to the connection diagram. Main terminals for models TK-E02 to TK-E6 are wired using solid wires or stranded wires. Stranded wires or flexible stranded wires can be connected by twisting them together crimping a sleeve (ferrule) onto them before connecting.

• Tightening torque

If wires are not tightened sufficiently, they may become hot or come loose and result in a fire, short-circuit, electric shock, or some other potentially dangerous situation. Be sure to tighten the wires to the torques specified in the tables below.

• Wire sizes, tightening tools, tightening torques Main circuit

Thermal overload relay type		TK-E02
Base unit type		SZ-HCE
Solid wire	One	0.75 to 4
(mm²)	Two	1 to 4
Stranded wire	One	0.75 to 4
(mm²)	Two	1 to 4
AWG	One	12 max.
	Two	12 max.
Sheath stripping length		<u></u> 11
(mm)		
Terminal screw size		M4
Tool		① Phillips screwdriver, H-type, No. 2 (ISO 8764)
		Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)
Tightening torque [N·m(lb·in)]		1.2 to 1.5 (11 to 13)

Ambient	Operating: -5 to 55°C
temperature	, , , , , , , , , , , , , , , , , , , ,
	condensation or icing (The average temperature over
	a 24-hour period must not exceed 35°C)
	Storage: –40 to 65°C
Humidity	45 to 85%RH
Atmosphere	No excessive dust, smoke, corrosive gases,
	flammable gases, steam, or salt
Vibration	10 to 55Hz 15m/s ²
Shock	50m/s ²

Control circuit

Single stranded □	One	0.75 to 2.5 (ø1 to ø1.6)
wire (mm²)□	Two	0.75 to 2.5
AWG	One	18 to 14
	Two	18 to 14
Sheath stripping leng	gth	<u></u> ⊢10→
(mm)		
Fork terminal		Max. 7.7mm wide (R2-3.5)
Terminal screw size		M3.5
Tool		+ Phillips screwdriver, H-type, No. 2 (ISO 8764)
		Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)
Tightening torque [N·m	(lb·in)]	0.8 to 1 (7 to 9)


Thermal overload relay type		TK-E2	TK-E3	TK-E5	TK-E6, E6H
Base unit type		SZ-HDE	SZ-HEE	_	_
	Single stranded wire (mm²) *1	0.75 to 16	1.5 to 35		16 to 70
	Flexible stranded wire with sleeve (mm²) *1	0.75 to 16	1.5 to 35		16 to 70
	Flexible stranded wire without sleeve (mm²)	0.75 to 16	1.5 to 35		16 to 70
	AWG	6 max.	2 max.		00 max.
	Sheath stripping length (mm)	18	21		23
Tool		⊕Phillips screwdriver, H-type, No. 2 (ISO 8764) ⊝Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)	OHex. wre	nch 4 (ISO	2936)
	Tightening torque (N·m)	2.5	6		10

Notes: *1 Stranded wire (0 to 25mm²) consists of 7 wires or less. Stranded wire (35 to 120mm²) consists of 19 wires or less. Flexible stranded wire consists of more number wires than the above.

Quick reference guide

Features

- The user can assemble a combination starter by combining a BM3 series manual motor starter and an SC series magnetic contactor according to the load motor capacity.
- The manual motor starter provides overload, phase-loss, and short-circuit protections for the motor circuit, and incorporates a dial for flexible adjustment to match the total load current of the motor.
- The magnetic contactor allows remote ON/OFF operation of the motor circuit with high frequency, and features a electrical durability of one million operations.
- The manual motor starter and magnetic contactor are connected via link module and mounted to a base plate.

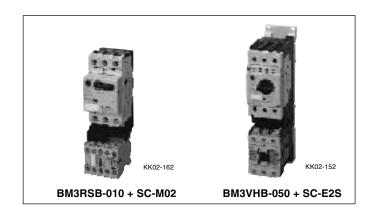

■ Combinations meeting for North American market

• BM3RSB, BM3RHB (General)

220-	240V AC	440-4	180V AC	M	MS part number	r	Contactor □	Link module	Base plate
HP rating	Rated	HP rating	Rated	Part r	number	Current	part number		
(HP)	current (A)	(HP)	current (A)			range (A)			
-	-	-	-	BM3RSB-P16	BM3RHB-P16	0.1-0.16	SC-M01, M01/G	BZ0LRC09AA	-
							SC-E02	BZ0LRE22AA	BZ0BPRE22A
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A
-	-	-	-	BM3RSB-P25	BM3RHB-P25	0.16-0.25	SC-M01, M01/G	BZ0LRC09AA	-
							SC-E02	BZ0LRE22AA	BZ0BPRE22A
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A
-	-	-	-	BM3RSB-P40	BM3RHB-P40	0.25-0.4	SC-M01, M01/G	BZ0LRC09AA	-
							SC-E02	BZ0LRE22AA	BZ0BPRE22A
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A
-	-	-	-	BM3RSB-P63	BM3RHB-P63	0.4-0.63	SC-M01, M01/G	BZ0LRC09AA	-
							SC-E02	BZ0LRE22AA	BZ0BPRE22A
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A
-	-	-	-	BM3RSB-001	BM3RHB-001	0.63-1	SC-M01, M01/G	BZ0LRC09AA	-
							SC-E02	BZ0LRE22AA	BZ0BPRE22A
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A
-	-	3/4	1.6	BM3RSB-1P6	BM3RHB-1P6	1-1.6	SC-M01, M01/G	BZ0LRC09AA	-
							SC-E02		BZ0BPRE22A
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A
1/2	2.2	1	2.1	BM3RSB-2P5	BM3RHB-2P5	1.6-2.5	SC-M01, M01/G	BZ0LRC09AA	-
							SC-E02	BZ0LRE22AA	BZ0BPRE22A
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A
3/4	3.2	2	3.4	BM3RSB-004	BM3RHB-004	2.5-4	SC-M01, M01/G	BZ0LRC09AA	-
							SC-E02	BZ0LRE22AA	BZ0BPRE22A
							SC-E02/G		BZ0BPRE22A
1-1/2	6	3	4.8	BM3RSB-6P3	BM3RHB-6P3	4-6.3	SC-M01, M01/G		
							SC-E02		BZ0BPRE22A
							SC-E02/G		BZ0BPRE22A
-	-	5	7.6	BM3RSB-010	BM3RHB-010	6.3-10		BZ0LRC09AA	
							SC-E02		BZ0BPRE22A
							SC-E02/G		BZ0BPRE22A
3	9.6	7-1/2	11	BM3RSB-013	BM3RHB-013	10-13	SC-E03		BZ0BPRE22A
							SC-E03/G		BZ0BPRE22A
5	15.2	10	14	BM3RSB-016	BM3RHB-016	11-16	SC-E04		BZ0BPRE22A
							SC-E04/G		BZ0BPRE22A
5	15.2	10	14	BM3RSB-020	BM3RHB-020	14-20	SC-E04		BZ0BPRE22A
							SC-E04/G		BZ0BPRE22A
7-1/2	22	15	21	BM3RSB-025	BM3RHB-025	18-25	SC-E05		BZ0BPRE22A
							SC-E05/G		BZ0BPRE22A
10	28	20	27	BM3RSB-032	BM3RHB-032	24-32	SC-E1		BZ0BPRE32A
							SC-E1/G	BZ0LRE32GA	BZ0BPRE32A

Combination StarterQuick reference guide

• BM3RSB, BM3RHB (Type F coordination)

	40V AC		BOV AC		MS part numbe		Contactor □	Link module	Base plate		it ratings at
HP rating		HP rating			number	Current	part number			480Y/277 A	/
HP)	current (A)	(HP)	current (A)			range (A)				for BM3RSB	
-	-	-	-	BM3RSB-P16	BM3RHB-P16	0.1-0.16	SC-M01, M01/G			65	65
							SC-E02		BZ0BPRE22A		
							SC-E02/G		BZ0BPRE22A		
-	-	-	-	BM3RSB-P25	BM3RHB-P25	0.16-0.25	SC-M01, M01/G			65	65
							SC-E02		BZ0BPRE22A		
							SC-E02/G		BZ0BPRE22A		
•	-	-	-	BM3RSB-P40	BM3RHB-P40	0.25-0.4	SC-M01, M01/G			65	65
							SC-E02		BZ0BPRE22A		
				DMODOD DOO	DMODUD DOG	0.4.0.00	SC-E02/G		BZ0BPRE22A	05	05
-	-	-	-	BM3RSB-P63	BM3RHB-P63	0.4-0.63	SC-M01, M01/G			65	65
							SC-E02		BZ0BPRE22A		
	_			DMODOD 004	DMODUD 004	0.00.4	SC-E02/G		BZ0BPRE22A	05	05
-	-	-	-	BM3H2B-001	BM3RHB-001	0.63-1	SC-M01, M01/G			65	65
							SC-E02		BZ0BPRE22A		
		3/4	1.6	DMODOD 4DC	BM3RHB-1P6	1.1.0	SC-E02/G		BZ0BPRE22A	0.5	65
-	-	3/4	1.0	BINISHSB-1P6	BINISKUB-150	1-1.6	SC-M01, M01/G			65	05
							SC-E02 SC-E02/G		BZ0BPRE22A		
1/2	2.2	1	2.1	DMODED ODE	BM3RHB-2P5	1605	SC-E02/G SC-M01, M01/G		BZ0BPRE22A	50	65
1/2	2.2	ı	2.1	DIVISHSD-2PS	DIVISHID-2PS	1.0-2.5	SC-E02		BZ0BPRE22A	50	00
							SC-E02/G				
3/4	3.2	2	3.4	DM2DCD 004	BM3RHB-004	254	SC-E02/G SC-M01, M01/G		BZ0BPRE22A	50	65
3/4	3.2	2	3.4	DIVISASE-004	DIVISAND-UU4	2.3-4	SC-E02		BZ0BPRE22A	50	00
							SC-E02/G		BZ0BPRE22A		
1-1/2	6	3	4.8	RM3RSR-6D3	BM3RHB-6P3	4-63	SC-M01, M01/G			50	65
1-1/2	o l	3	4.0	DINIGHTSD-0F3	DIVISITI D-0F3	4-0.5	SC-E02		BZ0BPRE22A	30	03
							SC-E02/G		BZ0BPRE22A		
_	_	5	7.6	BM3RSB-010	BM3RHB-010	6.3-10	SC-M02, M02/G			25	65
			7.0	S.III.OT.IO.D. 0.10		0.0 10	SC-E02		BZ0BPRE22A		
							SC-E02/G		BZ0BPRE22A		
3	9.6	-	-	BM3RSB-010	BM3RHB-010	6.3-10	SC-M02, M02/G			25	65
•	0.0					0.0 .0	SC-E03		BZ0BPRE22A		
							SC-E03/G		BZ0BPRE22A		
-	-	7-1/2	11	BM3RSB-013	BM3RHB-013	10-13	SC-E03		BZ0BPRE22A	25	65
							SC-E03/G		BZ0BPRE22A		
5	15.2	10	14	BM3RSB-016	BM3RHB-016	11-16	SC-E04		BZ0BPRE22A	25	65
							SC-E04/G		BZ0BPRE22A		
5	15.2	10	14	BM3RSB-020	BM3RHB-020	14-20	SC-E04		BZ0BPRE22A	25	65
		-					SC-E04/G		BZ0BPRE22A		
7-1/2	22	15	21	BM3RSB-025	BM3RHB-025	18-25	SC-E05		BZ0BPRE22A	25	50
							SC-E05/G		BZ0BPRE22A		
10	28	20	27	BM3RSB-032	BM3RHB-032	24-32	SC-E1		BZ0BPRE32A	25	50
-		_					SC-E1/G		BZ0BPRE32A	_	

To make an application for Type F condition, You need to prepare BZ0TCRE and BZ0TKUAB accessories separately.

Quick reference guide

• BM3VSB, BM3VHB (General)

220-2	240V AC	440-48	BOV AC	M	MS part numbe	r	Contactor □	Link module	Base plate
HP rating	Rated	HP rating	Rated	Part n	Part number		part number		
(HP)	current (A)	(HP)	current (A)			range (A)			
3	9.6	5	7.6	BM3VSB-010	BM3VHB-010	6.3-10	SC-E1	BZ0LVE51AA	BZ0BPVE51A
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A
3	9.6	7-1/2	11	BM3VSB-013	BM3VHB-013	10-13	SC-E1	BZ0LVE51AA	BZ0BPVE51A
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A
5	15.2	10	14	BM3VSB-016	BM3VHB-016	11-16	SC-E1	BZ0LVE51AA	BZ0BPVE51A
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A
5	15.2	10	14	BM3VSB-020	BM3VHB-020	14-20	SC-E1	BZ0LVE51AA	BZ0BPVE51A
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A
7-1/2	22	15	21	BM3VSB-025	BM3VHB-025	18-25	SC-E1	BZ0LVE51AA	BZ0BPVE51A
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A
10	28	20	27	BM3VSB-032	BM3VHB-032	24-32	SC-E1	BZ0LVE51AA	BZ0BPVE51A
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A
10	28	30	40	BM3VSB-040	BM3VHB-040	28-40	SC-E2	BZ0LVE51AA	BZ0BPVE51A
							SC-E2/G	BZ0LVE51GA	BZ0BPVE51A
15	42	30	40	BM3VSB-050	BM3VHB-050	35-50	SC-E2S	BZ0LVE51AA	BZ0BPVE51A
							SC-E2S/G	BZ0LVE51GA	BZ0BPVE51A
20	54	40	52	BM3VSB-063	BM3VHB-063	45-63	SC-E3	BZ0LVE65AA	BZ0BPVE65A
							SC-E3/G	BZ0LVE65GA	BZ0BPVE65A

• BM3VSB, BM3VHB (Type F coordination)

220-24	40V AC	440-48	30V AC	M	MS part numbe	er	Contactor □	Link module	Base plate	Short-circu	it ratings at
HP rating	Rated	HP rating	Rated	Part	number	Current	part number			480Y/277 A	AC (kA)
(HP)	current (A)	(HP)	current (A)			range (A)				for BM3VSB	for BM3VHB
3	9.6	5	7.6	BM3VSB-010	BM3VHB-010	6.3-10	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	65
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
3	9.6	7-1/2	11	BM3VSB-013	BM3VHB-013	10-13	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	65
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
5	15.2	10	14	BM3VSB-016	BM3VHB-016	11-16	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	65
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
5	15.2	10	14	BM3VSB-020	BM3VHB-020	14-20	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	65
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
7-1/2	22	15	21	BM3VSB-025	BM3VHB-025	18-25	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	65
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
10	28	20	27	BM3VSB-032	BM3VHB-032	24-32	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	65
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
10	28	30	40	BM3VSB-040	BM3VHB-040	28-40	SC-E2	BZ0LVE51AA	BZ0BPVE51A	25	65
							SC-E2/G	BZ0LVE51GA	BZ0BPVE51A		
15	42	30	40	BM3VSB-050	BM3VHB-050	35-50	SC-E2S	BZ0LVE51AA	BZ0BPVE51A	25	65
							SC-E2S/G	BZ0LVE51GA	BZ0BPVE51A		
20	54	40	52	BM3VSB-063	BM3VHB-063	45-63	SC-E3	BZ0LVE65AA	BZ0BPVE65A	25	65
							SC-E3/G	BZ0LVE65GA	BZ0BPVE65A		

To make an application for Type F condition, You need to prepare BZ0TKUAB accessories separately.

Optional accessories

■ Optional accessories


• Link modules

Description		Applicable	Applicable magnetic contactor	Operating	Туре	Mass
·		MMS		coil		(g)
	The link module connects the	BM3R	SC-M01, M02	AC	BZ0LRC09AA	25
_	manual motor starter and		SC-M01/G, M02/G	DC	BZ0LRC09AA	25
Marie A.	magnetic contactor electrically and		SC-E02, E03, E04, E05	AC	BZ0LRE22AA	25
	mechanically.		SC-E02/G, E03/G, E04/G, E05/G	DC	BZ0LRE22GA	35
			SC-E1	AC	BZ0LRE32AA	45
The second second			SC-E1/G	DC	BZ0LRE32GA	60
		BM3V	SC-E1, E2, E2S	AC	BZ0LVE51AA	45
•			SC-E1/G, E2/G, E2S/G	DC	BZ0LVE51GA	60
			SC-E3	AC	BZ0LVE65AA	65
(No.KK01-153)			SC-E3/G	DC	BZ0LVE65GA	80


Base plates

Descriptio)	Applicable	Applicable magnetic contactor	Operating	Туре	Mass
		MMS		coil		(g)
E =	The bear what is a wheetic what to	BM3R	SC-E02, E03, E04, E05	AC	BZ0BPRE22A	100
4	The base plate is a plastic plate to which the combination starter is		SC-E02/G, E03/G, E04/G, E05/G	DC	BZ0BPRE22A	100
	mounted. The base plate can then		SC-E1	AC	BZ0BPRE32A	160
1	be mounted to a panel with screws		SC-E1/G	DC	BZ0BPRE32A	160
4	or to a DIN rail.	BM3V	SC-E1, E2, E2S	AC	BZ0BPVE51A	160
*1			SC-E1/G, E2/G, E2S/G	DC	BZ0BPVE51A	160
121			SC-E3	AC	BZ0BPVE65A	195
	(No.KK01-155)		SC-E3/G	DC	BZ0BPVE65A	195

■ Combination starter configurations

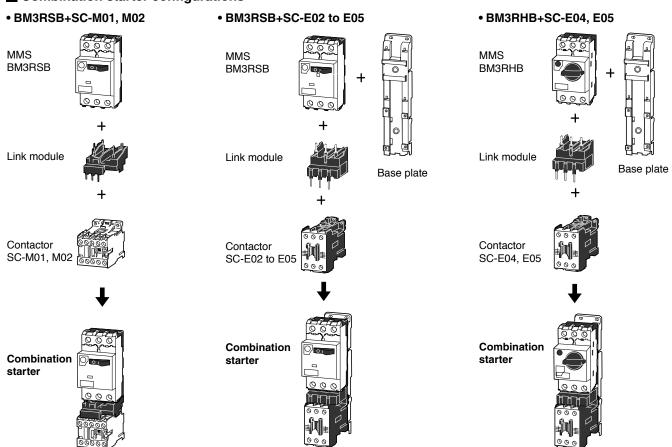

Optional accessories

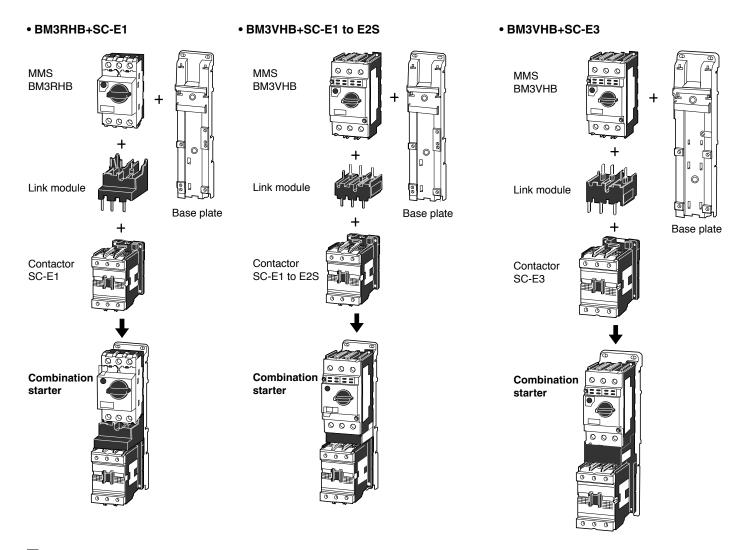


■ Notes for mounting an MMS and contactor

When the manual motor starter and magnetic contactor are configured as a combination starter, the nameplate ends up facing the wrong direction because the coil terminal of the magnetic contactor faces downward. Use the following procedure to turn the nameplate upside down.


For SC-E02 to SC-E05 magnetic contactors

- Insert a flat-blade screwdriver between the arc-chamber of the S phase or V phase and the terminal screw, and lift the arc-chamber to remove it.
- After removing the cover, turn the cover 180 degrees (top to bottom), then re-mount it onto the magnetic contactor.
- Align the cover with the top and bottom terminals and press it on firmly by hand.

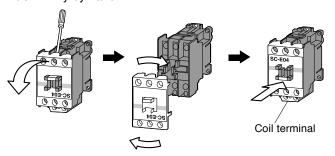


For SC-E1 to SC-E3 magnetic contactors

- Use a Phillips screwdriver to remove the two screws securing the front and back bodies.
- Remove the front body and turn it 180 degrees (top to bottom), then re-mount it with the screws.
- Make sure that no foreign matter enters the interior of the magnetic contactor during this removal and re-mounting procedure.

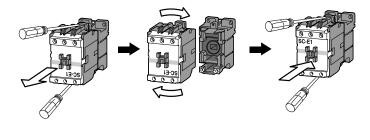

■ Dimensions, mm


• Base plates BZ0BPRE22A

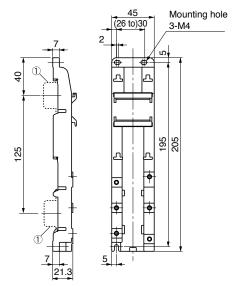

①35mm wide rail (hight 15mm) x 2


Base plate	Applicable type				
type	MMS	Contactor			
BZ0BPRE22A	BM3RSB	SC-E02, E03, E04, E05			
	BM3RHB	E02/G, E03/G, E04/G, E05/G			

BZ0BPVE51A

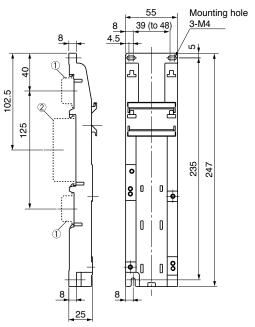


①35mm wide rail (hight 15mm) x 2 275mm wide rail (hight 25mm) x 1

Base plate	Applicable type		
type	MMS	Contactor	
BZ0BPVE51A	BM3VSB	SC-E1, E2, E2S,	
	ВМЗУНВ	E1/G, E2/G, E2S/G	

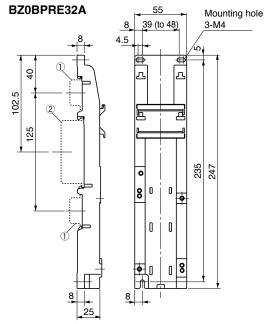

①35mm wide rail (hight 15mm) x 2 ②75mm wide rail (hight 25mm) x 1

Base plate	Applicable type		
type	MMS	Contactor	
BZ0BPRE32A	BM3RSB	SC-E1, E1/G	
	BM3RHB		

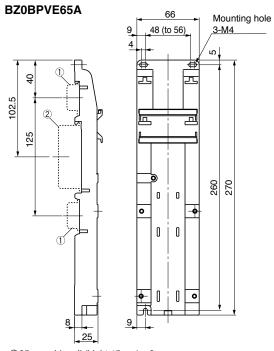

①35mm wide rail (hight 15mm) x 2 ②75mm wide rail (hight 25mm) x 1

	(3 /		
Base plate	Applicable type		
type	MMS	Contactor	
BZ0BPVE65A	BM3VSB	SC-E3, E3/G	
	вмзунв		


Dimensions

■ Dimensions, mm

Combination


BM3RSB + SC-M01, M02

+ SC-M01/G, SC-M02/G

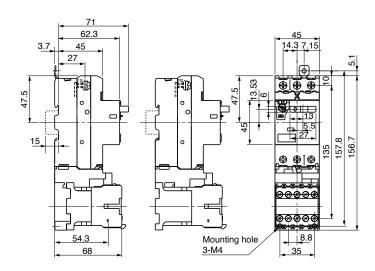


MMS	Contactors	Link module	Mass(g)
BM3RSB	SC-M01, M02	BZ0LRC09AA	540
	SC-M01/G, SC-M02/G	BZ0LRC09AA	600

BM3RSB + SC-E02 to E05

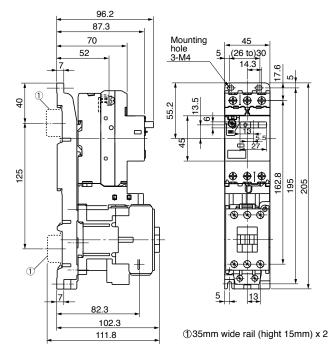


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RSB	SC-E02, E03, E04, E05	BZ0LRE22AA	BZ0BPRE22A	820

BM3RSB + SC-E02/G to E05/G

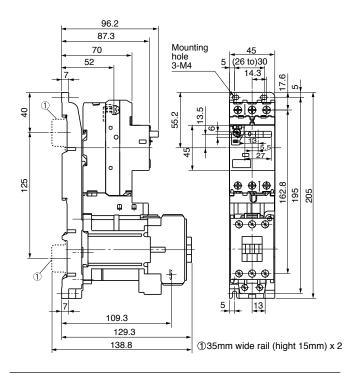


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RSB	SC-E02/G, E03/G, E04/G, E05/G	BZ0LRE22GA	BZ0BPRE22A	1,065

■ Dimensions, mm • Combination BM3RSB + SC-E1

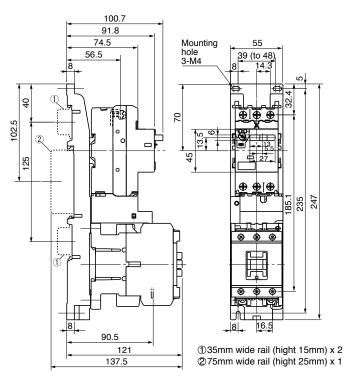


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RSB	SC-E1	BZ0LRE32AA	BZ0BPRE32A	1,135

BM3RSB + SC-E1/G

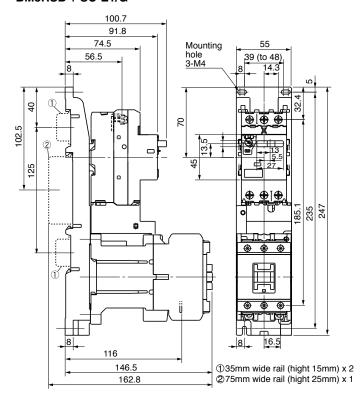


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RSB	SC-E1/G	BZ0LRE32GA	BZ0BPRE32A	1,360

BM3RHB + SC-E02 to E05

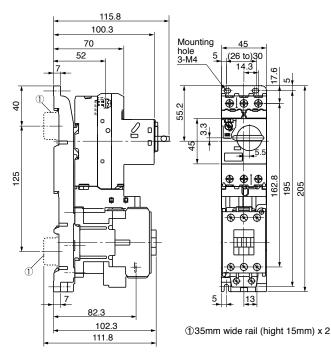

MMS	Contactors	Link module	Base plate	Mass (g)
BM3RHB	SC-E02, E03, E04, E05	BZ0LRE22AA	BZ0BPRE22A	840

BM3RHB + SC-E02/G to E05/G

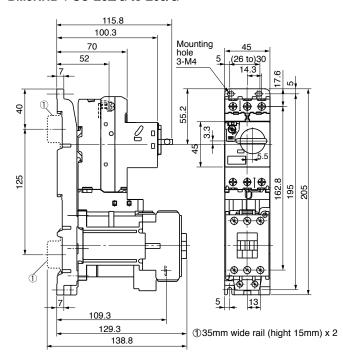


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RHB	SC-E02/G, E03/G, E04/G, E05/G	BZ0LRE22GA	BZ0BPRE22A	1,085

Dimensions

■ Dimensions, mm


Combination



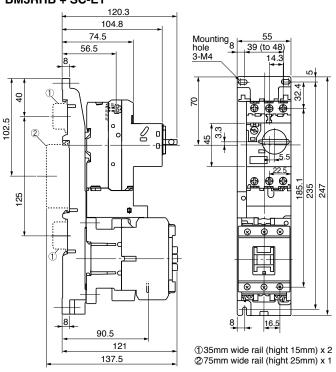


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RHB	SC-E1	BZ0LRE32AA	BZ0BPRE32A	1,155

BM3RHB + SC-E1/G

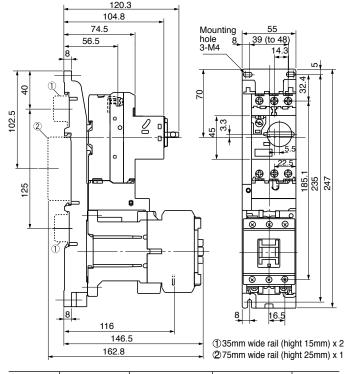


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RHB	SC-E1/G	BZ0LRE32GA	BZ0BPRE32A	1,380

BM3V□B + SC-E1, E2, E2S

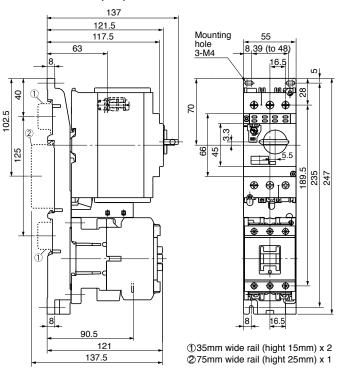

MMS	Contactors	Link module	Base plate	Mass (g)
BM3VSB	SC-E1, E2, E2S	BZ0LVE51AA	BZ0BPVE51A	1,580
BM3VHB				

BM3V□B + SC-E1/G, E2/G, E2S/G

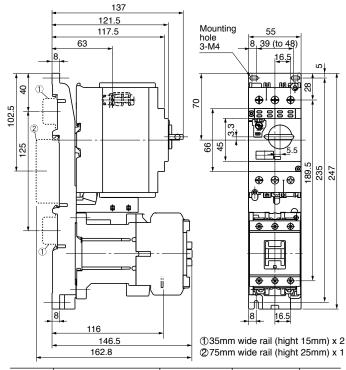


MMS	Contactors	Link module	Base plate	Mass (g)
BM3VSB	SC-E1/G, E2/G, E2S/G	BZ0LVE51GA	BZ0BPVE51A	1,810
BM3VHB				

Combination Starters Dimensions


■ Dimensions, mm

• Combination BM3V□B + SC-E3

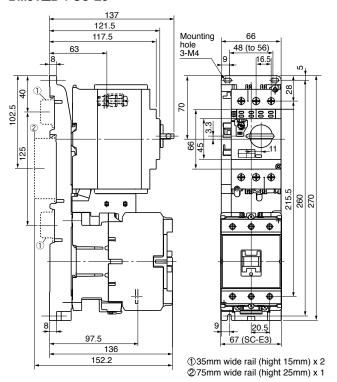

MMS	Contactors	Link module	Base plate	Mass (g)
BM3VSB	SC-E3	BZ0LVE65AA	BZ0BPVE65A	2,080
BM3VHB				

BM3V□B + SC-E3/G

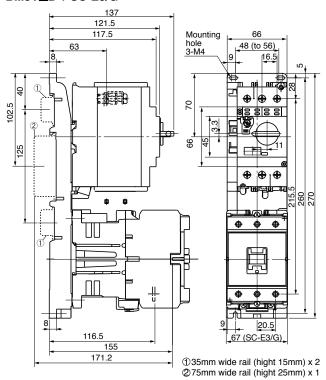


MMS	Contactors	Link module	Base plate	Mass (g)
BM3VSB	SC-E3/G	BZ0LVE65GA	BZ0BPVE65A	2,400
BM3VHB				


Dimensions

■ Dimensions, mm

• Type F combination BM3RSB + SC-M01, M02, M01/G, M02/G

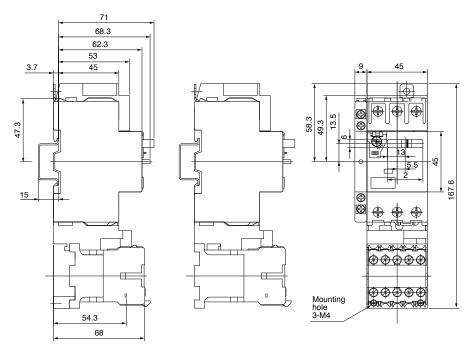

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-M01, M02	BZ0TCRE	BZ0TKUAB	BZ0LRC09AA	-	615
BM3RSB	SC-M01/G, M02/G	BZ0TCRE	BZ0TKUAB	BZ0LRC09AA	-	675

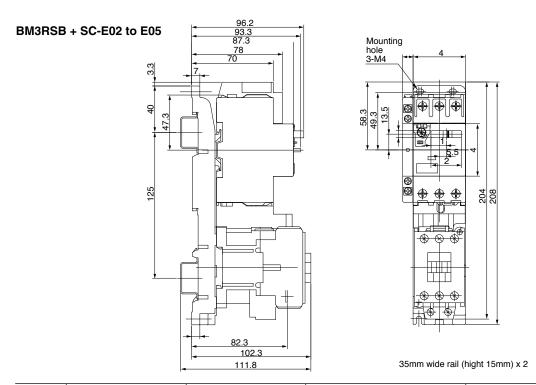


MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-E02, E03, E04, E05	BZ0TCRE	BZ0TKUAB	BZ0LRE22AA	BZ0BPRE22A	895


■ Dimensions, mm

• Type F combination

BM3RSB + SC-E02/G to E05/G

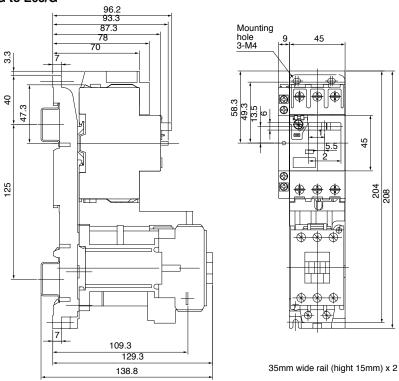


MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-E02/G, E03/G, E04/G, E05/G	BZ0TCRE	BZ0TKUAB	BZ0LRE22GA	BZ0BPRE22A	1,160

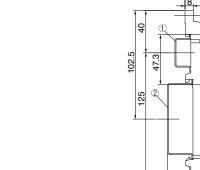

BM3RSB + SC-E1




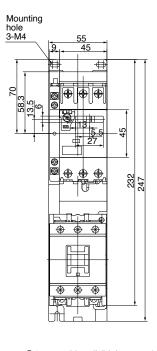

①35mm wide rail (hight 15mm) x 2 ②75mm wide rail (hight 25mm) x 1


MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-E1	BZ0TCRE	BZ0TKUAB	BZ0LRE32AA	BZ0BPRE32A	1,230

Dimensions

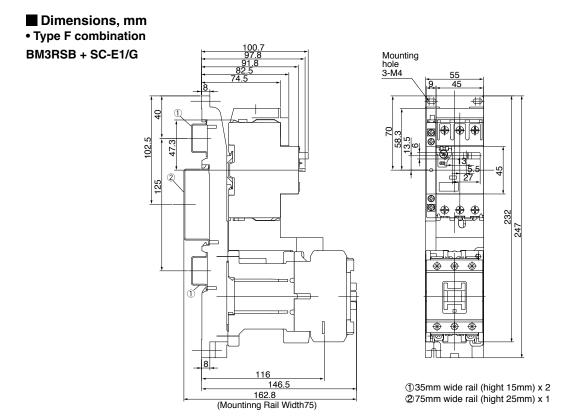

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-E1/G	BZ0TCRE	BZ0TKUAB	BZ0LRE32GA	BZ0BPRE32A	1,455


BM3RHB + SC-M01, M02, M01/G, M02/G

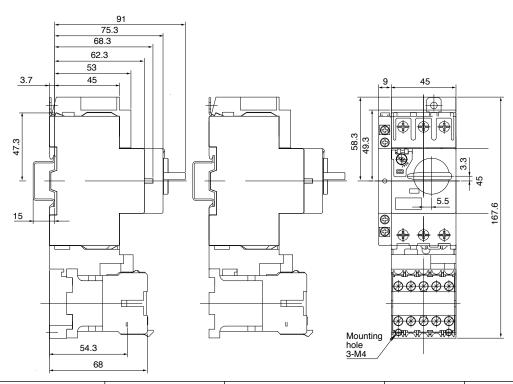

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-M01, M02	BZ0TCRE	BZ0TKUAB	BZ0LRC09AA	-	635
BM3RHB	SC-M01/G, M02/G	BZ0TCRE	BZ0TKUAB	BZ0LRC09AA	-	695


■ Dimensions, mm

• Type F combination

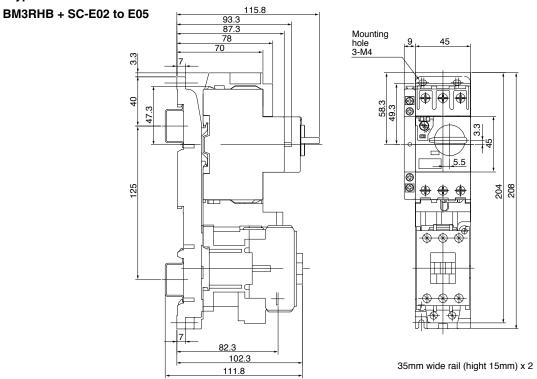

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-E02, E03, E04, E05	BZ0TCRE	BZ0TKUAB	BZ0LRE22AA	BZ0BPRE22A	915

BM3RHB + SC-E02/G to E05/G

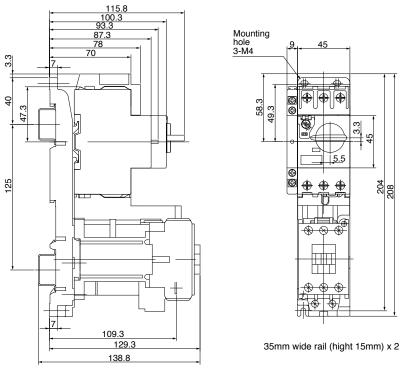



MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-E02/G, E03/G, E04/G, E05/G	BZ0TCRE	BZ0TKUAB	BZ0LRE22GA	BZ0BPRE22A	1,160

Dimensions

■ Dimensions, mm • Type F combination


BM3RHB + SC-E1

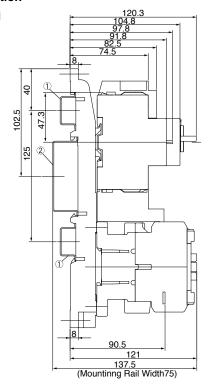


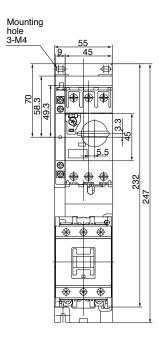

①35mm wide rail (hight 15mm) x 2 ②75mm wide rail (hight 25mm) x 1

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-E1	BZ0TCRE	BZ0TKUAB	BZ0LRE32AA	BZ0BPRE32A	1,230

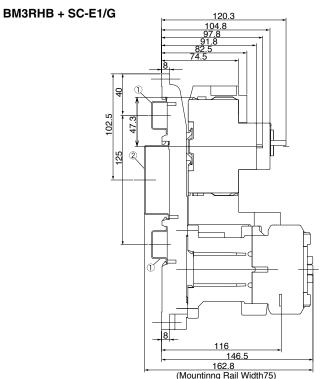

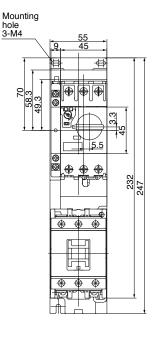


①35mm wide rail (hight 15mm) x 2

r	(Mountinng Rail Width75)	Ø75mm wide rall (night 25mm) x 1

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-E1/G	BZ0TCRE	BZ0TKUAB	BZ0LRE32GA	BZ0BPRE32A	1,455


■ Dimensions, mm


• Type F combination

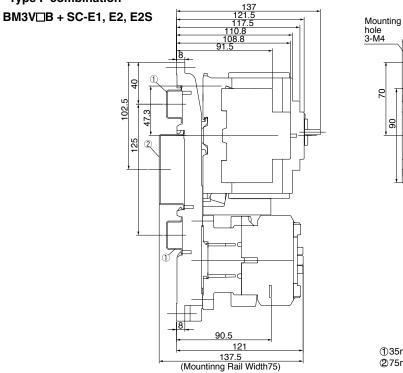

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3VSB,VHB	SC-E1,E2,E2S	-	BZ0TKUAB	BZ0LVE51AA	BZ0BPVE51A	1,625

BM3V□B + SC-E1/G, E2/G, E2S/G

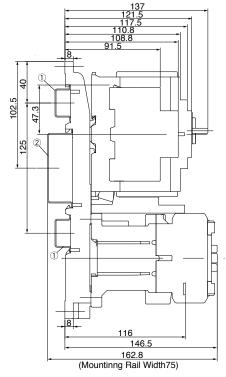

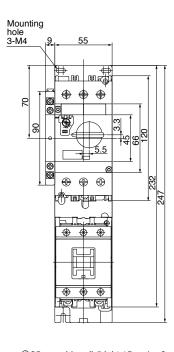

①35mm wide rail (hight 15mm) x 2

275mm wide rail (hight 25mm) x 1


8

①35mm wide rail (hight 15mm) x 2 ②75mm wide rail (hight 25mm) x 1

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3VSB,VHB	SC-E1/G,E2/G,E2S/G	=	BZ0TKUAB	BZ0LVE51GA	BZ0BPVE51A	1,855


Dimensions

Dimensions, mmType F combinationBM3V□B + SC-E3

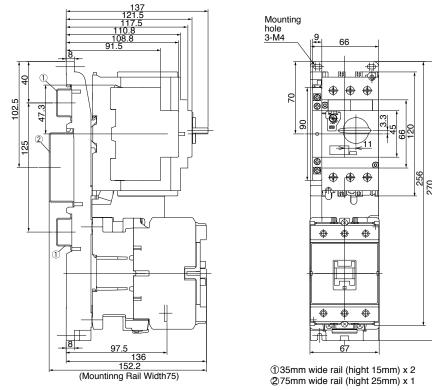

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3VSB,VHB	SC-E3	-	BZ0TKUAB	BZ0LVE65AA	BZ0BPVE65A	2,125

BM3V□B + SC-E3/G

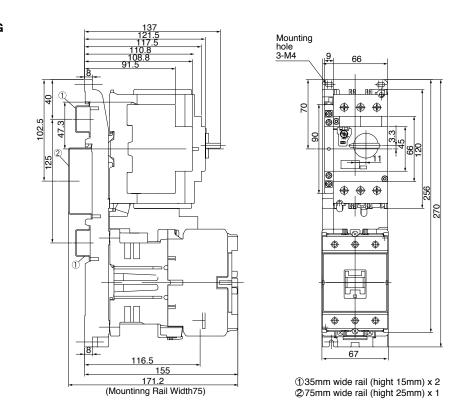

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3VSB,VHB	SC-E3/G	-	BZ0TKUAB	BZ0LVE65GA	BZ0BPVE65A	2,445

List Price for BM3 Series Manual Motor Starters

32A Frame types

Stand	lard breaking capacity	•	High breaking capacity				
Part number	Discount code	List Price	Part number	Discount code	List Price		
BM3RSB-P16	D14	80.00	BM3RHB-P16	D14	100.00		
BM3RSB-P25	D14	80.00	BM3RHB-P25	D14	100.00		
BM3RSB-P40	D14	80.00	BM3RHB-P40	D14	100.00		
BM3RSB-P63	D14	80.00	BM3RHB-P63	D14	100.00		
BM3RSB-001	D14	80.00	BM3RHB-001	D14	100.00		
BM3RSB-1P6	D14	80.00	BM3RHB-1P6	D14	100.00		
BM3RSB-2P5	D14	80.00	BM3RHB-2P5	D14	100.00		
BM3RSB-004	D14	80.00	BM3RHB-004	D14	100.00		
BM3RSB-6P3	D14	80.00	BM3RHB-6P3	D14	100.00		
BM3RSB-010	D14	90.00	BM3RHB-010	D14	110.00		
BM3RSB-013	D14	90.00	BM3RHB-013	D14	110.00		
BM3RSB-016	D14	90.00	BM3RHB-016	D14	110.00		
BM3RSB-020	D14	90.00	BM3RHB-020	D14	110.00		
BM3RSB-025	D14	100.00	BM3RHB-025	D14	120.00		
BM3RSB-032	D14	150.00	BM3RHB-032	D14	170.00		

63A Frame types

Sta	ndard breaking capacit	У	High breaking capacity			
Part number	Discount code	List Price	Part number	Discount code	List Price	
BM3VSB-010	D14	170.00	BM3VHB-010	D14	260.00	
BM3VSB-013	D14	170.00	BM3VHB-013	D14	260.00	
BM3VSB-016	D14	170.00	BM3VHB-016	D14	260.00	
BM3VSB-020	D14	170.00	BM3VHB-020	D14	260.00	
BM3VSB-025	D14	190.00	BM3VHB-025	D14	290.00	
BM3VSB-032	D14	210.00	BM3VHB-032	D14	310.00	
BM3VSB-040	D14	210.00	BM3VHB-040	D14	310.00	
BM3VSB-050	D14	230.00	BM3VHB-050	D14	330.00	
BM3VSB-063	D14	230.00	BM3VHB-063	D14	330.00	

List Price for BM3 Series Manual Motor Starters accessories

Part number	Description	Discount code	List Price
Auxliary contact	block (W)		
BZ0WIA	Front mounting Auxiliary contact - Internal type 1NO	D14	8.50
BZ0WIB	Front mounting Auxiliary contact - Internal type 1NC	D14	8.50
3Z0WUAAL	Left side mounting Auxiliary contact - Lateral type 2NO	D14	12.00
BZ0WUABL	Left side mounting Auxiliary contact - Lateral type 1NO+1NC	D14	12.00
BZ0WUBBL	Left side mounting Auxiliary contact - Lateral type 2NC	D14	12.00
BZ0WUAAR	Right side mounting Auxiliary contact - Lateral type 2NO	D14	12.00
BZ0WUABR	Right side mounting Auxiliary contact - Lateral type 1NO+1NC	D14	12.00
BZ0WUBBR	Right side mounting Auxiliary contact - Lateral type 2NC	D14	12.00
Alarm contact b		1	•
BZ0KIA	Front (right side only) mounting Alarm contact - Internal type 1NO	D14	9.00
BZ0KIB	Front (right side only) mounting Alarm contact - Internal type 1NC	D14	9.00
Auxliary and ala	rm contact blocks (WK)		
BZ0WKUAA	Left side mounting Auxiliary and Alarm contact 1NO(Aux.)+1NO(Alarm)	D14	18.00
BZ0WKUBA	Left side mounting Auxiliary and Alarm contact 1NC(Aux.)+1NO(Alarm)	D14	18.00
BZ0WKUAB	Left side mounting Auxiliary and Alarm contact 1NO(Aux.)+1NC(Alarm)	D14	18.00
BZ0WKUBB	Left side mounting Auxiliary and Alarm contact 1NC(Aux.)+1NC(Alarm)	D14	18.00
	rm contact block (KI)	1 2	10.00
BZ0TKUAB	Left side mounting Short Circuit Alarm contact 1NO+1NC	D14	20.00
Shunt trip device	·	1	
BZ0FAZU	Right side mounting Shunt trip / Coil voltage 24VAC 50/60Hz	D14	34.00
BZ0FBZU	Right side mounting Shunt trip / Coil voltage 48VAC 60Hz	D14	34.00
BZ0FCZU	Right side mounting Shunt trip / Coil voltage 48VAC 50Hz / 60VAC 60Hz	D14	34.00
BZ0F1ZU	Right side mounting Shunt trip / Coil voltage 100VAC 50Hz / 100-110VAC 60Hz	D14	34.00
BZ0FDZU	Right side mounting Shunt trip / Coil voltage 110-127VAC 50Hz / 120VAC 60Hz	D14	34.00
BZ0FEZU	Right side mounting Shunt trip / Coil voltage 200VAC 50Hz / 200-220VAC 60Hz	D14	34.00
BZ0FFZU	Right side mounting Shunt trip / Coil voltage 220-230VAC 50Hz / 240-260VAC 60Hz	D14	34.00
BZ0FGZU	Right side mounting Shunt trip / Coil voltage 240VAC 50Hz / 277VAC 60Hz	D14	34.00
BZ0FHZU	Right side mounting Shunt trip / Coil voltage 380-400VAC 50Hz / 400-440VAC 60Hz	D14	34.00
3Z0F4ZU	Right side mounting Shant trip / Coil voltage 415-440VAC 50Hz / 460-480VAC 60Hz	D14	34.00
3Z0FJZU	Right side mounting Shart trip / Coil voltage 500VAC 50Hz / 600VAC 60Hz	D14	34.00
BZ0FKZUD	Right side mounting Shart trip / Coil voltage 24-60VDC	D14	34.00
3Z0FLZUD	Right side mounting Shart trip / Coil voltage 110-240VDC	D14	34.00
Jndervoltage tri	<u> </u>	J D14	34.00
BZ0RAZ1U	Right side mounting Undervoltage trip / Coil voltage 24VAC 50Hz	D14	34.00
BZORAZIO BZORAZ2U	Right side mounting Undervoltage trip / Coil voltage 24VAC 50112	D14	34.00
	Right side mounting Undervoltage trip / Coil voltage 24VAC 50Hz	1	
BZORBZ1U		D14	34.00
BZORBZU	Right side mounting Undervoltage trip / Coil voltage 48VAC 60Hz	D14	34.00
BZOR1ZU	Right side mounting Undervoltage trip / Coil voltage 100VAC 50Hz / 100-110VAC 60Hz	D14	34.00
BZORDZU	Right side mounting Undervoltage trip / Coil voltage 110-127VAC 50Hz / 120VAC 60Hz	D14	34.00
BZ0REZU	Right side mounting Undervoltage trip / Coil voltage 200VAC 50Hz / 200-220VAC 60Hz	D14	34.00
BZ0RFZU	Right side mounting Undervoltage trip / Coil voltage 220-230VAC 50Hz / 240-260VAC 60Hz	D14	34.00
BZ0RGZU	Right side mounting Undervoltage trip / Coil voltage 240VAC 50Hz / 277VAC 60Hz	D14	34.00
BZ0RHZU	Right side mounting Undervoltage trip / Coil voltage 380-400VAC 50Hz / 400-440VAC 60Hz	D14	34.00
3Z0R4ZU	Right side mounting Undervoltage trip / Coil voltage 415-440VAC 50Hz / 460-480VAC 60Hz	D14	34.00
BZ0RJZU	Right side mounting Undervoltage trip / Coil voltage 500VAC 50Hz / 600VAC 60Hz	D14	34.00
External operation		544	
BZ0VBBL	External operating handle Standard type (Black) for BM3RH	D14	40.00
3Z0VYRL	External operating handle Emergency type (Red / Yellow) for BM3RH	D14	45.00
3Z0VBBM	External operating handle Standard type (Black) for BM3V	D14	40.00
BZ0VYRM	External operating handle Emergency type (Red / Yellow) for BM3V	D14	45.00
ine side termin			
BZ0TCRE	Line side terminal cover for BM3R	D14	18.00
Others			T
BZ0SET	Push-in lug for BM3R (10pcs/pack)	D14	8.00
BZ0TCV	IP 20 Terminal cover for BM3V (6pcs/pack)	D14	12.00
BZ0CFG	Dummy cover (10pcs/pack)	D14	40.00

List Price for BM3 Series Manual Motor Starters accessories

Part number	Description	Discount code	List Price
Busbar system			
BZ0BR02A	Busbar / 2-BM3R, modular space : 45mm	D14	19.00
BZ0BR03A	Busbar / 3-BM3R, modular space : 45mm	D14	23.00
BZ0BR04A	Busbar / 4-BM3R, modular space : 45mm	D14	27.00
BZ0BR05A	Busbar / 5-BM3R, modular space : 45mm	D14	28.00
BZ0BR12A	Busbar / 2-BM3R+1(9mm) external accessory, modular space : 54mm	D14	20.00
BZ0BR13A	Busbar / 3-BM3R+1(9mm) external accessory, modular space : 54mm	D14	24.00
BZ0BR14A	Busbar / 4-BM3R+1(9mm) external accessory, modular space : 54mm	D14	28.00
BZ0BR15A	Busbar / 5-BM3R+1(9mm) external accessory, modular space : 54mm	D14	30.00
BZ0BR22A	Busbar / 2-BM3R+1(18mm) or 2(9mm) external accessories, modular space : 63mm	D14	44.00
BZ0BR24A	Busbar / 4-BM3R+1(18mm) or 2(9mm) external accessories, modular space : 63mm	D14	54.00
BZ0BV02A	Busbar / 2-BM3V, modular space : 55mm	D14	42.00
BZ0BV03A	Busbar / 3-BM3V, modular space : 55mm	D14	53.00
BZ0BV04A	Busbar / 4-BM3V, modular space : 55mm	D14	65.00
BZ0BV12A	Busbar / 2-BM3V+1(9mm) external accessory, modular space : 64mm	D14	46.00
BZ0BV13A	Busbar / 3-BM3V+1(9mm) external accessory, modular space : 64mm	D14	59.00
BZ0BV14A	Busbar / 4-BM3V+1(9mm) external accessory, modular space : 64mm	D14	70.00
BZ0BV22A	Busbar / 2-BM3V+1(18mm) or 2(9mm) external accessories, modular space : 73mm	D14	50.00
BZ0BV24A	Busbar / 4-BM3V+1(18mm) or 2(9mm) external accessories, modular space : 73mm	D14	78.00
BZ0BFRA	3-phase feed-in terminal for BM3R	D14	23.00
BZ0BFVA	3-phase feed-in terminal for BM3V	D14	48.00
BZ0BCRA	Busbar cover for BZ0BR (pin connection)	D14	6.00
BZ0BCRB	Busbar cover for BZ0BR (fork connection)	D14	6.00
BZ0BCVA	Busbar cover for BZ0BV (pin connection)	D14	8.00
Enclosure		5	
BZ0CSLA	Enclosure Surface mounting type IP41	D14	40.00
BZ0CSLB	Enclosure Surface mounting type IP55 with conversion kits	D14	57.00
BZ0CFLA	Enclosure Flush mounting type IP41	D14	40.00
BZ0CFLB	Enclosure Flush mounting type IP55 with conversion kits	D14	51.00
BZ0CKA	Padlocking device	D14	30.00
BZ0CPM	Emergency pushbutton / Momentary	D14	39.00
BZ0CPL	Emergency pushbutton / Puch-lock turn reset	D14	40.00
BZ0CPK	Emergency pushbutton / Key operated Conversion kit from IP41 to IP55	D14 D14	82.00
BZ0CCA BZ0CUA		D14	12.00 11.00
BZ0CNA	Adapter set Neutral connector	D14	4.00
BZ0CNA BZ0CLGA	Indication Lamp / Green, 100-120VAC	D14	33.00
BZ0CLGA BZ0CLGB	Indication Lamp / Green, 200-240VAC	D14	33.00
BZ0CLGB BZ0CLGC	Indication Lamp / Green, 380-440VAC	D14	33.00
BZ0CLGC BZ0CLGD	Indication Lamp / Green, 480-500VAC	D14	33.00
BZ0CLGE BZ0CLGE	Indication Lamp / Green, 500-600VAC	D14	33.00
BZ0CLRA	Indication Lamp / Red, 100-120VAC	D14	33.00
BZ0CLRB	Indication Lamp / Red, 200-240VAC	D14	33.00
BZ0CLRC	Indication Lamp / Red, 380-440VAC	D14	33.00
BZ0CLRD	Indication Lamp / Red, 480-500VAC	D14	33.00
BZ0CLRE	Indication Lamp / Red, 500-600VAC	D14	33.00
BZ0CLCA	Indication Lamp / Transparent, 100-120VAC	D14	33.00
BZ0CLCB	Indication Lamp / Transparent, 100 120 VAC	D14	33.00
BZ0CLCC	Indication Lamp / Transparent, 200-240VAC	D14	33.00
BZ0CLCD	Indication Lamp / Transparent, 480-500VAC	D14	33.00
	i maioanon Eamp / manoparoni, 700 000 MO	, DIT	1 55.00

List Price for SC-E Series Contactors and TK-E Series Overload Relays and accessories

List Price for SC-E Series Contactors and TK-E Series Overload Relays

Contactors Overload Relays

	AC operating co	il		DC operating co	il	Overload Relays			
Part number	Discount code	List Price	Part number	Discount code	List Price	Part number	Discount code	List Price	
SC-M01	D14	40.00	SC-M01/G	D14	57.00	-	-	-	
SC-M02	D14	40.00	SC-M02/G	D14	57.00	-	-	-	
SC-E02	D14	33.00	SC-E02/G	D14	38.00	TK-E02	D14	42.00	
SC-E03	D14	40.00	SC-E03/G	D14	60.00	TK-E02	D14	42.00	
SC-E04	D14	54.00	SC-E04/G	D14	80.00	TK-E02	D14	42.00	
SC-E05	D14	65.00	SC-E05/G	D14	94.00	TK-E02	D14	42.00	
SC-E1	D14	78.00	SC-E1/G	D14	99.00	TK-E2	D14	80.00	
SC-E2	D14	108.00	SC-E2/G	D14	130.00	TK-E2	D14	80.00	
SC-E2S	D14	130.00	SC-E2S/G	D14	158.00	TK-E2	D14	80.00	
SC-E3	D14	140.00	SC-E3/G	D14	175.00	TK-E3	D14	90.00	
SC-E4	D14	160.00	SC-E4/G	D14	200.00	TK-E3	D14	90.00	
Super magnet	operating coil								
SC-E5	D14	360.00				TK-E5	D14	100.00	
SC-E6	D14	460.00				TK-E6	D14	148.00	
SC-E7	D14	535.00				TK-E6	D14	148.00	
						TK-E6H	D14	148.00	

List Price for SC-E Series Contactors and TK-E Series Overload Relays accessories

Part number	Description	Discount code	List Price
Auxliary contact	t block		
SZ-MA40	Front mounting Auxliary contact block (4NO) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA31	Front mounting Auxliary contact block (3NO+1NC) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA22	Front mounting Auxliary contact block (2NO+2NC) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA13	Front mounting Auxliary contact block (1NO+3NC) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA04	Front mounting Auxliary contact block (4NC) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA20	Front mounting Auxliary contact block (2NO) for SC-M01(/G), SC-M02(/G)	D14	25.00
SZ-MA11	Front mounting Auxliary contact block (1NO+1NC) for SC-M01(/G), SC-M02(/G)	D14	25.00
SZ-MA02	Front mounting Auxliary contact block (2NC) for SC-M01(/G), SC-M02(/G)	D14	25.00
SZ-MAS10	Side mounting Auxliary contact block (1NO) for SC-M01(/G), SC-M02(/G)	D14	15.00
SZ-MAS01	Side mounting Auxliary contact block (1NC) for SC-M01(/G), SC-M02(/G)	D14	15.00
SZ-A40/T	Front mounting Auxliary contact block (4NO) for SC-E02(/G) to SC-E4(/G)	D14	20.00
SZ-A31/T	Front mounting Auxliary contact block (3NO+1NC) for SC-E02(/G) to SC-E4(/G)	D14	20.00
SZ-A22/T	Front mounting Auxliary contact block (2NO+2NC) for SC-E02(/G) to SC-E4(/G)	D14	20.00
SZ-A20/T	Front mounting Auxliary contact block (2NO) for SC-E02(/G) to SC-E4(/G)	D14	14.00
SZ-A11/T	Front mounting Auxliary contact block (1NO+1NC) for SC-E02(/G) to SC-E4(/G)	D14	14.00
SZ-A02/T	Front mounting Auxliary contact block (2NC) for SC-E02(/G) to SC-E4(/G)	D14	14.00
SZ-AS1/T	Side mounting Auxliary contact block (1NO+1NC) for SC-E02(/G) to SC-E4(/G)	D14	22.00
SZ-AS2/T	Side mounting Auxliary contact block (1NO+1NC) for SC-E5 to SC-E7	D14	22.00
Main circuit sur	ge suppression unit		
SZ-ZM1E	Front mounting Main circuit surge suppression unit for SC-E02(/G) to SC-E05(/G)	D14	38.00
SZ-ZM2E	Side mounting Main circuit surge suppression unit for SC-E02(/G) to SC-E05(/G)	D14	38.00
SZ-ZM3E	Front mounting Main circuit surge suppression unit for SC-E1(/G) to SC-E4(/G)	D14	40.00
SZ-ZM4E	Side mounting Main circuit surge suppression unit for SC-E1(/G) to SC-E4(/G)	D14	40.00

List Price for SC-E Series Contactors and TK-E Series Overload Relays accessories

List Price for SC-E Series Contactors and TK-E Series Overload Relays accessories

Part number	Description	Discount code	List Price
Coil surge suppr			ı
SZ-MZ1	Coil surge suppression unit CR type 12-60VAC for SC-M01, SC-M02	D14	5.00
SZ-MZ2	Coil surge suppression unit CR type 72-250VAC for SC-M01, SC-M02	D14	5.00
SZ-MZ3	Coil surge suppression unit Diode type 6-250VDC for SC-M01/G, SC-M02/G	D14	5.00
SZ-Z1	Coil surge suppression unit Varistor type 24-48VAC/DC for SC-E02(/G) to SC-E05(/G)	D1	13.00
SZ-Z2	Coil surge suppression unit Varistor type 100-250VAC/DC for SC-E02(/G) to SC-E05(/G)	D1	13.00
SZ-Z3	Coil surge suppression unit Varistor type 380-440VAC/DC for SC-E02 to SC-E05	D1	13.00
SZ-Z6	Coil surge suppression unit Varistor type 24-48VAC/DC with LED for SC-E02(/G) to SC-E05(/G)	D1	17.00
SZ-Z7	Coil surge suppression unit Varistor type 100-250VAC/DC with LED for SC-E02(/G) to SC-E05(/G)	D1	17.00
SZ-Z31	Coil surge suppression unit Varistor type 24-48VAC/DC for SC-E1(/G) to SC-E4(/G)	D1	22.00
SZ-Z32	Coil surge suppression unit Varistor type 100-250VAC/DC for SC-E1(/G) to SC-E4(/G)	D1	22.00
SZ-Z33	Coil surge suppression unit Varistor type 380-440VAC/DC for SC-E1 to SC-E4	D1	22.00
SZ-Z4	Coil surge suppression unit CR type 24-48VAC/DC for SC-E02(/G) to SC-E05(/G)	D1	13.00
SZ-Z5	Coil surge suppression unit CR type 100-250VAC/DC for SC-E02(/G) to SC-E05(/G)	D1	13.00
SZ-Z8	Coil surge suppression unit CR type 24-48VAC/DC with LED for SC-E02(/G) to SC-E05(/G)	D1	17.00
SZ-Z9	Coil surge suppression unit CR type 100-250VAC/DC with LED for SC-E02(/G) to SC-E05(/G)	D1	17.00
SZ-Z34	Coil surge suppression unit CR type 24-48VAC/DC for SC-E1 to SC-E4	D1	23.00
SZ-Z35	Coil surge suppression unit CR type 24-40 VAC/DC for SC-E1 to SC-E4 Coil surge suppression unit CR type 100-250VAC/DC for SC-E1 to SC-E4	D1	23.00
SZ-Z35	Coil surge suppression unit CR type 100-250VAC/DC for SC-E1/G to SC-E4/G	D1	23.00
SZ-Z36 SZ-Z37	0 11 21	D1	23.00
	Coil surge suppression unit CR type 100-250VAC/DC for SC-E1/G to SC-E4/G	וט	23.00
		D14	10.00
SZ-MRWC	Power connection kit for reversing line side and load side for SC-M01(/G), SC-M02(/G)	D14	18.00
SZ-ERW1/A	Power connection kit for reversing line side for SC-E02(/G) to SC-E05(/G)	D14	10.00
SZ-ERW1/B	Power connection kit for reversing load side for Reversing Contactor SC-E02(/G) to SC-E05(/G)	D14	10.00
SZ-ERW1/D	Power connection kit for reversing load side for Reversing Motor Starter SC-E02(/G) to SC-E05(/G)	D14	10.00
SZ-ERW2/A	Power connection kit for reversing line side for SC-E1(/G) to SC-E2S(/G)	D14	20.00
SZ-ERW2/B	Power connection kit for reversing load side for Reversing Contactor SC-E1(/G) to SC-E2S(/G)	D14	20.00
SZ-ERW2/D	Power connection kit for reversing load side for Reversing Motor Starter SC-E1(/G) to SC-E2S(/G)	D14	20.00
SZ-ERW3/A	Power connection kit for reversing line side for SC-E3(/G) to SC-E4(/G)	D14	40.00
SZ-ERW3/B	Power connection kit for reversing load side for Reversing Contactor SC-E3(/G) to SC-E4(/G)	D14	40.00
SZ-ERW3/D	Power connection kit for reversing load side for Reversing Motor Starter SC-E3(/G) to SC-E4(/G)	D14	40.00
Mechanical inter			
SZ-MRM	Mechanical interlock unit for SC-M01(/G), SC-M02(/G)	D14	4.00
SZ-RM	Mechanical interlock unit for SC-E02(/G) to SC-E4(/G)	D1	20.00
Replacement coi			
4NC0H-#MC	Replacement coil for SC-E02 to SC-E05 (# : operating coil voltage code)	D1	30.00
SZ-GM/N1-#	Replacement coil for SC-E1 to SC-E2S (# : operating coil voltage code)	D1	30.00
SZ-GM/N2S-#	Replacement coil for SC-E3 to SC-E4 (# : operating coil voltage code)	D1	31.00
SZ-GS/N5-#	Replacement coil for SC-E5 (# : operating coil voltage code)	D1	250.00
SZ-GS/N6-#	Replacement coil for SC-E6 to SC-E7 (# : operating coil voltage code)	D1	276.00
Base unit for sep	parate mounting		
SZ-HCE	Separate mounting base unit for TK-E02	D14	10.00
SZ-HDE	Separate mounting base unit for TK-E2	D14	20.00
SZ-HEE	Separate mounting base unit for TK-E3	D14	25.00
Trip indicator			
SZ-L100	Trip indicator 100-110VAC for TK-E02	D1	15.00
SZ-L200	Trip indicator 200-220VAC for TK-E02	D1	15.00
SZ-L100N2	Trip indicator 100-110VAC for TK-E2 to TK-E6	D1	15.00
SZ-L200N2	Trip indicator 100-110VAC for TK-E2 to TK-E6	D1	15.00
Reset release bu			10.00
SZ-R1	Reset release button 300mm for TK-E02	D1	96.00
SZ-R1	Reset release button 500mm for TK-E02	D1	112.00
SZ-R3	Reset release button 700mm for TK-E02	D1	127.00
SZ-R3 SZ-R4			
	Reset release button 300mm for TK-E2 to TK-E6	D1	100.00
SZ-R5	Reset release button 500mm for TK-E2 to TK-E6	D1	120.00
SZ-R6	Reset release button 700mm for TK-E2 to TK-E6	D1	135.00
Dial cover			
SZ-DA	Dial cover for TK-E02 to TK-E6	D1	2.00

List Price for Combination Starters accessories

Part number	Description	Discount code	List Price
BZ0LRC09AA	Link module for BM3R and SC-M01(/G), SC-M02(/G)	D14	15.00
BZ0LRE22AA	Link module for BM3R and SC-E02 to SC-E05	D14	15.00
BZ0LRE22GA	Link module for BM3R and SC-E02/G to SC-E05/G	D14	20.00
BZ0LRE32AA	Link module for BM3R and SC-E1	D14	18.00
BZ0LRE32GA	Link module for BM3R and SC-E1/G	D14	20.00
BZ0LVE51AA	Link module for BM3V and SC-E1 to E2S	D14	18.00
BZ0LVE51GA	Link module for BM3V and SC-E1/G to E2S/G	D14	22.00
BZ0LVE65AA	Link module for BM3V and SC-E3	D14	24.00
BZ0LVE65GA	Link module for BM3V and SC-E3/G	D14	28.00
Base plates			
BZ0BPRE22A	Base plate for BM3R and SC-E02(/G) to SC-E05(/G)	D14	22.00
BZ0BPRE32A	Base plate for BM3R and SC-E1(/G)	D14	24.00
BZ0BPVE51A	Base plate for BM3V and SC-E1(/G) to SC-E2S(/G)	D14	26.00
BZ0BPVE65A	Base plate for BM3V and SC-E3(/G)	D14	30.00

Appendix 1: Construction of combination motor controllers

The UL508 standard defines 6 categories depending on the construction type for the combination motor controllers. The type and component function is shown below.

Туре	Component	Component	Component funciton per NEC				
		standard	Disconnect	Branch circuit protection	Motor control	Motor overload	
Α	Manual disconnect	UL98,UL1087	Х				
	Fuse	UL248		Х			
	Magnetic	UL508			Х		
	Overload relay	UL508				Х	
В	Manual disconnect	UL98,UL1087	Х				
	Motor short-circuit Protector	UL508		Х			
	Magnetic	UL508			Х		
	Overload relay	UL508				Х	
С	Inverse time Circuit Breaker	UL489	Х	Х			
	Magnetic	UL508			Х		
	Overload relay	UL508				Х	
D	Instantaneous Circuit Breaker	UL489	Х	X			
	Magnetic	UL508			Х		
	Overload relay	UL508				Х	
Е	Self-Protected control device	UL508	Х	X	Х	Х	
F	Manual Self-protected combination motor controller	UL508	Х	X		Х	
	Magnetic	UL508			Х		

Fuji MMS is indicated on the label with "Manual Self-Protected Combination Motor Controller" (TYPE E) and "Combination Motor Controller" (TYPE F).

Appendix 2 : Short circuit coordination comparison

UL508 (Part IV, Combination Motor Controllers) and IEC60947-4-1 are the two major standards concerning the combination of the MMS and the Contactor. In IEC60947-4-1, it only regulates the short-circuit protective coordination between the Contactor and the Circuit Breaker. However, in UL508, it takes the combination of the MMS and Contactor as a united component and requires additional performances besides the short-circuit test.

UL standard is available for another standard related short circuit coordination, that is UL subject 508E.

(IEC type "2" Coordination Short Circuit Tests of Electromagnetic Motor Controllers in accordance with IEC Publication 947-4-1)

UL subject 508E is to certify that the coordination between the MMS and Contactor comply with IEC60947-4-1 type 2 requirements.

Fuji combination Starters are also cUL listed UL subject 508E, which means that it comforms to both UL and IEC regulation for short-circuit coordination.

Test	UL508	IEC609	947-4-1	UL subject 508E
	Type F	Type 1	Type 2	
Short-Circuit □	Х	Х	Х	X
Coordination				
	- The contactor may be damaged - It may not be suitable for further service without repair or replacement.	 The contactor may be damaged□ It may not be suitable for further service without repair or replacement. 	No damage except light welding of the contacts of the contactor. □ It shall be suitable for further use.	No damage except light welding of the contacts of the contactor. □ It shall be suitable for further use.
Current withstand	Х	-	-	-
Dielectric voltage withstand	Х	Х	Х	X
Calibration	X	-	X	X
Temperature	Х	-	-	-
Effective region	North America	Europe	Europe	North America

Coordination details between MMS and Contactor as UL508 Type F, please see page 56, 57, as UL subject 508E, please see page 79, 80.

Appendix

• BM3RSB, BM3RHB (UL subject E coordination)

	40V AC		BOV AC	MM	VS part numbe		Contactor □	Link module	Base plate		t ratings at
HP rating	Rated	HP rating	Rated	Part	number	Current	part number			480V AC (k	(A)
(HP)	current (A)	(HP)	current (A)			range (A)				for BM3RSB	for BM3RHB
-	-	-	-	BM3RSB-P16	BM3RHB-P16	0.1-0.16	SC-M01, M01/G	BZ0LRC09AA	-	50	50
							SC-E02	BZ0LRE22AA	BZ0BPRE22A		
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A		
-	-	-	-	BM3RSB-P25	BM3RHB-P25	0.16-0.25	SC-M01, M01/G	BZ0LRC09AA	-	50	50
							SC-E02	BZ0LRE22AA	BZ0BPRE22A		
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A		
-	-	-	-	BM3RSB-P40	BM3RHB-P40	0.25-0.4	SC-M01, M01/G	BZ0LRC09AA	-	50	50
							SC-E02	BZ0LRE22AA	BZ0BPRE22A		
							SC-E02/G		BZ0BPRE22A		
-	-	-	-	BM3RSB-P63	BM3RHB-P63	0.4-0.63	SC-M01, M01/G	BZ0LRC09AA	-	50	50
							SC-E02	BZ0LRE22AA	BZ0BPRE22A		
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A		
-	-	-	-	BM3RSB-001	BM3RHB-001	0.63-1	SC-M01, M01/G	BZ0LRC09AA	-	50	50
							SC-E02	BZ0LRE22AA	BZ0BPRE22A		
							SC-E02/G		BZ0BPRE22A		
-	-	3/4	1.6	BM3RSB-1P6	BM3RHB-1P6	1-1.6	SC-M01, M01/G	BZ0LRC09AA	-	50	50
							SC-E02	BZ0LRE22AA	BZ0BPRE22A		
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A		
1/2	2.2	1	2.1	BM3RSB-2P5	BM3RHB-2P5	1.6-2.5	SC-M01, M01/G	BZ0LRC09AA	-	50	50
							SC-E02	BZ0LRE22AA	BZ0BPRE22A		
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A		
3/4	3.2	2	3.4	BM3RSB-004	BM3RHB-004	2.5-4	SC-E02	BZ0LRE22AA	BZ0BPRE22A	50	50
							SC-E02/G	BZ0LRE22GA	BZ0BPRE22A		
1-1/2	6	3	4.8	BM3RSB-6P3	BM3RHB-6P3	4-6.3	SC-E04	BZ0LRE22AA	BZ0BPRE22A	50	50
							SC-E04/G	BZ0LRE22GA	BZ0BPRE22A		
3	9.6	5	7.6	-	BM3RHB-010	6.3-10	SC-E04	BZ0LRE22AA	BZ0BPRE22A	-	50
							SC-E04/G		BZ0BPRE22A		
3	9.6	7-1/2	11	-	BM3RHB-013	10-13	SC-E05	BZ0LRE22AA	BZ0BPRE22A	-	50
							SC-E05/G	BZ0LRE22GA	BZ0BPRE22A		
5	15.2	10	14	-	BM3RHB-016	11-16	SC-E05	BZ0LRE22AA	BZ0BPRE22A	-	50
							SC-E05/G	BZ0LRE22GA	BZ0BPRE22A		
5	15.2	10	14	-	BM3RHB-020	14-20	SC-E05		BZ0BPRE22A	-	50
							SC-E05/G	BZ0LRE22GA	BZ0BPRE22A		
7-1/2	22	15	21	-	BM3RHB-025	18-25	SC-E1	BZ0LRE32AA	BZ0BPRE32A	-	50
							SC-E1/G	BZ0LRE32GA	BZ0BPRE22A		
10	28	20	27	-	BM3RHB-032	24-32	SC-E1	BZ0LRE32AA	BZ0BPRE32A	-	50
							SC-E1/G	BZ0LRE32GA	BZ0BPRE22A		

• BM3VSB, BM3VHB (UL subject E coordination)

220-24	40V AC	440-48	BOV AC	MI	VIS part numbe	er	Contactor	Link module	Base plate	Short-circui	it ratings at
HP rating	Rated	HP rating	Rated	Part number		Part number Current part r				480V AC (kA)	
(HP)	current (A)	(HP)	current (A)			range (A)				for BM3VSB	for BM3VHB
3	9.6	5	7.6	BM3VSB-010	BM3VHB-010	6.3-10	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	50
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
3	9.6	7-1/2	11	BM3VSB-013	BM3VHB-013	10-13	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	50
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
5	15.2	10	14	BM3VSB-016	BM3VHB-016	11-16	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	50
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
5	15.2	10	14	BM3VSB-020	BM3VHB-020	14-20	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	50
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
7-1/2	22	15	21	BM3VSB-025	BM3VHB-025	18-25	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	50
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
10	28	20	27	BM3VSB-032	BM3VHB-032	24-32	SC-E1	BZ0LVE51AA	BZ0BPVE51A	25	50
							SC-E1/G	BZ0LVE51GA	BZ0BPVE51A		
10	28	30	40	BM3VSB-040	BM3VHB-040	28-40	SC-E2	BZ0LVE51AA	BZ0BPVE51A	25	50
							SC-E2/G	BZ0LVE51GA	BZ0BPVE51A		

■ TERMS AND CONDITIONS OF SALE

Prices

All prices are subject to change without notice. In the event of a price change, the effective date of the change will be the date on the new price or discount schedule sheet.

All quotations made or orders accepted after the effective date will be based on the new prices.

Quotations

Written quotations are valid for 30 days from its date unless otherwise stated in the quotation. Verbal quotations expire the same day they are made.

Taxes

The price does not include any taxes. Buyer shall be responsible for the payment of all applicable taxes.

Terms of payment

Terms of payment will be listed on the quotations.

Minimum orders

Orders amounting to less than \$150.00 net per order will be charged a \$50.00 handling fee.

Delivery

Delivery of products shall be FOB point of origin in the U.S. Seller shall determine the point of origin of shipment. All shipping and other charges shall be paid by Buyer.

Packing

Prices include standard domestic packing. Additional special packing costs required for export or by Buyer's request will be charged to Buyer.

Weight and Dimensions

The weight and dimensions of products described in this catalog are the best information available at the time of going to press. As Seller follows a policy of continuous product improvement, design changes may make this information obsolete. Information in this catalog is subject to change without notice.

Inspection and acceptance of products

Buyer is responsible for evaluating received products for final acceptance. All claims for shortage must be made within thirty (30) days of receipt of products.

Return / Cancellation

No product shall be returned or canceled unless return/order cancel authorization has been secured from Seller. All returns/cancellations must comply with Seller's then current Return / Cancellation policy.

Risk of Loss

Risk of loss or damage to the product shall pass to Buyer at the FOB point.

Catalog Disclaimer

The information contained in this catalog does not constitute an express or implied warranty of quality, any warranty of merchantability of fitness for a particular purpose is hereby disclaimed. Since the Buyer's product information, specific use application, and conditions of use are all outside of Seller's control, it shall be the responsibility of the Buyer to determine the suitability of any of the products mentioned for the Buyer's application.

ONE YEAR LIMITED WARRANTY

The products identified in this catalog shall be sold pursuant to the terms and conditions identified in the Conditions of Sale issued by Fuji Electric with each order confirmation. Except to the extent otherwise provided for in the Conditions of Sale issued by Fuji Electric, Fuji Electric warrants that the Fuji Electric products identified in this catalog shall be free from significant defects in materials and workmanship provided the products have not been: (1) repaired or altered by others than Fuji Electric; (2) subjected to negligence, accident, misuse, or damage by circumstances beyond Fuji Electric's control; (3) improperly operated, maintained or stored; or (4) used in other than normal use or service. This warranty shall apply only to defects appearing within one (1) year from the date of shipment by Fuji Electric, and in such case, only if such defects are reported to Fuji Electric within thirty (30) days of discovery by purchaser.

Such notice should be submitted in writing to Fuji Electric at Park 80 West, Plaza II, Saddle Brook, NJ 07663. The sole and exclusive remedy with respect to the above warranty whether such claim is based on warranty, contract, negligence, strict liability or any other theory, is limited to

the repair or replacement of such product or, at Fuji Electric's option, reimbursement by Fuji Electric of the purchase price paid to Fuji Electric for the particular product. FUJI ELECTRIC DOES NOT MAKE ANY OTHER REPRESENTATIONS OR WARRANTIES, WHETHER ORAL OR IN WRITING, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY REGARDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Except as provided in the Conditions of Sale, no agent or representative of Fuji Electric is authorized to modify the terms of this Warranty in writing or orally.

In no event shall Fuji Electric be liable for special, indirect or consequential damages, including but not limited to, loss of use of the product, other equipment, plant, power system, loss of profits or revenues, cost of capital, or claims against the purchaser or user by its customers resulting from the use of information, recommendations and descriptions contained herein. Purchaser agrees to pass on to its customers and users, in writing at the time inquiries and orders are received by buyer, Fuji Electric's warranty as set forth above.

Your local authorized stocking distributor is:	

Fuji Electric FA Components & Systems Co., Ltd.

Mitsui Sumitomo Bank Ningyo-cho Bldg., 5-7 Nihonbashi Odemma-cho, Chuo-ku, Tokyo 103-0011, Japan

Phone: +81-3-5847-8044 Fax: +81-3-5847-8172

Website: www.fujielectric.co.jp/fcs

Fuji Electric Corp. of America

47520 Westinghouse Drive Fremont, CA 94539 Phone: 510-440-1060 Fax: 510-440-1063

Website:

www.americas.fujielectric.com

INFORMATION IN THIS CATALOG IS SUBJECT TO CHANGE WITHOUT NOTICE.