

CableEye[®]

PC-Based Cable Test System

Patent 5,280,251

User's Manual

Windows Version

**Copyright © 1999 - 2017
by CAMI Research Inc.**

All rights reserved. This manual, the software screen designs, the database text, and the help text are copyrighted materials and as such are protected by the copyright law. They may not be reproduced by any means, including photocopy, lithographic, mechanical, recording, electronic retrieval, or microfilm.

The name "CableEye" and the CableEye logo are registered trademarks of CAMI Research Inc.



42 Nagog Park
Acton, Massachusetts 01720

Tel: (978) 266-2655
Fax: (978) 266-2658
e-mail: tech@camiresearch.com
Web: www.camiresearch.com

Updates to this Manual

CAMI Research works continuously to improve and advance the CableEye® software. As a result, this User's Manual can only represent a snapshot of the software at one moment in time and may not fully describe a newer version of the software that you may be using. Should you find functions in the software that are not described within, please contact us and we will be pleased to help you. Be sure to have your serial number available:

Toll Free: (800) 776-0414

Intl Tel: +1 978-266-2655

Fax: (978) 266-2658

e-mail: tech@camiresearch.com

Table of Contents

1 INITIAL SETUP

| | | |
|-------|--|------|
| 1.1 | CableEye Parts List | 1-1 |
| 1.2 | Equipment You Need | 1-2 |
| 1.3 | Hardware Setup | 1-3 |
| 1.4 | Software Setup (Windows 2000/XP/Vista) | 1-7 |
| 1.5 | Starting the CableEye Software..... | 1-8 |
| 1.6 | Possible Startup Problems | 1-8 |
| 1.7 | Ready to Test! | 1-11 |
| 1.8 | Contents of Your CableEye Folder | 1-11 |
| 1.8.1 | Static Discharge Precautions..... | 1-7 |
| 1.8.2 | Use of External Ground Wire..... | 1-8 |
| 1.8.3 | Measuring Long Cables..... | 1-9 |

2 THINGS YOU SHOULD KNOW ABOUT CABLEEYE

| | | |
|-------|---|------|
| 2.1 | Screen Layout and General Operation | 2-2 |
| 2.1.1 | Operator Controls | 2-2 |
| 2.1.2 | Summary Boxes..... | 2-6 |
| 2.1.3 | Display Windows..... | 2-7 |
| 2.1.4 | Graphic Display Tool Bar | 2-8 |
| 2.1.5 | Netlist Display Tool Bar..... | 2-10 |
| 2.1.6 | Summary Box Tabs..... | 2-14 |
| 2.1.7 | Operation Status Indicators..... | 2-17 |
| 2.2 | Messages, Tones and Speech | 2-17 |
| 2.3 | Use of Hotkeys | 2-18 |
| 2.3.1 | Entering or Editing HotKeys..... | 2-18 |
| 2.3.1 | Deleting HotKeys..... | 2-18 |
| 2.4 | Printing Reports and Labels | 2-18 |
| 2.5 | Software Operation without a Tester Connected | 2-19 |
| 2.6 | HELP Menu | 2-19 |
| 2.7 | The CableEye Database | 2-20 |
| 2.8 | Placing your Databases on a Server | 2-20 |
| 2.9 | Importing and Exporting Cable Data | 2-21 |
| 2.10 | Using Connector Boards | 2-21 |
| 2.11 | ID Jumpers on Connector Boards | 2-22 |
| 2.12 | Sharing Test Points on Connector Boards | 2-22 |
| 2.13 | Attaching Multi-Headed Cables..... | 2-23 |
| 2.14 | Connector Graphics | 2-24 |
| 2.15 | User Names, Passwords and Privileges | 2-25 |
| 2.16 | Bar Code Scanning | 2-26 |
| 2.17 | Calibration | 2-27 |
| 2.18 | The Self-Test Function | 2-27 |
| 2.19 | License Files | 2-28 |
| 2.20 | Connector Wear-Out | 2-28 |
| 2.21 | CB Board Compatibility Chart | 2-29 |

3 BASIC OPERATIONS

| | | |
|--------|--|------|
| 3.1 | Measuring a Cable | 3-2 |
| 3.2 | Learning a Cable | 3-5 |
| 3.3 | Comparing Two Cables | 3-7 |
| 3.4 | Checking for Intermittent Connections | 3-9 |
| 3.5 | Saving Cable Data in the Database | 3-13 |
| 3.6 | Loading Cable Data from the Database | 3-17 |
| 3.7 | Searching the Database for a Match | 3-19 |
| 3.8 | Editing Cable Data | 3-21 |
| 3.8.1 | Editing the Netlist..... | 3-22 |
| 3.8.2 | Editing the Graphic Display | 3-23 |
| 3.9 | Designing a New Cable | 3-24 |
| 3.10 | Special Functions | 3-25 |
| 3.10.1 | Backup (Export) cable data to ZIP | 3-25 |
| 3.10.2 | Restore (Import) cable data from ZIP | 3-26 |
| 3.10.3 | Publish Cable Data | 3-26 |
| 3.10.4 | Show / edit additional cable properties..... | 3-27 |
| 3.10.5 | Edit custom cable pin labels | 3-27 |
| 3.10.6 | Find pin or connection in cable..... | 3-28 |
| 3.10.7 | Create Map from Cable..... | 3-28 |
| 3.10.8 | Import cable data form text file | 3-29 |
| 3.11 | Test Settings Menu | 3-31 |
| 3.11.1 | Tester Control..... | 3-31 |
| 3.12 | Using the Probe | 3-33 |
| 3.12.1 | Hardware Setup | 3-33 |
| 3.12.2 | Preferences Setup | 3-33 |
| 3.12.3 | Software Functions..... | 3-34 |
| 3.12.4 | Example 1, Probing Function | 3-34 |
| 3.12.5 | Example 2, Matching Function | 3-36 |
| 3.12.6 | Matching Probe Test Options..... | 3-38 |

4 MEASURING RESISTANCE

| | | |
|--------|---|------|
| 4.1 | Resistance Measurement and Thresholds | 4-2 |
| 4.2 | Resistance Measurement Capabilities | 4-3 |
| 4.3 | Measuring Resistors Automatically | 4-5 |
| 4.4 | Comparing Two Cables | 4-6 |
| 4.5 | Measuring Resistors by Direct Control | 4-7 |
| 4.6 | Editing Cable's Resistance | 4-8 |
| 4.7 | Resistance Tolerance | 4-8 |
| 4.8 | Accuracy | 4-9 |
| 4.9 | Measurement Time | 4-9 |
| 4.10 | Multinode Groups - Testing Complex Circuits | 4-10 |
| 4.10.1 | Multinode Resistor Connections..... | 4-10 |
| 4.10.2 | CableEye's automatic representation of multinode networks | 4-11 |
| 4.10.3 | Multinode Network Examples | 4-12 |
| 4.10.4 | Networks that can NOT be accurately measured..... | 4-14 |
| 4.10.5 | Entering Multinode Connections..... | 4-15 |
| 4.11 | Trace Resistance - Fixture Resistance Compensation | 4-16 |
| 4.11.1 | Adding Trace Resistance to your Match Data | 4-17 |

| | | |
|----------|---|------|
| 4.11.2 | Automatically Acquiring Trace Resistance Values..... | 4-18 |
| 4.12 | Causes of Inconsistent Resistance Readings | 4-19 |
| 4.13 | 4-Wire Kelvin Measurement Option | 4-20 |
| 4.13.1 | Overview | 4-20 |
| 4.13.2 | Principles of 4-Wire Measurement..... | 4-20 |
| 4.13.3 | Test Fixtures for 4-Wire Measurement | 4-21 |
| 4.13.4 | High Voltage Testing with 4-Wire Measurement..... | 4-24 |
| 4.13.5 | Initial Software and Hardware Setup | 4-24 |
| 4.13.6 | Setting the 4-Wire Test Current and Resistance Limits | 4-25 |
| 4.13.7 | Testing Cables and Viewing Results..... | 4-26 |
| 5 | PRINTING REPORTS AND LABELS | |
| 5.1 | Printing Cable Documentation | 5-2 |
| 5.1.1 | Printers Setup | 5-2 |
| 5.1.2 | Types of Reports..... | 5-2 |
| 5.1.3 | Print Options | 5-5 |
| 5.2 | Printing Labels | 5-7 |
| 5.2.1 | Label Setup..... | 5-7 |
| 5.2.2 | Printing the Labels..... | 5-8 |
| 5.3 | Automatic Printing and Batch Reporting | 5-8 |
| 5.3.1 | Automatic Printing..... | 5-9 |
| 5.3.2 | Batch Reporting | 5-10 |
| 5.4 | Custom Reporting - Add-On Option | 5-10 |
| 5.4.1 | Creating or Editing a Report Template..... | 5-10 |
| 5.4.2 | Printing a Custom Report..... | 5-11 |
| 5.4.3 | Custom Report Directory..... | 5-12 |
| 5.5 | Exporting Reports to PDF..... | 5-12 |
| 6 | AUTOMATIC TESTING | |
| 6.1 | Macros | 6-2 |
| 6.1.1 | The Macro Window | 6-3 |
| 6.1.2 | Creating and Editing a Macro..... | 6-4 |
| 6.1.3 | Macro Editing Summary..... | 6-6 |
| 6.1.4 | Macro Instructions and Examples..... | 6-7 |
| 6.1.5 | Variables and more examples..... | 6-15 |
| 6.1.6 | Other Information about Macros..... | 6-22 |
| 6.2 | JavaScript | 6-23 |
| 6.2.1 | About JavaScript | 6-23 |
| 6.2.2 | JavaScript Panels | 6-24 |
| 6.2.3 | Developing Scripts..... | 6-24 |
| 6.2.4 | Programming Guide..... | 6-26 |
| 6.2.5 | EXEC JAVASCRIPT..... | 6-26 |
| 6.3 | Application Programming Interface API | 6-27 |
| 7 | BATCH DATA LOGGING | |
| 7.1 | Documenting Batch Tests | 7-2 |
| 7.2 | Data Logging Instructions | 7-3 |
| 7.3 | Data Logging Examples | 7-3 |

| | | |
|----------|---|------|
| 7.4 | Notes and Comments about Data Logging | 7-7 |
| 8 | SETTING PREFERENCES | |
| 8.1 | Communications | 8-2 |
| 8.2 | Control | 8-3 |
| 8.3 | Connectors | 8-5 |
| 8.4 | Wiring Display | 8-6 |
| 8.5 | Fonts | 8-6 |
| 8.6 | Print Options | 8-7 |
| 8.7 | Printers and Reports | 8-7 |
| 8.8 | Labels | 8-7 |
| 8.9 | Speech | 8-7 |
| 8.10 | Operators | 8-7 |
| 8.11 | Batch Reporting | 8-8 |
| 8.12 | Hotkeys | 8-8 |
| 8.13 | Custom Colors | 8-9 |
| 8.14 | Custom Events | 8-9 |
| 8.15 | Network Directories | 8-10 |
| 8.16 | Directories | 8-11 |
| 9 | ADAPTING TO CUSTOM FIXTURES AND WIRE HARNESSSES - PINMAP | |
| 9.1 | Connector Interfaces and Pin Maps | 9-2 |
| 9.2 | Test Point Organization and Numbering | 9-2 |
| 9.3 | How CableEye Uses Pin Maps | 9-3 |
| 9.4 | Plug-and-Play Operation Using CB Boards | 9-6 |
| 9.5 | Creating a Custom Hardware Interface | 9-7 |
| 9.5.1 | Adapter Cables..... | 9-7 |
| 9.5.2 | Fixed-Mounted Connectors..... | 9-8 |
| 9.5.3 | Custom CB Boards..... | 9-9 |
| 9.5.4 | External Connector Panels..... | 9-10 |
| 9.5.5 | Custom Mating Harness for Harness Boards..... | 9-11 |
| 9.6 | Creating a Fixture Map - Quick Guide | 9-13 |
| 9.7 | The PinMap Software | 9-16 |
| 9.7.1 | PinMap Terminology and Organization | 9-16 |
| 9.7.2 | File Controls..... | 9-17 |
| 9.7.3 | Fixture Maps vs. CB Board Maps | 9-17 |
| 9.7.4 | Build and Test Controls | 9-19 |
| 9.7.5 | Map Editing Controls | 9-21 |
| 9.7.6 | Map Properties..... | 9-24 |
| 9.7.7 | Mapping Test Points..... | 9-26 |
| 9.8 | Creating a CB Board Map | 9-27 |
| 9.9 | Embedding a CB Board Map in a Fixture Map | 9-29 |
| 9.10 | Copying and Pasting Maps | 9-30 |
| 9.11 | Maps for 4-Wire Testing | 9-32 |
| 9.12 | Map Entry Errors and Their Consequences | 9-34 |
| 9.13 | More Examples | 9-36 |

10 CONNECTOR DESIGNER

| | |
|--|-------|
| 10.1 Connector Designer Capabilities | 10-2 |
| 10.2 Designing a New Connector | 10-3 |
| 10.2.1 Create Connector from Picture..... | 10-3 |
| 10.2.2 Create Fully Custom Connector..... | 10-5 |
| 10.3 Connector Designer Windows | 10-6 |
| 10.3.1 Editor Toolbar | 10-7 |
| 10.3.2 Connector Graphic Properties Window | 10-7 |
| 10.3.3 Connector Graphic Window..... | 10-10 |
| 10.3.4 Connector Pin List Window | 10-10 |
| 10.3.5 Connector Pin Tools..... | 10-11 |
| 10.4 Editing and Cloning Connectors | 10-14 |
| 10.4.1 Editing a Connector | 10-14 |
| 10.4.2 Cloning a Connector | 10-14 |
| 10.5 Tips for Importing Connector Graphics | 10-15 |