

LED Rope Light, Bulk Reel



Listing becomes void if altered in any way

Installation instructions for ULRLED-XX-150

 
WARNING: These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with these instructions, current electrical codes and/or the current National Electric Code (NEC). Use this rope light only with pre-molded plug-in power cord. Any other power cord or feed may damage the fixture. Not intended for hardwire use.

WARNINGS - READ ALL INSTRUCTIONS BEFORE YOU START:

CAUTION - To reduce risk of fire, electric shock or injury to persons, pay close attention to this manual and stay within its guidelines when using this product.

Before use, note that this product requires a 120V AC outlet. Ensure that the voltage of your power supply is compatible!

1. Do not cover this product as the covering may cause rope to overheat, melt or ignite.
2. Do not operate LED rope light while it is tightly coiled.
3. Do not submerge flexible light in liquids, or use the product in the vicinity of standing water or other liquids.
4. Do not route the cord or rope light through walls, ceilings, doors, windows or any similar part of the building structure.
5. Secure this flexible light using only the mounting clips provided or factory recommended mounting track (sold separately).
6. Do not secure this product or its cord with staples, nails, or like means that may damage the insulation.
7. Do not use if there is any damage to the PVC housing or power cord insulation. Inspect periodically.
8. Do not install on gates or doors, where subject to continuous flexing.
9. Do not install in tanks or enclosures where heat cannot dissipate when Rope Light is on.
10. Follow instructions carefully when splicing LED rope sections or attaching power cords. Ensure that all connections, including the end cap on the last segment, are properly installed with dielectric grease and shrink tube to preclude the entrance of water (outdoor applications).
11. Risk of fire. Do not replace attachment plug. Discard product if attachment plug is damaged.
12. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter plug.
13. This product is designed for use by a qualified installer.
14. This product is for decorative use only. Not to be used by children as a toy. Keep out of reach of small children.
15. Do not exceed 150' maximum run distance in any single run.

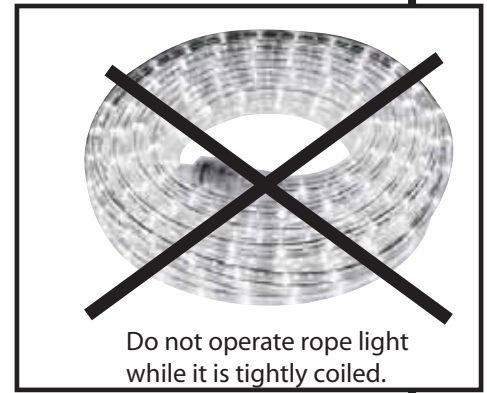

NOTE: Cutting the rope light bulk reel and/or altering the power cord in any way including, but not limited to, cutting, splicing and/or adding any power accessories will void the UL Listing.

CAUTION - To reduce risk of fire, electric shock or injury to persons:

WARNING - When using outdoor portable lighting products, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:


1. Use Ground Fault Circuit Interrupter (GFCI) protection on the circuit(s) or outlet(s) when using outdoors.
2. Use only UL approved outdoor extension cords, such as type SW, SOW, STW, STOW, SJW, SJOW, SJTW or SJTOW. This designation is marked on the jacket of the extension cord.

TO REPLACE FUSE (see Figure 1):


This plug contains an electrical fuse as a safety feature.

1. Disconnect power before replacing the fuse.
2. Grasp plug and remove from the receptacle or other outlet device.
3. Do not unplug by pulling on the cord.
4. Slide open or unscrew the fuse access cover on top of the attachment plug. See Figure 1.
5. Remove old fuse carefully.
6. Never attempt to replace the fuse with a higher wattage fuse. Use only 5 Amp 120 Volt fuse. Failure to do so may be a fire hazard.
7. Set new fuse in holder and reinstall access cover.

 Figure 1

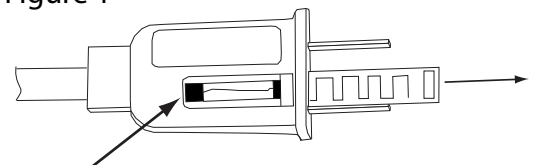

 Fuse is inside plug. Slide open or unscrew fuse access cover as shown.

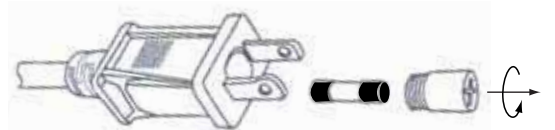

LED Rope Light, Bulk Reel



Listing becomes void if altered in any way

Installation instructions for ULRLED-XX-150

WARNING: Risk of fire. Do not replace attachment plug! Plug contains a safety feature (fuses) that should not be removed. Discard cord set if the attachment plug is damaged.

NOTE: Do not exceed 150 foot maximum run distance in any single run!

INSTALLING ROPE LIGHT

1. Attach mounting clips with nails or screws onto wooden surfaces. Be sure that surface is mechanically sound. See Figure 4.
2. For best results, mounting clips should be evenly spaced and be a maximum of 12 inches apart. See Figure 5.
3. Make sure that the distance between two lines of Rope Light are at least 1/2" apart. NOTE: For straight line applications, use DL-TRACK-4 mounting track (sold separately).
4. Gently press rope light into track or clips so that it snaps into place.

PROP 65 WARNING

Handling the coated electrical wires of this product exposes you to lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm.

WASH HANDS AFTER USE.

Figure 4

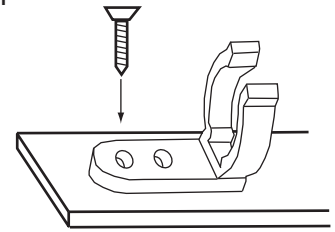 


Figure 5

