



## INSTALLATION MANUAL



GSM



Alarm Security System™

ST-SK1

## Features

- GSM transmitter
- Supports up to 10 remote controls, 99 wireless accessories and 50 RFID tags
- Can store up to 5 phone numbers, 5 SMS numbers. a Central Monitoring System)
- Arm / disarm the system by SMS, phone call, or App (on iOS or Android)
- Can be disarmed by RFID tag
- Built-in siren (110dB)
- Call function from the panel
- SMS alerts for power failure, power recovery and low battery
- Audio surveillance of the site from distance
- 2 x 800mAh lithium batteries included (8h battery life in standby mode)

## Specifications

### Product name

ST-SK1

### Alarm current

300mA

### SKU

ST-SK1

### Backup batteries

Lithium Batteries: 3.7V / 800 mAh x 2 (BL-5B)  
(8h battery life in standby mode)

### Control panel power supply

Input: AC 110-240V / 50-60 Hz  
Output: DC 12V / 800 A

### Internal siren

95dB

### GSM working frequency

850 / 900 / 1800 / 1900 mHz

### Housing material

ABS plastic

### Radio-frequency

433.92MHz (±75KHz)

### Operating conditions

Temperature: -10°C~55°C  
Humidity: ≤ 80% (non-condensing)

### Transmission distance

80m in open space

### Control panel dimensions (L x W x H)

188 x 125 x 25 mm

### Standby current


80ma

## Box content


SS1 Control Panel x1  
Motion Detectors x1  
Door / Window Contacts x1  
Remote Controls x2  
RFID Tags x2

AC Adaptor x1  
Documentation x1

## Box content

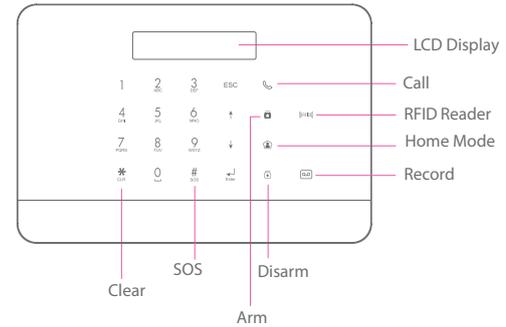

## Control Panel Layout (Back)

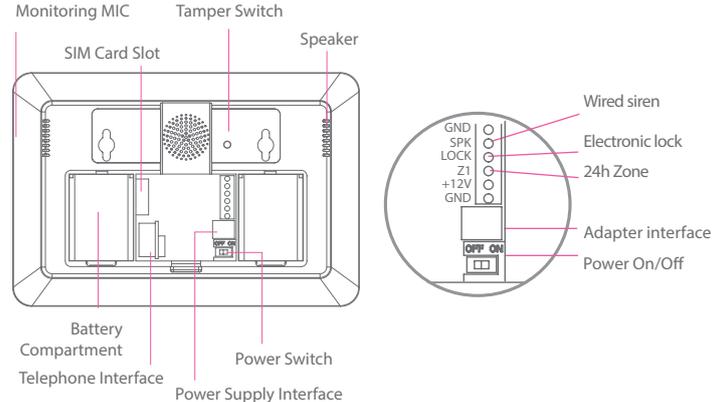

## Quick Start-up Guide

### Connect your System

#### Using the GSM transmitter (SIM card)

Open the battery compartment at the back of the control panel and insert a SIM card in the control panel.

#### Important


Before using the SS1 in GSM mode, you need to purchase a SIM card that works on the GSM network with 850 / 900 / 1800 / 1900 MHz frequency. We recommend you to subscribe to a plan with unlimited texts and one hour of voice. For more information, please contact your local reseller.

#### Important

Make sure the SIM card does not require any PIN code. For more information, please contact your local reseller.

### Turning your System on

1. Plug the AC adaptor to an AC socket.
2. Plug the output connector of the AC adaptor into the adaptor interface in the battery compartment at the back of the control panel.
3. Turn the power switch to "ON" (in the battery compartment at the back of the control panel).

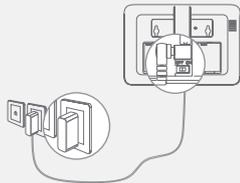

### Mount the Control Panel

Before mounting the control panel on the wall, make sure the reception of the GSM signal is sufficient.

Fix the wall-mounting bracket on the wall with screws. Wedge the panel on the bracket, make sure they fit well.

### Basic Operations

#### Arm the System

Press the Arm button " " on the control panel. The control panel beeps once: the system is armed. The LCD display indicates "Armed" and the Arm icon on the control panel is lit.

#### Note

If the Entry / Exit Delay is activated, all zones except the 24h zone will be armed after the delay set (refer to the instructions on page 10 of this manual "Entry / Exit Delay").

#### Disarm the System

Type your user code and press the Disarm button " " on the control panel. The control panel beeps twice: the system is disarmed.

#### Home Mode

Press the Home button " " on the control panel. The control panel beeps once: the system is armed in Home Mode.

All the sensors assigned to the Normal zone are armed. The sensors assigned to the Home zone are disarmed.

#### Emergency Mode

Hold the " " button for 3 seconds. The alarm is triggered immediately and the siren rings out. At the same time, the control panel dials the stored phone numbers.

## Speed Dial

Press the Call button “☎” on the control panel for 3 seconds: the panel auto-dials the first stored phone number. Press the Call button “☎” to end the call.

## Hands-free Phone Call from the Panel

### Through GSM

Press the Call button “☎” on the control panel, type the phone number you wish to call and press the Call button “☎” again.

## Record / Play a Voice Memo

Long press the Record Voice Memo button to record a 10-second voice message. The Play Voice Memo Button blinks when a message has been recorded. Push the center of the RFID reader in the control panel to listen to the voice memo. The LED indicator turns off when the voice memo is being played. Touch it again to replay the memo.

## Hard Reset

Turn the control panel on. Press the tamper switch at the back of the control panel 5 times within 5 seconds after having turned it on.

Settings will be restored to default values. Stored phone numbers and connected accessories will be cleared.

## Setup from the control panel

The SS1 must be set up before using for the first time. During the setup of the system, the control panel can be powered either by the AC power adapter or by the backup batteries.

### Default codes

- Admin code (necessary to set up your system): 123456
- User code (necessary to disarm your system or stop the alarm): 1234
- Duress code: 0000 (enables you to trigger a duress alarm)
- Open door code: 8888 (enables you to open an electronic door lock plugged to your control panel and disarm your system or stop the alarm)

*All access codes can be changed. We recommend you to change these codes before using your system for the first time.*

The control panel of your alarm system features an LCD display that enables you to navigate through the menu of the control panel and set up your alarm system.

To enter the setng menu, In disarm status, then (*your admin code + Enter*) on the control panel.

In the table on the next page, each column represents a menu or a sub menu. Each menu or submenu will be displayed on one of the two lines of the LCD display. On the LCD display, the current menu, submenu, or setting is shown on the line at the bottom, while the previous menu or submenu is shown on the line at the top.

Navigate and select the setting you wish to modify with the keys “↑” or “↓”, and enter each menu or sub menu by pressing “Enter”.

### How to use the keyboard

“\*” = delete

“↓” = move forward

“↑” = move backward

“Enter” = select / confirm

“Esc” = back / previous step in the menu / cancel

The tables on the next pages summarize all the settings that can be accessed and modified on the control panel.

Main Menu	Sub Menu 1	Sub Menu 2	Sub Menu 3	Comments
Phone numbers	Phone [1~5] is:		-	Select the phone or SMS number you want to edit, type in the phone number and confirm with the key "Enter". Use the key "*" to clear.
	SMS Num [1~5] Is:			5 phone numbers and 5 SMS numbers can be stored in the control panel.
Accessories	Remote & Keypad	Add a new	01/10 30	The LCD screen displays "01/10" (at the left), which indicates the number of the remote control you are about to connect (01 is the current remote control, 10 is the total number of remote controls you can connect), and "30" (at the right), which indicates the time remaining to connect the remote control. Press any key on the keypad or remote control, you hear one beep: the connection is successful.  Once the remote control has been added, the countdown starts over from 30 so that you can register another remote control in control panel (up to 10 remote control can be registered in the control panel). Press Esc to exit.
		Delete All	1=YES 0=NO	
		Delete a Remote	Input 01-10:	Enter the number of the Remote Control you wish to delete and press "Enter".
Accessories	RFID Tag	Add a new	01/50 30	The LCD screen displays "01/50" (at the left), which indicates the number of the RFID tag you are about to connect (01 is the current RFID tag, 50 is the total number of tags you can connect), and "30" (at the right), which indicates the time remaining to connect the RFID tag. Swipe the RFID tag in front of the RFID reader, you hear one beep: the connection is successful.  Once the RFID tag has been added, the countdown starts over from 30 so that you can register another RFID tag in control panel (up to 50 tags can be registered in the control panel). Press Esc to exit.
		Delete all	1=YES 0=NO	
		Delete a Tag	Input 01-50:	Enter the number of the RFID tag you wish to delete and press "Enter".
Accessories	Wireless Sensors	Add a new	Home Zone Delay Zone Normal Zine 24-H Zone	Select the sensor type you wish your sensor to be assigned to (Normal Sensor, 24 Hour Sensor, Delay Sensor, or Home Sensor), press "Enter" to confirm. For more information on zone setup, please refer to page 14 of this manual.  The LCD screen displays "01/99" (at the left), which indicates the number of the sensor you are about to connect (01 is the current sensor, 99 is the total number of sensors you can connect), and "30" (at the right), which indicates the time remaining to connect the sensor. Trigger the sensor, you hear one beep: the connection is successful.  Once the sensor has been added, the countdown starts over from 30 so that you can register another sensor in control panel (up to 99 sensors can be registered in the control panel). In such case, the sensor will be added to the same zone. Press Esc to exit.
		Delete all?	1=YES 0=NO	
		Delete a Sensor	Input 01-99:	Enter the number of the sensor you wish to delete and press "Enter".
Accessories	Test Mode		-	Trigger the sensors you have previously connected to the control panel. You hear 1 beep, the LCD screen displays the signals that have been respectively sent by each sensor triggered. Make sure all the sensors you have triggered are mentioned on the LCD screen. Press "Esc" to exit the test mode.  This mode enables you to test if the sensors have been connected successfully to the control panel.

Main Menu	Sub Menu 1	Sub Menu 2	Sub Menu 3	Comments	Note
System Setting	<b>Date and Time</b>	YYYY-MM-DD TIME			(e.g. 2014-06-20 14H30)
System Setting	<b>Date Format</b>				
System Setting	<b>Entry Exit Delay</b>	Entry Delay	000-300	This function can be used if you do not want to bring a remote control or RFID tag with you. When the system is armed, you hear one beep every second to remind you to leave. The beep rhythm speeds up during the last 10 seconds. If an intruder is detected, the alarm will be delayed accordingly.	The entry and exit delays only work for sensors connected as Delay Zone accessories (see "Wireless" on page 8).
		Exit Delay	000-300	Time is calculated in seconds. The Entry and Exit Delay can be set from 0 to 300 seconds.	The <b>Entry Delay</b> gives you time to disarm the system on the control panel without triggering an alarm. The <b>Exit Delay</b> gives you time to arm the system on the control panel and leave your home without triggering an alarm.
System Setting	<b>Auto Arm / Disarm</b>	Auto Arm Time	<00:00>	You can set up the system to arm and disarm automatically at a defined time every day.	Setting Auto Arm and Auto Disarm to the exact same time will deactivate the function.
		Auto Disarm Time	<00:00>		
		ON or OFF?			
System Setting	<b>Control by Phone</b>	ON or OFF?	-	You can activate or deactivate the control of your system by phone call. Activating the control by phone call enables you to arm and disarm the system and monitor your home by phone call.	See instructions on page 14 for more information on the control of the system by phone call.
System Setting	<b>GSM Fail Alarm</b>	ON or OFF?		Notification of SIM/ GSM signal problem.	Deactivate this function if you want to use the alarm system in PSTN mode only.
System Setting	<b>Keypad tones</b>	ON or OFF?	-	Activate or deactivate the sound when typing on the keyboard of the control panel.	
System Setting	<b>Access code</b>	Admin Code	123456	Your admin code enables you to enter the setup menu. <i>Default admin code: 123456</i>	It is recommended to change all codes before using your system for the first time and to keep your codes secret
		User Code	1234	Your user code enables you to disarm the system on the control panel. The user code is the access code requested when you call the control panel. <i>Default user code: 1234</i>	
		Duress Code	1111	In case of emergency, when you are requested to disarm the system by force, it is recommended to disarm your system with your Duress Code. The panel will silently dial the stored phone numbers. <i>Default duress code: 1111</i>	
		Open Door Code	8888	You can open electronic doors using this code. The door must be wired to the [LOCK] interface on the back of the control panel.	

Main Menu	Sub Menu 1	Sub Menu 2	Sub Menu 3	Comments	Note
System Settings	Ring Times	<1-9>: 5	-	Enter the value (from 1 to 9) and confirm with "Enter". This function enables you to determine the number of times the control panel will ring before taking your call (for control by phone call).	
System Settings	Siren Alert Time	<1-9Min>: 3		Enter the value (from 1 to 9) and confirm with "Enter". This function enables you to determine for how long the siren rings out in case of alarm.	
System Settings	Backlight Time	<0-120s>: 30	-	Enter the value (from 0 to 120) and confirm with "Enter". Default setting is 30 seconds.	
System Settings	Siren Setup	Wired Siren	Siren Switch ON/OFF	Enable / Disable the siren. Default setting: On	Wired siren refers to a siren connected to the control panel by wire.
			Arm/Disarm Tone ON/OFF	Arm / Disarm silently. Default setting: On	
		Built-in Siren	Siren Switch ON/OFF	Enable / Disable the siren. Default setting: On	Built-in siren refers to the siren featured in the control panel.
			Arm/Disarm Tone ON/OFF	Arm / Disarm silently. Default setting: On	
		Wireless Siren	Siren Switch ON/OFF	Enable / Disable the siren. Default setting: On	Wireless siren refers to a siren connected to the control panel by radio-frequency.
			Arm/Disarm Tone ON/OFF	Arm / Disarm silently. Default setting: On	
System Settings	User ID Disarm Upload	On / Off On / Off	- -	When Disarm Upload is on, the system will upload the history of arm/disarm events to the the CMS.	
System Settings	Call Recycle	<1-9>: 3		When the alarm is triggered, the control panel dials the numbers you have stored. If you do not disarm the system, the control panel will call you again (up to 9 times). The "Call Recycle" function enables you to define the number of times the control panel attempts to call you. Default setting: 3 times.	
System Settings	Language	-	-	Select the language you wish to choose and confirm with "Enter".	Languages available may vary depending on the version of your product.
System Settings	Reset	1=YES 0=NO	-	All system settings will be restored to default setting. Stored phone numbers and connected accessories will be cleared.	
System Settings	About	About Jun 4 2014	-		
History	-	-	-	Choose the event log you need to track, press "Enter".	The control panel keeps in record the latest 150 event logs.

## Zone setup of accessories

Every detector can be assigned to 4 different categories of zones: Home Zone, Delay Zone, Normal Zone and 24-H Zone. To assign a detector to a zone, follow the instructions on page 8 of this manual (the zone will be assigned at the time of connection of the accessory).

### Normal zone

When the system is armed, if a sensor is triggered, the siren rings out. When the system is disarmed, sensors do not trigger an alarm.

### 24h zone

Regardless the system is armed or disarmed, sensors assigned to the 24h zone can trigger an alarm. *It is recommended to assign smoke detectors, gas detectors and outdoor beam sensors to the 24-H zone.*

### Delay zone

If you want to set up the entry and exit delay functions, corresponding sensors must be assigned to the Delay zone. Once the delay time has been set up, the sensors will not trigger the alarm during the delay set. Refer to the instructions "Entry and Exit Delay" on page 10 of this manual. *It is recommended to assign the Door / Window Contact to the Delay zone.*

### Home zone

When the system is armed in Home Mode, the sensors assigned to the Home zone do not trigger an alarm. *It is recommend to assign motion detectors to the Home zone so that you can have your system armed in Home Mode when you are home and move inside your home without triggering any alarm.*

## Control by phone call

*This feature is available only after having enabled it from the control panel, as explained on page 10 of this manual.*

### Method 1

When an alarm has been triggered, the control panel dials the stored phone numbers. When you pick up the phone, follow the voice instructions to control the panel from distance (refer to the instructions in the table below).

### Method 2

1. Dial the telephone number of your control panel (either the number of the SIM card in your control panel or the number of the landline to which your panel is connected). After getting through, the voice instructions will guide you to enter your access code.
2. Enter your user code, followed by "#".
3. A voice gives you the options you can select.
4. Select the operations to control the panel (see instructions in the table below).

### Note

The call will end automatically if you do not send any command within 30 seconds.

### Table of commands for control by phone call

Command	Function	Comment
Press "1"	Arms the system	
Press "0"	- Disarms the system and turns the siren off - Stops monitoring without hanging up - Stops the phone call function without hanging up	
Press "3"	Phone call with control panel	
Press "*"n	- Starts audio monitoring mode (not limited in time) - Stops the built-in siren and the wireless siren (if connected to the control panel)	-
Press "6"	Turns all sirens off	-
Press "9"	- Turns the built-in siren on (whether the siren ringing settings is ON or OFF) - Turns the wireless siren on (if connected to the control panel)	-
Press "#"	- Turns all sirens off - Exits control by phone call - Stops call recycles	-

### Note

In GSM mode, the audio monitoring is not limited in time.

## Setup by SMS

### IMPORTANT: BEFORE USING FOR THE FIRST TIME

Insert a SIM card in the control panel before starting SMS operations. Make sure the SIM card does not require any PIN code.

SAVE A SMS NUMBER IN THE CONTROL PANEL (using the control panel). Only stored numbers can control and configure the system.  
(Refer to the instructions page 8)

Each SMS operation defined in this user manual will be illustrated as follows:

You send:

SMS Command

*The first pink speech bubble is the SMS command sent by the user.*

*The first grey speech bubble is the reply sent by the control panel.*

The control panel replies:

Control panel's reply

*The speech bubbles that follow are the dialogue between the user and the control panel (SMS sent by the user are in blue, SMS sent by the control panel are in grey).*

The system is in English by default. To change the system language, refer to the instructions on page 22 of this manual.

### Important

When replying to the control panel by SMS, make sure no space follows punctuation marks like "." or ":". For examples, to store SMS numbers, your SMS must be formatted as follows:

SMS numbers:  
1.067890033  
2.067890022  
3.067890011  
4.067890000  
5.

SMS number

1.067890033  
2.0678900

No space after "1."

## Disarm the System

Send:

0

System disarmed.

## Arm the System

Send:

1

System armed.

## Home Mode

Send:

2

System in home mode.

## Settings Enquiry

Send:

00

System:Disarmed  
AC power:on

### Note

The values indicated hereinabove will change after having set up the system.

## Store Phone Numbers

Send:

5

Phone numbers:

- 1.
- 2.
- 3.
- 4.
- 5.

Copy, paste, then edit  
(case sensitive):

Phone numbers:

1. 067890033
2. 067890022
3. 067890011
4. 067890000
- 5.

Ok

## Store Phone Numbers for SMS Notifications

Send:

6

SMS numbers:

- 1.
- 2.
- 3.
- 4.
- 5.

Copy, paste, then edit  
(case sensitive):

SMS numbers:

1. 067890033
2. 067890022
3. 067890011
4. 067890000
- 5.

Ok

### Note

The first SMS number will receive SMS notifications when the system is disarmed by RFID tag. To start receiving these notifications, you must rename the RFID tags. Up to 4 RFID tags can be renamed. Other tags will be attributed a number based on the order of registration to the control panel. Refer to the instructions on page 8 to learn how to register an RFID tag in the control panel.

## Rename Zones

Send "91~99". For example for zone 1,

send:

Zones names:

- 1.

Copy, paste, then edit  
(case sensitive):

Zones names:

1. Entrance door sensor

Ok

### Note

Zones 1 to 9 can be renamed. The name of the zone cannot consist of more than 30 Latin characters. Zones 10 to 99 cannot be renamed.

## SMS Alert for Accessory Low Battery

(available for two-way accessories such as Motion Detectors)

For accessories assigned to zones that have been renamed, an SMS will be sent under the format "Zone name + low battery".

Bedroom PIR low battery

For accessories assigned to zones that have not been renamed, an SMS will be sent under the format "Zone number + low battery".

Zone 10 low battery.

## SMS Alert for Accessory Tamper Alarm

(available for two-way accessories such as Motion Detectors)

For accessories assigned to zones that have been renamed, an SMS will be sent under the format "Zone name + tamper alarm".

Bedroom PIR tamper alarm.

For accessories assigned to zones that have not been renamed, an SMS will be sent under the format "Zone number + tamper alarm".

Zone 10 tamper alarm.

## Rename RFID Tag

Send:

10

Rename RFID tag names:

- 1.
- 2.
- 3.
- 4.

Copy, paste, then edit  
(case sensitive):

Rename RFID tag names:

1. Tom
2. Nurse
3. Nancy
4. David

Ok

### Note

The first SMS number will receive SMS notifications when the system is disarmed by RFID tag. To start receiving these notifications, you must rename the RFID tags. Up to 4 RFID tags can be renamed. Other tags will be attributed a number based on the order of registration to the control panel. Refer to the instructions on page 8 to learn how to register an RFID tag in the control panel.

## Entry and Exit Delay Time

Send:

11

Entry delay time(0-300sec):0  
Exit delay time(0-300sec):0

Copy, paste, then edit  
(case sensitive):

Entry delay time(0-300sec):10  
Exit delay time(0-300sec):20

Ok

### Note

This function can be used if you do not want to bring a remote control or a RFID tag with you.

When you arm the system, the system will be armed after the delay set. When you disarm the system, the system will be disarmed after the delay set.

When arming the system, you hear one beep every second to remind you to leave. The beep rhythm speeds up during the last 10 seconds. If an intruder is detected, the alarm will be delayed accordingly.

## Siren Volume and Ringing Time

Send:

12

Siren volume(0=Mute,1=High):1  
Siren ringing time(1-9min):3

Copy, paste, then edit  
(case sensitive):

Siren volume(0=Mute,1=High):0  
Siren ringing time(1-9min):5

Ok

## Disarm Password

Send:

13

Disarm password (4 digits):  
1234

Copy, paste, then edit  
(case sensitive):

Disarm password (4 digits):  
4321

Ok

## Change System Language

Send the code corresponding to the language you want to set. For example, for English, send "0001".

0001

Ok

Refer to the table below for the full list of languages:

0001 English  
0002 French  
0003 German  
0004 Italian

Languages available may vary depending on the version of your product.

## Restore System to Factory Settings by SMS

Send:

0000

Ok

 
The settings will be restored to default values. Stored phone numbers and connected accessories will not be deleted.

### Note

Only stored numbers can send the SMS to restore factory settings.

## Accessories


### Wireless Remote Control



### Arm the system

Press the Arm button "Ⓜ" to arm the alarm system. The LED indicator lights up (the control panel beeps once). The system is armed.

If an intruder is detected, the siren rings out. (The siren turns off after 5 minutes as per default settings.) In the meantime, the system dials the stored phone numbers automatically.

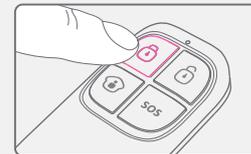

### Disarm the system

Press the Disarm button "Ⓜ" to disarm the alarm system. The LED indicator turns off (the control panel beeps twice). The system is disarmed.



### Home Mode

Press the Home Mode button "🏠" on the remote control. The system state LED is on. All the sensors in regular zones are armed except those in the Home Mode zone. The sensors in the Home Mode zone are disarmed so that users can move inside their home.



## Mute Mode


Press the Home Mode button "🏠" and then the Arm "🔒" or Disarm "🔓" button immediately after. Doing so, the control panel does not beep when you arm or disarm your system.



## Emergency Mode

Regardless the status of the system, the alarm is triggered when the SOS button "SOS" is pressed on the remote control.

At the same time, the control panel sends a notification by SMS ("RC-01 SOS", 01 being the remote control's number) and dials the pre-stored phone numbers.

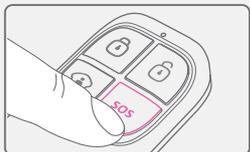

## Register in the control panel

Refer to the instructions in the table on page 8 of this manual "Remote & Keypad".

## Specifications

### Power supply

DC 3V (CR2025 button battery x1)

### Static current

≤10 uA

### Operating current

≤7 mA

### Transmission distance

≤ 80 m (in open area)

### Radio-frequency:

433MHz (±75KHz)

### Housing material

ABS plastic

### Operating conditions

Temperature: -10°C ~ +55°C


Relative Humidity: ≤80%  
(non-condensing)

### Dimensions

57 x 31 x 11 mm

## Wireless Motion Detector

### Design

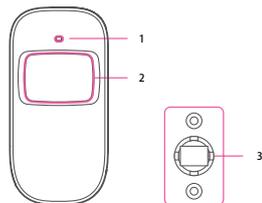

1. LED indicator
2. Detection window
3. Bracket

### LED indications


**Blinks continuously:** self-testing

**Blinks once:** an intruder is detected

**Blinks twice:** self-testing is complete; entering working mode.

**Blinks once every 3 seconds:** under-voltage indication, the batteries must be replaced. (You will be informed by SMS when the batteries are low if the motion detector is registered in the control panel.)

### PCB Layout

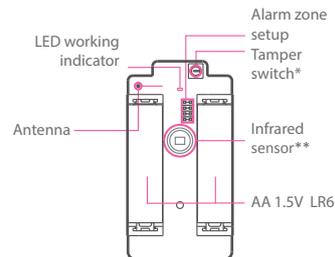

### \* Tamper switch

When the alarm system is armed, the tamper switch will trigger the alarm if the case is opened.


### \*\*infrared sensor

Detects the infrared rays released by human body motion. Do not touch the surface. Keep the surface clean.

## Usage

Open the case and remove the battery activation strip. Self-testing will start for 30 seconds.

When the sensor is in operation, if it is triggered more than twice within 3 minutes, it will switch to standby mode to save power. If no movement is detected within the next 3 minutes, the sensor goes back to working mode.

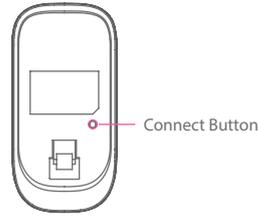


## Register in the control panel

Navigate through the menu of the control panel and reach "ADD A NEW" (Wireless Sensor). Press the Connect button at the back of the motion sensor or trigger the sensor (by moving in front of it) to register the detector in the control panel.

## Installation

Avoid mounting the detector close to windows, air conditioner, heater, refrigerator, oven, sunshine and places where the temperature changes fast or where the air stream flows frequently.

If two detectors are installed in the same detection scope, adjust the location to avoid interferences and false alarms.

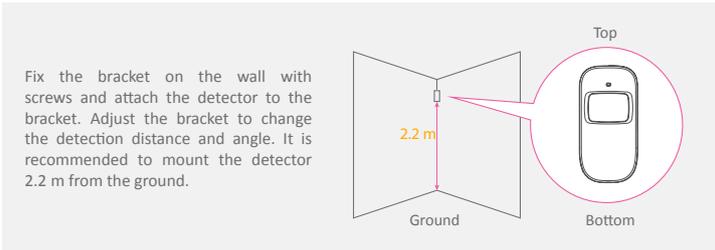

The detector is more sensitive to cross movements than vertical movements.



## Testing

A. After the installation, turn the detector on. After one minute of self-testing, press the test button, walk in the scope of detection and watch the LED indicator to make sure the detector is working.

B. The LED indicator blinks once when body movement is detected.

C. Adjust the detector angle to achieve the best detection performance.

## Specifications

**Power supply**  
DC 3V (AA 1.5V LR6 Batteries x 2)

**Static current**  
≤ 30µA

**Alarm current**  
≤ 15 mA

**Detection scope**  
8m / 110°

**Transmission distance**  
≤ 80m (in open area)

**Radio-frequency**  
433 MHz (±75 KHz)


**Housing material**  
ABS plastic

**Operating conditions**  
Temperature: -10°C~55°C  
Relative humidity: ≤ 80% (non-condensing)

**Detector dimensions (L x W x H)**  
107 x 53 x 32 mm

**Bracket dimensions (L x W x H)**  
52 x 30 x 26.5 mm

## Detection Scope

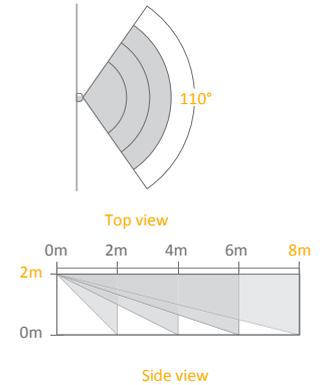


## Wireless Door / Window Contact

### Features


This Door / Window Contact can be installed on doors, windows, and any other objects that open and close. The sensor sends a signal to the control panel when the magnet is separated from the transmitter.

Thanks to the tamper switch, any attempt to remove the cover of the Door / Window Contact will trigger the alarm.

### Design

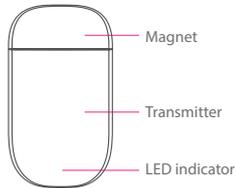

### PCB Layout

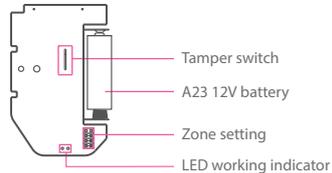

### LED indications

**Blinks once:** the door or window is open and the transmitter sends a signal to the control panel.

**Blinks quickly:** Low power indication, the batteries must be replaced.


### Register in the control panel

Navigate through the menu of the control panel and reach "ADD A NEW" (Wireless Sensor). Then separate the magnet from the transmitter to register the detector in the control panel.

To check if the registration is complete, arm the system and separate the magnet from the transmitter again by opening the door or window on which it is installed. If the siren rings out, the registration is successful.

### Installation

- Open the case and remove the battery activation strip.
- Mount the sensor on the door and the magnet on the door frame.
- Make sure the magnet is placed above the transmitter.
- Mount the magnet max. 1 cm away from the transmitter and secure the transmitter and magnet with double-sided tape or screws.
- Avoid mounting the sensor in areas with a large amount of metal or electrical wiring such as a furnace or utility room.

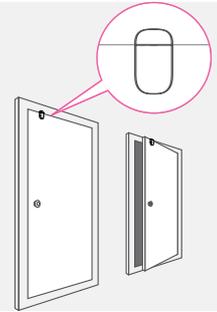

### Specifications

#### Power supply

DC 12V (A23 12V Battery x 1)

#### Static current

≤ 30  $\mu$ A

#### Alarm current

≤ 15 mA

#### Transmitting distance

≤ 80 m (in open area)

#### Radio-frequency

433 MHz ( $\pm$ 75 KHz)

#### Housing material

ABS plastic

#### Operating conditions

Temperature: -10°C~55°C

Relative humidity: ≤ 80% (non-condensing)

#### Transmitter dimensions (LxWxH)

60 x 45 x 18 mm

#### Magnet dimensions (LxWxH)

45 x 19 x 17.5 mm

## RFID Tag

### Features

The RFID tag enables you to disarm your system or unlock electronic door locks.

### Register in the control panel

Refer to the instructions in the table page 8 of this manual (“RFID TAG”).

### Specifications

#### Dimensions

45 x 30 x 7 mm

## Troubleshooting and maintenance

### FAQ

Issue	Cause of malfunction	Solution
No response following interaction with the control panel	The control panel is switched off	Open the battery compartment and turn the power on
	Electricity grid failure	Contact your electricity provider
	Backup batteries are empty	Plug the AC adapter to an AC socket
Accessories cannot connect to the control panel	The control panel is not in Connection mode	Make sure the control panel is in Connexion mode
	Accessories have not been triggered for connection	Make sure the accessory is triggered so to send a signal to the control panel
	When attempting the connection, the control panel beeps twice	The accessory has already been connected  Make sure you do not trigger any other accessory when connecting one accessory to the control panel (e.g. do not stay in the detection scope of a motion detector if it is not the one you want to connect)
No response from the control panel following commands from the remote control	The remote control has not been connected to the control panel	Follow the instructions in this manual to connect the remote control to the panel
	Remote control is too far from the control panel	Transmission distance of the remote control: 80 m (in open area)  A signal repeater can be installed to increase the transmission distance
RFID tag fails to disarm the system	RFID tag has not been connected to the control panel	Follow the instructions in this manual to connect the RFID tag to the control panel
Impossible to access settings from the control panel	You are not in the setup menu of the LCD display	Enter your admin code followed by “Enter” to enter the setup menu

## Precautions

For a safer use of the product and to optimize the lifespan of the product, we recommend you to follow the precautions below:

- The wireless accessories must be connected to the control panel.
- Low power voltage may affect transmission distance.
- Do not press the SOS key on the remote control if it is unnecessary to avoid disturbing neighborhood.
- Check the system regularly to make sure the system works properly.
- The control panel is neither waterproof nor moisture-proof, install it in a shady, cool and dry place.
- The case of the control panel is made of ABS plastic. Keep away from bright light for a longer lifespan.
- The control panel is not explosion-proof. Keep away from fire and flames.
- Install the control panel away from objects such as heater, air conditioner, microwave oven etc. that generate heat or electromagnetic fields.
- Dispose of the batteries according to local regulations.
- Dismantling of this product must be done by professional personnel only.

## Standards



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.

Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.



In compliance with European laws. This product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



This product was designed and manufactured in compliance with Directive 2002/95/EC of the European Parliament and of the Council on the restriction of use of certain hazardous substances in electrical and electronic equipment (RoHS Directive - RoHS) and is deemed to comply with the maximum concentration values set by the European Technical Adaptation Committee (TAC).

Manufactured in China.





ELBRO AG, Gewerbestrasse 4,  
CH-8162 Steinmaur,  
Switzerland  
[www.elbro.com](http://www.elbro.com)