

DP- 702 User's Manual



Package Contents

- 1 x DP-702 MP3 Player
- 1 x Audio Patch Cord
- 1 x User's Manual
- 1 x Mounting Plate
- 1 x Power Adapter (5V DC)

CAUTION: Using other power adaptor voids the warranty and may damage the player.

Installation

1. Copy desired sound files to the USB drive. Add a unique three-digit number to the beginning of each filename. Numbers must be consecutively assigned, starting from 001 and up to 099. This tells the system which file should be played first, which should be the second, and etc.
2. Connect the IN jack to the external background music source.
3. Connect the OUT jack to the PA system.
4. Use only the provided power adaptor to power the unit. Using other power adaptor voids the warranty and may damage the unit.
5. Turn on the system by turning the VOL dial away from the OFF position.
6. During normal operation, the LED display shows the delay in minutes, e.g. '05' means the delay is 5 minutes between the end of the previous message and the beginning of the next message. Pressing the SELECT button increments the delay. Going over 10 will reset the delay to 1.

7. The internal speaker can be toggled on/off by pressing the SPEAKER button. It's very useful for content verification and trouble shooting.
8. The VOL. dial controls the overall volume (message & background music) as seen on the OUT jack.
9. To adjust the message volume independently, hold down the SELECT button while turning on the power. Release the button when the display shows a single digit on the left (the right digit will be dimmed). This digit is the message volume and the range is 0 to 9 (default = 7). Press the SELECT button repeatedly to get to the desired volume. Going over 9 will reset to 0. When done, simply do nothing. The player will automatically start normal operation in about 3 seconds.
10. To play background music only, simply unplug the USB drive.
11. In case of power outage, the player will automatically resume normal operation after the power is restored.

Specifications

Number of Files: 99 max. (played sequentially, one at a time)

File Type Supported: MP3, CBR/VBR 320kbps or lower

USB Drive Capacity: 32 GB max. (500 hours of 128 kbps MP3 audio)

USB File System: FAT (FAT16) or FAT32

Output Power: 200mW max.

Trouble shooting

The background music plays but not the messages.

1. Make sure sound files are of the MP3 type.
2. Make sure the audio patch cord is securely connected.
3. Make sure file numbers are assigned with consecutive numbers starting from 001.

The sound quality is poor.

1. Make sure the audio patch cord is securely connected.
2. Try adjusting the volume.

Disclaimer

Eletech and its subsidiaries shall not be held liable for any loss or claims by you or any other person or entity that may arise through the use of this product.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.