


Gear Adjusting Magazine Rack Assembly Instructions

Parts List

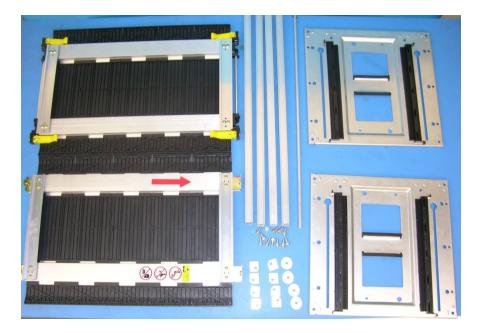

- •One fixed side panel (card guide)
- •One adjustable card guide with locks
- •Four square corner posts
- •One top and bottom which are identical
- •12 SHC screws
- •8 Square washers
- •4 Round washers
- •One round board stopper

Step One




With the top (or bottom) on it's side, attach and tighten the four corner posts using the square washers with the notch facing out. Make sure the plastic gear is facing in as illustrated






Lay the fixed card guide, slots facing up, on the two corner posts and attach one end using the SHC screws and round washers. It should be obvious where this card guide is attached as the adjustable card guide will be inserted into the keyhole so it can move in the slot



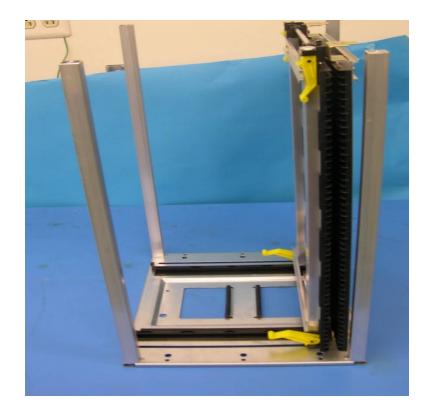

Stand the rack up and insert the adjustable card guide by inserting the round ends into the round holes on the bottom plate. Use the SHC screws and round washers to attach and tighten



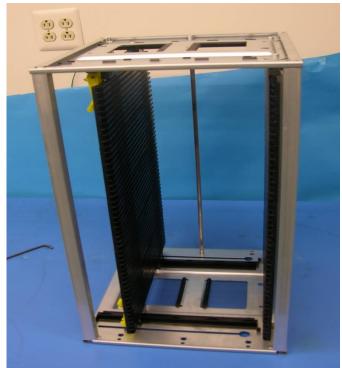

- •Attach the top plate making sure the round metal parts on the adjustable guide are aligned with the holes and slide the card guide away from the fixed guide.
- •Check to make sure it slides freely and lock all four latches
- •Insert the round board stop





This shows the round end of the adjustable card guide aligned with the round hole and also shows the where the fixed card guide is attached with the round washers and SHCS

Trouble?

• Contact us at 1-888-fancort ext. 227