## NOSE ASSEMBLY DATA SHEET .81 (20.6 mm) 5.71 (145 mm) 3 54 (89.9 mm) (61.7 mm) 1.33 (33.8 mm) Ø.62 (15.8 mm) .43 (10.9 mm) CAUTION! Do not operate if pintail deflector is removed. Pintail may eject forcibly. SEVERE PERSONAL INJURY MAY RESULT. \*REQUIRES 730715 ADAPTER. 20 \*\*TWEEZERS ARE RECOMMENDED FOR INSERTING JAWS INTO COLLET. \*\*\*RIGHT ANGLE NOSE ASSEMBLIES REQUIRE MORE

Recommended Tool:

**REV 3/15** 

Type:

THAN ONE "PULL".

# GAGE BILT

GAGE BILT Inc.

44766 Centre Court (586) 226-1500 Clinton Twp. MI 48038 (586) 226-1505 Fax e-mail:solutions@gagebilt.com / www.gagebilt.com

Fasteners:

. ,,,,,			1 401011010.		GB715
Single Action 1/8" Ø			NAS1398A/1399A NAS1738A/1739A RV1000/1100 & 1200	Alternate Tools: *GB751	
Ref. No.	Qty.	Description			4A-715A-54RA
1	1	Nose Tip			10488
2	1	Anvil Holder			10115
2	2	Jam Nut			70411
4 5 6	1	Collet			20327
5	1	Super Grip Jaw Assy			30418-S5
6	1	Frame			75310
7 8	2	Shoe Bearing			75311
	1	Drawbolt-Collet			70486
9	1	Barbed Retainer			70575
10	1	Deflector			61107
11	1	Lever			75313
12	1	Button Head Cap Screw			402471
13	2	Set Screw			75315
14	1	Guard			75316
15	2	Pivot Pin			75317
16	8	Link		75318	
17	4	Link Pin		75319	
18	1	Bellcrank		75320	
19	1	Guide Pin			75321
20	1		Drawbolt		75322
21	1		Adapter Frame		70458
22	1		Collet Extension		70457

#### ATTACHMENT:

Disconnect air supply from tool. Hold back of drawbolt-collet (8) down with thumb. Thread anvil holder (2) into frame (6) until it bottoms out on collet (4). Loosen approximately 1/4 turn and tighten jam nut (3) securely to frame (6). Engage one or two threads of collet extension (22) onto piston assy located on tool, then insert adapter frame (21) into end of head cylinder assy located on tool and turn clockwise until snug. Rotate nose assembly to desired position and tighten jam nut (3) securely. Reconnect air supply to tool.

#### DISASSEMBLY:

Loosen jam nut (3) and remove holder (2). Unscrew collet (4) which contains super grip jaw ass'y (5) from drawbolt-collet (8).

Remove button head cap screw (12) and guard (14). Remove two set screws (13) and push out two pivot pins (15) to permit removal of linkage. Shoe bearings (7) and drawbolt-collet (8) will disengage from lever (11).

Remove four link pins (17) to disassemble lever (11), links (16), bellcrank (18) and drawbolt (20).

Remove guide pin (19) from frame (6). Adapter Frame (21) is secured to frame with Loctite® and need not be removed unless damaged.

### REASSEMBLY:

Reverse the procedure. Linkage, consisting of lever (11), links (16), bellcrank (18) and drawbolt (20) should be assembled as a subassembly before inserting lever (11) into shoe bearings (7) and drawbolt-collet (8). MAKE SURE NOTCHES ON DRAWBOLT-COLLET (8) ARE POINTING TOWARDS LEVER (11). This complete subassembly may then be inserted into frame (6) and retained by guide pin (19) and pivot pins (15).