
NOSE ASSEMBLY DATA SHEET

 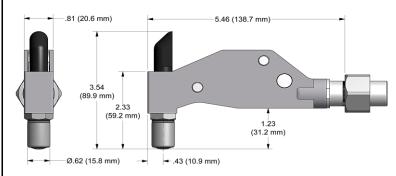


CAUTION!

Do not operate if pintail deflector is removed. Pintail may eject forcibly. SEVERE PERSONAL INJURY MAY RESULT.



***GB752 USE 752142 STROKE LIMITER.









11/14 REV 12/15

GAGE BILT

GAGE BILT Inc.

44766 Centre Court (586) 226-1500 Clinton Twp. MI 48038 (586) 226-1505 Fax e-mail:solutions@gagebilt.com/www.gagebilt.com/

Type:		Fasteners:	Recommended Tool: GB751 Alternate Tools: **GB731 ***GB752	
Single Action *1/8" Ø		NAS1398A/1399A RV 1000/1100 & 1200 *5/32 Ø AF5075 / AF5076 / S149A020		
Ref. No.	Qty.	Description		4A-751C-54RA
1	1	Nose Tip		10488
-	1	Anvil Holder		10115
2 3	1	Jam Nut		70411
4	1	Collet		20327
5 6	1	Super Grip Jaw Assy		30418-S5
	1	Frame		75310
7	2	Shoe Bearing		75311
8	1	Drawbolt-Collet		70486
9	1	Barbed Retainer		70575
10	1	Deflector		61107
11	1	Lever		75313
12	1	Button Head Cap Screw		402471
13	2	Set Screw		75315
14	1	Guard		75316
15	2	Pivot Pin		75317
16	8	Link		75318
17	4	Link Pin		75319
18	1	Bellcrank		75320
19	1	Guide Pin		75321
20	1	Drawbolt		75322
21	1	Adapter Assy		70459
22	1	Collet Extention		70463

ATTACHMENT:

Disconnect air supply from tool. Hold back of drawbolt-collet (8) down with thumb. Thread anvil holder (2) into frame (6) until it bottoms out on collet (4). Loosen approximately 1/4 turn and tighten jam nut (3) securely to frame (6). Engage one or two threads of collet extension (22) onto piston assy located on tool, then insert adapter assy (21) into end of head cylinder assy located on tool and turn clockwise until snug. Rotate nose assembly to desired position and tighten adapter assy (21) securely. Reconnect air supply to tool.

DISASSEMBLY:

Loosen jam nut (3) and remove holder (2). Unscrew collet (4) which contains super grip jaw ass'y (5) from drawbolt-collet (8).

Remove button head cap screw (12) and guard (14). Remove two set screws (13) and push out two pivot pins (15) to permit removal of linkage. Shoe bearings (7) and drawbolt-collet (8) will disengage from lever (11).

Remove four link pins (17) to disassemble lever (11), links (16), bellcrank (18) and drawbolt (20).

Remove guide pin (19) from frame (6). Adapter Assy (21) is secured to frame with Loctite® and need not be removed unless damaged.

REASSEMBLY:

Reverse the procedure. Linkage, consisting of lever (11), links (16), bellcrank (18) and drawbolt (20) should be assembled as a subassembly before inserting lever (11) into shoe bearings (7) and drawbolt-collet (8). MAKE SURE NOTCHES ON DRAWBOLT-COLLET (8) ARE POINTING TOWARDS LEVER (11). This complete subassembly may then be inserted into frame (6) and retained by guide pin (19) and pivot pins (15).