353205 ADAPTER DATA SHEET


To attach adapter and nose to tool:

- 1. Remove nose assembly nut from nose drawbar.
- Place adapter nut (3) into threaded end of collet with thread forward as shown. Thread collet adapter (2) onto head piston.
- 3. With collet placed in nose assembly anvil, tighten both onto anvil adapter assembly (1).
- Slide anvil adapter (1) over collet adapter (2) and lock into place on tool. Slide drawbar into nose assembly thru adapter assembly.
- 5. Using tee-wrench (4) thru rear of installation tool and 1/4" allen wrench on front of nose assembly drawbar tighten nut to drawbar.

CAUTION

Pintail may eject forcibly.
Used for closed access applications only to prevent severe personal injury!

<u>To remove adapter and nose from tool</u> <u>reverse assembly instructions</u>

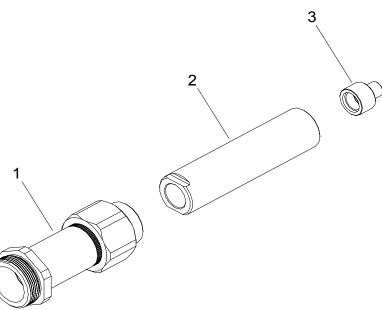

2/93 Rev. 5/02

*Stroke limiter 480153 required with GBP4801.

GAGE BILT

GAGE BILT Inc.

44766 Centre Court (586) 226-1500 Clinton Twp., MI 48038 (586) 226-1505 Fax e-mail:solutions@gagebilt.com / www.gagebilt.com

Rotatable
Offset Nose Assembly
Adapter

Type:

Adapts GB205A Series Nose Assemblies to: GB745 and GBP4801B Installation Tools

Ref. No.	Qty.	Description	353205
1	1	Anvil Adapter Assembly	353231
2	1	Collet Adapter	353216
3	1	Nut	353218
4	1	Tee-Wrench (Not Shown)	A-139