

# GNU SNOWBOARD BINDINGS

## INSTRUCTIONS HOW TO REPLACE ANKLE STRAP

### HOW TO REMOVE ANKLE STRAP

1. Open Cam Lever Buckle by pulling upward, slide adjuster strap out from Cam Lever Buckle.
2. Release Micro Buckle on opposite side of ankle strap, slide ratchet ladder out of Micro Buckle.

### HOW TO ATTACH ANKLE STRAP

1. Open Cam Lever by pulling upward, slide adjuster strap into Cam Lever Buckle, push Cam Lever Buckle downward to lock strap in place.
2. Insert ratchet ladder strap into Micro Buckle.

