

## **8220/ 8260-WIFI IP Setting & Driver Installing**

We should ensure following two points when we held this printer on hand.

1: A valid IP address should be allocate to the printer as required.

2: Install the correct driver for your printer

### ***How to allocate a valid IP for our printer ?***

Two ways for reference:

1: WiFi connection setting ( Wireless network required )

2: Connect the printer and pc with RJ45 ports;

> If Wifi connection method , we should refer to following steps ( step 1 to step 9 )

> RJ45 connection method, we have to follow from step 3 to step 9;

1. Plug and switch on the printer;


2. Find the wireless network and link it. Then find the file named † HF-A11• and link it '

Next ;

3. Put the IP address ( 10.10.100.254 ) into the browser address bar, press enter we can see below window;




**Choose admin for the user name and default password is also admin. Press ok and then Next.**

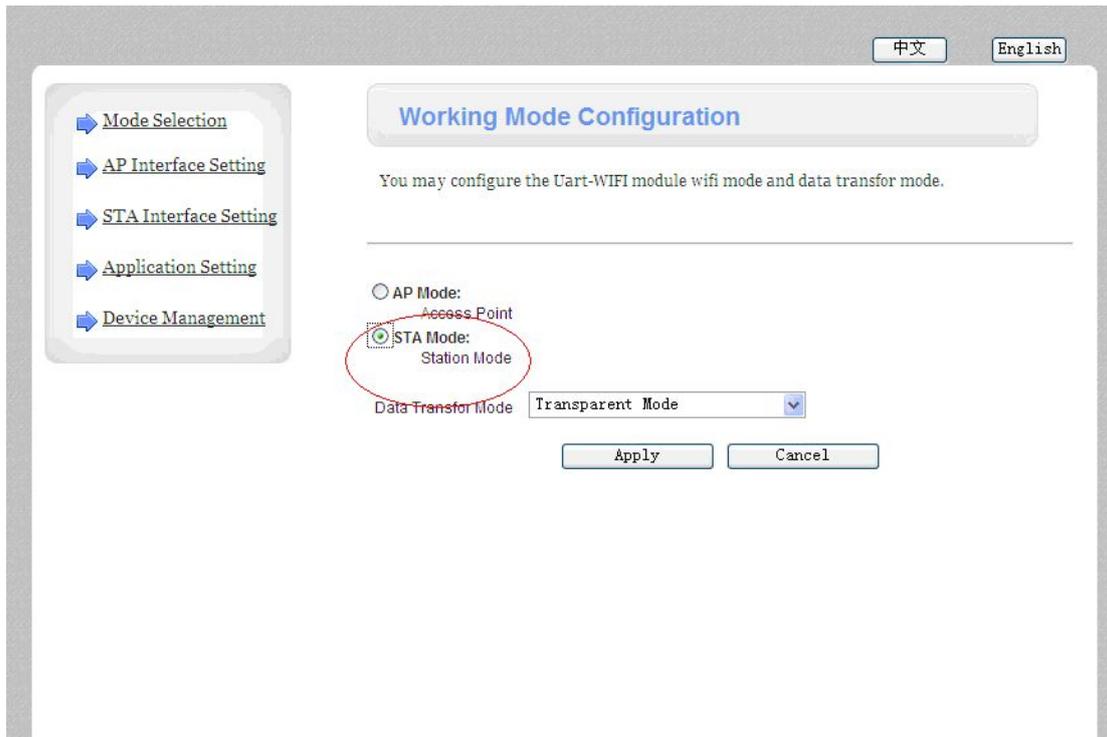


> Select # Station Mode # , Choose transparent mode. Refer to above jpg.

4. Select # STA interface Setting • as below;

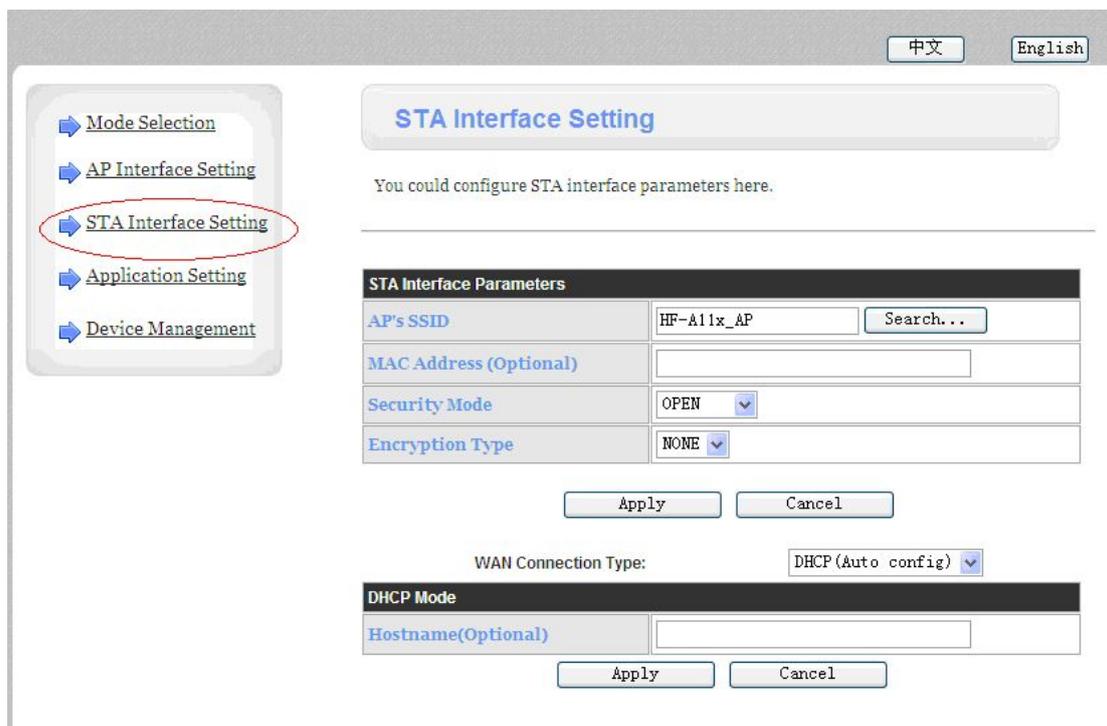


Then click **Search** and we can see and choose the wireless devices

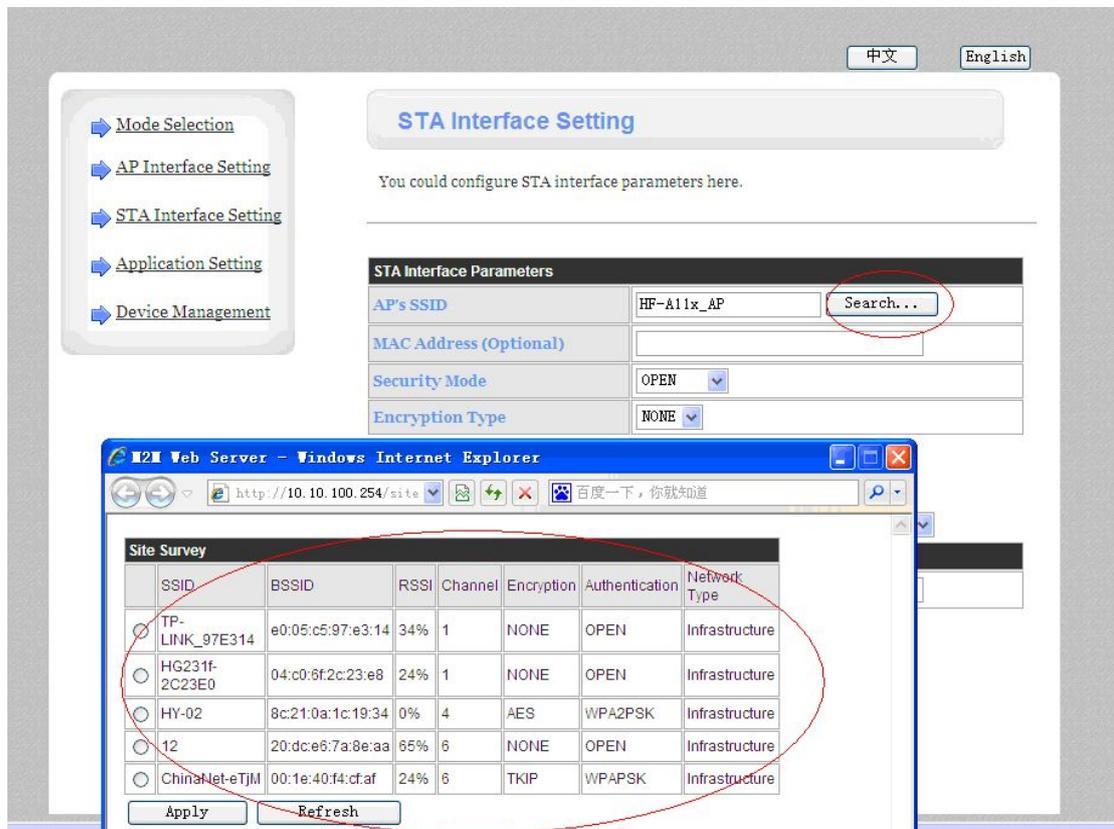


> Here is the wireless devices available for use.



5. Choose the desired device as below

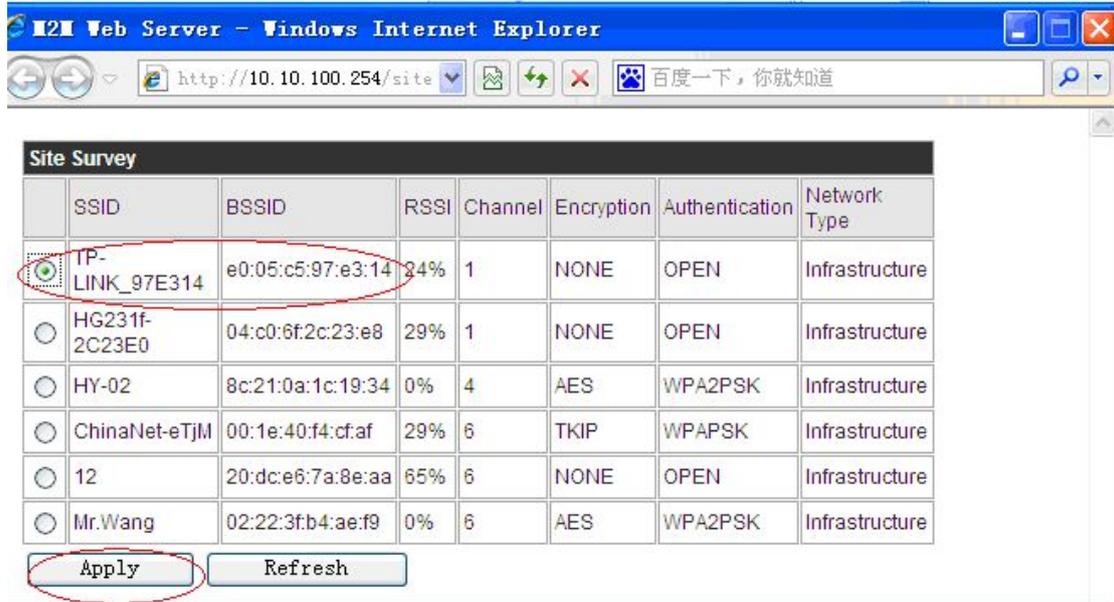

> Click **Apply**.

6. Enter the correct configuration in the dialogue as below jpg shows.

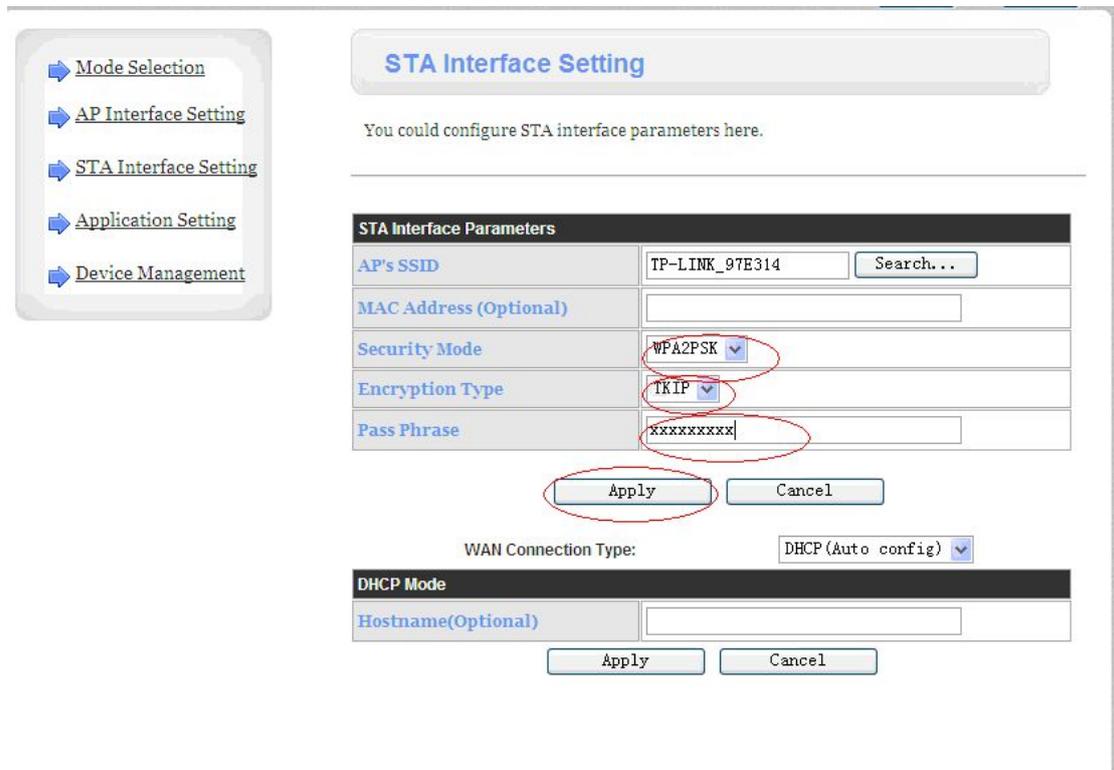

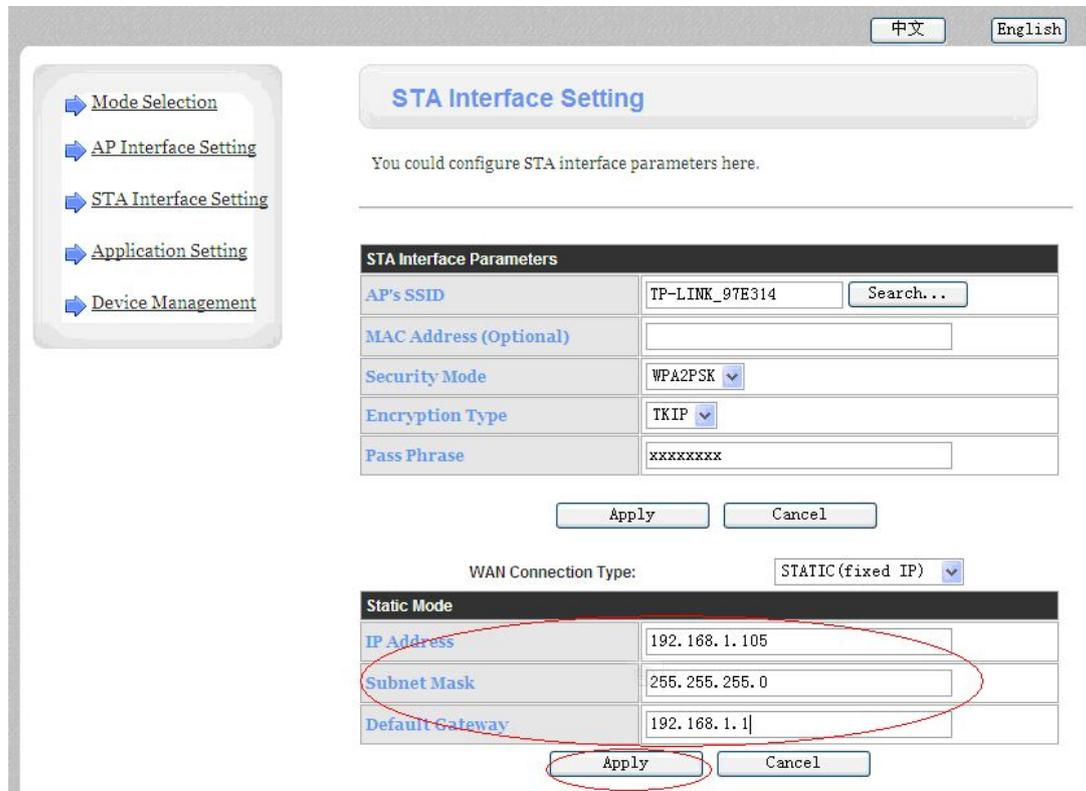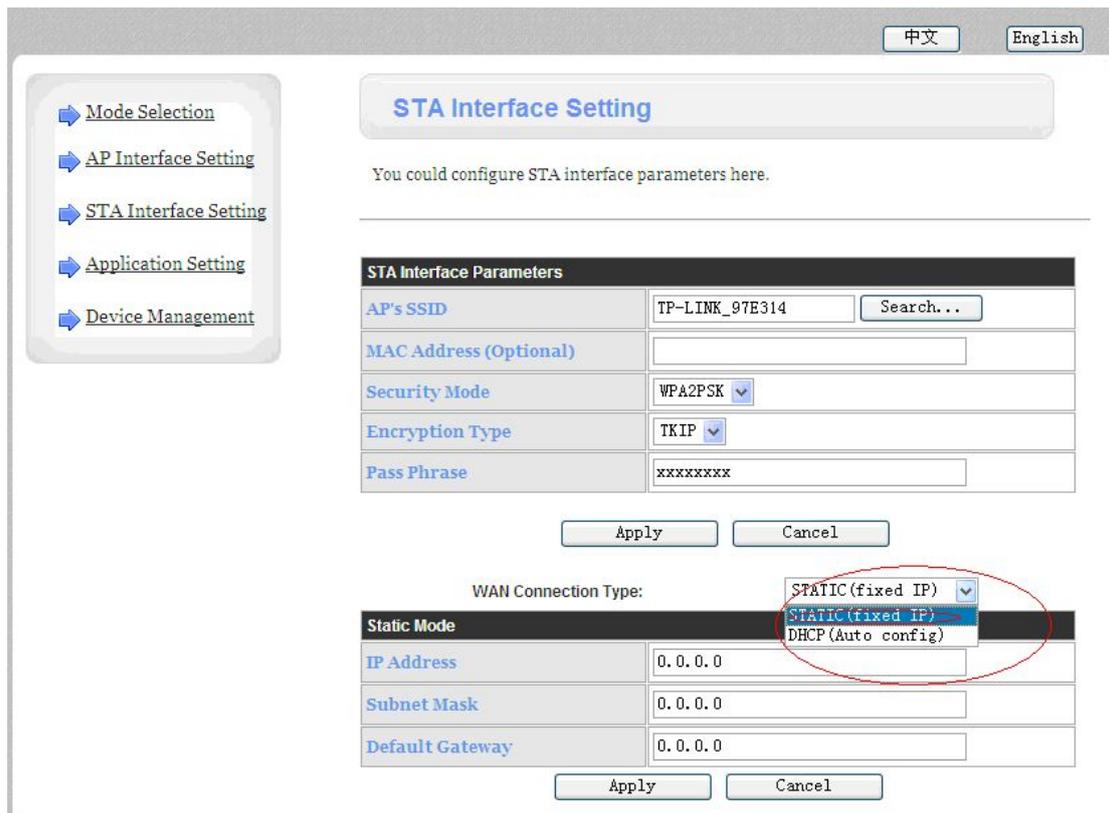

> Click **Apply** after all these configuration steps ;

**7. Select † Serial and other settings • as below;**



Uart Setting	
Baudrate	115200
Data Bits	8
Parity	None
Stop	1
CTSRTS	Disable

Apply Cancel

UART AutoFrame Setting	
UART AutoFrame	Disable



Apply Cancel

Network Setting	
Mode	Server
Protocol	TCP
Port	9100
Server Address	10.10.10.100
MAX TCP Num. (1-32)	32
TCP Time out (MAX 600 s)	300

Apply Cancel


> Click † Apply• after all setting done.

**8. Restart the module as below;**

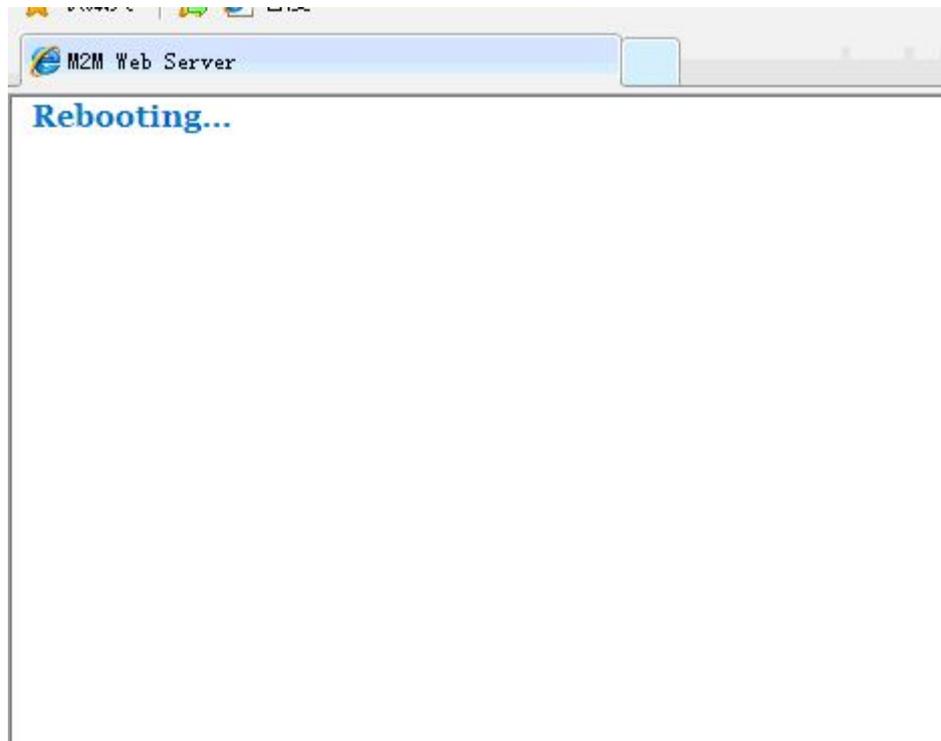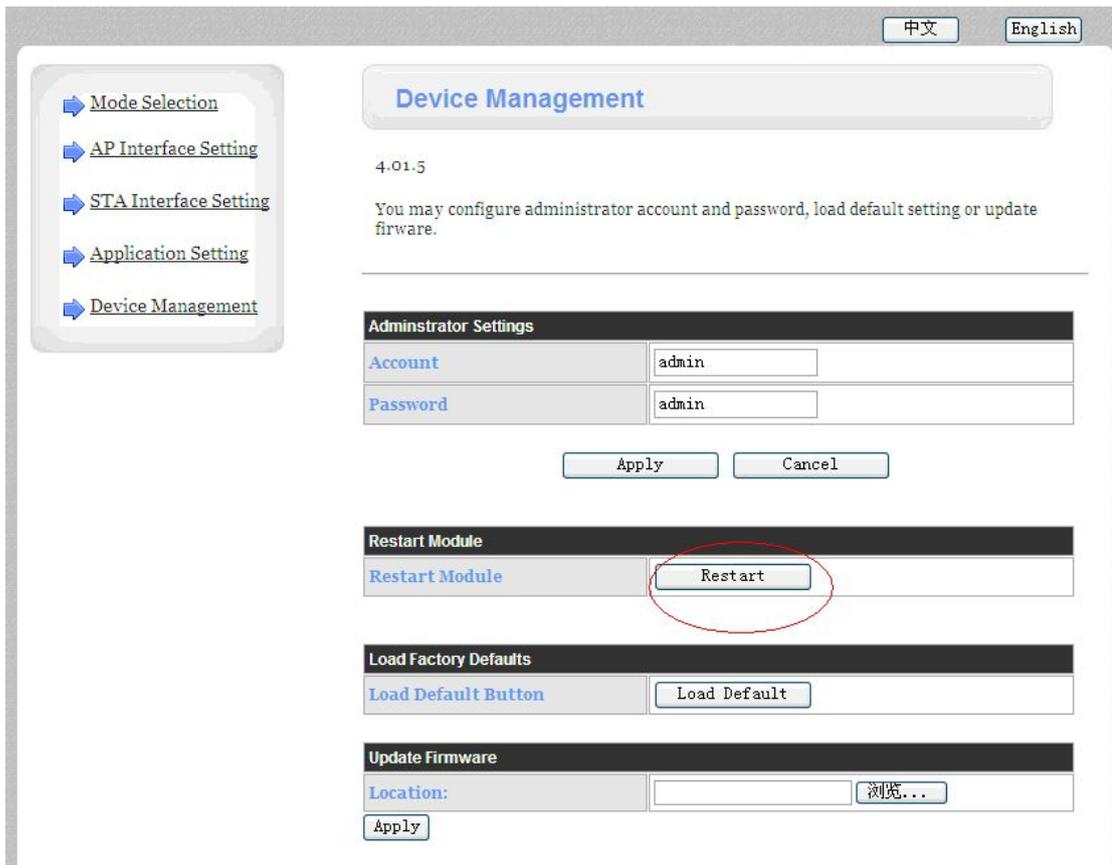


> **Module configuration done**

9 . Computer † Start → † Run • Input word † CMD • , we have below dialog:

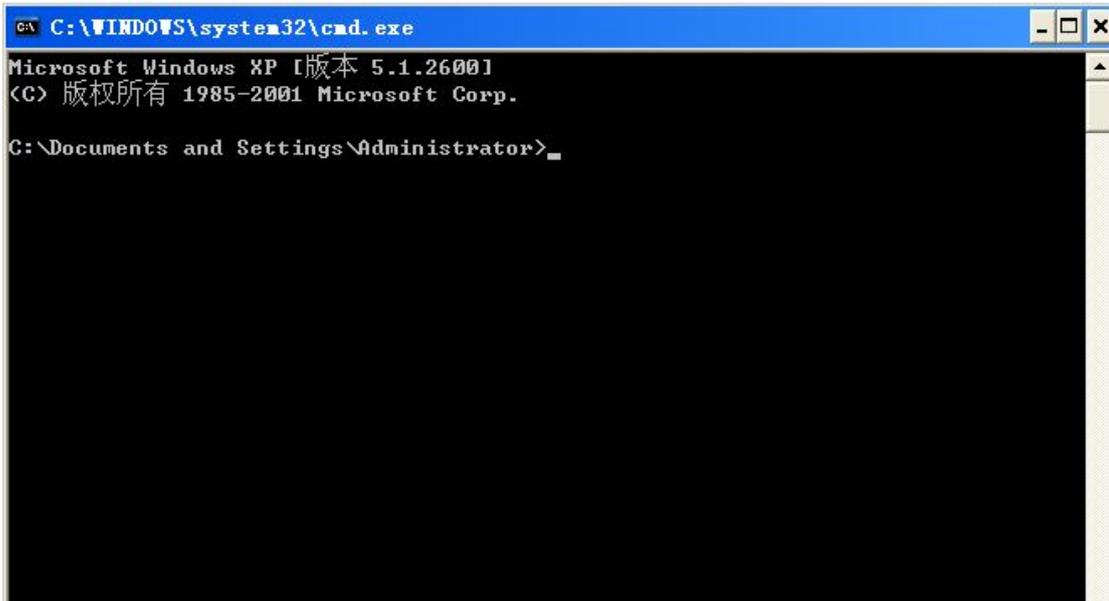

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [版本 5.1.2600]
(C) 版权所有 1985-2001 Microsoft Corp.
C:\Documents and Settings\Administrator>
```

> Input † ping 192.168.1.105 -t • as below

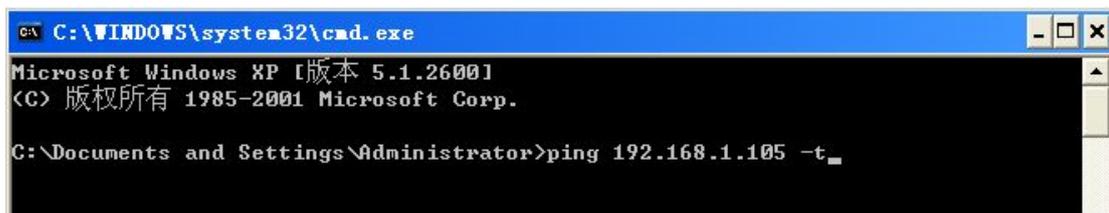

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [版本 5.1.2600]
(C) 版权所有 1985-2001 Microsoft Corp.
C:\Documents and Settings\Administrator>ping 192.168.1.105 -t
```

> Press † Enter •

If details shows as below , means connection is Ok ;

```
C:\WINDOWS\system32\cmd.exe - ping 192.168.1.105 -t
Microsoft Windows XP [版本 5.1.2600]
(C) 版权所有 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>ping 192.168.1.105 -t

Pinging 192.168.1.105 with 32 bytes of data:

Reply from 192.168.1.105: bytes=32 time=61ms TTL=255
Reply from 192.168.1.105: bytes=32 time=1ms TTL=255
Reply from 192.168.1.105: bytes=32 time=3ms TTL=255
Reply from 192.168.1.105: bytes=32 time=2ms TTL=255
Reply from 192.168.1.105: bytes=32 time=86ms TTL=255
Reply from 192.168.1.105: bytes=32 time=1ms TTL=255
Reply from 192.168.1.105: bytes=32 time=2ms TTL=255
Reply from 192.168.1.105: bytes=32 time=1ms TTL=255
```

***Now, lets talk about the “ correct driver installation ”***


**1: Insert the driver CD ‘choose the language ‘next :**



**2: After press † OK• , then go Next ;**




**3: Read the software terms and instruction carefully and select  accept then go forward.**

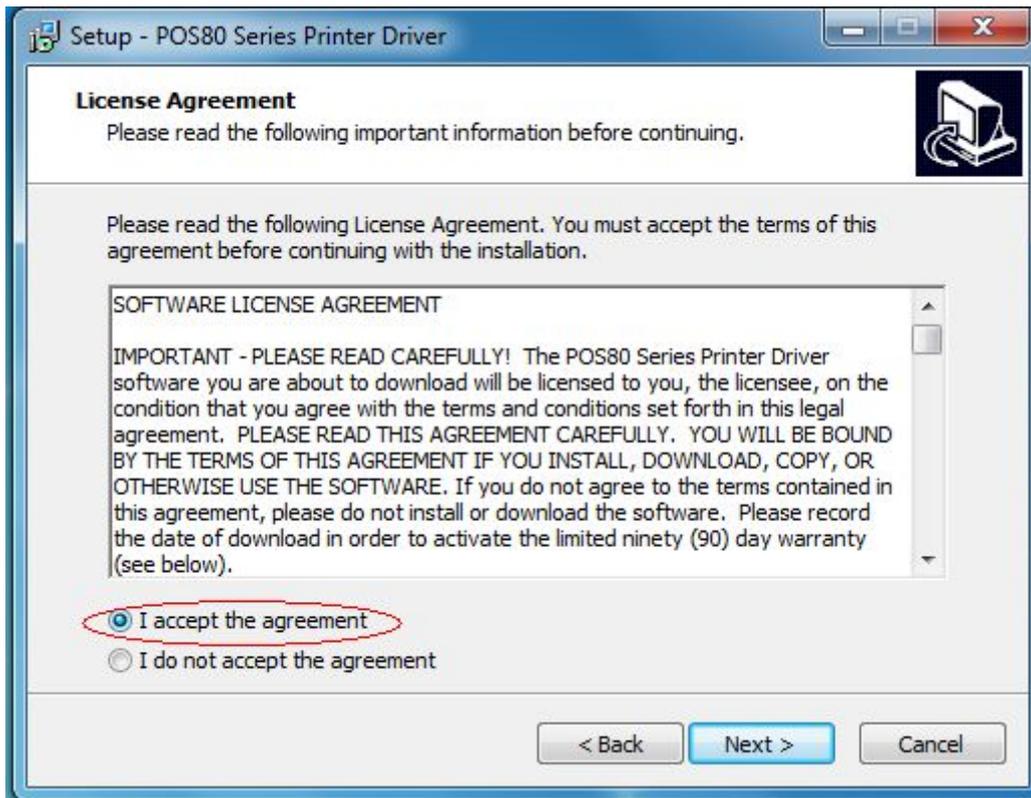


4: Click † Next • to keep installing, this process might be blocked by your security software.

Please help to give the permission by manual setting.

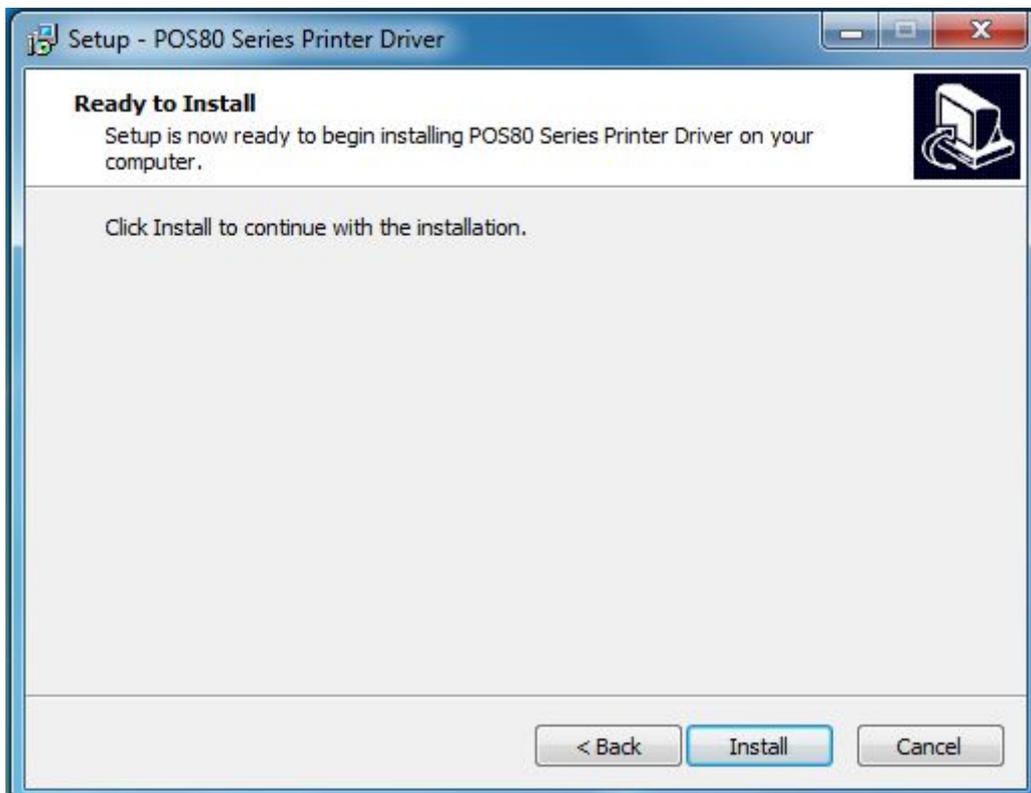

**5: Choose the desired system and Next;**

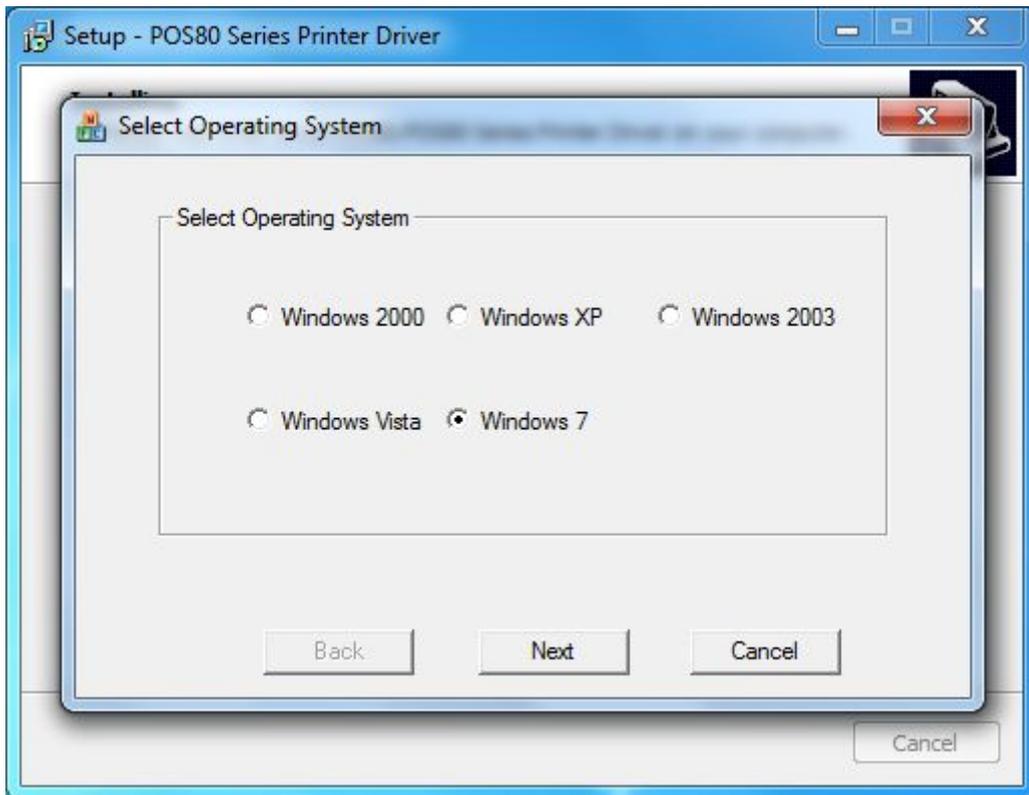


**6: Choose the right print type as below**




## 7: Driver installation Done




8: Click "Control panel" in the computer main menu, click "printer and fax" to select the printer which one you just installed,click "Add Port" and choose "Stand ICP/IP Port",then click "new port"

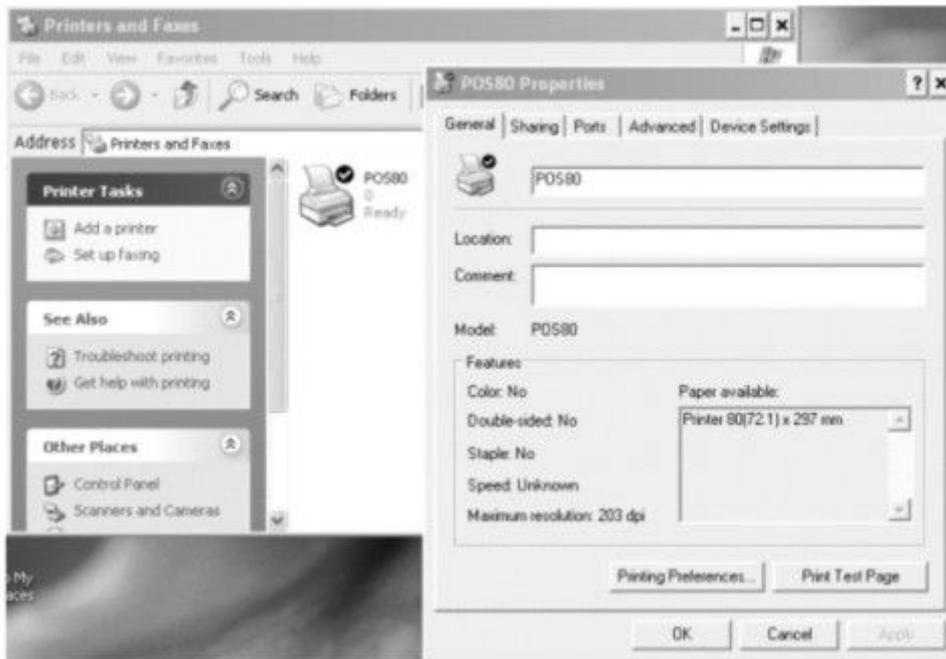


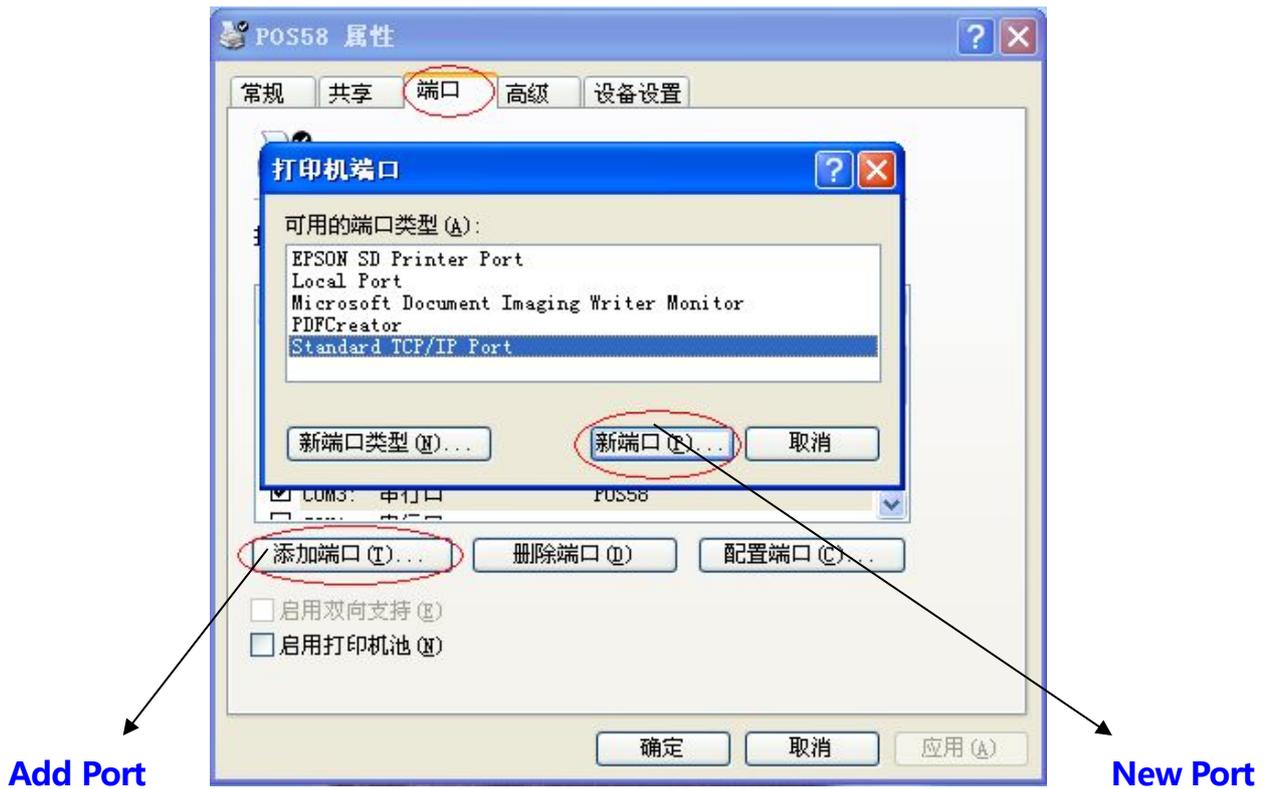


9: Enter the IP address into **Printer Name** dialog, and click **Next** to continue the installation.

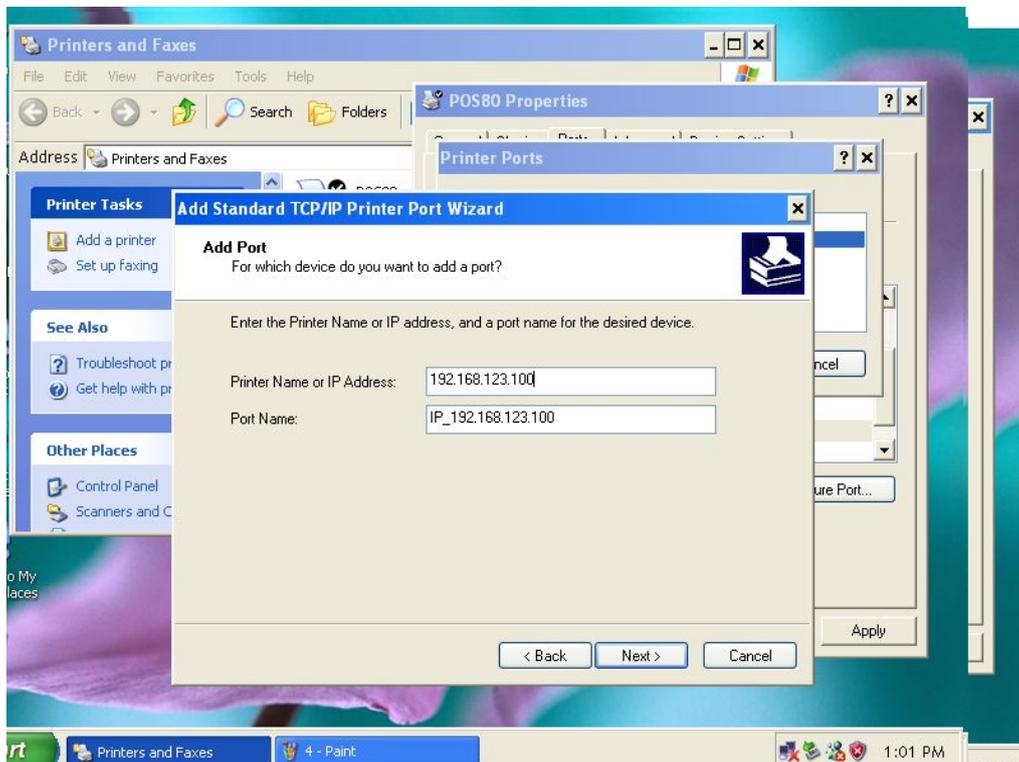


**10: Click "Port" to Select † Add Standard TCP/IP Printer Port Wizard• , click † Next• to continue the installation.**

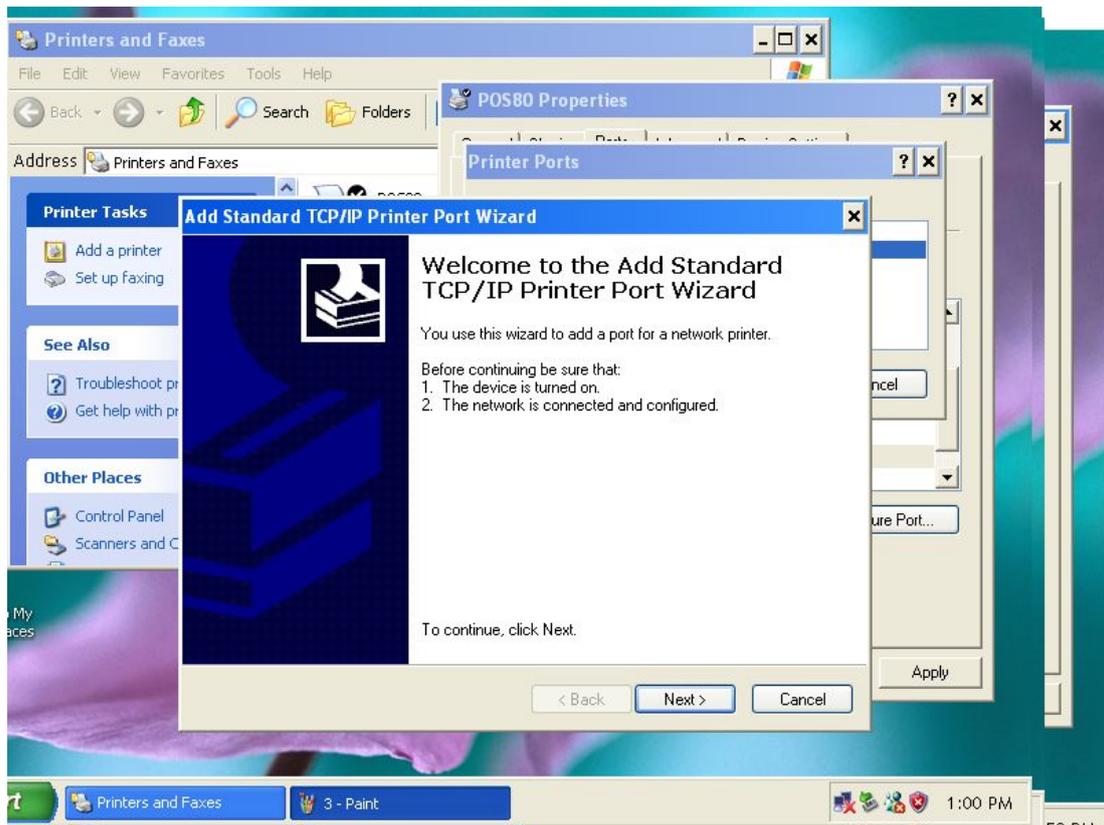

**11: Add the standard TCP / IP Printer Port Wizard, select the device type, and then click † Next• to continue the installation, See the following image:**

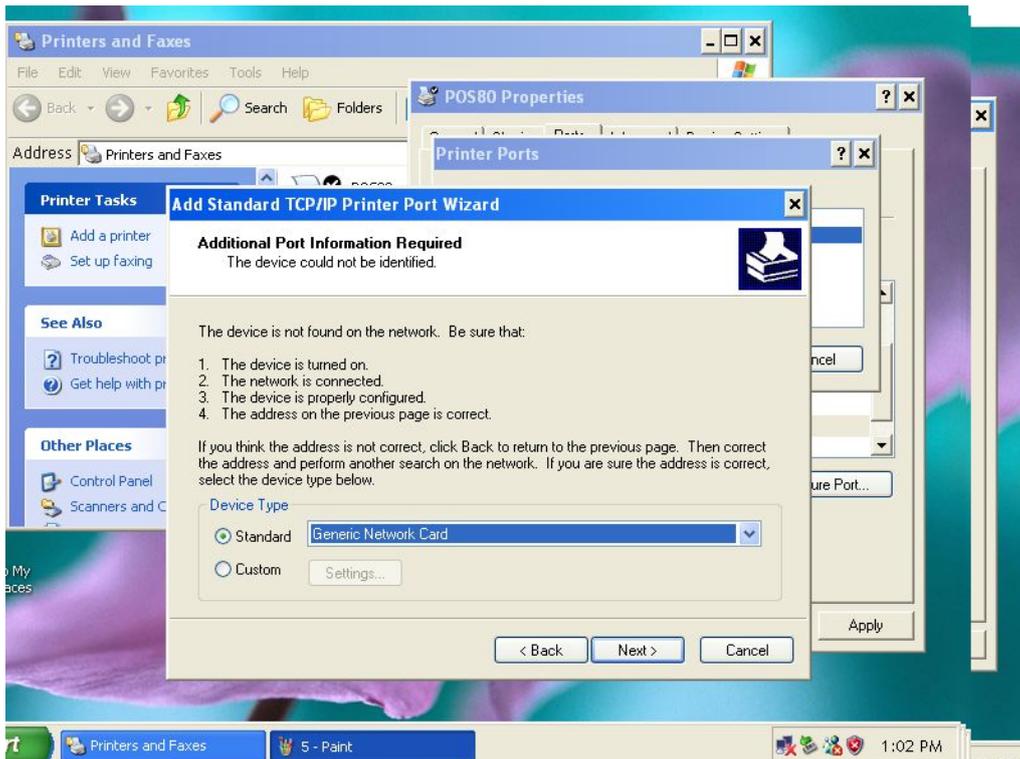



12: Click **Finish** to complete the installation, see the following image:

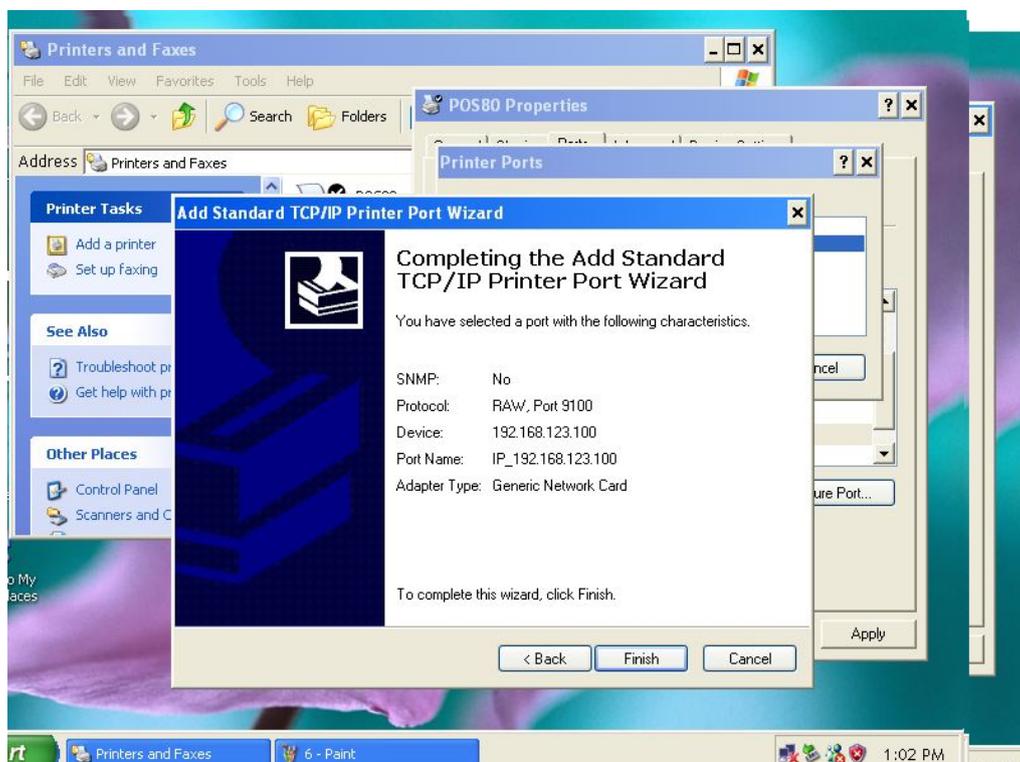


14: Installation will return to **Properties** interface, and then select the correct IP port, click

‡ Apply , you can now print a test page. See the following image:

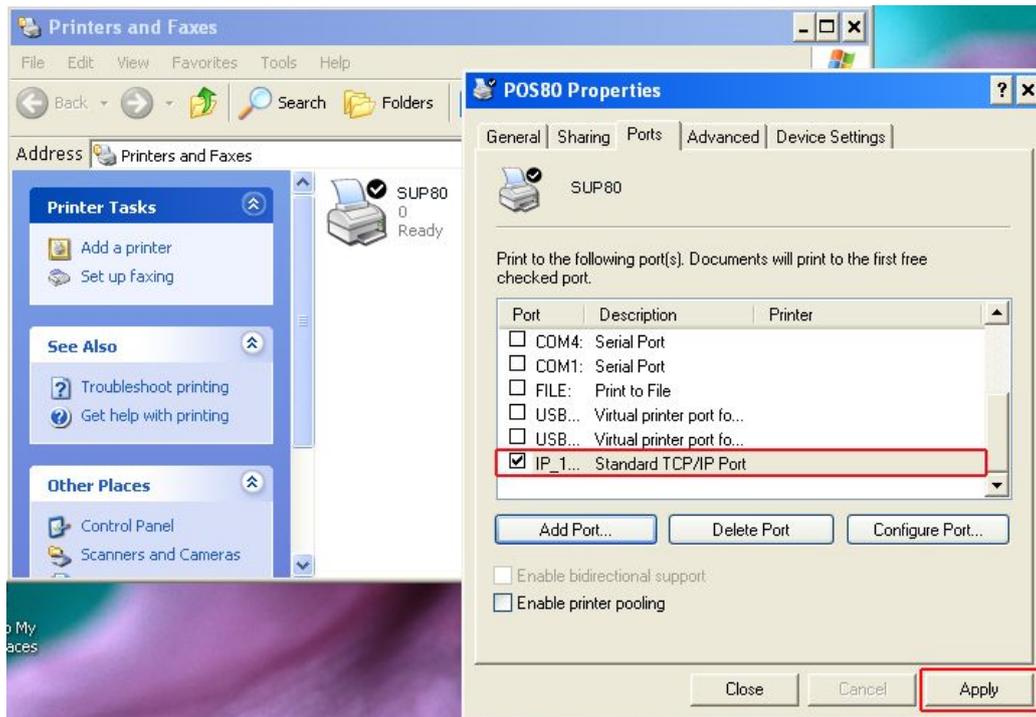

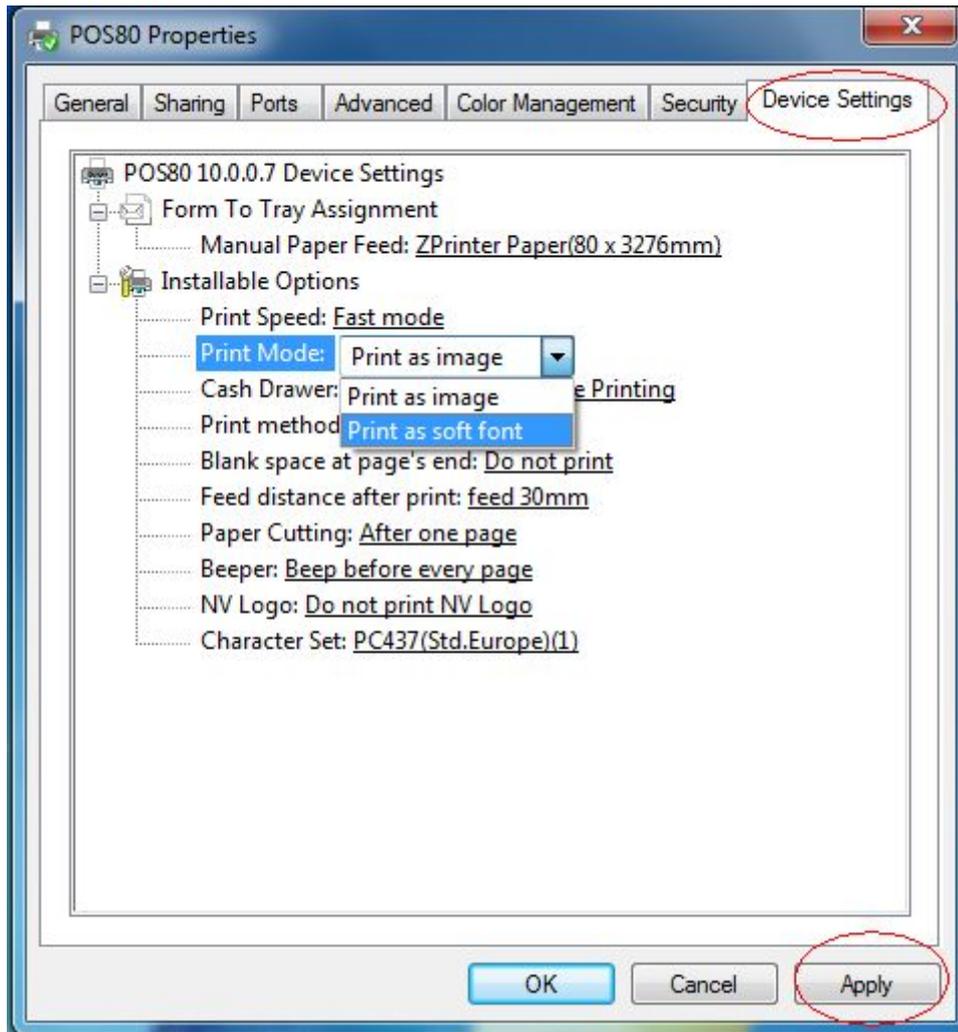

> Return to † General • and click † Print Test Page • as below.

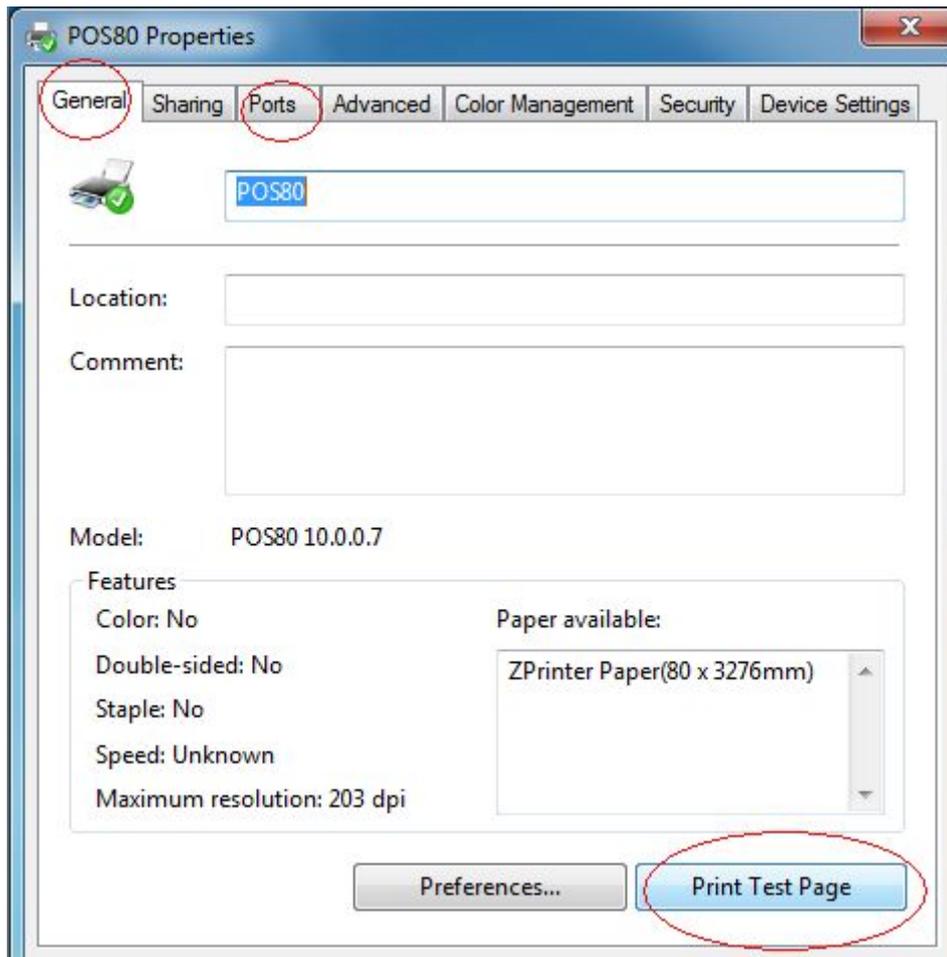

> Everything is ok if the test page print out in good condition.