 



# **HAUPPAUGE DIGITAL TV TUNER FOR XBOX ONE**

QUICK INSTALLATION GUIDE

# WHAT'S IN THE BOX



 HAUPPAUGE DIGITAL TV  
TUNER  
FOR USE IN  
USA & CANADA

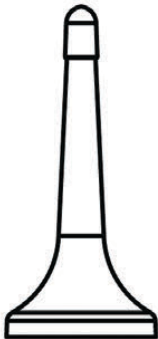

10 MILE ANTENNA WITH  
COAX CONNECTOR



USB  
EXTENSION

# WHAT YOU'LL NEED



XBOX ONE



TELEVISION/MONITOR

 


HIGH-SPEED INTERNET  
CONNECTION

# STEP 1

CONNECT THE HAUPPAUGE DIGITAL TV TUNER TO THE TELESCOPING 10 MILE ANTENNA (INCLUDED) OR A HIGH POWERED ANTENNA (OPTIONAL) WITH A COAX CABLE.

PLACE YOUR ANTENNA IN AN AREA LIKELY TO GET GOOD RECEPTION, SUCH AS A WINDOW.

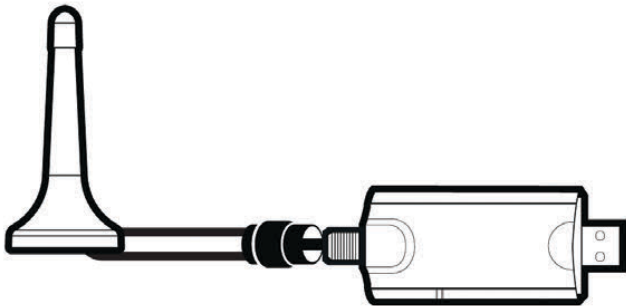


For best results, try to put the antenna in a window or area with minimum obstructions

## STEP 2

 CONNECT THE USB EXTENSION CABLE ONTO THE HAUPPAUGE DIGITAL TV TUNER.


THEN PLUG THE OTHER END OF THE USB EXTENSION CABLE INTO A USB PORT ON THE BACK OF YOUR XBOX ONE.

ANY UNUSED XBOX ONE USB PORT CAN BE USED.

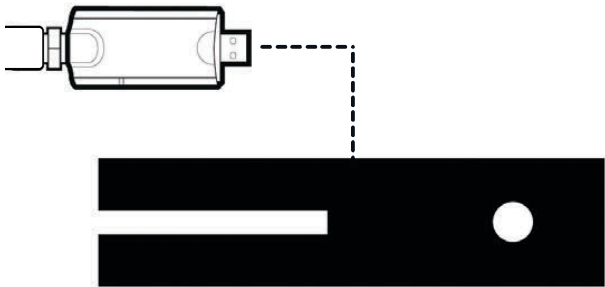

## STEP 3

 WHEN THE “TV TUNER DETECTED” NOTIFICATION POPS UP, HOLD THE XBOX BUTTON ON YOUR XBOX ONE CONTROLLER TO BEGIN SETUP.

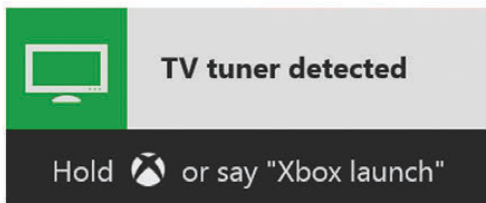

TO COME BACK TO SETUP LATER, GO TO SETTINGS > TV & ONEGUIDE > DEVICE CONTROL > TV TUNER SETTINGS

# STEP 4

ENTER YOUR ZIP CODE TO SCAN FOR CHANNELS. THIS WILL TAKE A FEW MINUTES.

REVIEW THE SCAN RESULTS AND SEE IF YOU'RE GETTING THE CHANNELS THAT YOU EXPECTED.

IF YOU ARE MISSING CHANNELS, TRY REPOSITIONING YOUR ANTENNA AND SCAN AGAIN.

ONCE CHANNEL SCAN IS COMPLETE, FOLLOW THE ON-SCREEN INSTRUCTIONS TO BEGIN WATCHING TV.



# TIPS AND TRICKS

- You can hit X on your Xbox One Controller at any time while watching TV to pull up the OneGuide and see what's on.
- If Live Pause is enabled, hit A to pause, rewind, and fast-forward while watching TV.
- Download the Xbox SmartGlass app for iOS, Android, or Windows devices to stream over-the-air TV anywhere in the home.
- Snap TV to watch TV while you play games.



# TROUBLESHOOTING

## I'M NOT RECEIVING THE CHANNELS I EXPECT:

- The included antenna is capable of receiving a TV signal within 10 miles of a TV transmitter. However, this range can be affected by a variety of environmental factors including any obstructions between the antenna and the TV transmitter. Try experimenting with different antenna placements and rescanning if you are not achieving your desired results.
- Make sure you have extended the supplied 10 mile antenna. It will work much better if it is at full height!
- If you do not know the direction of your local TV broadcasters, Antennaweb.org has a good antenna selector which will help you find the direction to your local TV transmitter.
- The included 10 mile antenna may not be strong enough for your location, and you might need a more powerful antenna. For more information on antenna recommendations, go to [www.hauppauge.com/xboxtv](http://www.hauppauge.com/xboxtv)

## MY XBOX ONE IS NOT RECOGNIZING THE DIGITAL TV TUNER:

- Ensure you are using the included USB extension cable to connect the digital TV tuner to the back of the Xbox One.
- Make sure that your Xbox One is connected to the Internet and is up to date.
- Support for the Hauppauge Digital TV tuner is only in the U.S. and Canada and will not work outside these countries.
- For issues related to the digital TV tuner hardware, please contact Hauppauge support (contact details on the back of this guide). For issues related to the Xbox One, go to [support.xbox.com](http://support.xbox.com)

# NEED MORE HELP?

[WWW.HAUPPAUGE.COM/XBOXTV](http://WWW.HAUPPAUGE.COM/XBOXTV)

HAUPPAUGE SUPPORT IS AVAILABLE:

MONDAY TO FRIDAY

9:00AM TO 6:30PM EST

TELE: (631) 434-3198

EMAIL: [SUPPORT@HAUPPAUGE.COM](mailto:SUPPORT@HAUPPAUGE.COM)

MADE BY

**Hauppauge!**<sup>®</sup>

Hauppauge Computer Works, Inc.

[www.hauppauge.com](http://www.hauppauge.com)

Assembled in Malaysia Copyright 2015 Hauppauge Computer Works Inc.