

### Changes to the steps required to bind your under floor heating controller with evohome.

We have changed the software within the HCC80R – for this new software version, the binding procedure for the under floor heating controller series HCE80, HCC80, HCE80R, HCC80R and HCE80-NL is simplified.

Because the room set point and room temperature will be sent in one message from evohome controller (one step binding) there is a new binding procedure that needs to be followed. Only the Binding procedure has been changed, all other functions are still the same without any changes.

#### Binding the underfloor controller

1. Press the bind button on the underfloor heating controller until the bind button light comes on and the zone number light flashes.

If the zone light flashes green go to **Step 1** (new binding procedure software version 1.04).

If the zone light flashes red go to **Step 2** (old binding procedure software version 1.01).

**Step 1** on the evohome Controller, press the green bind button, the zone light turns solid yellow, the binding is successful.

The Binding for the zone is completed.

For the next zone press bind button on the underfloor heating controller two times, the next zone light flashes green, repeat procedure again for next zones.

**Remark:** If the zone is bound (zone light is solid yellow ) after pressing the Bind button on the underfloor heating controller, the red LED is flashing which means another room sensor can be bound to the zone. This is required in applications when the time program e.g. CM927 is used for several zones but the room sensor must be assigned to the individual zone. However if the evohome controller is used, this step can be passed (press 2x Bind button as described above).

**Step 2** on the evohome Controller, press the green bind button, if the zone light turns solid red continue with these instructions.

- Press the back arrow on the evohome Controller.
  - Press the bind button on the underfloor heating controller the zone light should flash green
  - On the evohome controller, press the green bind button
- The zone light on the underfloor heating controller should now be solid green.

You can identify if the HCC80R Underfloor controller you are looking at has the new software allowing one step binding by looking for the new software version V 1.04 and date code (after 13/7/14) will be printed on the product and packaging label.

Other Honeywell FAQ's and product documentation:

There are a wide range of FAQ's available on a variety of different topics. They can all be accessed via our website [www.honeywelluk.com](http://www.honeywelluk.com).


#### Binding the underfloor heating controller with the evohome controller



- 1 Press and hold the installation button  on the underfloor heating controller for 2 seconds. The LED lights up. The LED of zone 1 flashes green.
- 2 Press the green connection button  at the **evohome** controller. If binding was successful, the yellow LED of the underfloor heating controller lights up. Binding of the zone (room) is completed.

Repeat the process to bind further zones:

- Press the bind button  at the underfloor heating controller twice (skip red flashing LED). The green LED of the first zone flashes green.

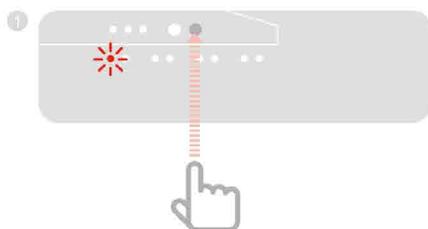

### Installation & User Guides

All our Installation and User Guides for Honeywell heating control products sold in the UK can be found on the website [www.honeywelluk.com](http://www.honeywelluk.com).

Full details of our product range can also be accessed by visiting [www.honeywelluk.com](http://www.honeywelluk.com).

Our products can be purchased from Professional Plumbing & Heating Merchants; Builders Merchants and other suppliers of professional products to the heating and plumbing industry across the UK.

### Contacting Honeywell:

Technical Support: Please note, we are unable to offer technical support to householders. Please contact your local installer for assistance.

08457 678999 (charged at local rates) +44 (0)1344 656125  
(calls from outside the UK)

Available from Monday - Thursday 09:00 - 17:00 Friday 09:00 - 16:00

This line is often busy during peak periods. If your enquiry is not of an urgent nature, please send an email, an automatic email form is available on the contact page on

[www.honeywelluk.com](http://www.honeywelluk.com).

### Installer Training Courses: 01344 656352

Please note that calls cannot be transferred between geographical numbers.

This sheet is for guidance only and at the time of production represented the latest information available to Honeywell from various sources. Honeywell reserves the right at any time and without notice to change any product, specification or any other information contained in this publication and cannot accept any responsibility for loss or damage arising out of any errors that may inadvertently be contained herein.

Honeywell Control Systems, Honeywell House, Skimped Hill Lane,  
Bracknell, Berkshire RG12 1EB

