

Field Calibration for LANTEK 6 / 7 / 7G

Field Calibration is a 4-step process !

Terms:

Patchcord 1: Patchcord that you plan to use at the Remote Handset


Patchcord 2: Patchcord that you plan to use at the Display Handset

Select Field Calibration from the DH Ready Screen




Step 1: Connect Display und Remote Handset via Patchcord 1, then

press

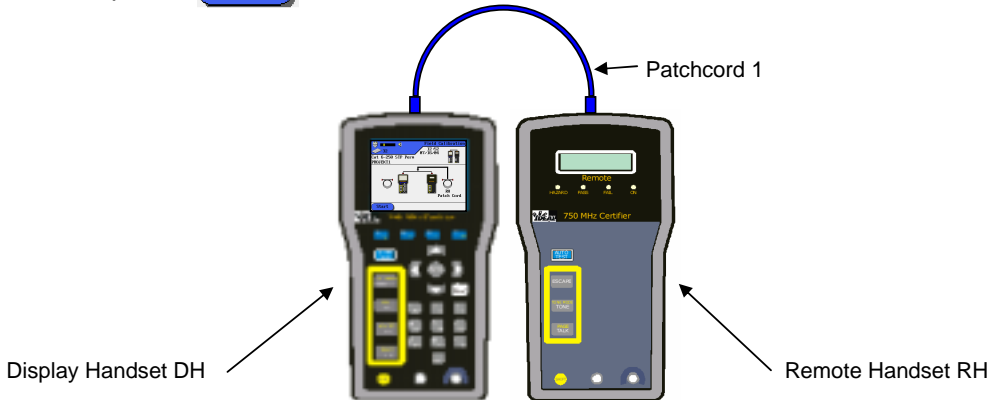

Step 2: Connect Display und Remote Handset via Patchcord 2, then

press

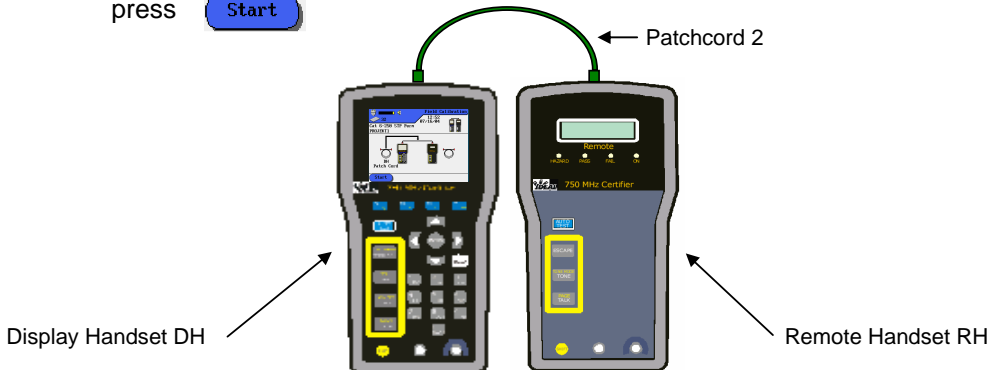

Step 3: Disconnect Patchcord 2 from Remote, then press on DH

Step 4: Connect Patchcord 1 to Remote Handset, then press on RH

