

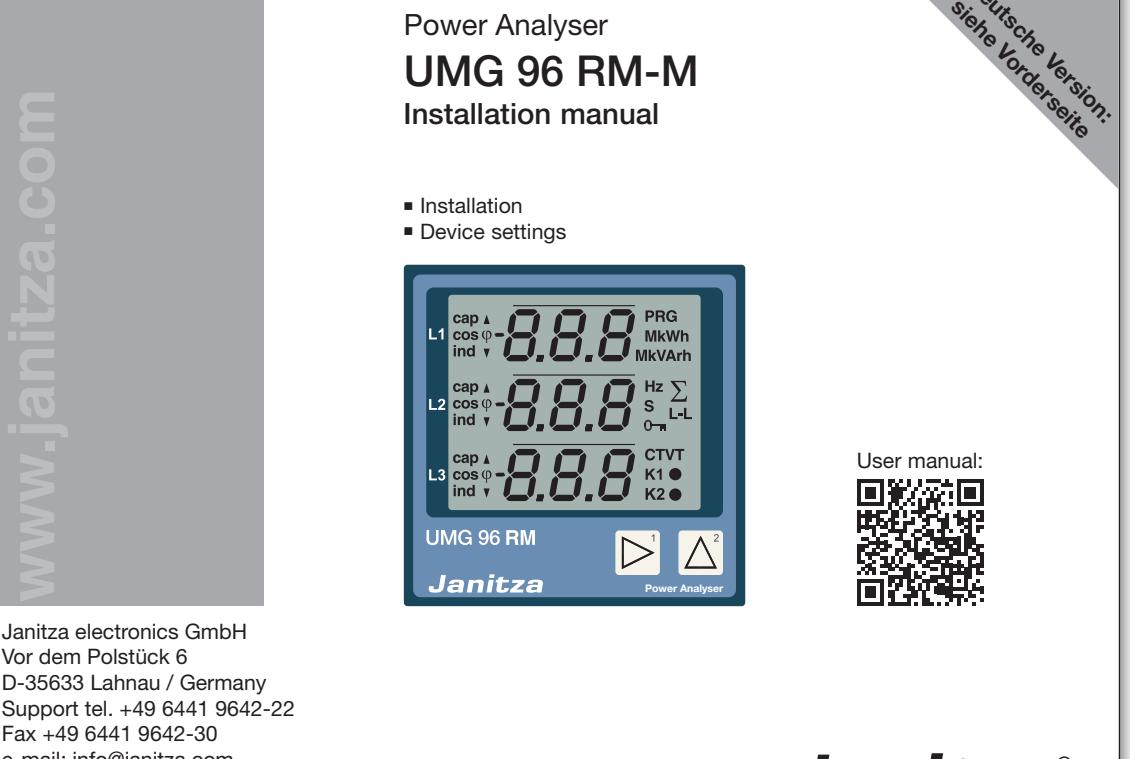
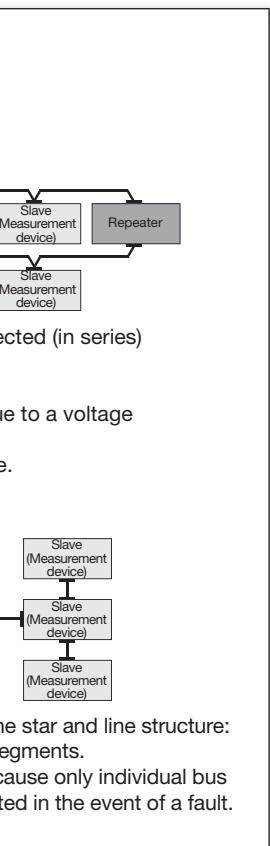
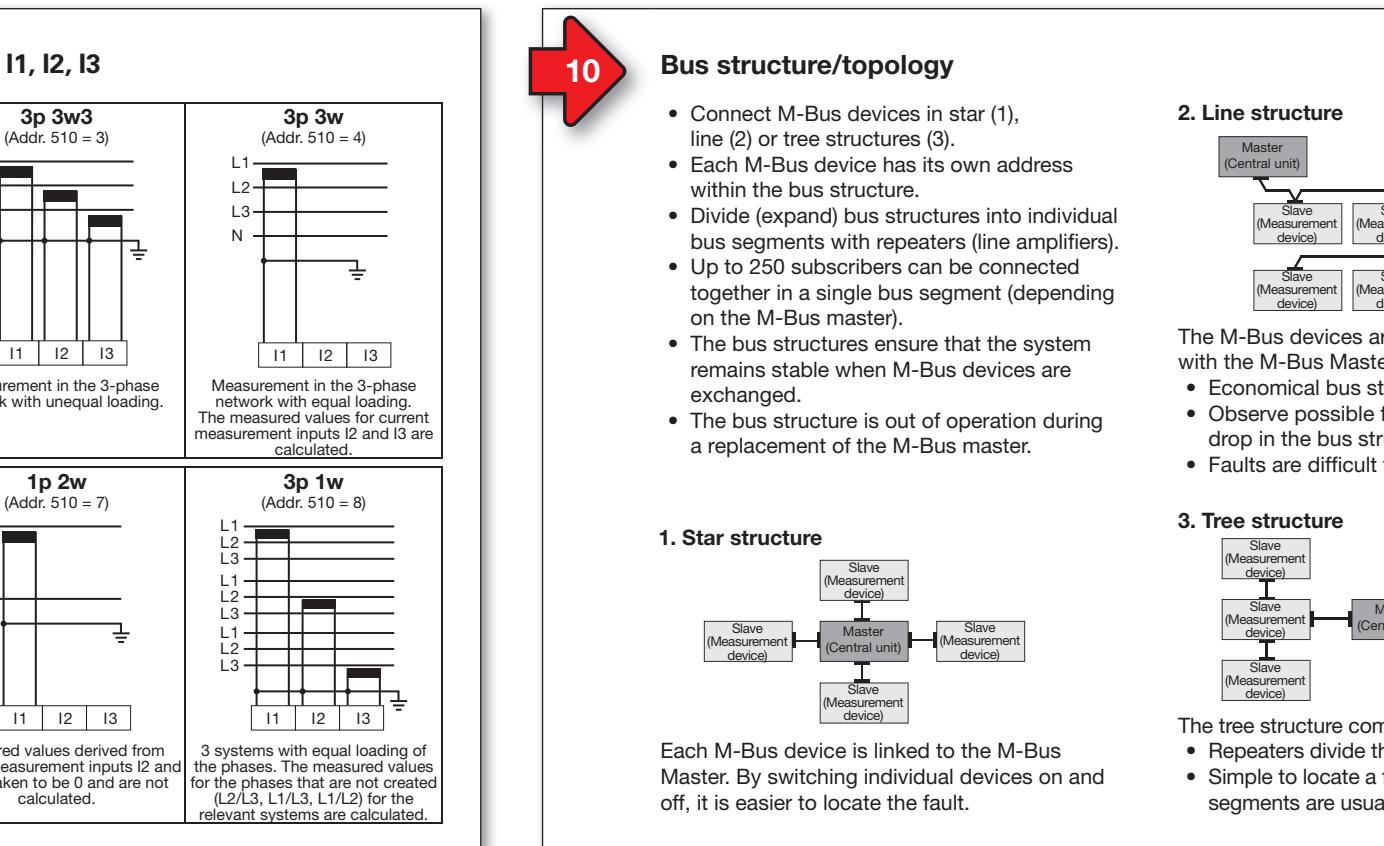
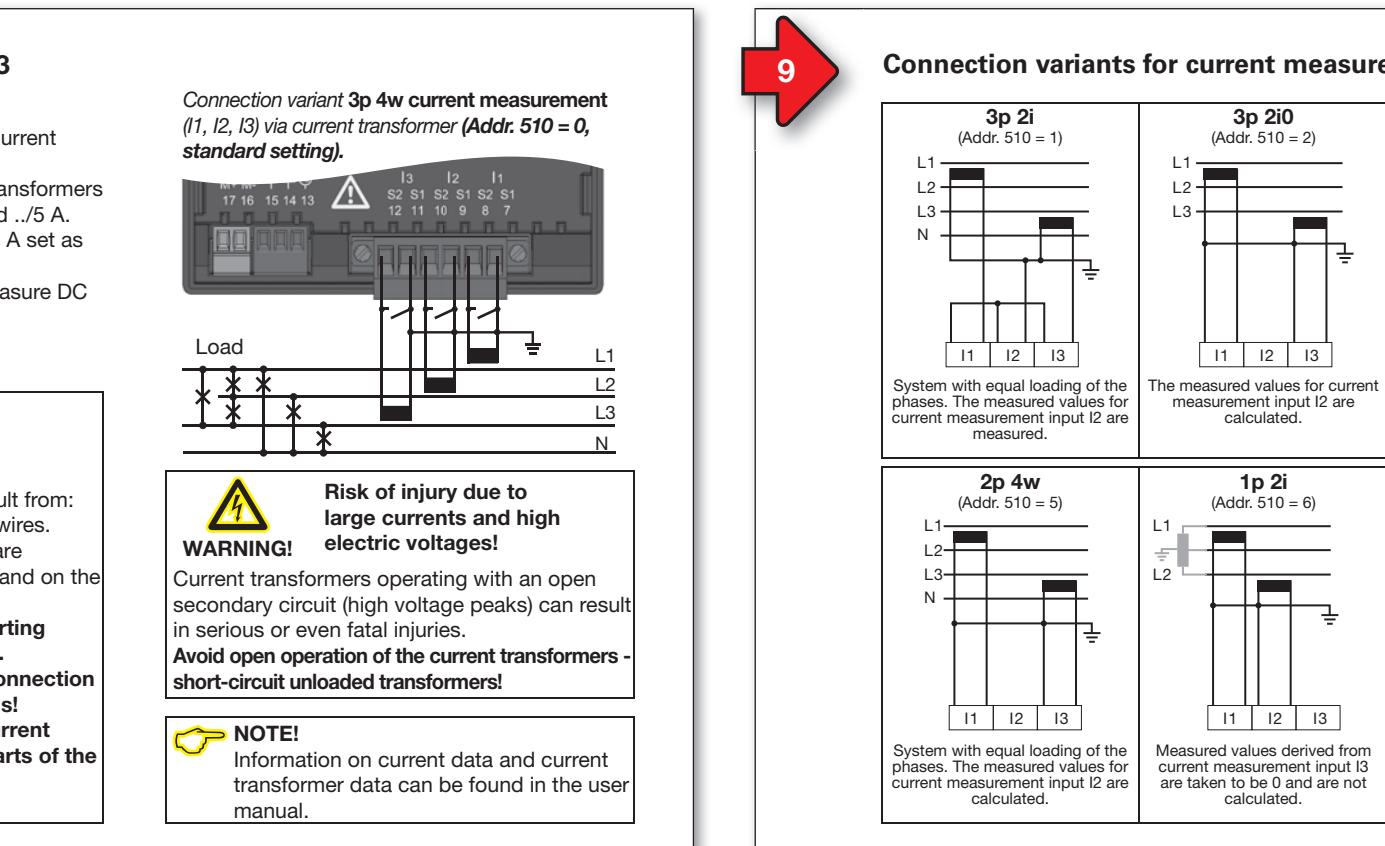
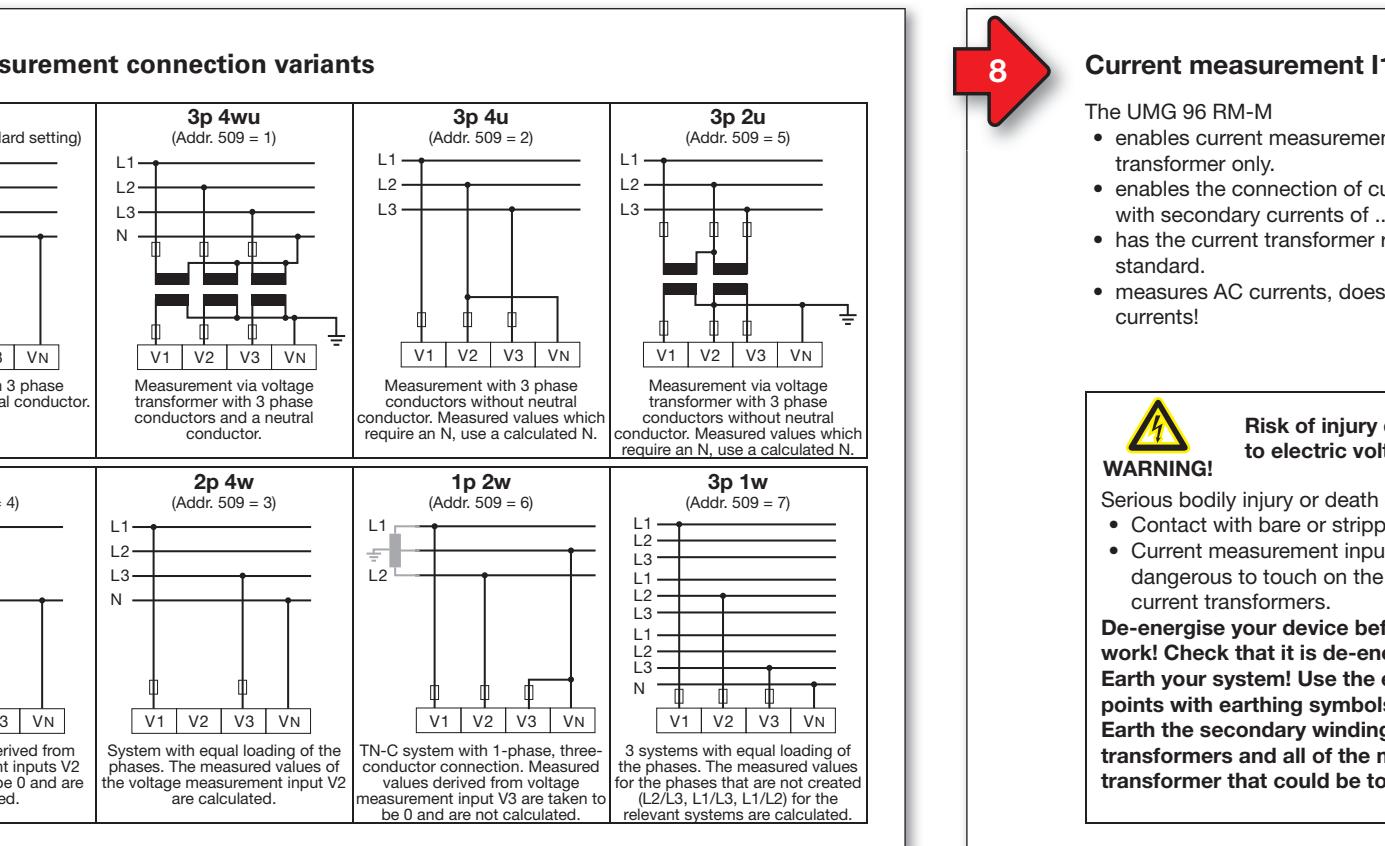


Power Analyser UMG 96 RM-M Installation manual

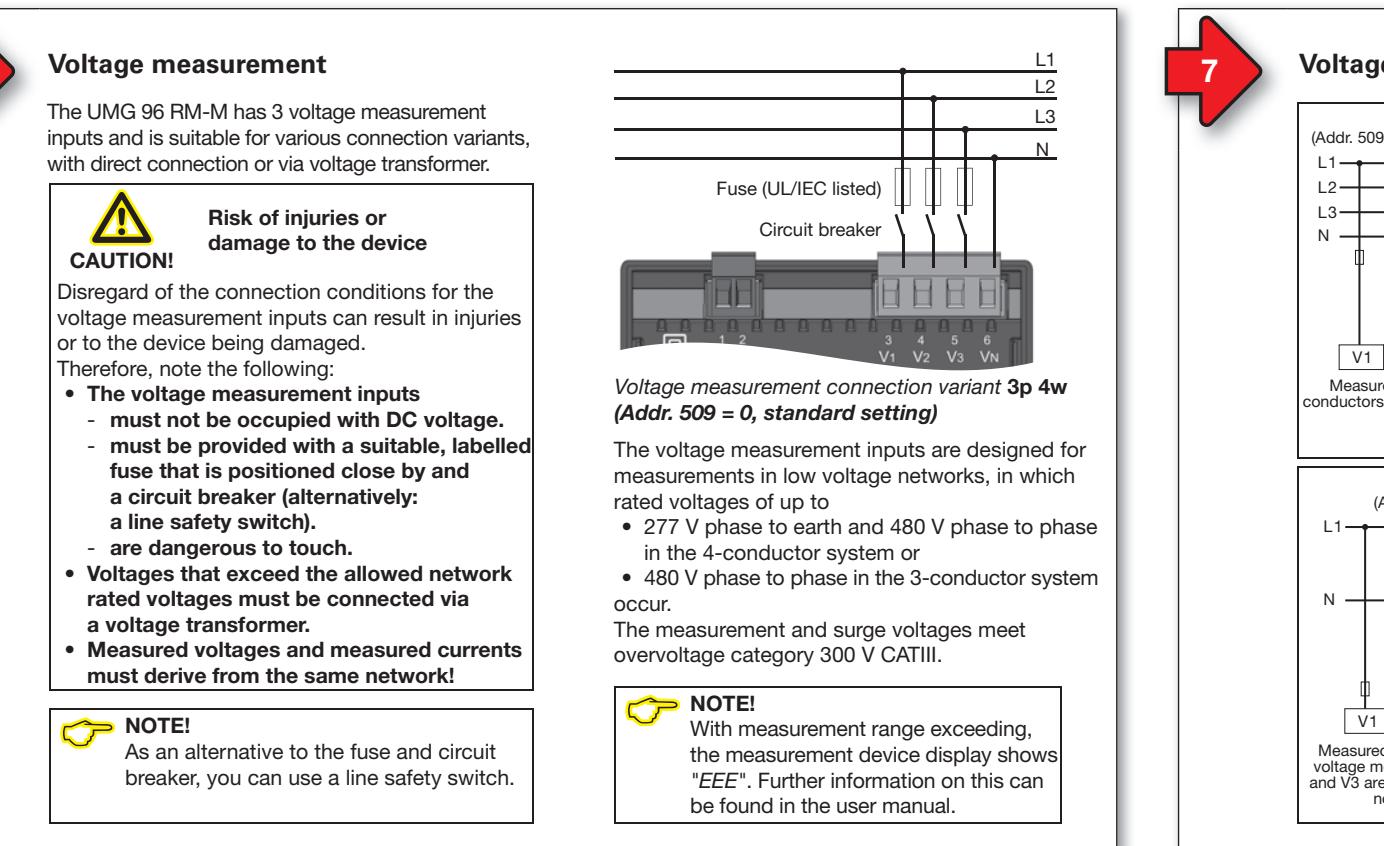

Janitza electronics GmbH
Von den Poltsch 6
D-56533 Lahnau / Germany
Support tel. +49 6441 9642-22
Fax +49 6441 9642-30
e-mail: info@janitza.com
Website: http://www.janitza.com

Janitza®

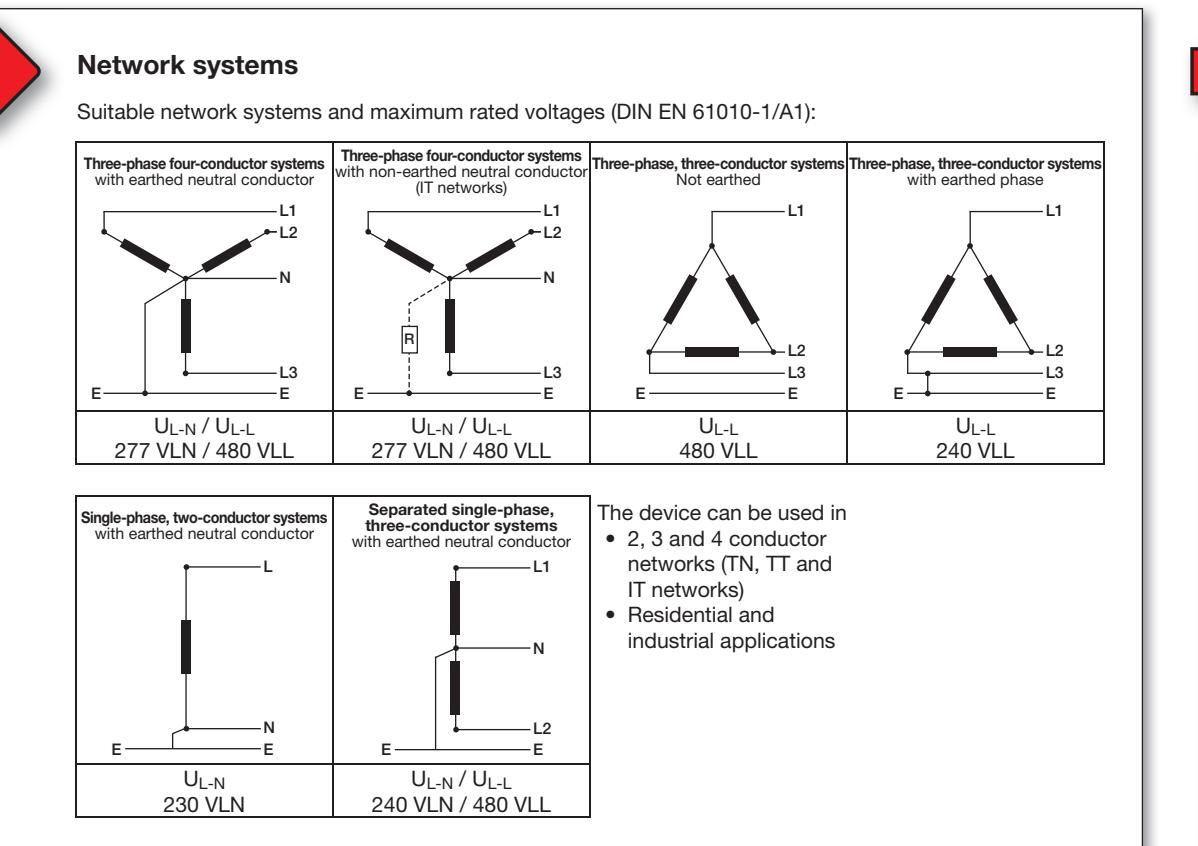

2. Line structure

3. Tree structure

4. Bus structure

5. Bus structure

6. Bus structure

7. Bus structure

8. Bus structure

9. Bus structure

10. Bus structure

11. Bus structure

12. Bus structure

13. Bus structure

14. Bus structure

15. Bus structure

16. Bus structure

17. Bus structure

18. Bus structure

19. Bus structure

