

SPECIFICATION SHEET

JFW MODEL 50MS-305

MATRIX SWITCH

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	DC-6 GHz
Configuration	18 x 4 Blocking Matrix (See block diagram 092-7410) (maximum of 4 active RF paths) (inputs & outputs are self-terminating*) (all ports are bi-directional) (the ADMIN password is located on rear panel)
Startup/Default States (configurable)	All ports off at startup (see MATRIX command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command) All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
Enclosure Type	19 inch rack mount @ 4RU high
Impedance	50 Ohms nominal
VSWR	1.2:1 typical DC-2GHz 1.3:1 typical 2-4GHz 1.4:1 typical 4-6GHz 1.5:1 maximum DC-2GHz 1.6:1 maximum 2-4GHz 1.7:1 maximum 4-6GHz
Insertion Loss	2.5 dB typical @ 6GHz 3.0 dB maximum DC-6GHz
Isolation	Input to Input - 65 dB minimum Input to Output - 65 dB minimum Output to Output - 65 dB minimum
RF Input Power	+30 dBm average (Hot Switched)
Switching Speed	20 milliseconds
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET

JFW MODEL 50MS-305

MATRIX SWITCH

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Remote Commands

Matrix Commands:

Matrix, Set Input, Set Output, Read Input, Read Output, Read All Inputs, Read All Outputs, Read Matrix Paths

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector

SMA female

AC Supply

100-240 VAC @ 47-63 Hz
2 Amp 5x20mm "Slo-Blo" AC fuse
Littelfuse #215-002, JFW #025-021

Temperature Range

0°C to +50°C

Physical Size

See outline drawing 092-7409

* The unused inputs and outputs are terminated when the unit is powered only. If AC power is lost, all inputs and outputs are open.

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	07/17/2012		BAC 08/22/2012				
24239	07/15/2015	A	TRS 07/15/2015				