


REMOVE BNC MALE CONNECTOR
TO REPLACE FUZE

| | | | | | | | |
|--|-----|------|----|---|-------------------|--|---|
|  | | | | JFW INDUSTRIES, INC. INDIANAPOLIS, IN | | PROPRIETARY INFORMATION | |
| | | | | | | ALL SURFACES ARE TO BE FREE OF BURRS, PITS, & SCRATCHES | |
| REV | ECN | DATE | BY | DRAWN BY | B. ZEIHEN | DATE | 6-8-06 |
| | | | | APP'D BY | | SCALE | FULL |
| | | | | MATERIAL | | | TOLERANCES FRACTIONAL DIM. ± 1/64 2 PLACE DECIMAL ± .010 3 PLACE DECIMAL ± .005 ANGULAR DIM. ± 1/2° |
| | | | | FINISH | | | DWG NO. |
| | | | | DESCRIPTION | 50RF-038: RF FUZE | | 092-5140 |