


# FBT-5 Battery Changing Instructions

## WARNING:

Before opening the case, make sure anti-static precautions are used. There are unprotected static sensitive parts inside the FBT-5 case.



1. Place the FBT-5 face down and remove the 4 screws that hold the two case halves together.
2. Separate the case and place the bottom half to the left of the top half as shown below.
3. The static sensitive parts are in the top half of the FBT-5 case. Do not touch them.
4. Remove the used batteries from the battery holder in the bottom half of the case.
5. Install the new batteries in the holder using the indicators in the holder for proper polarity.
6. Re-mate the two halves of the case and re-tighten the 4 screws.
7. Dispose of used batteries according to local regulations.

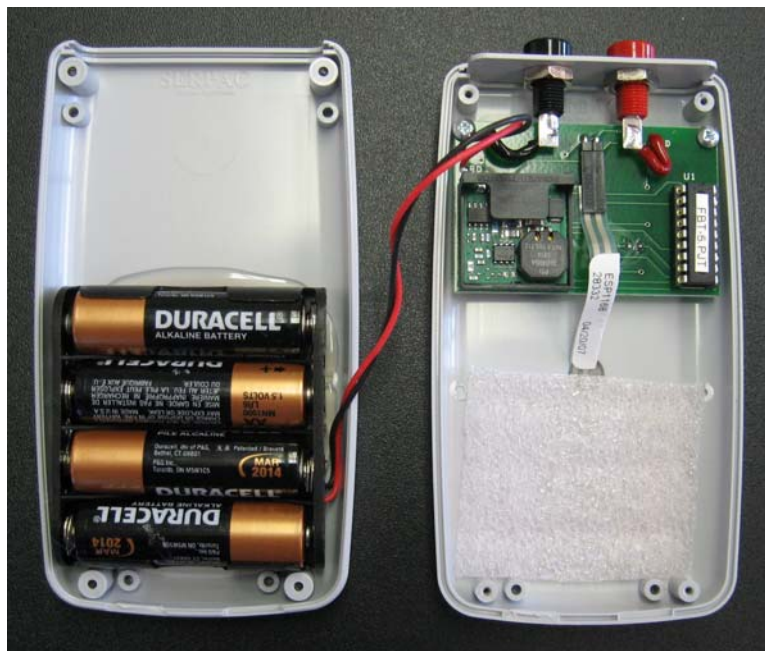

Please keep these instructions with the FBT-5.

Please keep these instructions with the FBT-5.

Please keep these instructions with the FBT-5.

Please keep these instructions with the FBT-5.