

1 DESCRIPTION

The Notifier AM6000 driver is a serial driver. It allows the FieldServer to transfer data from a Notifier AM6000 over either RS232 or RS485 using Notifier AM6000 protocol.

Notifier AM6000 serial driver is a passive client only driver. This means that the driver is capable of processing and storing data from unsolicited messages sent from a Notifier panel. It is not capable of polling for data or sending data to a panel. As the driver does not provide server side functionality it is not capable of emulating a Notifier panel.

This driver receives messages intended for a system printer, interprets these messages by filling in data arrays in the FieldServer. This data is available for other devices or PLC's to read.

As the messages do not contain information which would allow this driver to differentiate messages from one panel or another, no more than one panel can be connected to a port.

This driver is based on a specification entitled "AM6000 Control Panel Serial Protocol for Printer". No revision or date information is provided with the specification.

The driver can expose communication statistics in a data array and hence an upstream device can monitor these stats.

2 FORMAL DRIVER TYPE

Serial
Passive Client Only

3 COMPATIBILITY MATRIX

FieldServer Model	Compatible with this driver
FS-x30	No
SlotServer	No
ProtoNode	No
QuickServer FS-QS-10xx	No
QuickServer FS-QS-12xx	No
ProtoCessor FPC-ED2	No
ProtoCessor FPC-ED4	No

4 CONNECTION INFORMATION

Connection type: RS-232 or RS-485 (Two wire, Half-Duplex)
 Baud Rates: Notifier Panels Allow 2400 Baud only
 Driver Allows 110; 300; 600; 1200; 2400; 4800; 9600; 19200; 28800; 38400; 57600; 115200
 Data Bits: 7 (Driver allows 7, 8)
 Stop Bits: 1 (Driver allows 1, 2)
 Parity: Even (Driver allows Odd, Even, None)
 Multidrop Capability: No

5 DEVICES TESTED

Device	Tested (FACTORY, SITE)
AM6000	Factory

6 COMMUNICATIONS FUNCTIONS - SUPPORTED FUNCTIONS AT A GLANCE:

Some Sample Message Lines that can be processed

```
ALARM FIXED PHOT. LINE 05 DETECTOR ADDRESS 01 12:56 20/12/00 501
TROUBLE SIREN SUPER.LINE INTERRUPTED 12:59 20/12/00
ALLARME: PULSANTE MAN PULSANTE MAGASSINO 09:54 22/10/02 101
GUASTO: OTTICO ANAL. MAGAZZINO 09:55 22/10/02 101
```

6.1 Messages Supported

The driver processes lines of text. It differentiates between system messages and device messages.

Lines containing a loop and device number are processed and data is stored based at a location based on the loop and device number.

All other lines are considered to be reports of system status and result in a value being stored based on the type of event being reported.

6.2 Languages Supported

The driver provides primary support for messages received in English.

Alarm & Trouble messages from loop addressed devices as well as the block acknowledge are supported if the messages are in **Italian**.

6.3 Unsupported Functions and Data Types

Function	Reason
Some system messages have a line number as part of the message, eg. "Low Voltage on Line 10". The driver does not report the line number.	
The date and time portion of the message lines are ignored.	

6.4 Ignored Messages

The driver reports messages that it ignores by allowing the most recent ignored message to be stored in a data array which can easily be read in ASCII format. The driver provides ignored message statistics.