

Insertion and Extractor Tool (HTA60615)

Application Tooling Specification Sheet



Order No. 11-02-0022

FEATURES

- This tool is designed to insert series 70021, 70028, 70058, 70110, and 71851 terminals into crimp housings (Series 70066 and 70107)
- This tool is designed to extract series 91821 terminals from crimp housings (Series 91935)

SCOPE

<u>Products</u>: 2.54mm (.100") Pitch SL[™] and Picoflex® Discrete Wire Crimp Terminals.


| Terminal Series No. | Terminal Order No. | | | | | | | |
|------------------------|--------------------|------------|------------|------------|------------|------------|------------|------------|
| 56134 | 56134-8000 | 56134-8100 | 56134-9000 | 56134-9100 | | | | |
| 70021 | 16-02-0077 | 16-02-0078 | 16-02-0079 | 16-02-0080 | 16-02-0081 | 16-02-0091 | 16-02-0092 | 16-02-0093 |
| | 16-02-0105 | 16-02-0106 | 16-02-0107 | 16-02-0108 | 16-02-0109 | 16-02-0110 | 16-02-0111 | 16-02-0112 |
| | 16-02-0113 | 16-02-0114 | 16-02-0115 | 16-02-0116 | 16-02-0117 | 70021-0081 | 70021-0114 | 70021-0117 |
| | 40-08-0871 | 40-08-0872 | 40-08-0873 | 40-08-0874 | | | | |
| 70028 | 40-08-4832 | 40-08-4833 | 40-08-4834 | 40-08-4860 | 40-12-4831 | 40-12-4832 | 40-12-4833 | 40-12-4834 |
| | 40-12-4835 | 40-12-4836 | 40-12-4943 | 40-12-4944 | 70028-0005 | | | |
| 70058 | 16-02-0069 | 16-02-0074 | 16-02-0082 | 16-02-0083 | 16-02-0084 | 16-02-0085 | 16-02-0086 | 16-02-0087 |
| | 16-02-0088 | 16-02-0096 | 16-02-0097 | 16-02-0098 | 16-02-0099 | 16-02-0100 | 16-02-0101 | 16-02-0102 |
| | 16-02-0103 | 16-02-0104 | 16-02-0131 | 16-02-0135 | 16-02-0137 | 16-02-0139 | 16-02-0140 | 16-02-0143 |
| | 16-02-0144 | 16-02-0147 | 16-02-0150 | 16-02-0151 | 16-02-0152 | | | |
| | 70058-0069 | 70058-0082 | 70058-0083 | 70058-0084 | 70058-0086 | 70058-0087 | 70058-0088 | 70058-0096 |
| | 70058-0097 | 70058-0099 | 70058-0102 | 70058-0103 | 70058-0104 | 70058-4069 | 70058-4084 | 70058-4086 |
| | 70058-4096 | 70058-4099 | 70058-4102 | 70058-5001 | | | | |
| 70110 | 40-07-4826 | 40-07-4827 | 40-07-4828 | 40-07-4829 | 40-08-0827 | 40-08-4827 | 40-08-4828 | 40-08-4829 |
| | 40-08-4877 | 40-08-4878 | 40-12-4827 | 40-12-4828 | 40-12-4829 | 40-12-4847 | 40-12-4848 | 40-12-4849 |
| | 40-12-4907 | 40-12-4908 | | | | | | |
| 71851 | 16-02-0119 | 16-02-1109 | 16-02-1110 | 16-02-1111 | 16-02-1112 | 16-02-1113 | 16-02-1114 | 16-02-1115 |
| | 16-02-1116 | 16-02-1117 | 16-02-1118 | 16-02-1119 | 16-02-1120 | 16-02-1121 | 16-02-1122 | 16-02-1123 |
| | 16-02-1124 | 16-02-1125 | | | | | | |
| | 71851-0119 | 71851-1110 | 71851-1112 | 71851-1114 | 71851-1115 | 71851-1116 | 71851-1118 | 71851-1119 |
| | 71851-4110 | 71851-4112 | 71851-4114 | 71851-4116 | 71851-4118 | 71851-4119 | 71851-8022 | |
| 91821 | 91821-0001 | 91821-0003 | | | | | | |

OPERATION:

For Insertion of 56134 Terminal Series:

Individual terminals may be inserted in the housing using this Insertion tool.

- 1. The terminal should be partially inserted into the housing. See Figure 1.
- 2. Position tip of insertion tool near the top of the terminal as shown in the picture above.
- 3. Push the terminal straight into the housing until an audible click is heard, or until the locking tang is visible on the opposite side of the housing.

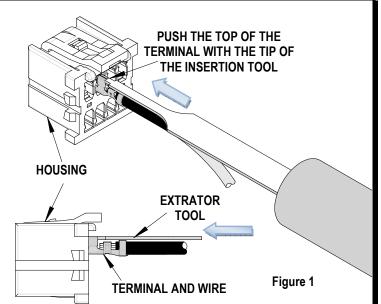

Note: Please do not forcefully insert, insert at an angle, or insert with a twisting action. It may damage the terminal or housing.


Note: Please do not forcefully insert, insert on an angle, or insert with twisting action. It may damage the tool or the housing.

For Insertion of 70021, 70028, 70058, 70110, and 71851 Terminal Series:

Individual terminals may be inserted in the housing using this Insertion tool.

 To properly use this tool, with the flat side facing up, place the step of the tool into the terminal under the locking tangs. See Figure 1. Push the terminal into the housing until the locking tangs are visible through the window. The terminal then should be locked in place.

Optional: The terminal can be partially inserted in the terminal housing first, and then the Insertion tool can be used to firmly seat the terminal.

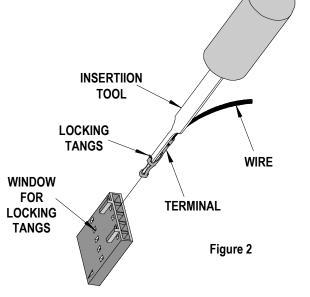

Note: Please do not forcefully insert, insert on an angle, or insert with twisting action. It may damage the tool or the housing.


Release Date: 07-25-02 Revision Date: 08-07-13 **UNCONTROLLED COPY**

For Extraction of 91821 Terminal Series:

Individual terminals may be extracted from the housing using this Tool.

- 1. Push the terminal and the wire forward in the arrow direction before using this Tool. Insert the Tool into the slot above the locking tang of the terminal. Push the tool down until the locking tang is even with the rest of the terminal. This will free the terminal from the housing.
- 2. Holding the wire and the tool together, pull the wire back through the connector slot in the arrow direction as shown in Figure 3.

Molex does not offer repair parts for this Tools due to the inexpensive nature of the tool

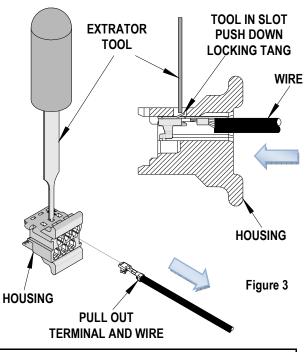

CAUTION: This extractor tool should be used to extract the terminal only. Using it for unintended purposes may cause injury or damage to parts. Be careful not to deform the end of the terminal.

CAUTION: Molex specifications are valid only when used with Molex terminals, applicators and tooling.

Contact Information

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Visit our Web site at http://www.molex.com

Release Date: 07-25-02 Revision Date: 08-07-13 **UNCONTROLLED COPY**