



**MCS 8140
Network USB Processor**

NAS-USBIP Combo User Manual

Revision 1.0

August 2007

For support contact: support-8140@moschip.com

Table Of Contents

1. Introduction:	3
2. Windows utility	5
2.1. Virtual USB-IP Driver S/W	5
2.2. Device Mapping:	6
2.3. Server Manager:	8
2.3.1. Server Configuration:	11
2.3.2. Upgrade Firmware.	14
2.3.3. Restore factory defaults.	15
2.4. Printer Auto-Connect:	15
3. Web Server	17
3.1. Network Settings	18
3.2. Secure NAS Settings	19
3.2.1. Shares setting:	20
3.2.2. Users Settings:	21
3.2.3. FTP settings:	22
3.2.4. IPSec Security Settings	23
3.2.5. Status page	24
3.3. Virtual USB-IP Settings	25
3.3.1. Status Page	26
3.3.2. Upgrade Page.	27
4. Accessing the Network drive:	29
5. Additional Information	30
5.1. Wireless USB Server	30
5.2. Appendix A: Accessing MCS8140 NAS in Windows Vista:	30
5.3. Appendix B:	30
5.4. Support:	30

1. Introduction:

The MosChip MCS8140 NAS USB-IP Combo solution not only allows you to add storage space onto your home or office network but also allows you to work with the remote USB devices over a local network as if they were connected directly to your local PC.

Key Features of the application are

- **Integrated USB-IP and NAS solution.**
- **USB Port 0 and Port 1 are USB NAS ports. Any Mass storage devices connected to these ports will be detected as NAS drives**
- **Enables IDE or SATA based hard disks to be connected using PCI IDE/SATA Controller**
- **The USB Port 2 and Port 3 are USB-IP ports, any device connected to these ports can be virtualized on to the client PC**
- **Allows USB Devices to be used and shared by client PC's on LAN.**
- **Supports wide variety of USB devices.**
- **Supports both Ethernet and Wifi networks.**
- **Supports printing to USB printer from both Wired and Wireless Interface.**
- **Supports printer auto-reconnect while sharing the printer from Client PC's.**
- **Supports auto sharing of USB devices.**
- **Supports USB device safe removal.**
- **User-Friendly Application interface.**

As a part of NAS solution any IDE or SATA based hard disks can be connected through a PCI based SATA/IDE controller on MCS8140 PCI Host interface. Apart from the fixed SATA/IDE drives, the MCS8140 NAS solution enables on-the-go connection of USB Storage drives onto the 2 USB ports.

The USB Port 0 and Port 1 are USB NAS ports. Any Mass storage devices connected to these ports will be detected as NAS drives and needs to be manually shared onto the network. Any other device connected to these ports will not be detected or available.

The USB Port 2 and Port 3 are USB-IP ports, any device connected to these ports can be virtualized on to the client PC using the USBIP ADMIN Utility.

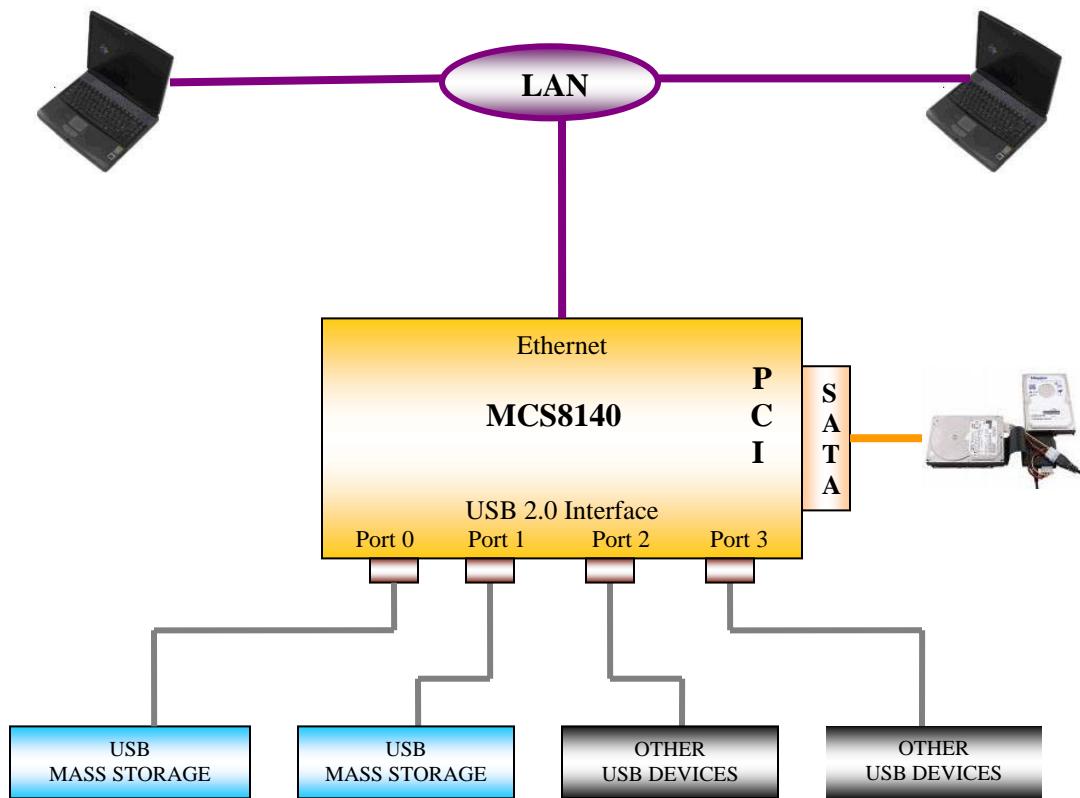


Figure: NAS USB-IP Combo Setup

Access to the Network disks (SATA/IDE or USB) can be password protected and can be securely accessed over the network. The MCS8140 NAS Application has IPSec feature which utilizes the built-in Hardware Encryption Block to establish a Virtual Private Network (VPN) on-the-wire security.

2. Windows utility

USBIP Admin utility Setup is an Install Shield based application, which can be used for installing, uninstalling and upgrading the MCS8140 Client S/W. Please run the self-explanatory Install shield application to install the MCS8140 Admin Utility.

Admin utility is an application, which virtualizes the devices that are connected on the remote USB-Server. USBIP Admin utility can also be used for configuring the USB server device (on the board).

2.1. Virtual USB-IP Driver S/W


This contains a Virtual Bus Enumerator driver & Virtual Bus driver. These drivers will help in vitalizing the USB devices, for each attached device on the USB-Server.

Virtual Bus driver takes the USB traffic from the USB Client drivers and passes it to the USB-Server, which is sitting remotely on the network.

As soon as the utility is installed this application will be placed in the system tray as shown in the figure below.



Double click the icon on the system tray to view the Full screen mode of the PC client application as shown below.

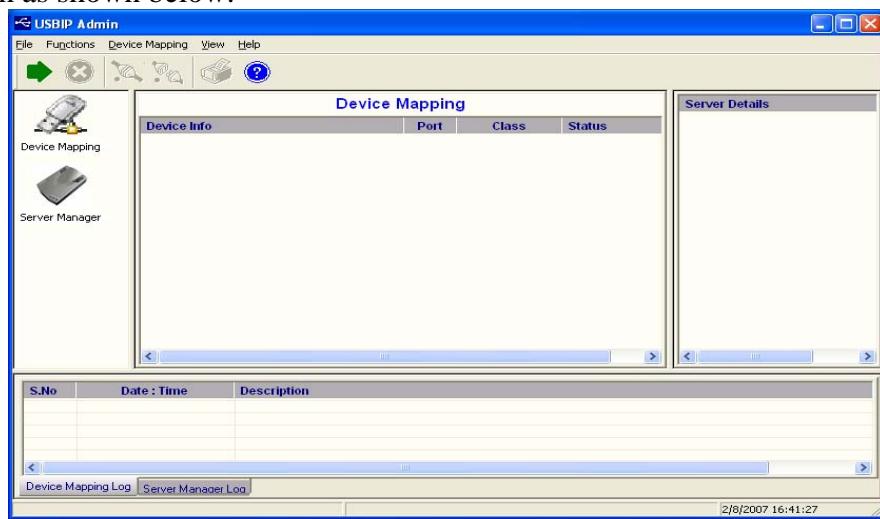

The application has four panels, which are docked in the application.

- 1) Main window: This displays all the Device server and the USB Devices connected on them
- 2) Function Panel: This panel enables to switch between the Device Mapping and Server Manager Application.
- 3) Device Details Panel: This displays the more verbose information of the server and the device selected on the main window.
- 4) Log panel: Any event on the USB server creates a log in the Log panel. This helps in continuous monitoring of USB device servers on the network.

MCS8140 Admin Utility has two main functionalities built in

- a) Device Mapping
- b) Server Manager

2.2. Device Mapping:

Device Mapping enables virtualization of all USB Devices connected to the MCS8140 board on the **LAN** on to your local PC.

Click on the Green Arrow Button in the Admin utility to start the device mapping, which will automatically start the ‘Found New Hardware’ wizard to install the Virtual USB driver.

Continue the Add New Hardware wizard to install the Virtual USB driver for the MCS8140 Admin utility.

Make sure “Search for a suitable driver for my device (recommended)” is selected. Click on Next and the Operating System automatically searches for the driver until the Virtual USB over IP driver is installed.

Make sure that you click on “Continue anyway” if a Windows dialog pops up about the Digital Signature as shown below.




Power on the MCS8140 board and connect a Ethernet cable from the Mcs8140 Ethernet port to your Local Area Network.

The USBIP Admin utility is capable enough to identify the MCS8140 USB servers by it's IP address on the network. As soon as the MCS8140 box is detected with a specific IP address the Windows automatically invokes a Found New Hardware Wizard to install the drivers for the USB server box.


Continue the Installation to see the MCS8140 board and the USB devices connected in the Admin utility as shown below.

NOTE: For proper enumeration of device remove the Firewall from the Windows Machine.

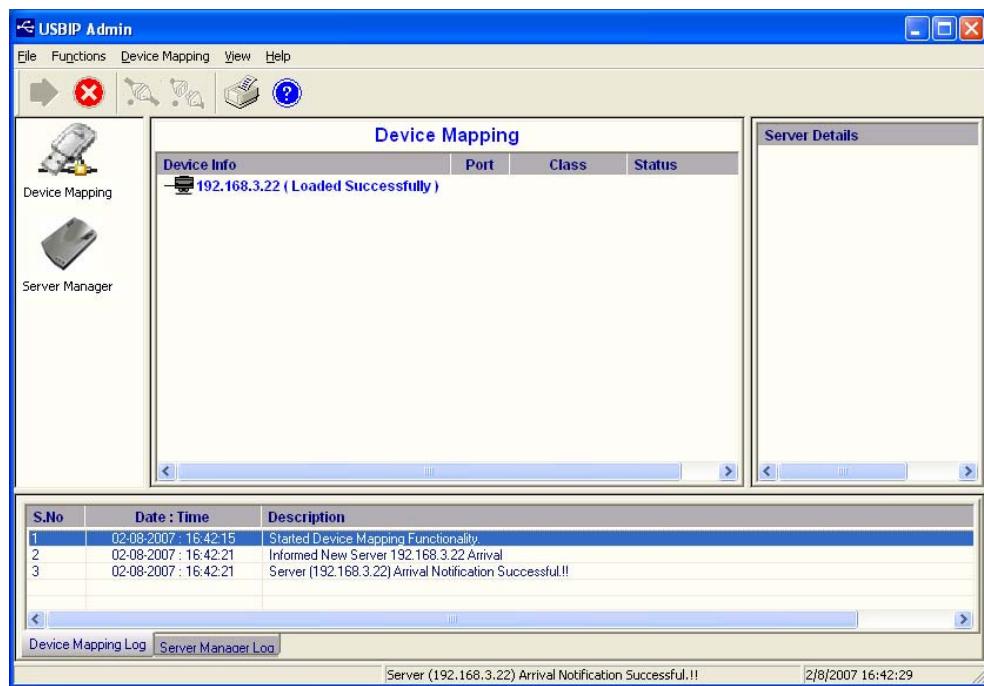


In the Device mapping Window, all the USB devices are shown as a tree under the USB Server.

Right click on any device and click on “Connect” to virtualize that USB device onto your PC as shown below .

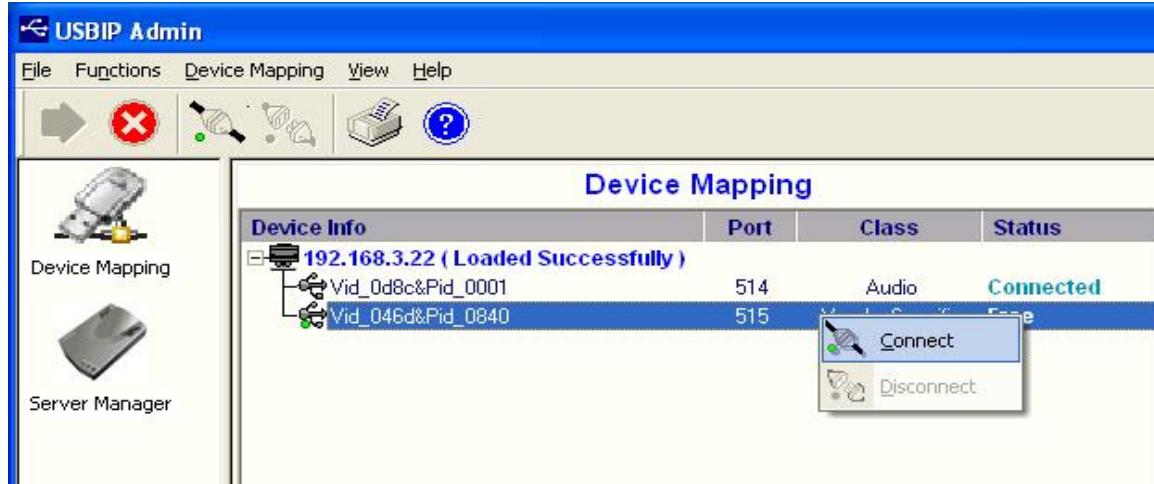

2.3. Server Manager:

Server manager enables the Administrator to configure MCS8140 USB server on the network.

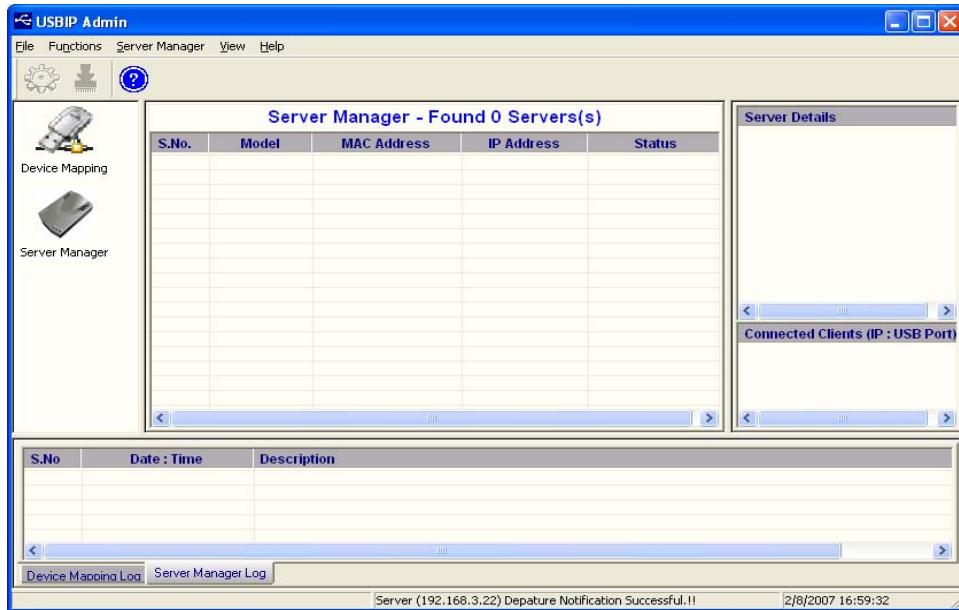


The Server Manger also has an option to search for the USB servers on the Network.


Right Click on the Server Manager Main window and Click on Search server **as shown below .**



It pops up the ‘Searching for Servers’ dialog and list all the MCS8140 USB server devices on the Network as shown below

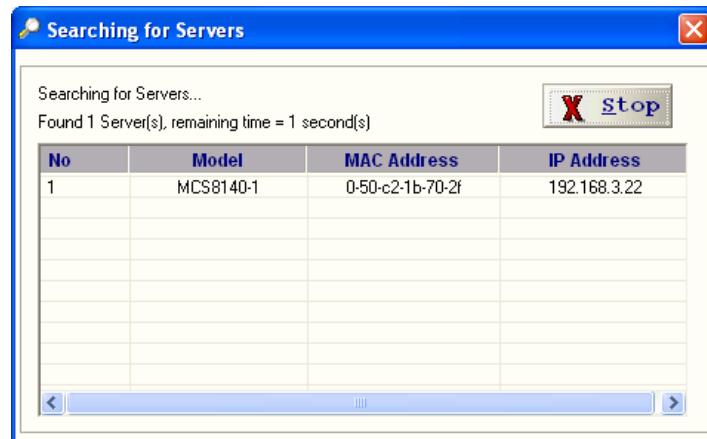

The USB Device Server search is password protected and should be unlocked in order to configure the selected device.

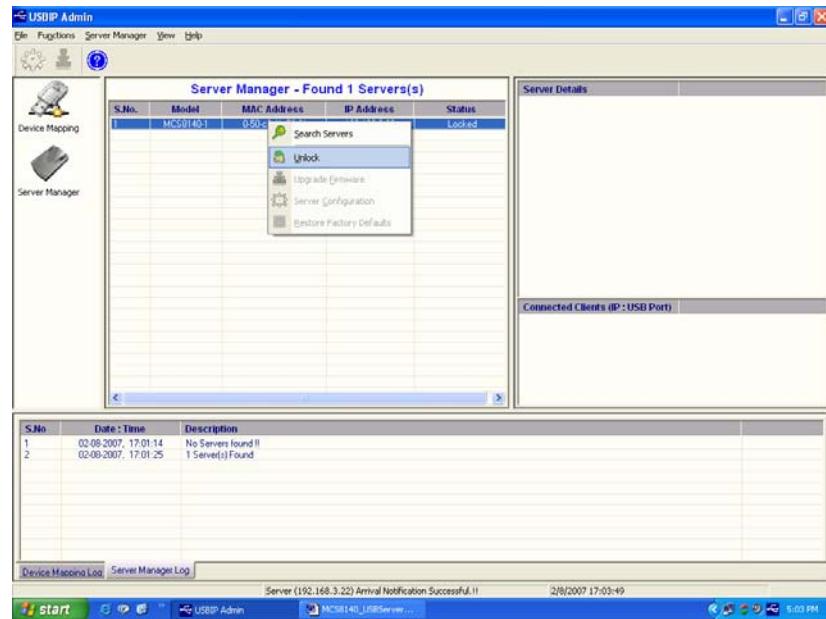

On selecting ‘Un-Lock’ the password dialog pops up as shown below. Key in the password in the ‘Password’ dialog. The default password for the USB IP Server is “moschip”




If the Authentication is successful a ‘Unlock OK’ dialog appears.

Now the Device server can be configured for various settings as given below.


2.3.1. Server Configuration:

Server Manager has an option to change Server Configuration settings through USBIP Admin Utility.

To open server configuration window right click on the MCS8140 server displayed on the Server Manager Main window and select “Server Configuration” option as shown below.

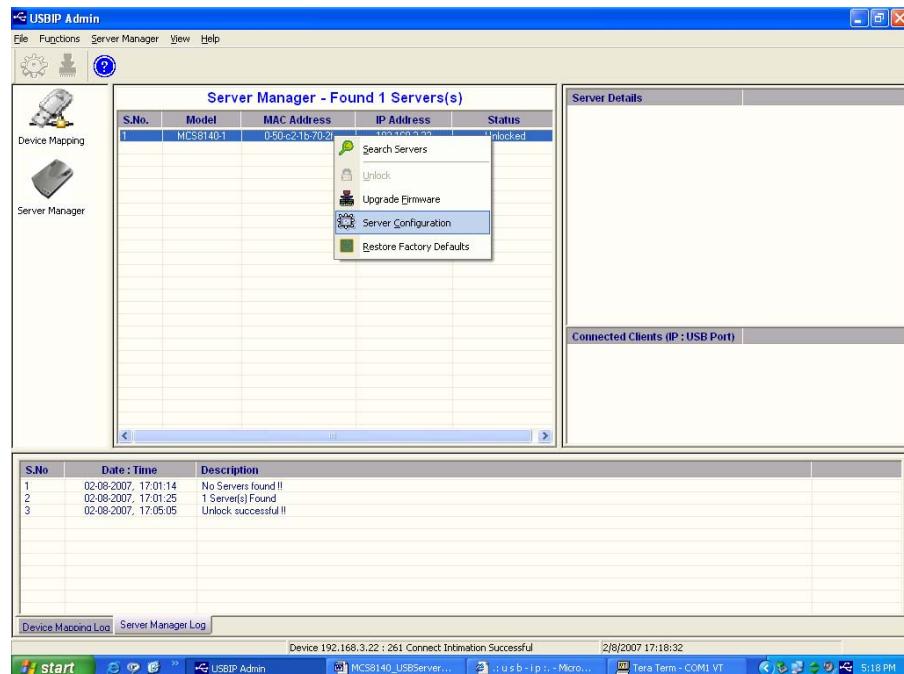


It pops up Server Configuration window as shown below.

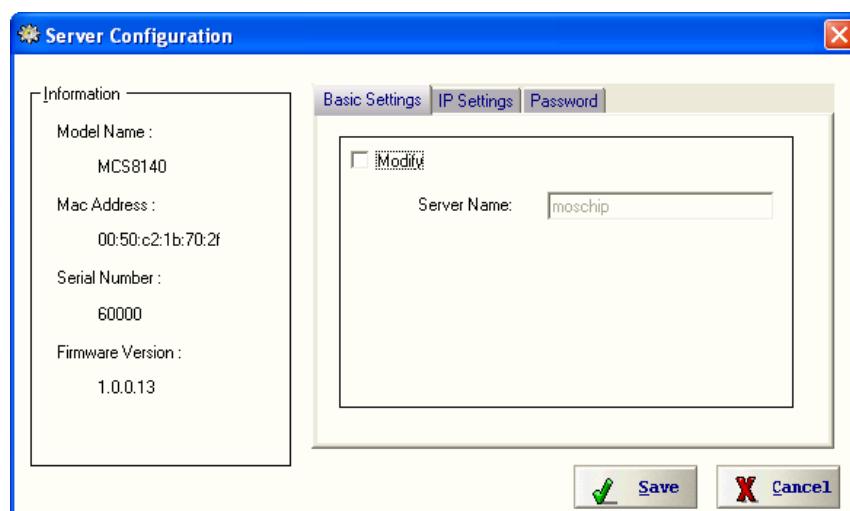


Basic Settings Page:

The Basic Settings page allows you to specify a server name. Check the modify box and enter server name as shown below.

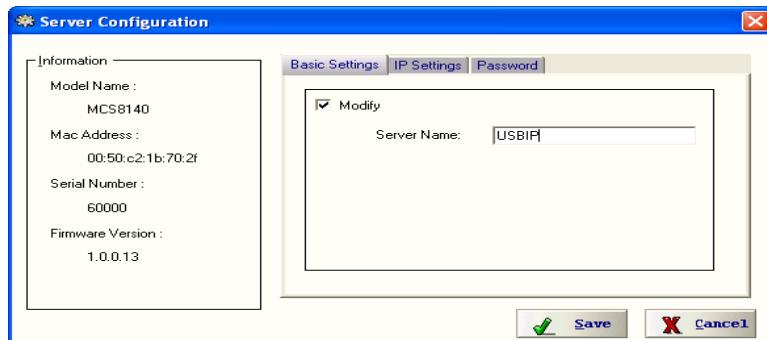


IP Settings Page:

The IP Settings page allows you to modify MCS 8140 box IP Address as shown below.

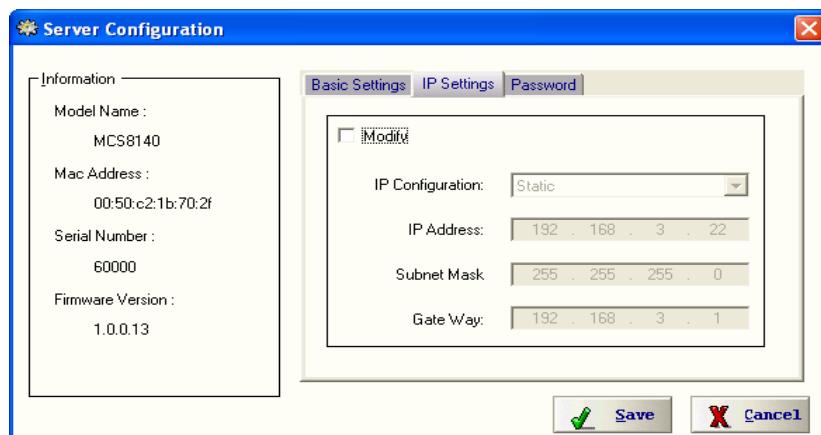


The Default IP Address is **192.168.3.22**


To modify the IP Address of the MCS8140 box, check the 'Modify' box and Select IP Configuration (Select IP configuration Static/DHCP from IP Configuration drop-down box) as shown below.

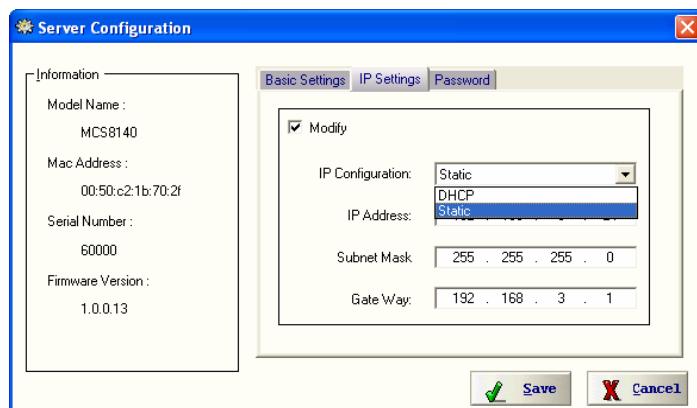

After Selecting IP Configuration key in the IP Address of the MCS8140 box in the IP Address field followed by proper Subnet Mask & Gate Way as shown below.

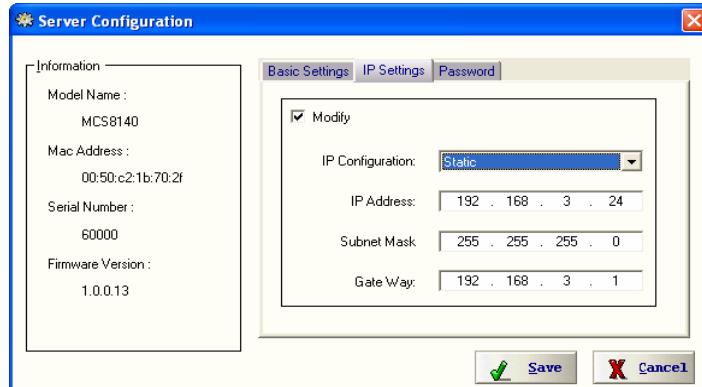

After entering IP address, Subnet Mask & Gate Way then click on “save” button. Then USBIP Admin shows progress bar for some time and after it pops up a message box as shown below.

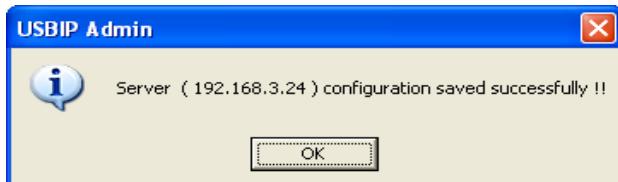


Note: Every board in the network is identified by its IP address. The utility treats each IP address as unique device. Even if the IP address of the box is modified it treats the same box as a different device and will pop up a Found New Hardware Wizard.

Continue the Found New Hardware Wizard to install the Virtual USB-over-IP bus driver.

Now MCS 8140 box appears with changed IP Address under USBIP Admin utility.

Password:


The Password Settings page allows you to change or Enable/Disable password of the MCS8140 box. The Password settings page will be as shown below.

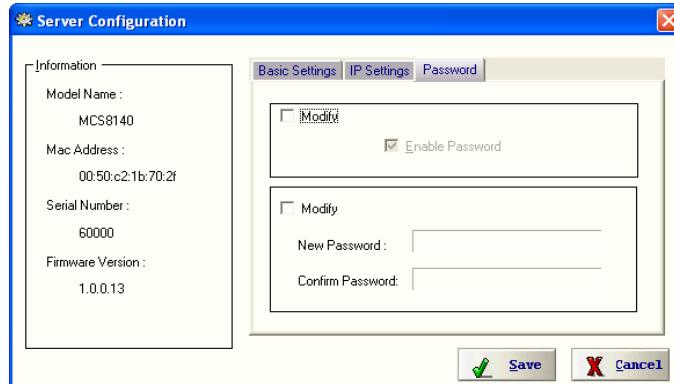


Check the Modify box to Enable or Disable password option to MCS8140 box.

2.3.2. Upgrade Firmware.

MCS8140 USB Server Firmware can be upgraded remotely using the Firmware upgrade option. Select the server on the Server manager. Right Click on the server and Select Upgrade Firmware option to upgrade the firmware.

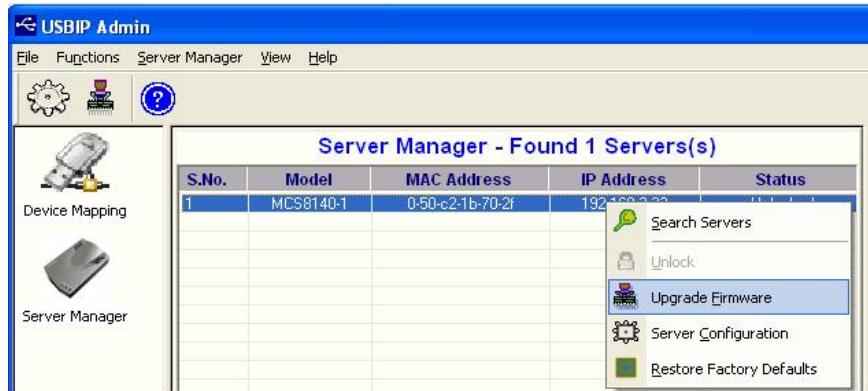


Select the file to be upgraded by click on the Browse option in the “Select File” dialog as shown below.

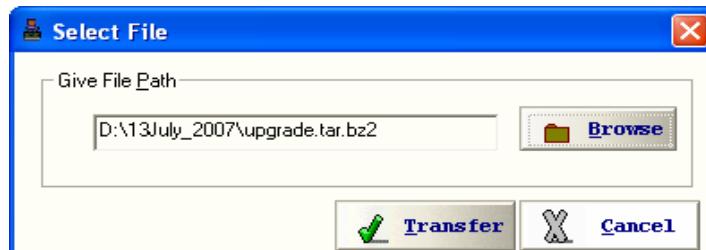

A upgrade.tar.bz2 file is required to upgrade the firmware. The upgrade .tar file can be downloaded from MosChip website.


Click on “Transfer” to upgrade the firmware. A firmware upgrade status is displayed which automatically relinquishes once the transfer is completed.

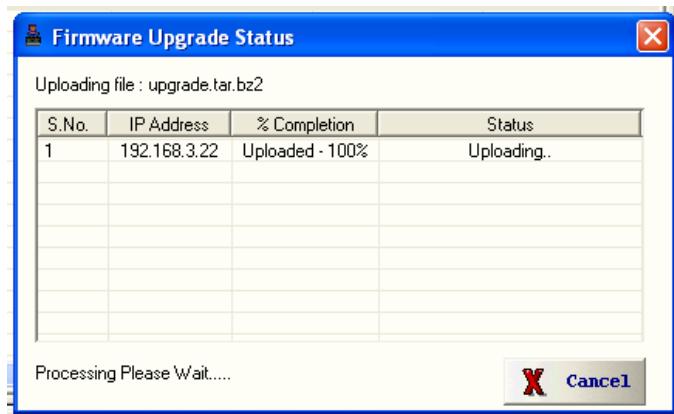


As soon as the transfer is completed, the MCS8140 USB server box automatically restarts to apply the upgraded firmware settings.

2.3.3. Restore factory defaults.

Right click on the MCS8140 Server under Server Manager Window and select the Restore Factory Defaults function to obtain Default settings as shown below.

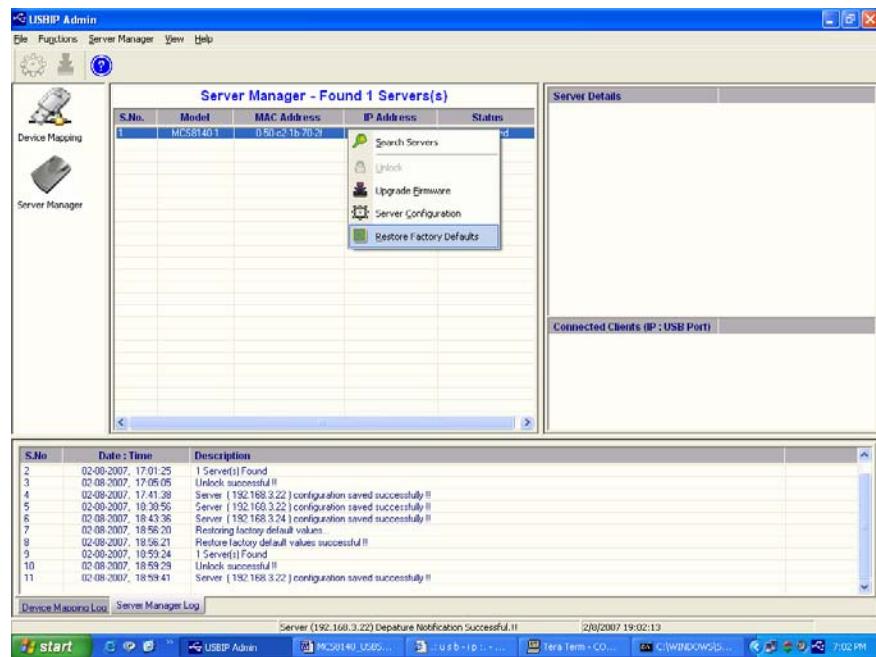


Then USBIP Admin Utility pops up a window asking for to continue or not. If we select Ok button it will get default settings.

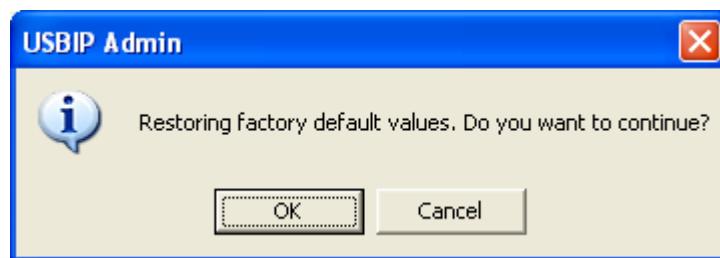

2.4. Printer Auto-Connect:

USB Admin Utility enables Printers be shared between multiple clients making it a bidirectional Print Server. In order to share the printer between multiple clients the user may need to connect the printer at least once to install the driver for the Printer.

Once the printer is enumerated disconnect the Printer form the Device Mapping Window,  Select the Printer Auto Reconnect button  on the Menu bar to open the Printer Auto-Connect Window.

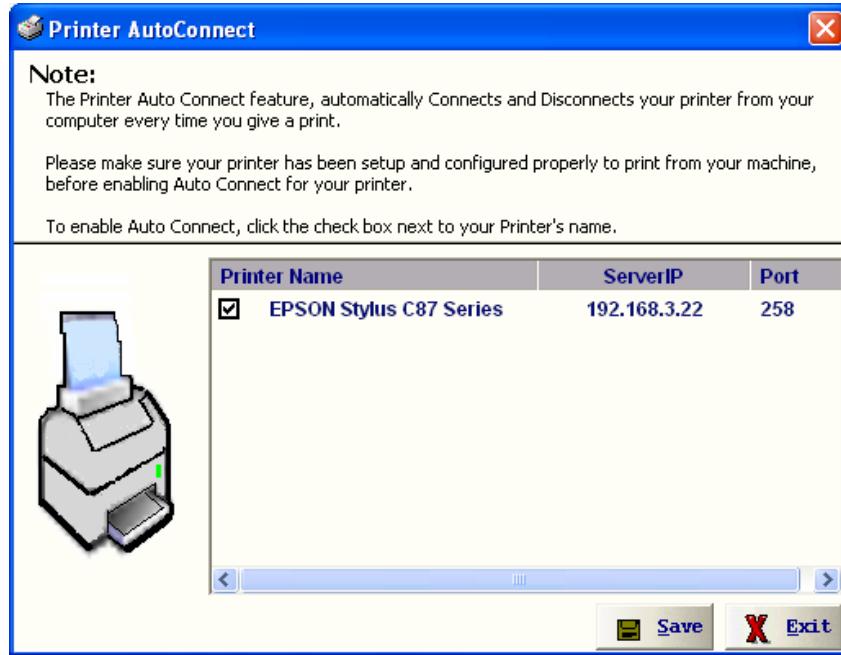

Select the Printer which was connected and Click on “Save” and close the Window.

Once the Printer is configured for Auto-Connect mode, It remains free as long as the Printer is connected and becomes “Busy” only when a user prints to the printer connected.

Multiple User print jobs will be executed on a time sharing basis.

3. Web Server


The MCS8140 NAS USB-IP Combo has a user-friendly web browser interface to configure the box.

To open the web interface just type the IP address of the box <http://192.168.3.22:901> in the browser. (Make sure that the proxy server is disabled on your PC's Internet explorer).

A dialog prompts for the username and password. The username is “root” and the default password is “moschip”.




If the authorization is successful, the Home page of the MCS8140-NAS application will be seen as shown below.

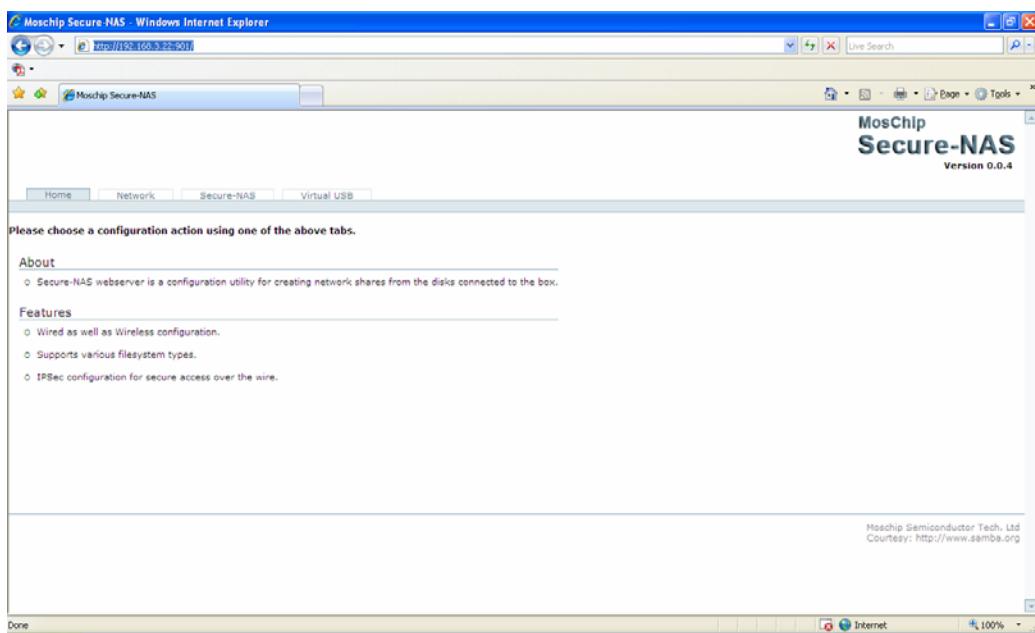


3.1. Network Settings

The “Network” tab allows you to configure both wired as well as wireless interfaces. For the wired side we can configure the Static IP manually or set the box to automatically obtain an IP address by setting to the Dynamic (DHCP) mode. (Make sure that the DHCP server should be in ON).

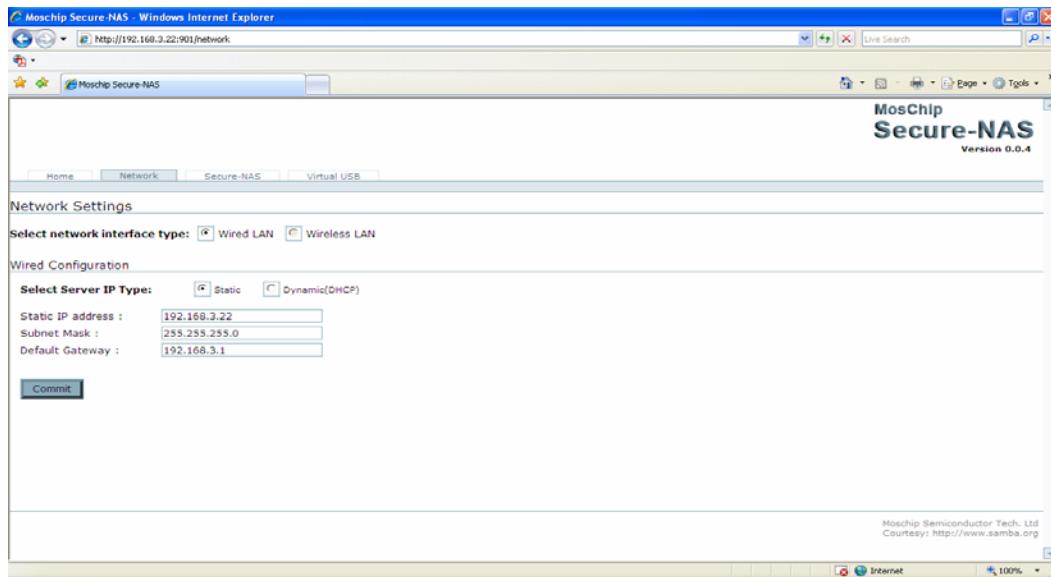

If the user selects the Network Interface type as “Wireless LAN” the browser shows the Wireless configuration web page as shown below.

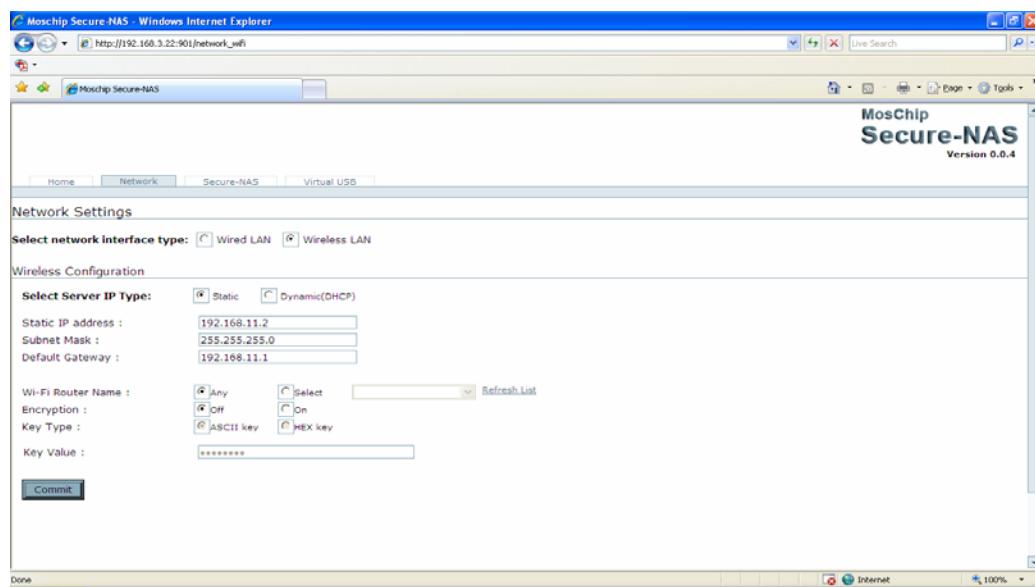

Select the Server IP Type, and select Static in order to change the **IP address**, **Subnet mask** and **Default Gateway** of the Box. If the choice is made as “*Dynamic (DHCP)*”, the box will automatically try to get an IP Address from the wireless router available.

In the Wireless configuration the application can also list the Wifi access points available in the network in the *Wi-Fi Router Name*.


If the choice has to be made to connect to a specific Wireless Router or access point choose “Select” radio button and select the Wireless router in the dropdown menu.

If the network is security enabled, then select the *Encryption* as *On* and select the key type as either *ASCII** or *Hex** and key in the pass phrase in the Key value box and click on Connect to connect to *Wi-Fi* network.

Note *: Setting up of Hex or ASCII key is mostly Wireless Router dependent


3.2. Secure NAS Settings

The web-server has separate webpage to configure Secure NAS. Click on the Secure-NAS tab to view the secure NAS settings in the Combo NAS USB IP solution.

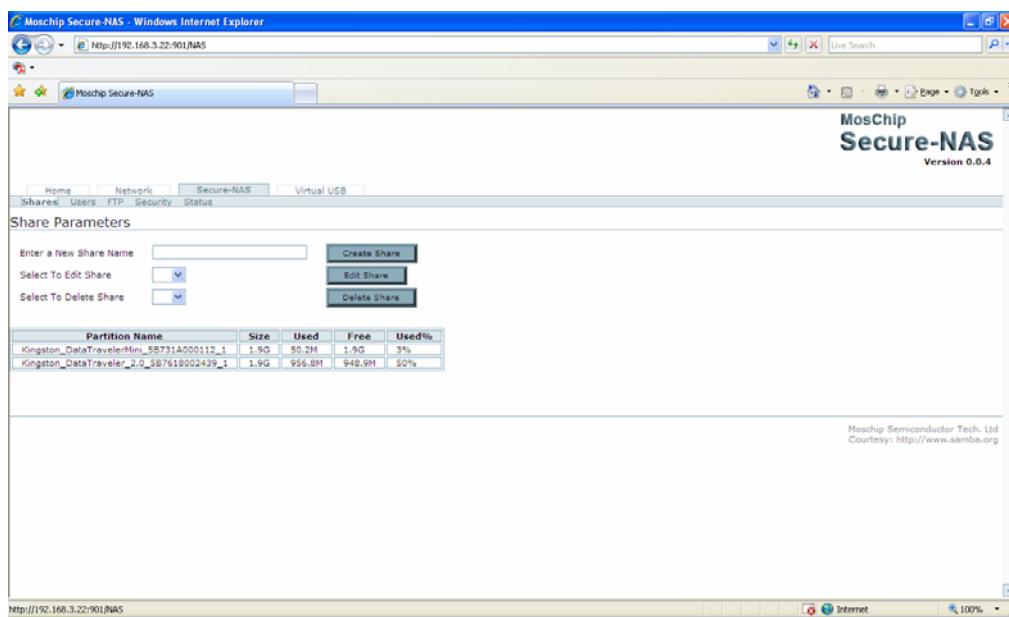


3.2.1. Shares setting:

The “Shares” tab is for creating/editing/deleting a share. A share is the partition of the disk that you want others in the network to access. When a disk is connected to the NAS box the partitions and their statistics will be shown in this page.

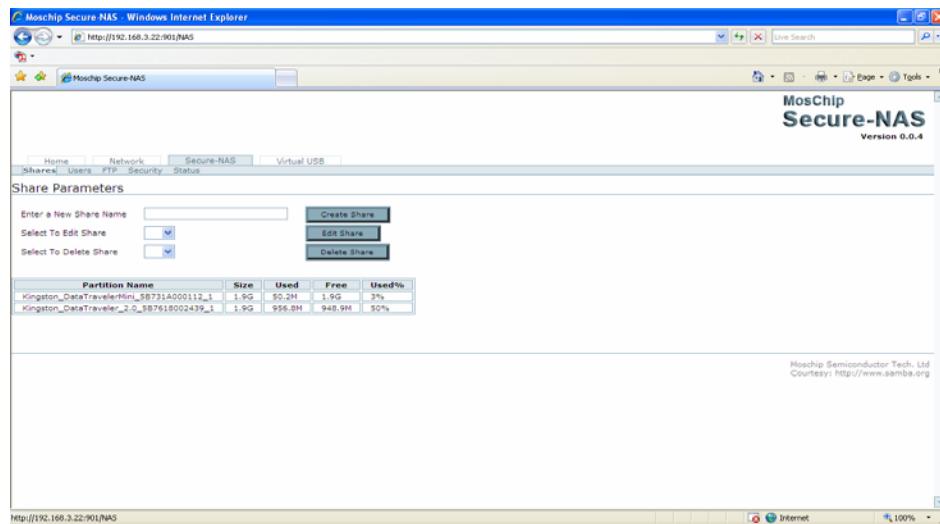

Specify the name in the “Enter a New Share Name” field to create a new share. If you have already created a share then they will be shown in the “Select to Edit Share” and “Select to Delete Share” lists that will allow you to edit/delete the shares.

When you click “Create Share” the parameters required for creating a new share are displayed.

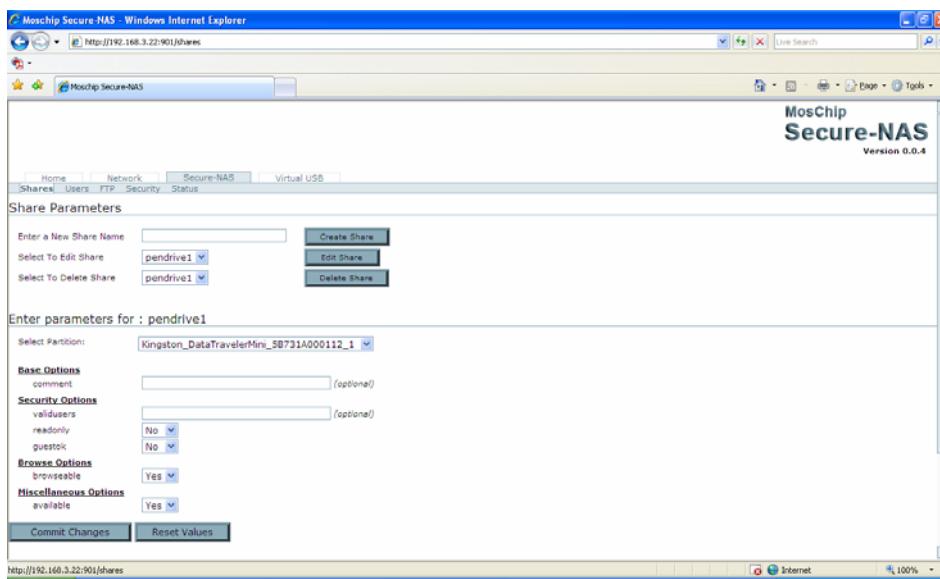

Once a share is created by some the name (Ex: “flash_drive”), then you will be prompted to enter the parameters for the share.


Select Partition: Select the partition which you want to access with the given share name.

- **Comment:** Comments that you want to give for a share (optional setting)
- **Validusers:** Give the users separated with commas who are authorized to access this share. If no user is listed then all will have access to that share. (optional setting)
- **Readonly:** Set read/write permissions for the share. Default is “No” which is read/write permission.
- **Guestok:** Access the share with no password with account specified under *guest account*.
- **Browseable:** This controls whether this share is seen in the list of available shares in a net view and in the browse list.
- **Available:** This parameter lets you “turn off” a service. If *available = no*, then *ALL* attempts to connect to the service will fail

For normal use you need not edit any parameters except selecting the required partition. Click on “Commit Parameters” button and your share will be ready.

3.2.2. Users Settings:

In the “Users” tab you can add/delete/enable/disable a user. You can also change the password for a specified user. The list of registered users will be displayed at the bottom. Enabling/Disabling a user means if a user has been created and you want the user not to access any share then you can disable that user. Means he will not be entirely deleted but only restricted to access any share.

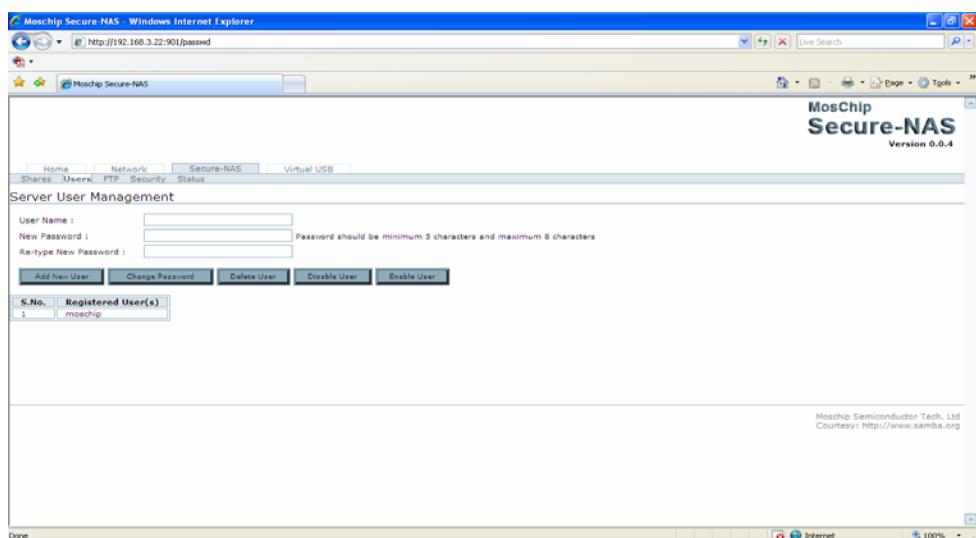


A username "moschip" is by default present, which is shown in the Registered User(s) table.

3.2.3. **FTP settings:**


In the "FTP" tab you can configure FTP server in the NAS box so that users can connect to it through FTP also and access their files. There is only a single username "ftp-admin" through which any user has to connect through FTP. In this page **only** the password of that username can be changed by the administrator.

Here you can configure the FTP server to allow anonymous logins where any user can login by giving username as "anonymous" and any password. Read only or read/write permissions can also be set.

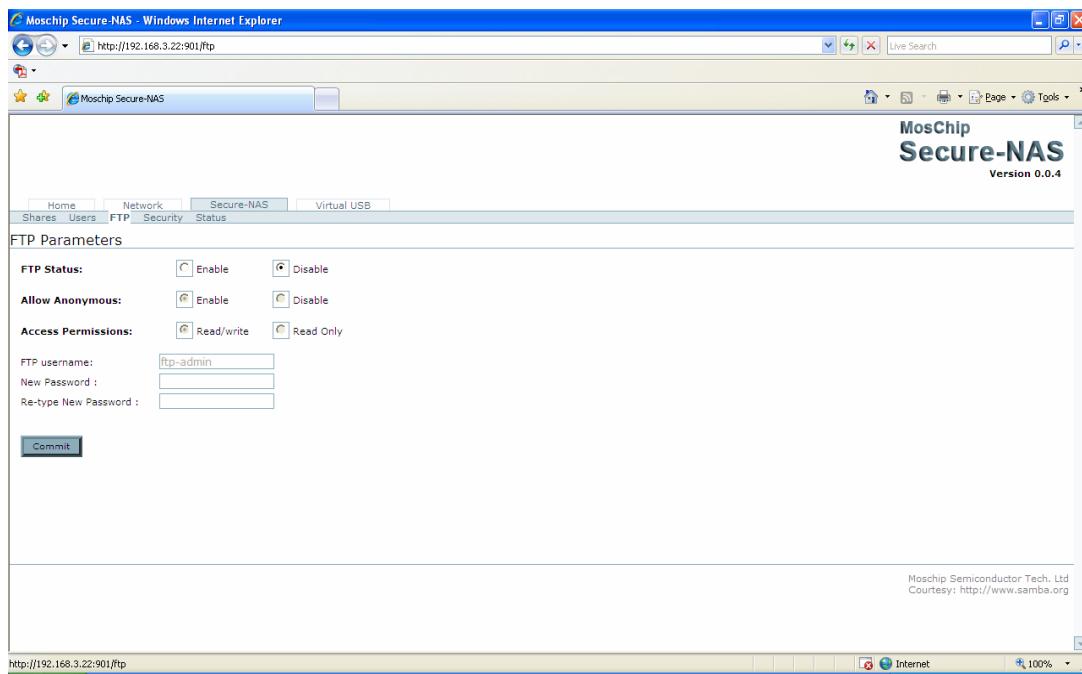

3.2.4. IPSec Security Settings

In the “Security” tab you can configure a VPN with a client for secure access to the box. The box uses IPSec for establishing a VPN.

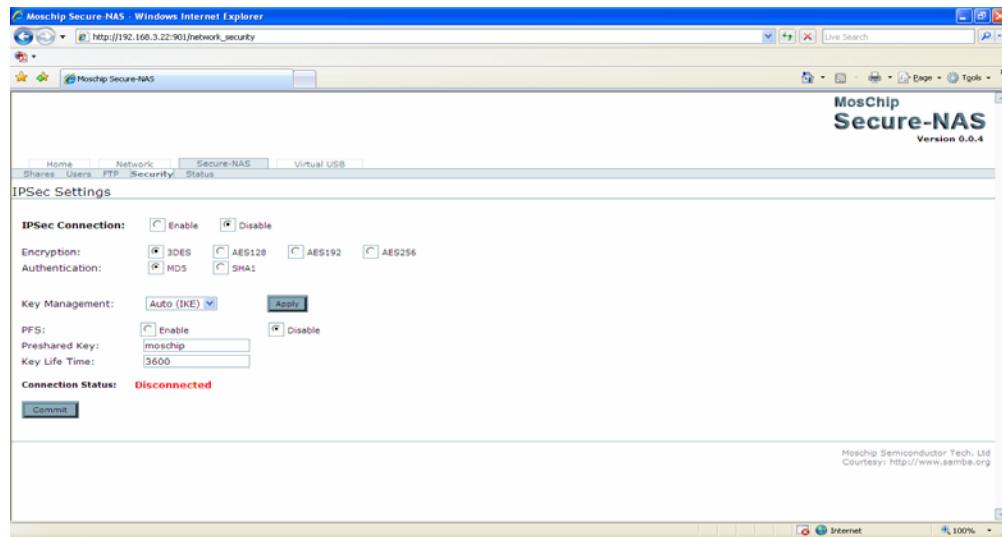

By default the security will be disabled. Then we have the encryption and authentication settings. The MCS8140-NAS will support 3DES, AES128, AES192 and AES256 encryption techniques and MD5, SHA1 authentication techniques.

Encryption:	<input checked="" type="radio"/> 3DES	<input type="radio"/> AES128	<input type="radio"/> AES192	<input type="radio"/> AES256
Authentication:	<input checked="" type="radio"/> MD5	<input type="radio"/> SHA1		

The “Key Management” allows setting the type of key management whether Auto IKE (Internet Key Exchange) or “Manual”.

In the below figure the “Auto (IKE)” is selected. Under this you have an option for enable/disable PFS (Perfect Forward Secrecy) which is useful for key exchange. The “Pre-shared Key” field is to specify what key to use and the “Key Life Time” field is the amount to specify the key lifetime in seconds.

Key Management:	<input type="radio"/> Auto (IKE)	<input type="radio"/> Manual	<input type="radio"/> PFS	<input type="radio"/> Enable	<input checked="" type="radio"/> Disable
	Apply				
PFS:					
Preshared Key:	<input type="text" value="moschip"/>				
Key Life Time:	<input type="text" value="3600"/>				

The below figure is the “Manual” configuration of Key Management. Here we have to specify the “Encryption Key” as well as the “Authentication Key”. Apart from these we have a SPI (Security Parameter Index) field with which the SA’s (Security Associations) will be identified.

Key Management:	Manual	Apply
Encryption Key:	ABCDEF ^H IJKLMNOPQ	
Authentication Key:	ABCDEF ^H IJKLMNOP	
SPI:	0x100	(0x100 to 0xffff)


The connection status (Disconnected/Connected) will be displayed at the bottom in red.

Connection Status: **Disconnected**

Please check the [Appendix section](#) to know on how to configure IPSec on a Windows XP machine.

3.2.5. Status page

In the “Status” tab you can view the NAS server status, active connections, active shares and opened files in a very informative way.

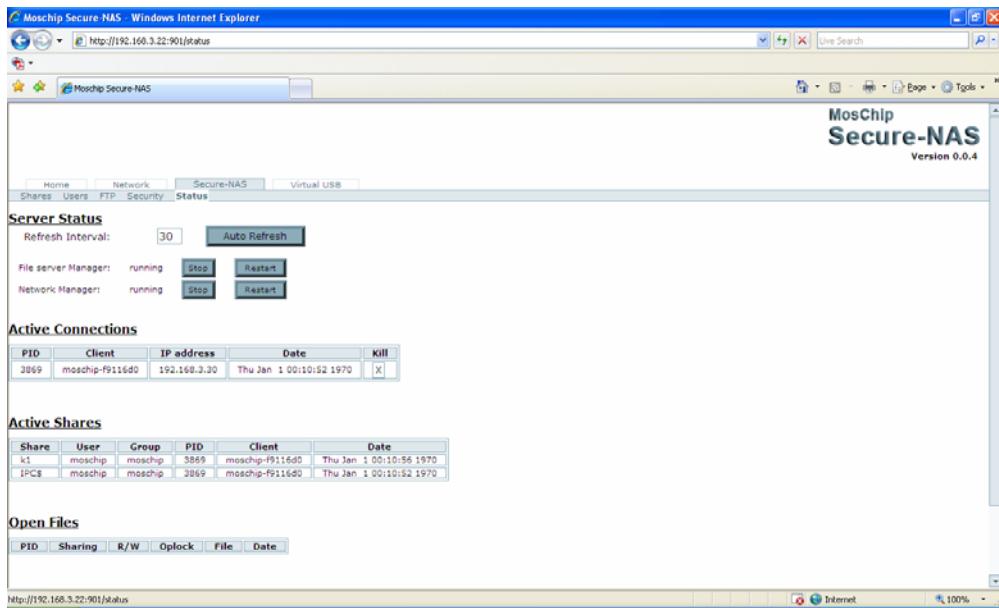

The screenshot shows the MosChip Secure-NAS Status page. The top navigation bar includes Home, Network, Secure-NAS, and Virtual USB. Below this, the Status tab is selected. The page is divided into several sections:

- Server Status:** Refresh Interval: 30, Auto Refresh button. File server Manager: running, Stop, Restart buttons. Network Manager: running, Stop, Restart buttons.
- Active Connections:** A table with columns: PID, Client, IP address, Date, Kill. One entry is shown: 3069, moschip-f9116d0, 192.168.3.30, Thu Jan 1 00:10:52 1970, with a Kill button.
- Active Shares:** A table with columns: Share, User, Group, PID, Client, Date. Two shares are listed: k1, moschip, moschip, 3869, moschip-f9116d0, Thu Jan 1 00:10:56 1970; IPC\$, moschip, moschip, 3869, moschip-f9116d0, Thu Jan 1 00:10:52 1970.
- Open Files:** A table with columns: PID, Sharing, R/W, Oplock, File, Date. No entries are shown.


The “Auto Refresh” button when clicked will keep on refreshing the page based upon the given refresh time interval.

The “Active Connections” will display the IP addresses and the PC names that have connected to the NAS box. In the “Kill” column you can close a connection by clicking “X” mark. But the client can re-establish the connection.


The “Active Shares” page will display which share is accessed by which client. The “Open Files” will display which files are currently opened by which client. The file permissions are also displayed here.

3.3. Virtual USB-IP Settings

The web-server has separate webpage to configure Virtual USB server settings. Click on the Virtual USB tab to view the USB server settings in the Combo NAS USB IP solution.

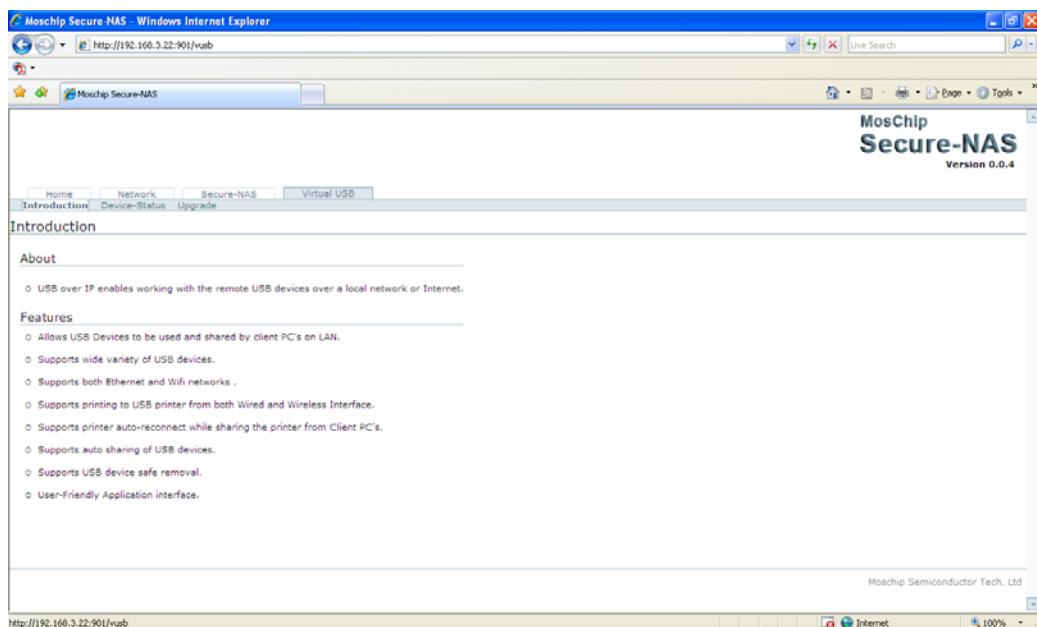

3.3.1. Status Page

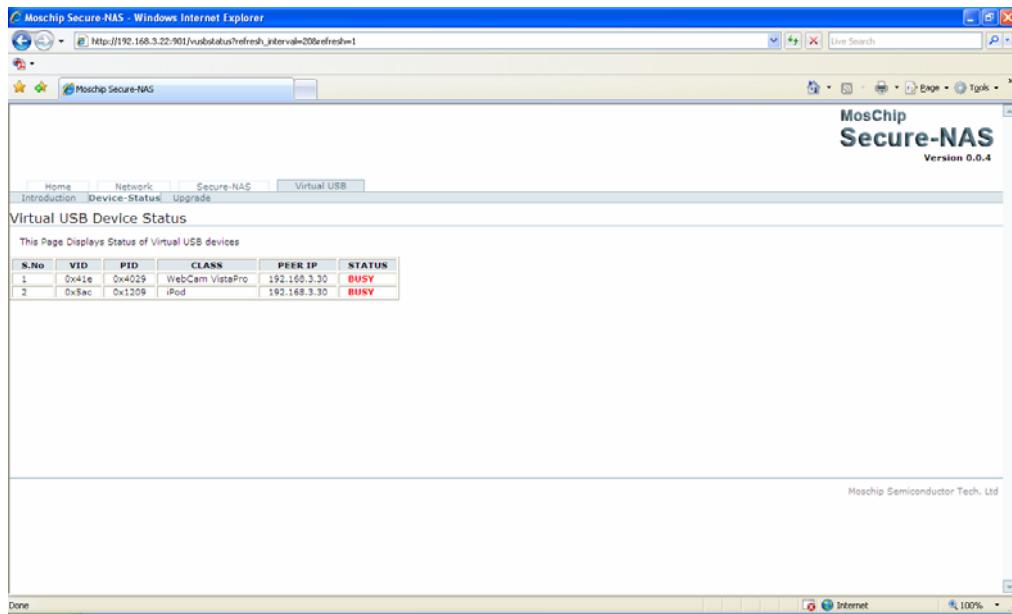

The status page displays the current status of the USB devices attached.

- Device Status:
- Vendor Id
- Product Id
- Class Id
- Peer-ip address
- Status


This status page is updated automatically every 10 seconds and it shows the device connected to MCS8140 board.

The Device Status table shows the Vendor Id, Product Id, Class, Peer-IP and the Status of the Device connected. The Peer-IP is the IP Address of the computer on which the device is currently accessed. Whenever any Device is Busy the Status of that device changes to “BUSY” and whenever it is not being used it changes to “FREE” as shown below.


s.no	vid	pid	class	peer ip	status
1	0x46d	0x92f	Camera	0.0.0.0	FREE
2	0x58f	0x6387	Mass Storage Device	192.168.3.23	BUSY
3	0x4b4	0x6830	USB2.0 Storage Device	192.168.3.23	BUSY
4	0x58f	0x6387	Mass Storage Device	0.0.0.0	FREE

3.3.2. Upgrade Page.


The Upgrade page allows you to upgrade the firmware.

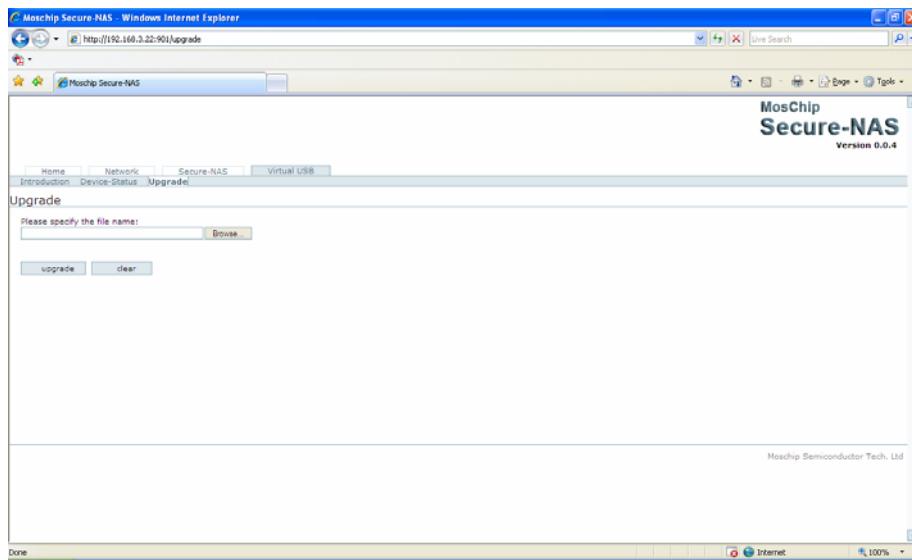


Select the file to be upgraded by click on the Browse option on the Upgrade page as shown below.

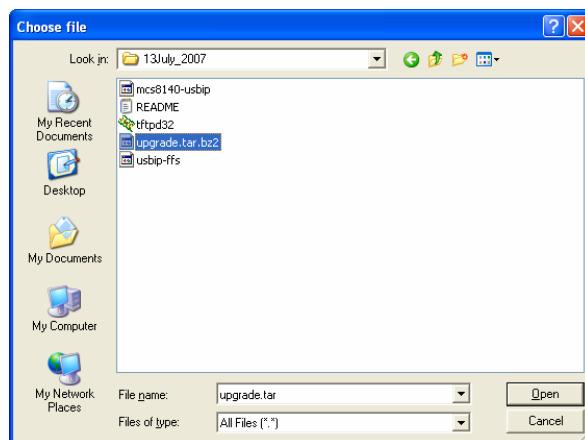

A upgrade.tar.bz2 file is required to upgrade the firmware. The upgrade .tar file can be downloaded from MosChip website.

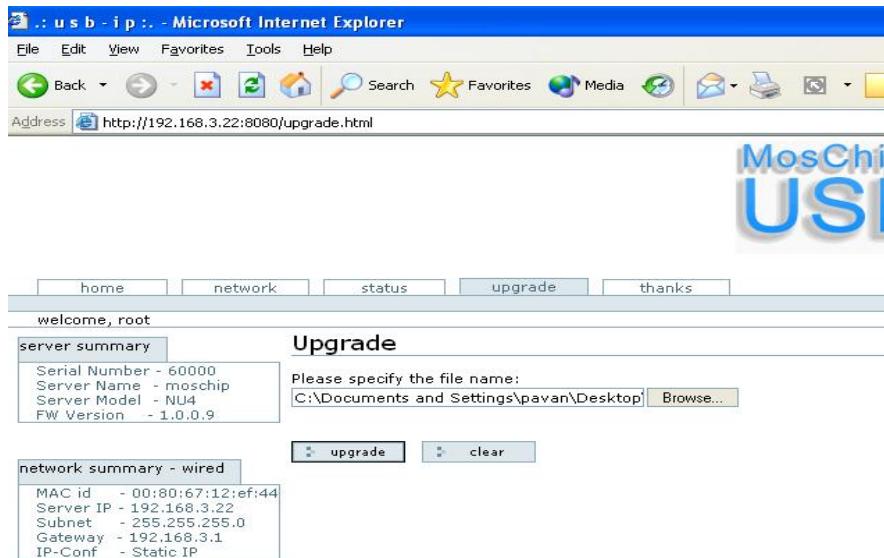

Click on “upgrade” to upgrade the firmware

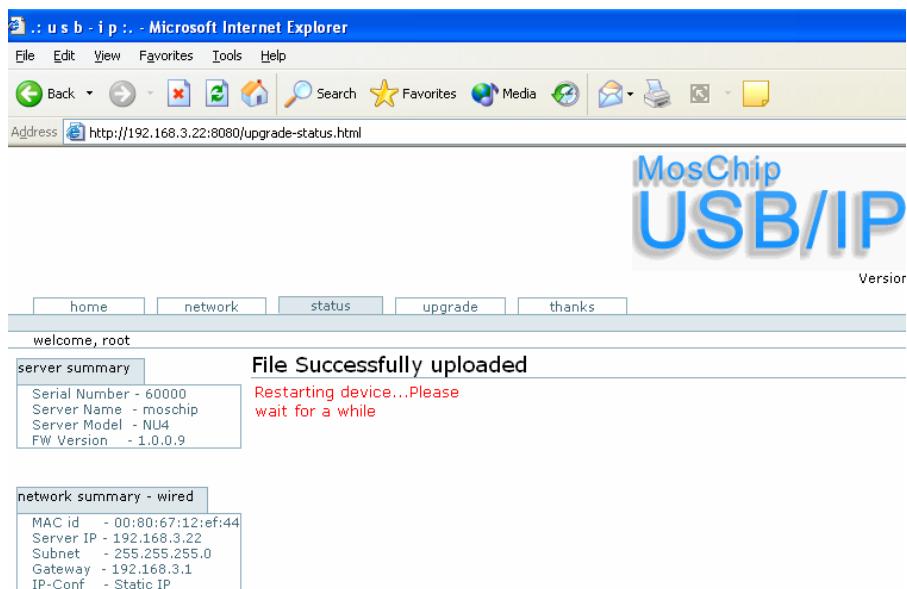


A file successfully uploaded message is displayed and the webpage also indicates that the MCS8140 USB server box is restarting to apply the upgraded firmware settings.


4. Accessing the Network drive:

Ensure the PC IP Address and Box IP Address is in the same subnet.
The network drive will be available on “My Network places” of Windows operating system.

Goto My Network places> Entire Network>Workgroup>mcs8140 as shown below to access the network drive on MCS8140.

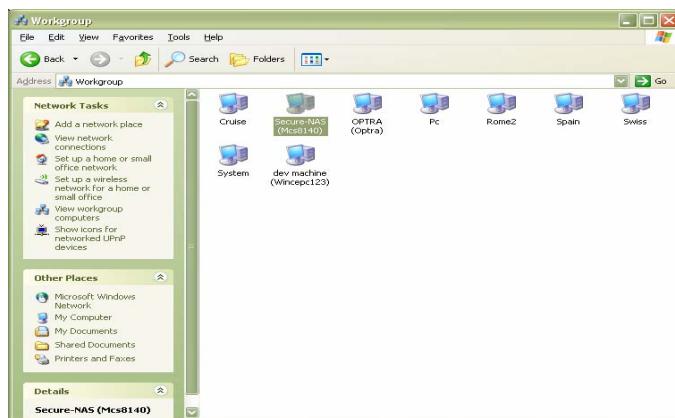


Shortcut: Goto Programs > Run. Type the box IP address in the Run Dialog as show below.

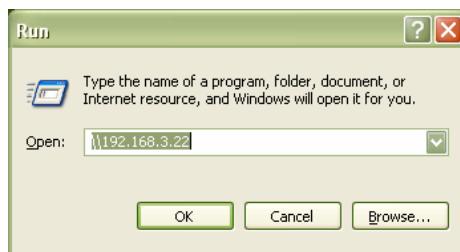

OR

Type the box name in the Run dialog as follows: \\mcs8140

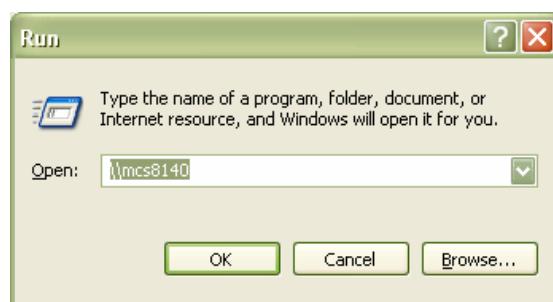

5. Additional Information

5.1. Wireless USB Server

The current USBIP Server release has driver support for Prism chipset based Wi-Fi cards and Broadcom BCM 4306KFB chipset based Wi-Fi cards.

If the board used is a MosChip Combo EVB, the user can plug in the above listed chipset based PCI Wi-Fi cards into the PCI Host slots of MCS8140 Evaluation Boards to convert it into a Wireless USB Server.

5.2. Appendix A: Accessing MCS8140 NAS in Windows Vista:

For accessing MCS 8140 NAS box In Windows Vista Ultimate and Home Edition please refer to the Appendix section of MCS8140 NAS User Manual.

5.3. Appendix B:

For Setting up IP Security on Windows XP please refer to the Appendix section of MCS8140 NAS User Manual.

5.4. Support:

Contact support-8140@moschip.com for any other technical details.

Important notice

MosChip products are not authorized for use as critical components in life support devices or systems. The use of MosChip Semiconductor Technology LTD's products in such devices or systems is done so fully at the customer risk and liability.

MosChip Semiconductor Technology, LTD believes the information in this document to be accurate and reliable but assumes no responsibility for any errors or omissions that may have occurred in its generation or printing. The information contained herein is subject to change without notice and no responsibility is assumed by MosChip Semiconductor Technology, LTD to update or keep current the information contained in this document, nor for its use or for infringement of patent or other rights of third parties. MosChip Semiconductor Technology, LTD does not warrant or represent that any license, either expressed or implied, is granted to the use.