



# **dsPIC33EV 5V CAN-LIN Starter Kit User's Guide**

---

**Note the following details of the code protection feature on Microchip devices:**

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

---

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

#### **Trademarks**

The Microchip name and logo, the Microchip logo, dsPIC, FlashFlex, flexPWR, JukeBlox, KEELOQ, KEELOQ logo, Klear, LANCheck, MediaLB, MOST, MOST logo, MPLAB, OptoLyzer, PIC, PICSTART, PIC<sup>32</sup> logo, RightTouch, SpyNIC, SST, SST Logo, SuperFlash and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

The Embedded Control Solutions Company and mTouch are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, BodyCom, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, ECAN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, KlearNet, KlearNet logo, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, RightTouch logo, REAL ICE, SQI, Serial Quad I/O, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademarks of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2014, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-63276-749-3

**QUALITY MANAGEMENT SYSTEM**  
**CERTIFIED BY DNV**  
**= ISO/TS 16949 =**

*Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.*

**Object of Declaration: dsPIC33EV 5V CAN-LIN Starter Kit (DM33018)**

**EU Declaration of Conformity**

**Manufacturer:** Microchip Technology Inc.  
2355 W. Chandler Blvd.  
Chandler, Arizona, 85224-6199  
USA

This declaration of conformity is issued by the manufacturer.

The development/evaluation tool is designed to be used for research and development in a laboratory environment. This development/evaluation tool is not a Finished Appliance, nor is it intended for incorporation into Finished Appliances that are made commercially available as single functional units to end users under EU EMC Directive 2004/108/EC and as supported by the European Commission's Guide for the EMC Directive 2004/108/EC (8<sup>th</sup> February 2010).

This development/evaluation tool complies with EU RoHS2 Directive 2011/65/EU.

This development/evaluation tool, when incorporating wireless and radio-telecom functionality, is in compliance with the essential requirement and other relevant provisions of the R&TTE Directive 1999/5/EC and the FCC rules as stated in the declaration of conformity provided in the module datasheet and the module product page available at [www.microchip.com](http://www.microchip.com).

For information regarding the exclusive, limited warranties applicable to Microchip products, please see Microchip's standard terms and conditions of sale, which are printed on our sales documentation and available at [www.microchip.com](http://www.microchip.com).

Signed for and on behalf of Microchip Technology Inc. at Chandler, Arizona, USA

  
Derek Carlson  
VP Development Tools

12-Sep-14  
Date

# Digital Power Starter Kit User's Guide

---

NOTES:

---

---

## Table of Contents

---

---

<b>Preface .....</b>	<b>7</b>
<b>Chapter 1. Introduction to the Starter Kit</b>	
1.1 Overview .....	13
1.2 What's In The Kit .....	14
1.3 Starter Kit Hardware .....	14
1.4 Installing Device Drivers for the Starter Kit .....	17
<b>Chapter 2. The Demonstration Application</b>	
2.1 Transmit/Master Mode .....	19
2.2 Receive/Slave Mode .....	25
2.3 UART Monitoring Log .....	25
<b>Chapter 3. Modifying the Application</b>	
3.1 Removing CAN from the Demo Application .....	28
<b>Chapter 4. Troubleshooting</b>	
<b>Appendix A. Starter Kit Schematics .....</b>	<b>31</b>
<b>Index .....</b>	<b>35</b>
<b>Worldwide Sales and Service .....</b>	<b>36</b>



---

## Preface

---

### NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site ([www.microchip.com](http://www.microchip.com)) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXA”, where “XXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

## INTRODUCTION

This chapter contains general information that will be useful to know before using the dsPIC33EV 5V CAN-LIN Starter Kit. Items discussed in this chapter include:

- Document Layout
- Conventions Used in this Guide
- Warranty Registration
- Recommended Reading
- The Microchip Web Site
- Development Systems Customer Change Notification Service
- Customer Support
- Revision History

## DOCUMENT LAYOUT

This document describes how to use the dsPIC33EV 5V CAN-LIN Starter Kit as a development tool to emulate and debug firmware on a target board, as well as how to program devices. The document is organized as follows:

- **Chapter 1. “Introduction to the Starter Kit”** provides a brief overview and hardware description of the Starter Kit.
- **Chapter 2. “The Demonstration Application”** describes the Starter Kit's pre-programmed application.
- **Chapter 3. “Modifying the Application”** describes how to use the MPLAB® X IDE to make changes to the demo application
- **Chapter 4. “Troubleshooting”** describes common issues and their solutions.
- **Appendix A. “Starter Kit Schematics”** provides detailed schematics for the Starter Kit.

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

## CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

### DOCUMENTATION CONVENTIONS

Description	Represents	Examples
<b>Arial font:</b>		
Italic characters	Referenced books	<i>MPLAB® IDE User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u><i>File&gt;Save</i></u>
Bold characters	A dialog button	Click <b>OK</b>
	A tab	Click the <b>Power</b> tab
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
<b>Courier New font:</b>		
Plain Courier New	Sample source code	<code>#define START</code>
	Filenames	<code>autoexec.bat</code>
	File paths	<code>c:\mcc18\h</code>
	Keywords	<code>_asm, _endasm, static</code>
	Command-line options	<code>-Opa+, -Opa-</code>
	Bit values	<code>0, 1</code>
	Constants	<code>0xFF, 'A'</code>
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets [ ]	Optional arguments	<code>mcc18 [options] file [options]</code>
Curly brackets and pipe character: {   }	Choice of mutually exclusive arguments; an OR selection	<code>errorlevel {0 1}</code>
Ellipses...	Replaces repeated text	<code>var_name [, var_name...]</code>
	Represents code supplied by user	<code>void main (void) { ... }</code>

## WARRANTY REGISTRATION

Please complete the enclosed Warranty Registration Card and mail it promptly. Sending in the Warranty Registration Card entitles users to receive new product updates. Interim software releases are available at the Microchip web site.

## RECOMMENDED READING

This user's guide describes how to use dsPIC33EV 5V CAN-LIN Starter Kit. Other useful documents are listed below. The following Microchip documents are available and recommended as supplemental reference resources.

### **Readme Files**

For the latest information on using other tools, read the tool-specific Readme files in the Readmes subdirectory of the MPLAB X IDE installation directory. The Readme files contain update information and known issues that may not be included in this user's guide.

### **dsPIC33 Family Reference Manuals**

This reference manuals explain the operation of the dsPIC33 digital signal controller family architecture and peripheral modules. The specifics of each device family are discussed in the individual family's device data sheet.

This useful manual is on-line in sections at the Technical Documentation section of the Microchip website. Refer to these for detailed information on dsPIC33 device operation.

### **dsPIC33EVXXXGM00X/10X Family Data Sheet (DS70005144) and dsPIC33EVXXXGM00X/10X Flash Programming Specification (DS70005137)**

Refer to this device data sheet for device-specific information and specifications. Also, refer to the appropriate device flash programming specification for information on instruction sets and firmware development. These files may be found on the Microchip website or from your local sales office.

### **MPLAB® XC16 C Compiler User's Guide and Libraries (DS50002071)**

This document describes the usage of Microchip's MPLAB XC16 C Compiler for application development.

### **MPLAB® X IDE User's Guide (DS50002027)**

This document describes how to use the MPLAB X IDE, Microchip's latest version of its integrated development environment, as well as the MPLAB Project Manager, MPLAB Editor and MPLAB SIM Simulator. Use these development tools to help you develop and debug application code.

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

---

## THE MICROCHIP WEB SITE

Microchip provides online support via our web site at [www.microchip.com](http://www.microchip.com). This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

## DEVELOPMENT SYSTEMS CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at [www.microchip.com](http://www.microchip.com), click on Customer Change Notification and follow the registration instructions.

The Development Systems product group categories are:

- **Compilers** – The latest information on Microchip C compilers, assemblers, linkers and other language tools. These include all MPLAB C compilers; all MPLAB assemblers (including MPASM™ assembler); all MPLAB linkers (including MPLINK™ object linker); and all MPLAB librarians (including MPLIB™ object librarian).
- **Emulators** – The latest information on Microchip in-circuit emulators.
- **In-Circuit Debuggers** – The latest information on the Microchip in-circuit debuggers. This includes MPLAB ICD 3 and PICKit 3 debuggers.
- **MPLAB® X IDE** – The latest information on Microchip MPLAB X IDE development environment for all PIC® MCUs. MPLAB X IDE is available for Windows, iOS and Linux operating systems.
- **Programmers** – The latest information on Microchip programmers, including the PM3 production-volume device programmer.

## CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:

<http://www.microchip.com/support>.

## REVISION HISTORY

### Revision A (October 2014)

This is the initial release of this document.

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

---

NOTES:

---

## Chapter 1. Introduction to the Starter Kit

---

Thank you for purchasing the dsPIC33EV 5V CAN-LIN Starter Kit. This board features the dsPIC33EV256GM106 Digital Signal Controller (DSC) for automotive and motor control applications. The Starter Kit contains serial data ports for CAN, LIN and SENT, a self-contained USB programming/debug interface, and an expansion footprint for flexibility in application hardware development.

This chapter introduces the Starter Kit and provides an overview of its features. Topics covered include:

- Overview
- What's In the Kit
- Hardware
- Installing Drivers for the Starter Kit

### 1.1 OVERVIEW

The dsPIC33EV 5V CAN-LIN Starter Kit is a stand-alone demonstration board, allowing users to explore three popular automotive and industrial serial data formats (CAN, LIN and SENT). The board uses the 5 VDC supplied by the host computer's USB interface, consuming approximately 70 mA. The PICkit On-Board (PKOB) USB programmer and debugger allows simple programming without the need for an additional hardware interface. No other external tools are required to program the device. An optional ICSP™ interface also allows for debugging with more advanced tools.

The Starter Kit board includes several analog features to showcase the capabilities of the dsPIC33EV256GM106 family. The included 64-pin digital signal controller integrates the following features:

- One CAN module with 32 buffers and 16 receive filters
- Two SENT (Single Edge Nibble Transmission) modules
- Two UARTs with LIN/J2606 support
- SPI and I<sup>2</sup>C™ serial interfaces
- One high-speed (1.1 Msps), 10/12-bit A/D converter with multiple input channels
- One Charge Time Measurement Unit (CTMU)
- Six Pulse-Width Modulation (PWM) outputs

In addition, the CAN-LIN Starter Kit board also provides:

- Analog temperature sensor (MCP9701A)
- Ratiometric trim potentiometer
- CAN Interface (MCP2561) with DB9 male connector
- LIN Interface (MCP2021A) with required interface electronics
- Three general purpose momentary push buttons
- Three general purpose LEDs
- Breakout Connector footprint

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

## 1.2 WHAT'S IN THE KIT

The dsPIC33EV 5V CAN-LIN Starter Kit contains the following:

- dsPIC33EV 5V CAN-LIN Starter Kit board
- USB cable (A to mini-B)
- An insert card with links to the website for this manual, schematics and the demo application


## 1.3 STARTER KIT HARDWARE

The CAN-LIN Starter Kit ships with a simple pre-programmed application to transmit or receive data packets that simulate sensor readings, using the three automotive data ports. The data transmitted is the temperature reading from the on-board temperature sensor, the 12-bit data from the potentiometer, and the status of the three user push buttons. External protocol analyzers can be used to read the transmitted data. In addition, the secondary UART channel sends an activity log of transmitted/received data via I/O pin RB4. See [Section 2.3 “UART Monitoring Log”](#) for details.

To develop code and to program and debug the dsPIC33EV256GM106 DSC, you will need the latest versions of MPLAB X IDE (V2.10 or later) and MPLAB XC16 compiler (V1.23 or later).

[Figure 1-1](#) shows the Starter Kit board, along with the major hardware features.

**FIGURE 1-1: dsPIC33EV 5V CAN-LIN STARTER KIT FEATURES**

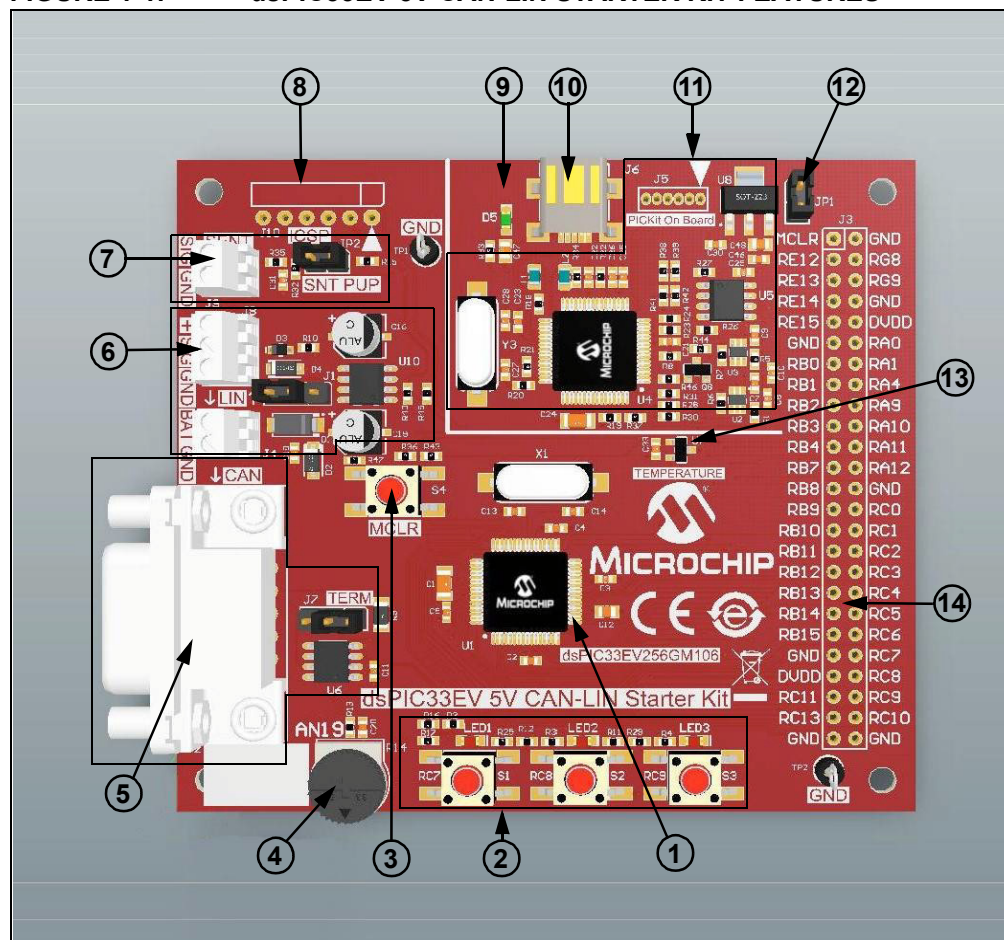

1. **dsPIC33EV256GM106 Digital Signal Controller (U1):** this DSC is at the heart of the application. It is responsible for managing communications for all three serial protocols, using dedicated hardware peripherals for CAN and SENT, and one of the DSC's compatible UARTs for LIN. An external 8 MHz crystal (X1) provides stable timing. All of the I/O pins not used by the sensors and serial interfaces are available on the breakout connector.
2. **User Push Buttons and LEDs:** three push buttons (S1 through S3) are provided to simulate digital sensor data in the pre-programmed application. The switches and their associated red LEDs (LED1 through LED3) are connected to dedicated I/O port pins. The switches have external pull-ups, and thus read a logic low when depressed. The LEDs are lit when their port pins are driven high. The LEDs are low-current types, consuming approximately 2 mA each when lit.
3. **Master Clear Push Button:** pressing this button causes a Master Clear reset of the DSC and the running application.
4. **Potentiometer (R14):** the linear trim potentiometer is used to simulate analog sensor readings for the pre-programmed application. The wiper is connected to the DSC's A/D converter; the body is connected between ground and I/O port RG8. Driving RG8 high makes the potentiometer a divider between VDD and ground. Driving RG8 low disables the potentiometer, and allows for reduced power consumption. R13 and C20 form a low-pass, anti-aliasing filter.
5. **CAN Interface:** this uses the Microchip MCP2561 CAN driver/receiver, which can operate up to 1 MB/s. Connections to external CAN devices are made through J2, a standard DB9 serial connector. An optional 120Ω bus termination resistor is controlled via jumper J7.
6. **LIN Interface:** this uses the Microchip MCP2021A LIN controller (U10), and is fully compliant with the LIN 2.x/SAE J2602-2 specifications. Screw terminal connections are provided for battery power in Master mode (J4) and data bus connections in Master and Slave modes (J8). Jumper J1 is used to select the operating mode.
7. **SENT Interface:** screw terminals (J9) are provided for data connections. The bus pull-up is controlled with jumper JP2.
8. **ICSP Header (J10):** space is provided for a standard 6-pin In-Circuit Serial Programming™ connector (FCI 68016-106HLF) for the dsPIC33EV256GM106 DSC. This allows for in-circuit emulation and debugging using Microchip's MPLAB REAL ICE™ in-circuit emulator, as well as direct programming of the DSC.
9. **Power LED (D5):** this LED is lit when USB bus power is available to the USB connector.
10. **USB Port (J6):** the mini-B port provides programming/debugging connectivity and power to the Starter Kit. Bus power (+5 VDC) is provided to the DSC side of the Starter Kit through a noise filter network (L1/C47).

**Note:** The CAN-LIN Starter Kit can only be powered through the USB port. No other provisions to supply power to the board are available.

11. **PICKit 3 On Board (PKOB):** the PIC24FJ256GB106 microcontroller provides a simple programming interface between the dsPIC33EV256GM106 DSC and MPLAB IDE software for programming and debugging. A 3.3V regulator (U8) provides power to the circuit. Since the DSC operates at 5V, level translators (U2 and U3) are used for the internal serial clock programming signals. Space for a legacy 6-pin PICKit programmer expansion header (J5) to program the PKOB microcontroller is also provided.

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

12. **Current Measurement Shunt (JP1):** the operating current of the DSC can be measured here by removing the jumper and placing an ammeter across the pins. Running the demo at 40 MIPS results in current consumption of approximately 34 mA (from the +5VDC rail).
13. **Temperature Sensor (U7):** the MCP9701A analog temperature sensor measures the board's temperature; its analog output is connected to AN18 of the 12-bit ADC. The sensor's scale is 19.5 mV/°C nominal. The ADC uses VDD (5V) as its reference, so each bit represents a 12.2 mV step. The circuit can resolve  $\pm 1^{\circ}\text{C}$ .
14. **Breakout Connector (J3):** many of the DSC's I/O pins are accessible through this connector footprint. The user can solder in a male or female 2x25 pin header (2.54mm pin spacing). Individual wires can be soldered into the connector holes. Table 1-1 lists the expansion header's connections to the DSC.

**TABLE 1-1: EXPANSION CONNECTOR PINOUT**

J3 Pin	Function	Device Pin	J3 Pin	Function	Device Pin
1	MCLR <sup>(1)</sup>	7	26	GND	—
2	GND	—	27	RB9	49
3	RE12	27	28	RC0	21
4	RG8 <sup>(1)</sup>	6	29	RB10	60
5	RE13	28	30	RC1	22
6	RG9	8	31	RB11	61
7	RE14	29	32	RC2	23
8	GND	—	33	RB12	62
9	RE15	30	34	RC3	35
10	DVDD	10, 26, 38, 57	35	RB13	63
11	GND	—	36	RC4 <sup>(1)</sup>	36
12	RA0	13	37	RB14	2
13	RB0	15	38	RC5 <sup>(1)</sup>	37
14	RA1	14	39	RB15	3
15	RB1	16	40	RC6 <sup>(1)</sup>	50
16	RA4	33	41	GND	—
17	RB2	17	42	RC7 <sup>(1)</sup>	51
18	RA9	34	43	DVDD	10, 26, 38, 57
19	RB3	18	44	RC8 <sup>(1)</sup>	52
20	RA10	64	45	RC11	24
21	RB4 <sup>(2)</sup>	32	46	RC9 <sup>(1)</sup>	55
22	RA11	12	47	RC13	47
23	RB7	46	48	RC10	45
24	RA12	11	49	GND	-
25	RB8	48	50	GND	-

**Note 1:** Shared I/O pin; refer to schematic for details.

**2:** RB4 is also used for the UART Log Data for the pre-programmed application.

## 1.4 INSTALLING DEVICE DRIVERS FOR THE STARTER KIT

The proper USB drivers for the Starter Kit are included in the MPLAB X IDE installation (Windows, iOS or Linux). The first time the Starter Kit is attached to the IDE, a notification window may appear that USB drivers are being installed.

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

---

NOTES:

---

## Chapter 2. The Demonstration Application

---

The Starter Kit board is pre-programmed with a small application to demonstrate its functionality in its three serial automotive interfaces (CAN, LIN and SENT). The application can either operate as a Transmitter (Master) or as a Receiver (Slave), but not both at once.

The application's mode is set at power-up, or when a Master Clear event occurs, as follows:

- if none of the push buttons are depressed during power-up or while the  $\overline{\text{MCLR}}$  push button is pressed, the three LEDs will light in sequence 1-2-3, and turn off in reverse sequence (3-2-1). The board is now in Transmit/Master mode.
- if *any* of the push buttons are depressed during power-up or while the  $\overline{\text{MCLR}}$  push button is pressed, all three LEDs will blink together five times, and then remain lit until the push button(s) are released. This places the board in Receive/Slave mode.

### 2.1 TRANSMIT/MASTER MODE

When the application is running in Transmit mode, it executes an endless one-second loop as the main routine, which performs the following:

1. The state of the push buttons is read, and the corresponding LED is lit if the button is pressed.
2. The temperature sensor is sampled, and its analog output converted.
3. RG8 is driven high (+5V), and the voltage on the potentiometer is read.
4. The results of (1), (2) and (3) are formatted and transmitted on each of the three serial interfaces, starting with the CAN interface.
5. The UART monitor sends a formatted ASCII text message from pin RB4 (see [Section 2.3 "UART Monitoring Log"](#) for details).
6. The application waits until the timer tick ends, and then repeats the process.

While the LIN and SENT interfaces do not need to be connected in Transmit mode, an external active CAN bus or CAN analyzer must be connected to the CAN port; this is due to the CAN requirement of receiving an external ACK signal before transmitting a message. Unless the CAN portion of the application is disabled, the application will pause and wait indefinitely without an external connection, and no LIN or SENT data will be transmitted. See [Section 3.1 "Removing CAN from the Demo Application"](#) for information on reconfiguring the application.

## 2.1.1 SENT Data Transmission Formatting

The SENT message consists of the following:

- A Synchronization/Calibration period (pulse) of 56 tick times
- A Status nibble of 12 to 27 tick times. This is user defined
- Up to six data nibbles of 12 to 27 tick times. The demo uses 6 nibbles (3 bytes)
- A CRC nibble of 12 to 27 tick times

The tick time is set by a `#define` statement at 50  $\mu$ s, with an allowable range of 3  $\mu$ s to 90  $\mu$ s.

The SENT protocol uses nibbles, not bytes or words, to format the message. In the demo application, the Status nibble encodes the state of the user-defined push buttons. The data nibbles encode the potentiometer and temperature sensor readings. The Status and data nibbles are:

- Status: 0 S3 S2 S1, where S1 through S3 represents the status of the push buttons (a '1' indicates that corresponding switch is pressed). The value of this nibble reflects which button (if any) is pressed
- Nibbles 1 through 3: 12 bits of the ADC conversion value for the potentiometer reading (MSbit to LSbit)
- Nibbles 4 through 6: 12 bits of the ADC conversion value for the temperature sensor (MSbit to LSbit)

The CRC is generated by the SENT module in hardware, and is not calculated by the application.

Figure 2-1 shows a typical screen capture of SENT data transmitted by the application. This data was captured using the KOPF Automotive Interface 4 analyzer and KFlexExplorer software (KOPF GmbH).

**FIGURE 2-1: SENT MESSAGES FROM THE STARTER KIT**

Ch	Len	Typ	Time	Data	Sync [us]
0	8	SENT Frame	00:20:27...	00 6F 2D 2E	2782
0	8	SENT Frame	00:20:27...	00 6F 2D 2E	2782
0	8	SENT Frame	00:20:27...	00 70 2D 01	2782
0	8	SENT Frame	00:20:27...	00 6F 2D 5A	2782
0	8	SENT Frame	00:20:28...	10 6F 2D 88	2782
0	8	SENT Frame	00:20:28...	00 6E 2D 79	2782
0	8	SENT Frame	00:20:28...	00 6E 2D 43	2782
0	8	SENT Frame	00:20:28...	20 6F 2D 47	2782
0	8	SENT Frame	00:20:29...	20 6E 2D 8C	2782
0	8	SENT Frame	00:20:29...	00 6F 2D 7D	2782
0	8	SENT Frame	00:20:29...	00 6F 2D 88	2782
0	8	SENT Frame	00:20:29...	40 6E 2D 8C	2782
0	8	SENT Frame	00:20:30...	40 6F 2D 33	2782
0	8	SENT Frame	00:20:30...	40 70 2D 3B	2782
0	8	SENT Frame	00:20:30...	00 70 2D 01	2782

# The Demonstration Application

## 2.1.1.1 CONNECTING HARDWARE FOR SENT DATA TRANSMISSION

Connection to another SENT device is by two wires, SIGNAL and GROUND. The connections are made via J9.

The SENT bus requires a pull-up resistor, which is enabled by installing Jumper JP2. If two Starter Kit boards are connected, enable the pull-up on only one of the boards; remove the JP2 jumper on the other board. Similarly, if the Starter Kit is connected to an existing SENT network which has a pull-up installed, remove the JP2 jumper.

**Note:** The rise-time control filter on the Starter Kit is not guaranteed to meet the requirements of the SENT standard in all possible applications. Refer to SAE J2716 for filter design guidelines.

## 2.1.2 LIN Data Transmission Formatting

The various LIN timing parameters are set in the demo application in a series of `#define` statements ([Example 2-1](#)). Connection to existing LIN networks or peripherals may require adjusting these parameters. The constant FCAN is the MIPS running frequency in Hz.

### EXAMPLE 2-1: LIN TIMING PARAMETERS

```
#define FCAN 4000000
#define LIN_BAUD 4800
#define LIN_BIT_TIME ((1000000/LIN_BAUD) + 0.5)
#define LIN_BRGVAL ((FCAN/LIN_BAUD)/16) - 1
#define LIN_ID 0x23
#define LIN_BIT_STUFF 0x4
```

The data is transmitted as follows:

1. The ID byte, which includes two parity bits. The ID is set as a `#define` in the demo program, and may be changed to any valid byte. The application uses 0x23 by default, which is transmitted with parity as 0xE2.
2. The second byte is the data for the three push button switches. S1 represents the LSbit (bit 0), S2 is bit 1 and S3 is bit 2. A '1' in a bit position shows the corresponding switch is depressed. Note that the switches are not debounced by the application, and the switch states are sampled once every second; therefore, there may be a delay to register a key press in the serial data.
3. The next two bytes are the raw temperature readings from the ADC. At room temperature, expected data values are from 0x02D0 to 0x0320. The application takes four readings and then averages them to send the final result.
4. The next two bytes are the potentiometer value from the ADC. The range is approximately 0x000 to 0x0FFF (a small offset value is possible).
5. The final byte is the checksum, computed per LIN specification. Note that this is an enhanced checksum calculation, which includes the ID byte in the calculation.


[Figure 2-2](#) shows the LIN data output from the application, captured by using the Microchip LIN Serial Adapter (Microchip part # APGDT001) and associated software. This shows the output of the LIN port running the demo software.

To set this in the LIN analyzer application, open the *Setup* menu and change the settings at the Setup dialog to:

- Baud Rate: 4800
- Timeout (ms): 1000
- COM Port: "APG USB to LIN 0"

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

**FIGURE 2-2: LIN MESSAGES FROM THE STARTER KIT**

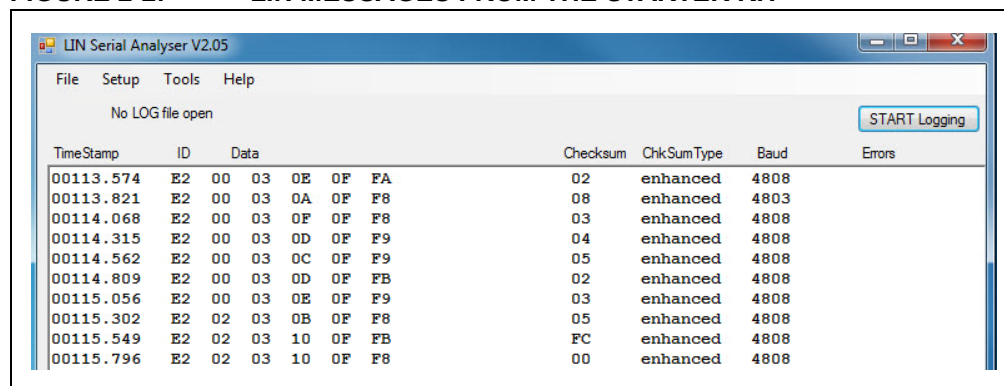

The screenshot shows the LIN Serial Analyser V2.05 software interface. It has a menu bar (File, Setup, Tools, Help) and a status bar (No LOG file open). A 'START Logging' button is in the top right. The main area displays a table of LIN messages with the following columns: TimeStamp, ID, Data, Checksum, ChkSumType, Baud, and Errors. The data rows show a sequence of messages with timestamps from 00113.574 to 00115.796, all with ID E2 and a baud rate of 4808. The data field contains hexadecimal values, and the checksum field contains values like 02, 08, 03, 04, 05, 02, 03, 05, FC, and 00.

TimeStamp	ID	Data	Checksum	ChkSumType	Baud	Errors
00113.574	E2	00 03 0E 0F FA	02	enhanced	4808	
00113.821	E2	00 03 0A 0F F8	08	enhanced	4803	
00114.068	E2	00 03 0F 0F F8	03	enhanced	4808	
00114.315	E2	00 03 0D 0F F9	04	enhanced	4808	
00114.562	E2	00 03 0C 0F F9	05	enhanced	4808	
00114.809	E2	00 03 0D 0F FB	02	enhanced	4808	
00115.056	E2	00 03 0E 0F F9	03	enhanced	4808	
00115.302	E2	02 03 0B 0F F8	05	enhanced	4808	
00115.549	E2	02 03 10 0F FB	FC	enhanced	4808	
00115.796	E2	02 03 10 0F F8	00	enhanced	4808	

## 2.1.2.1 CONNECTING HARDWARE FOR LIN DATA TRANSMISSION

The LIN bus electrical signaling is controlled by a MCP2021A LIN transceiver (U10). The standard LIN bus uses three wires: SIGNAL, GROUND and POWER (+12VDC). The transceiver requires an external +12 VDC supply to be connected. The connections between the LIN bus (or other LIN device) and the Starter Kit are different for Transmit and Receive modes. Table 2-1 summarized the differences.

In Transmit (Master) mode, the +12VDC is applied to the BAT terminal of J4, and the battery ground is connected to the GND terminal. The LIN signal is applied to the SIG terminal of J8. The SIG terminal is for the LIN signal wire, and the GND terminal is used for the LIN ground. In addition, jumper J1 is set to position 1-2 for Transmit mode.

In Receive (Slave mode), J4 is not used. The +12 VDC is supplied over the bus POWER wire, which is connected to the + terminal of J8. The SIG terminal is connected to the LIN SIGNAL wire, and GND is for the GROUND wire. Jumper J1 is set to position 2-3 for Receive mode.

**TABLE 2-1: LIN CONNECTIONS FOR TRANSMIT AND RECEIVE MODES**

Connector/Jumper		Transmit	Receive
J1	Master/Slave	1-2 (Master)	2-3 (Slave)
J4	BAT	POWER	—
	GND	GROUND	—
J8	+	—	POWER
	SIG	SIGNAL	SIGNAL
	GND	GROUND	GROUND

# The Demonstration Application

## 2.1.3 CAN Data Transmission Formatting

CAN data is transmitted as follows:


1. The SID. The demo code arbitrarily uses 0x123, which is set by the `#define MSG_SID` statement. It may be changed to any valid SID.
2. The DLC byte, which shows six bytes of data are to be transmitted.
3. The next two bytes (DATA 0 and DATA 1) are the data for the three switches. The switch data appears on DATA 0, while DATA 1 is 0x00. S1 is the LSBit (bit 0), S2 is bit 1 and S3 is bit 2. A '1' in a bit position shows the corresponding switch is depressed. Note that the switches are not debounced by the application, and the switch state are sampled once every second; therefore, there may be a delay to register a key press in the serial data.
4. The following two bytes (DATA 2 and DATA 3) are the raw temperature readings from the ADC. At room temperature, expected data values are from 0x02D0 to 0x0320. The application takes four readings and then averages them to send the final result. DATA3 is the Most Significant Byte.
5. The final two bytes (DATA 4 and DATA 5) are the potentiometer value from the ADC. The range is approximately 0x000 to 0x0FFF (a small offset value is possible). DATA 5 is the Most Significant Byte.

Figure 2-3 shows a typical CAN message from the demo application, as captured using the Microchip CAN Bus Analyzer (Microchip part # APGDT002) and associated software running on Windows 7. This shows a potentiometer value reading of 0x057D, and a raw temperature reading of 0x02E4. The CAN Analyzer shows that the CAN messages arrive 250 ms apart, as set by the application's main timer loop.

The CAN Analyzer must be configured to the demo application's parameters with the Setup dialog (*Setup > Hardware Setup*). The correct setting are:

- Bitrate Control: 250 kbps
- Mode Control: Normal
- Termination Control: On

**FIGURE 2-3: CAN MESSAGES FROM THE STARTER KIT**

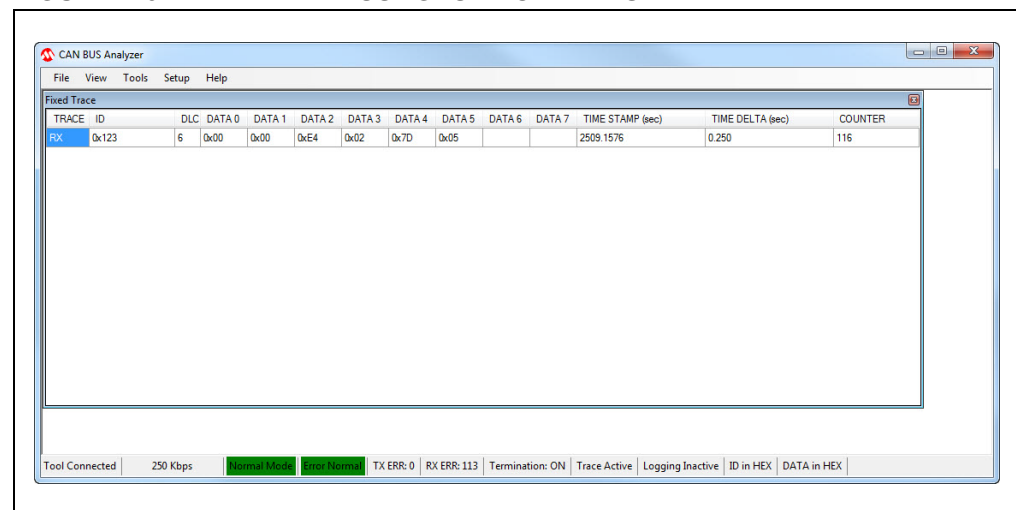

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

---

## 2.1.3.1 CONNECTING HARDWARE FOR CAN DATA TRANSMISSION

The CAN bus should be double-terminated with 120 $\Omega$  resistors at each end of the CAN cable. Jumper J7 controls cable termination across the CAN data lines. When the jumper is in the TERM position (positions 2-3), a 120 $\Omega$  resistor is connected across the cable.

When connecting two CAN-LIN Starter Kit boards to each other via a DB9 female-to-female serial cable, place the J7 jumpers in the TERM position on both boards. Do not use more than two bus termination resistors.

The CAN connector (J2) follows the *de facto* industry standard for signal connection. Table 2 lists the signal pins.

**TABLE 2-2: CAN CONNECTOR PINOUT (J2)**

DB9 Pin	CAN Signal Name
1	NC
2	CAN_L
3	Ground
4	NC
5	NC
6	Ground
7	CAN_H
8	NC
9	NC

## 2.1.3.2 SPECIAL CONSIDERATIONS FOR CAN

For the demo application to properly execute, the CAN port must be connected to an active CAN bus or CAN analyzer tool that provides an Acknowledge (ACK) signal to the Starter Kit. If it is not connected, the demo application's main loop will hang, waiting for an ACK signal to be received; no LIN or SENT transmissions will be sent.

The application can be modified and re-compiled to disable CAN functionality and only run the SENT and LIN portions. See [Section 3.1 “Removing CAN from the Demo Application”](#) for details.

## 2.2 RECEIVE/SLAVE MODE

Receive/Slave mode is set by pressing and releasing the  $\overline{\text{MCLR}}$  push button while simultaneously pressing and holding any of the three push button switches. The three LEDs rapidly flash in unison, then stay lit. Once they are all lit, release the held push button.

While in Receive mode, the application waits for any of the three serial interfaces to receive and process a valid message from another CAN-LIN Starter Kit running the demo application in Transmit mode, or other external source. Once processed, the LEDs will momentarily flash to indicate a valid received message, as follows:

- Valid CAN message: LED1
- Valid LIN message: LED2
- Valid SENT message: LED3

It is possible that messages sent by other sources will show a valid received message if they are the correct baud/bit rates and have the same number of data bytes transmitted as the demo application.


Messages can be received from any or all of the connected ports at once, and multiple messages will be validated.

## 2.3 UART MONITORING LOG

The demo application contains an independent message-logging UART in both Transmit and Receive mode. The UART uses ASCII-encoded serial data at 38,400 baud, 8-bit data, with 1 Start bit, 1 Stop bit and no parity (38400-8-1-1-N). The serial data is sent to I/O pin RB4 on the Expansion Connector (J3). In Transmit mode, the logger reports the current temperature ( $^{\circ}\text{C}$ ), the measured potentiometer voltage (V) and the status of each push button switch. This data is then encoded and sent over each interface (in the order of SENT, LIN, then CAN).

Figure 2-4 displays a typical logging message in Transmit mode, as viewed on a terminal application. Note that this ASCII data is not what is physically sent over the interfaces. The data sent is raw data as described in the prior sections for each interface. The data is described as local, as this is the data measured by the board about to Transmit.


**FIGURE 2-4: UART TRANSMIT LOG (TERMINAL DISPLAY)**

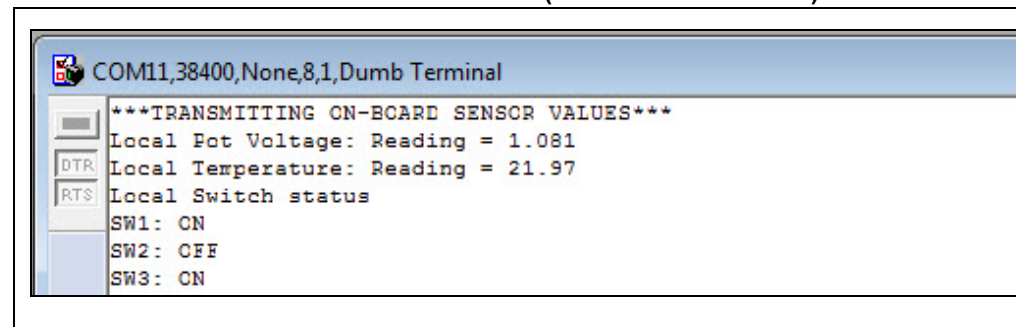

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

The UART logging code will decode the incoming messages if the board is in Receive mode. CAN and LIN messages contain ID byte fields, and the logger will display these as well. Figure 2-5 shows a typical decoded CAN message sent by another CAN-LIN Starter Kit. The first line shows that a CAN message with an SID of 0x123 (the demo application default SID) has been received.

**FIGURE 2-5: UART RECEIVE LOG (TERMINAL DISPLAY)**

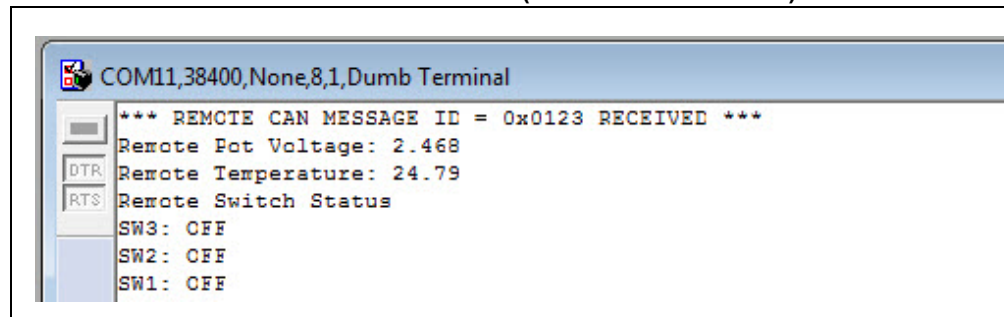

The application assumes that incoming messages in Receive mode are coming from another CAN-LIN Starter Kit, and is thus hard-coded to parse and decode its own messages. Of course, it is possible to have non-demo messages received and parsed, but the displayed data will be random; the only fields properly displayed will be the ID fields for CAN and LIN. The source code can be edited and re-compiled to parse any message, or to simply display the raw data bytes like a typical analyzer.

The CAN portion only accepts SID messages. EID messages are not handled.

## 2.3.1 Connecting the Logger To A USB Host

The +5V UART serial data present on I/O pin RB4 must somehow get to a computer terminal. The Microchip MCP2200 Breakout Module (Microchip part # ADM00393) provides one simple way to create a serial-to-USB interface. The module is available separately at the microchipDIRECT web site ([www.microchipdirect.com](http://www.microchipdirect.com)).

The Breakout Module needs only three connections to the Starter Kit board via the expansion riser (Table 2-3); none of the other ports on the Breakout Module are used. The logger can then communicate to a host computer or terminal over USB. Driver support for the MCP2200 for both Windows and Linux is available.

**TABLE 2-3: CONNECTIONS FOR THE BREAKOUT MODULE**

Breakout Board Signal	Expansion Connector Signal
RX	RB4
VDD	DVDD
G	GND

**Note:** The MCP2200 Breakout Module can operate on a VDD of either 3.3V or 5V, which is selectable by a jumper. For this application, make sure that the jumper is configured for 5V (positions 2-3).

---

## Chapter 3. Modifying the Application

---

The pre-programmed demo application for the Starter Kit can be easily modified to change its operation, or removed and replaced with your own hardware-appropriate application. To modify the application, develop new code, and/or program and debug the dsPIC33EV256GM106 DSC, you will need the latest versions of MPLAB X IDE (V2.10 or later) and MPLAB XC16 compiler (V1.23 or later). In addition, you will need the Starter Kit demo application software, available as a zipped MPLAB X IDE project file from the Microchip web site.

After unzipping the application archive and launching MPLAB X IDE, the Starter Kit Demo project folder will appear in the Projects tab in the main view. The source code for the demo application is a single C file, `33EV_main_v11.c`. (no header files).

Before starting, verify that the project is configured correctly:

1. Right click on the folder, and select **Properties**.
2. In the Project Properties window, verify that the selected target device is the dsPIC33EV256GM106.
3. If the Starter Kit is connected to the computer via the USB port, the serial number associated with this Starter Kit's PKOB should be displayed in the Hardware Tool window, located in the Project Properties window. (Note that the serial number will be unique for each PKOB.)

### 3.1 REMOVING CAN FROM THE DEMO APPLICATION

The pre-programmed Starter Kit application can be modified and re-compiled to omit the CAN portion of the demo. To do this:

1. Open the source file (`33EV_main_v11.c`) in the MPLAB X IDE editor, or in a suitable text editor.
2. Perform a text search to find the main function call for the CAN routine:  
`CAN_Transmit();`  
This code will be near line 472 of the source file.
3. Comment out that line.
4. Save and close the file.
5. Re-compile the source code, and load it into the DSC.

The demo application should now execute only the LIN and SENT portions. The overall one-second loop timing of the application will remain the same.

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

---

NOTES:

---

## Chapter 4. Troubleshooting

---

This chapter discusses common operational issues and how to resolve them.

### **1. The demo application does not run.**

The Starter Kit board must be plugged into a powered USB hub, computer or other USB Host device that supplies at least 80 mA. Start by plugging into the USB Device port, J2. LED D5 should light when VBUS is detected.

If D5 is not lit, verify that the USB Host side port is functional.

Verify that Current Measurement Shunt JP1 is in place.

The default application requires that the Starter Kit be connected to an active CAN bus or CAN analyzer. If it not connected, the demo will hang in its main loop and fail to run at all. If a CAN bus or analyzer is not available, it will be necessary to disable the CAN portion of the application. See [Section 3.1 “Removing CAN from the Demo Application”](#) for how to do this.

### **2. LIN (or SENT) data cannot be detected by the external bus analyzers.**

Verify that the Signal and Ground wires (and Power for LIN) for the affected protocol are connected to the Starter Kit correctly. Note that for the LIN protocol, different connections are used when the Starter Kit is in Transmit or Receive mode.

For LIN, verify that the position of jumper J1 is in the proper position for the Starter Kit's current mode.

For SENT, verify that jumper JP2 is installed, enabling the pull-up resistor.

### **3. The Starter Kit is correctly connected to an external CAN bus or CAN Analyzer, but the external device is having problems receiving CAN messages from the Starter Kit.**

Verify that the CAN bus is properly terminated. If there are only two devices connected (e.g., the Starter Kit and an analyzer), verify that the CAN terminating resistor is enabled (jumper J7 is installed), and that the other device is properly terminated. If there are more than two devices, verify that two *and only two* are terminated.

Verify that the CAN baud rate is set at 250 kbps. When using the CAN analyzer software provided with the Microchip CAN Bus Analyzer, use the Setup dialog ([Setup > Hardware Setup](#)) to check and/or change the setting. (For other CAN analyzer packages, refer to the instructions provided with the software.)

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

---

NOTES:

---

## **Appendix A. Starter Kit Schematics**

---

The following schematic diagrams (Revision 2.0) are included in this appendix:

**Application:**


- [Figure A-1](#): Application DSC and Associated Components

**Programmer/Debugger:**


- [Figure A-2](#): PICkit On Board Programmer/Debugger

# dsPIC33EV 5V CAN-LIN Starter Kit User's Guide

**FIGURE A-1: STARTER KIT, SHEET 1 (dsPIC33EV256GM106-SIDE COMPONENTS)**

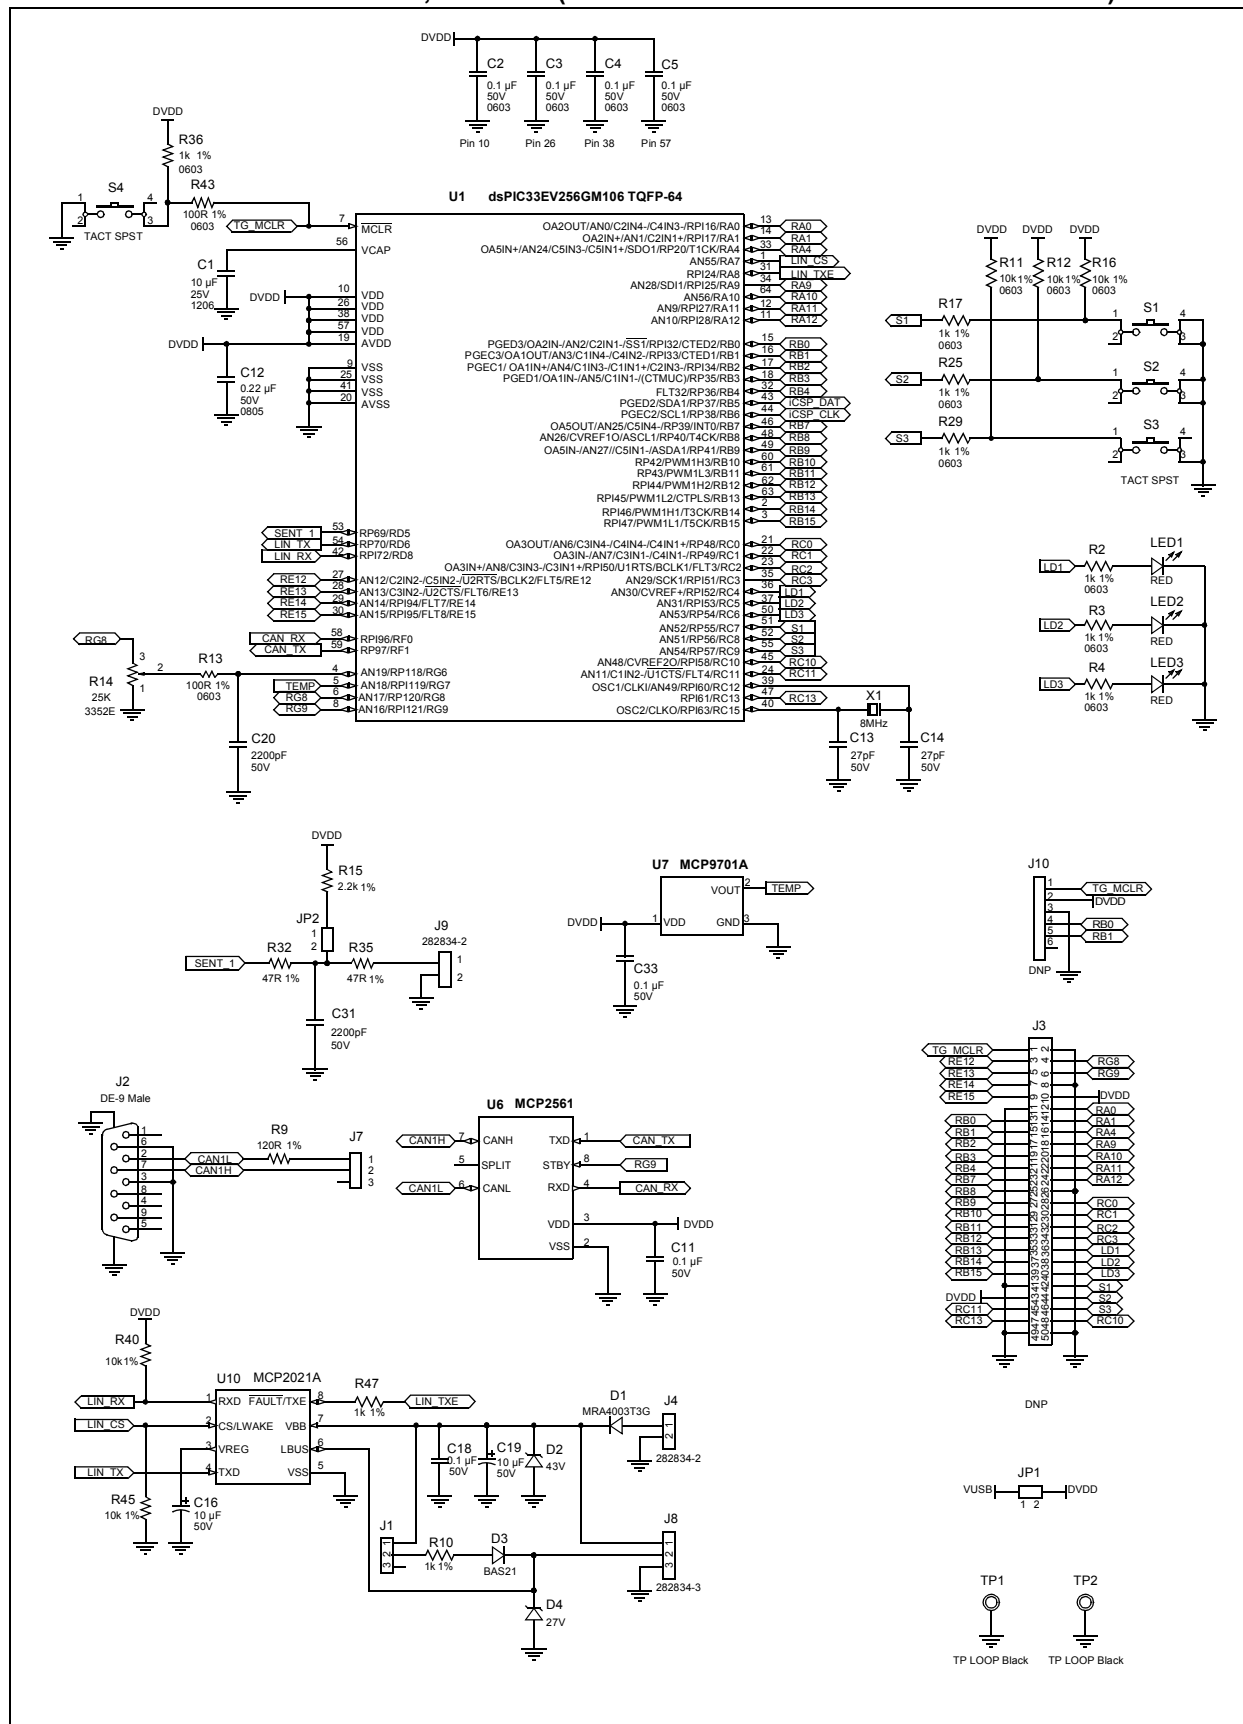

**FIGURE A-2: STARTER KIT, SHEET 2 (PICkit™ ON-BOARD PROGRAMMER)**

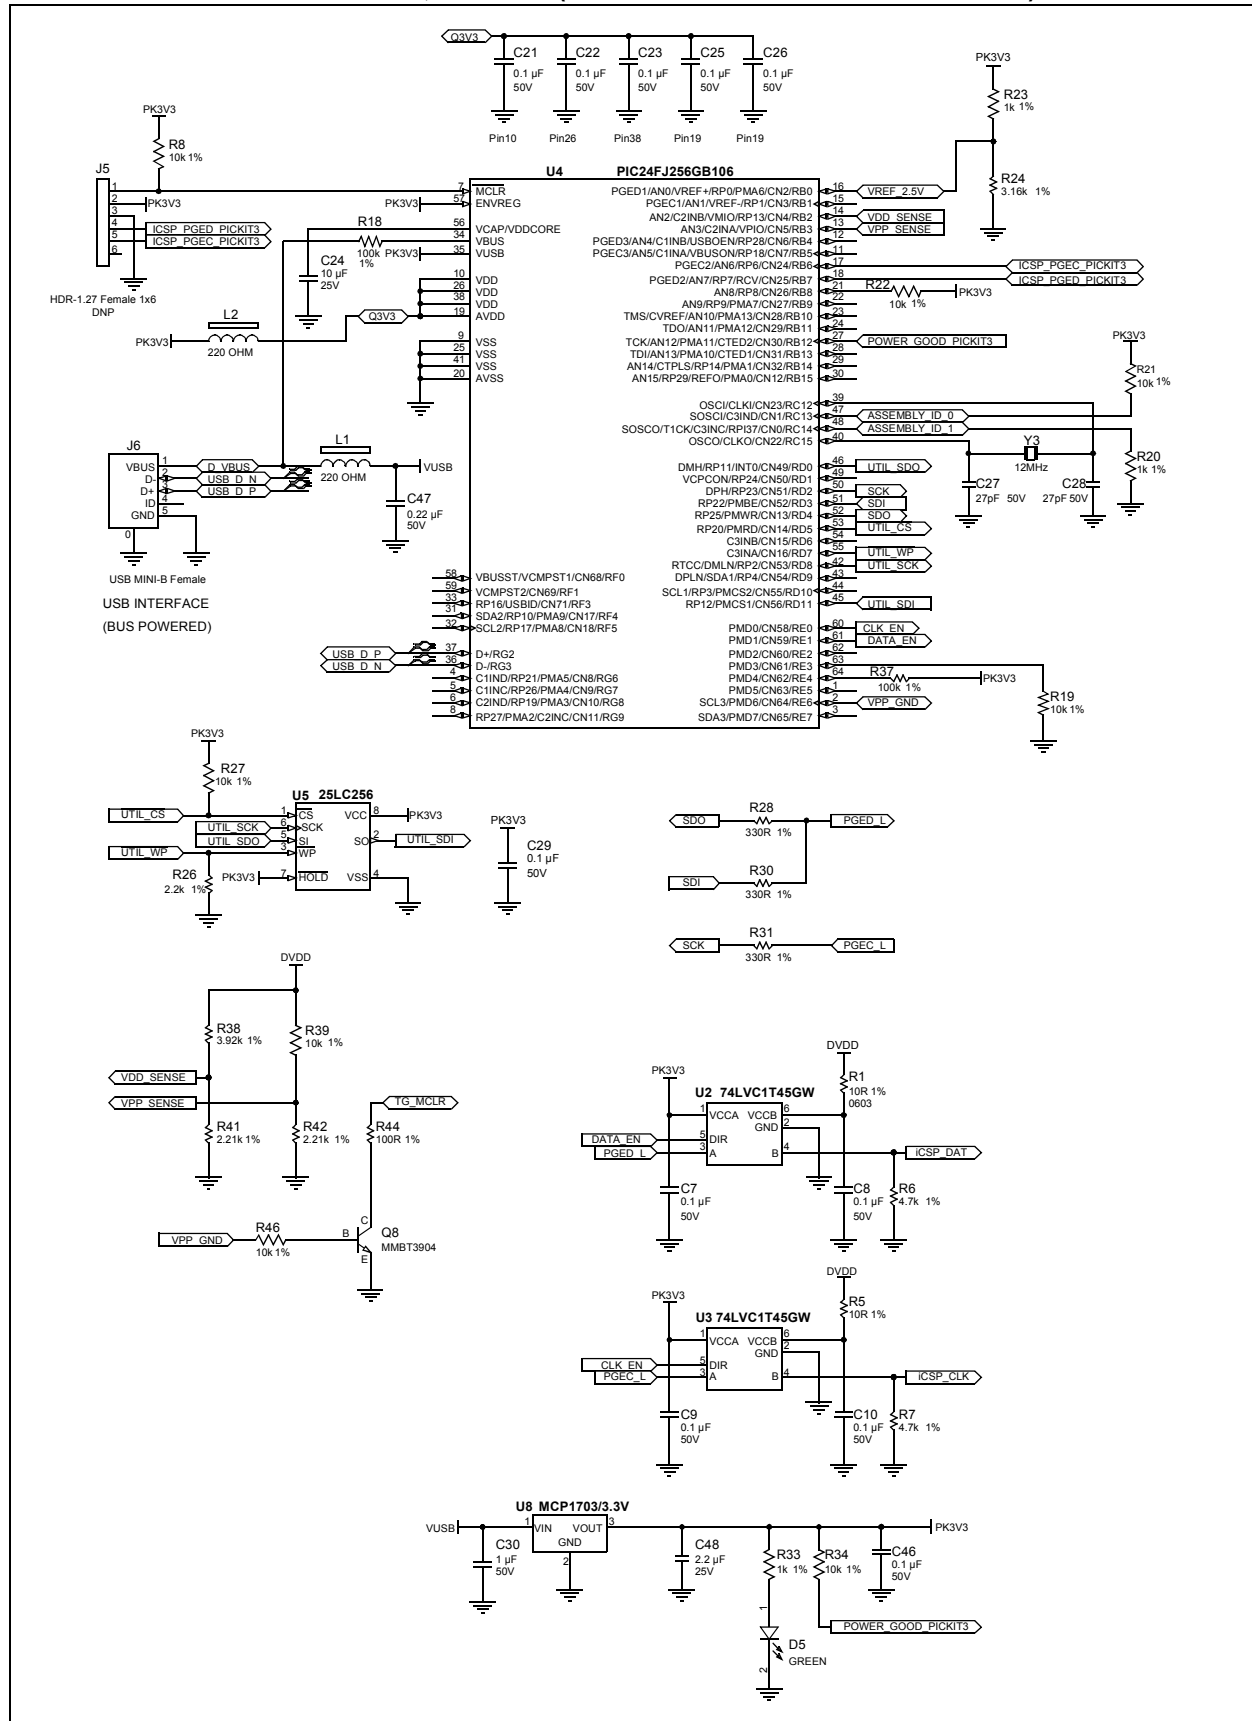

NOTES:

## Index

### **C**

#### **CAN**

Data Transmission Formatting .....	23
Hardware Interface .....	24
Removing from the Demo Application .....	28
Special Considerations .....	24

Current Measurement Shunt .....	16
---------------------------------	----

Customer Notification Service .....	10
-------------------------------------	----

Customer Support .....	11
------------------------	----

### **D**

Demonstration Application .....	19
---------------------------------	----

Device Driver .....	17
---------------------	----

#### **Documentation**

Conventions .....	8
-------------------	---

Layout .....	7
--------------	---

dsPIC33EV256GM106 DSC .....	15
-----------------------------	----

### **E**

Expansion Breakout Connector .....	16
------------------------------------	----

### **H**

#### **Hardware Connections**

CAN .....	24
-----------	----

LIN .....	22
-----------	----

SENT .....	21
------------	----

### **I**

ICSP Header .....	15
-------------------	----

Internet Address .....	10
------------------------	----

### **L**

#### **LIN**

Data Transmission Formatting .....	21
------------------------------------	----

Hardware Interface .....	22
--------------------------	----

### **M**

MCLR Push Button .....	15
------------------------	----

Microchip Internet Web Site .....	10
-----------------------------------	----

Modifying the Application .....	27
---------------------------------	----

### **P**

PICkit On Board (PKOB) .....	15
------------------------------	----

Potentiometer .....	15
---------------------	----

### **R**

Reading, Recommended .....	9
----------------------------	---

Removing CAN from the Application .....	28
---	----

### **S**

Schematic Diagrams .....	31–33
--------------------------	-------

#### **SENT**

Data Transmission Formatting .....	20
------------------------------------	----

Hardware Interface .....	21
--------------------------	----

### **T**

Temperature Sensor .....	16
--------------------------	----

Transmit/Master Mode .....	19
----------------------------	----

CAN Data .....	23
----------------	----

LIN Data .....	21
----------------	----

SENT .....	20
------------	----

Troubleshooting .....	29
-----------------------	----

### **U**

UART Monitoring Log .....	25
---------------------------	----

Connecting to a USB Host .....	26
--------------------------------	----

USB Port .....	15
----------------	----

User Push Buttons and LEDs .....	15
----------------------------------	----

### **W**

Warranty Registration .....	9
-----------------------------	---

WWW Address .....	10
-------------------	----

## Worldwide Sales and Service

### AMERICAS

**Corporate Office**  
2355 West Chandler Blvd.  
Chandler, AZ 85224-6199  
Tel: 480-792-7200  
Fax: 480-792-7277  
Technical Support:  
<http://www.microchip.com/support>  
Web Address:  
[www.microchip.com](http://www.microchip.com)

**Atlanta**  
Duluth, GA  
Tel: 678-957-9614  
Fax: 678-957-1455

**Austin, TX**  
Tel: 512-257-3370

**Boston**  
Westborough, MA  
Tel: 774-760-0087  
Fax: 774-760-0088

**Chicago**  
Itasca, IL  
Tel: 630-285-0071  
Fax: 630-285-0075

**Cleveland**  
Independence, OH  
Tel: 216-447-0464  
Fax: 216-447-0643

**Dallas**  
Addison, TX  
Tel: 972-818-7423  
Fax: 972-818-2924

**Detroit**  
Novi, MI  
Tel: 248-848-4000

**Houston, TX**  
Tel: 281-894-5983

**Indianapolis**  
Noblesville, IN  
Tel: 317-773-8323  
Fax: 317-773-5453

**Los Angeles**  
Mission Viejo, CA  
Tel: 949-462-9523  
Fax: 949-462-9608

**New York, NY**  
Tel: 631-435-6000

**San Jose, CA**  
Tel: 408-735-9110

**Canada - Toronto**  
Tel: 905-673-0699  
Fax: 905-673-6509

### ASIA/PACIFIC

**Asia Pacific Office**  
Suites 3707-14, 37th Floor  
Tower 6, The Gateway  
Harbour City, Kowloon  
Hong Kong  
Tel: 852-2401-1200  
Fax: 852-2401-3431

**Australia - Sydney**  
Tel: 61-2-9868-6733  
Fax: 61-2-9868-6755

**China - Beijing**  
Tel: 86-10-8569-7000  
Fax: 86-10-8528-2104

**China - Chengdu**  
Tel: 86-28-8665-5511  
Fax: 86-28-8665-7889

**China - Chongqing**  
Tel: 86-23-8980-9588  
Fax: 86-23-8980-9500

**China - Hangzhou**  
Tel: 86-571-8792-8115  
Fax: 86-571-8792-8116

**China - Hong Kong SAR**  
Tel: 852-2943-5100  
Fax: 852-2401-3431

**China - Nanjing**  
Tel: 86-25-8473-2460  
Fax: 86-25-8473-2470

**China - Qingdao**  
Tel: 86-532-8502-7355  
Fax: 86-532-8502-7205

**China - Shanghai**  
Tel: 86-21-5407-5533  
Fax: 86-21-5407-5066

**China - Shenyang**  
Tel: 86-24-2334-2829  
Fax: 86-24-2334-2393

**China - Shenzhen**  
Tel: 86-755-8864-2200  
Fax: 86-755-8203-1760

**China - Wuhan**  
Tel: 86-27-5980-5300  
Fax: 86-27-5980-5118

**China - Xian**  
Tel: 86-29-8833-7252  
Fax: 86-29-8833-7256

**China - Xiamen**  
Tel: 86-592-2388138  
Fax: 86-592-2388130

**China - Zhuhai**  
Tel: 86-756-3210040  
Fax: 86-756-3210049

### ASIA/PACIFIC

**India - Bangalore**  
Tel: 91-80-3090-4444  
Fax: 91-80-3090-4123

**India - New Delhi**  
Tel: 91-11-4160-8631  
Fax: 91-11-4160-8632

**India - Pune**  
Tel: 91-20-3019-1500

**Japan - Osaka**  
Tel: 81-6-6152-7160  
Fax: 81-6-6152-9310

**Japan - Tokyo**  
Tel: 81-3-6880-3770  
Fax: 81-3-6880-3771

**Korea - Daegu**  
Tel: 82-53-744-4301  
Fax: 82-53-744-4302

**Korea - Seoul**  
Tel: 82-2-554-7200  
Fax: 82-2-558-5932 or  
82-2-558-5934

**Malaysia - Kuala Lumpur**  
Tel: 60-3-6201-9857  
Fax: 60-3-6201-9859

**Malaysia - Penang**  
Tel: 60-4-227-8870  
Fax: 60-4-227-4068

**Philippines - Manila**  
Tel: 63-2-634-9065  
Fax: 63-2-634-9069

**Singapore**  
Tel: 65-6334-8870  
Fax: 65-6334-8850

**Taiwan - Hsin Chu**  
Tel: 886-3-5778-366  
Fax: 886-3-5770-955

**Taiwan - Kaohsiung**  
Tel: 886-7-213-7830

**Taiwan - Taipei**  
Tel: 886-2-2508-8600  
Fax: 886-2-2508-0102

**Thailand - Bangkok**  
Tel: 66-2-694-1351  
Fax: 66-2-694-1350

### EUROPE

**Austria - Wels**  
Tel: 43-7242-2244-39  
Fax: 43-7242-2244-393

**Denmark - Copenhagen**  
Tel: 45-4450-2828  
Fax: 45-4485-2829

**France - Paris**  
Tel: 33-1-69-53-63-20  
Fax: 33-1-69-30-90-79

**Germany - Dusseldorf**  
Tel: 49-2129-3766400

**Germany - Munich**  
Tel: 49-89-627-144-0  
Fax: 49-89-627-144-44

**Germany - Pforzheim**  
Tel: 49-7231-424750

**Italy - Milan**  
Tel: 39-0331-742611  
Fax: 39-0331-466781

**Italy - Venice**  
Tel: 39-049-7625286

**Netherlands - Drunen**  
Tel: 31-416-690399  
Fax: 31-416-690340

**Poland - Warsaw**  
Tel: 48-22-3325737

**Spain - Madrid**  
Tel: 34-91-708-08-90  
Fax: 34-91-708-08-91

**Sweden - Stockholm**  
Tel: 46-8-5090-4654

**UK - Wokingham**  
Tel: 44-118-921-5800  
Fax: 44-118-921-5820