



FLORENCE-1R-MAXI-WG assembly

Slide the lens into the aluminium profile and make sure the whole lens is evened out, so that every hole reserved for connectors are hidden inside the profile.

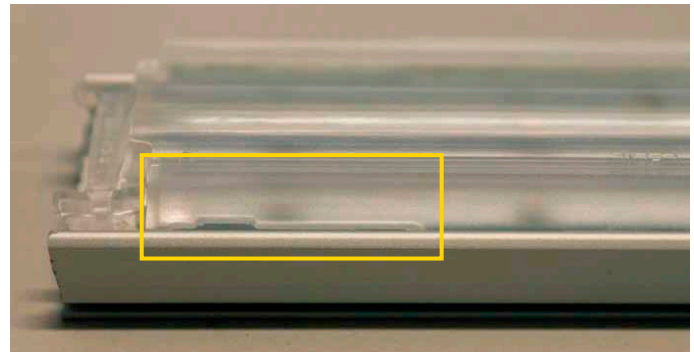


The fastening clips will be installed on both sides of every lens.

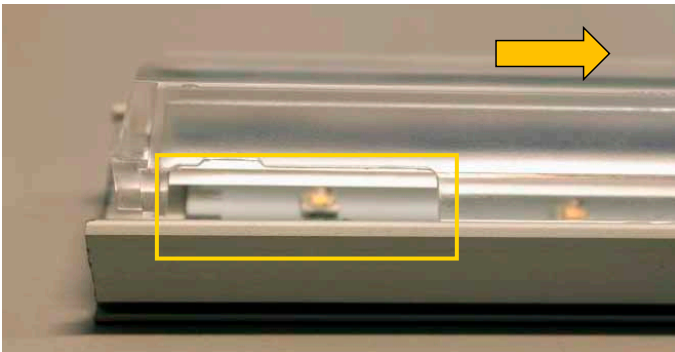

Press the clips inside the profile with the help of a flat headed screwdriver.

It may be easier to place one side to its place at first, and then press the other side down.

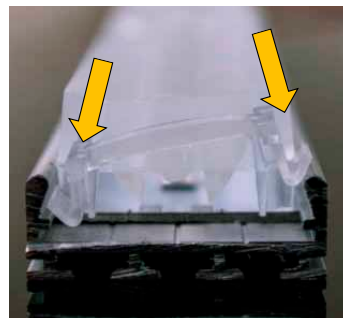

These small arrows on the other side of the lens show direction of the light beam, so make sure they are pointing towards the wall.

