

## Content

<b>1</b>	<b>EIA-RS-485 Standard .....</b>	<b>2</b>
1.1	Coding .....	2
1.2	Connections.....	2
1.3	Topology.....	2
1.4	System requirements .....	2
<b>2</b>	<b>Coding and addressing .....</b>	<b>3</b>
<b>3</b>	<b>Mapping.....</b>	<b>4</b>
3.1	Address space.....	4
3.2	Used addresses.....	5
3.3	Used Syntax .....	6
<b>4</b>	<b>Device information .....</b>	<b>7</b>
4.1	Device identification .....	7
<b>5</b>	<b>Measurements .....</b>	<b>8</b>
5.1	General instantaneous values.....	8
5.2	System analysis.....	9
5.2.1	Instantaneous values of harmonic analysis (up to version 1.0x.807) .....	9
5.2.2	Instantaneous values of harmonic analysis (from version 1.0x.875) .....	10
5.2.3	Instantaneous values of imbalance analysis acc. Fortescue .....	11
5.2.4	Instantaneous values of extended power analysis.....	11
5.3	Minimum / maximum values of system quantities.....	12
5.4	Minimum / maximum values of system analysis .....	13
5.4.1	Maximum values of harmonic analysis (up to version 1.0x.807) .....	13
5.4.2	Maximum values of harmonic analysis (from version 1.0x.875) .....	14
5.4.3	Maximum values of imbalance analysis acc. Fortescue .....	15
5.4.4	Maximum values of extended power analysis.....	15
5.5	Mean-values: Trend, Last values, minimum / maximum values .....	16
5.5.1	Mean values of power (standard quantities), averaging interval t1 .....	16
5.5.2	User-defined mean values, averaging interval t2.....	16
5.5.3	Bimetal current, averaging interval t3.....	16
5.6	Resetting of min/max values .....	17
5.7	Present state of limit values .....	17
5.8	Present state of monitoring functions .....	17
5.9	Summary alarm .....	17
<b>6</b>	<b>Energy meters.....</b>	<b>18</b>
6.1	Meter contents of standard quantities .....	18
6.2	Meter contents of user-defined quantities .....	18
6.3	Present tariff of meters .....	19
<b>7</b>	<b>Operating hour counters .....</b>	<b>19</b>
<b>8</b>	<b>Remote interface .....</b>	<b>20</b>

Camille Bauer Metrawatt AG reserves the right to change the content of this document at any time without notice.

The basics of the **MODBUS®** communication are summarized in the document "**Modbus Basics. PDF**" (see documentation CD or on our website <http://www.camillebauer.com>)

## GMC INSTRUMENTS

Camille Bauer Metrawatt AG  
Aargauerstrasse 7  
CH-5610 Wohlen / Switzerland  
Phone: +41 56 618 21 11  
Telefax: +41 56 618 35 35  
E-Mail: info@cbmag.com  
<http://www.camillebauer.com>




# 1 EIA-RS-485 Standard

The EIA-RS 485 standard defines the physical layer of the Modbus interface.


## 1.1 Coding

The data will be transferred serially via the 2-wire bus. The information is coded in NRZ code as a differential signal. The positive polarity signals a logical 1, the negative polarity signals a logical 0.

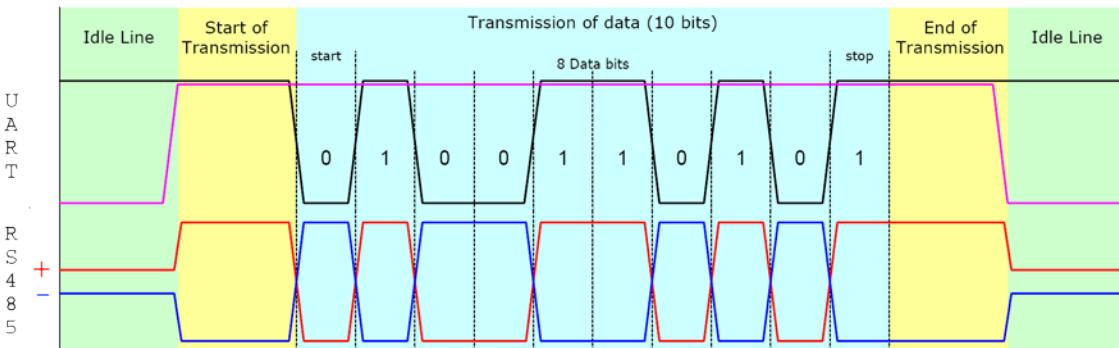


## 1.2 Connections

We recommend using a shielded and twisted two-wire bus cable. Shielding improves the electromagnetic compatibility (EMC). The notation of the wires A resp. B is contradictory depending on the information source.

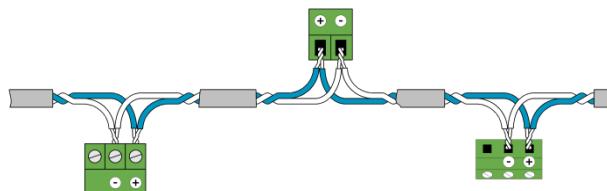


The potential difference of all bus members must not exceed  $\pm 7V$ . Therefore the use of a shield or of a third wire (ref line) for potential equalization is recommended.

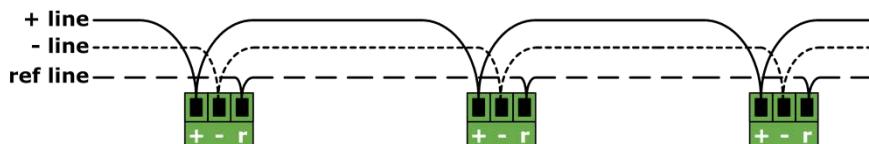

## 1.3 Topology

On both ends of the bus cable a termination resistor must be provided. In addition to the bus termination resistors a resistor  $R_U$  (Pull-up) must be connected to the supply voltage and a resistor  $R_D$  (Pull down) to the reference potential. By means of these two resistors a defined idle state of the line is ensured if no bus member is sending data.

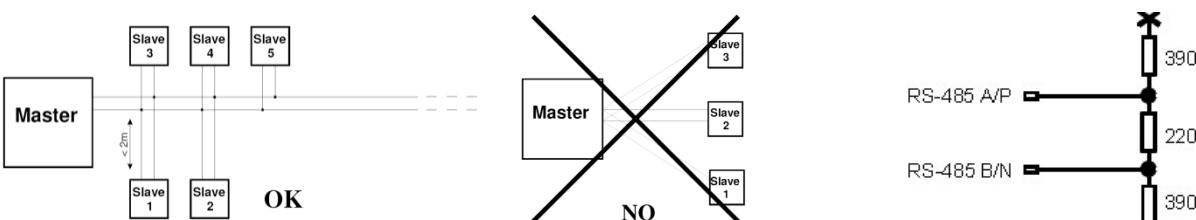

## 1.4 System requirements

Cable	: twisted 2-wire line, characteristic impedance 100 up to 130 $\Omega$ , min. 0.22mm <sup>2</sup> (24AWG)
Cable length	: maximum of 1'200m, depending on the transfer rate
Members	: maximum of 32 per segment
Baud rate	: 2'400, 4'800, 9'600, 19'200, 38'400, 57'600, 115'200 Baud
Mode	: 11 Bit format - 2 stop bits, no parity or 1 stop bit with odd/even parity 10 Bit format - 1 stop bit, no parity (possible, but not in accordance with Modbus standard)

## 2 Coding and addressing

### Addressing

Modbus groups different data types as references. For addressing the data one have to know that Modbus starts the register numeration at 1, but the addressing at 0.

*Example: Measurement U1N on register address 102*

- Address declaration in value table (see chapter 5.1): (4x)102
- Real address: 102 (offset 1)
- Address used in telegram transmission: 101 (offset 0)

### Serializing

The Modbus specification defines the telegrams to be sequences of data bytes. For the correct serializing of the bytes (MSB or LSB First), the appropriate physical layer (RS485, Ethernet) is responsible. The RS485 (UART, COM) transmits the „Least Significant Bit“ first (LSB First) and adds the synchronization and parity bits (start bit, parity bit and stop bit).

Start	1	2	3	4	5	6	7	8	Par	Stop
-------	---	---	---	---	---	---	---	---	-----	------

### Reading bit information: Function 0x01, Read Coil Status

Bits are represented within a byte in a conventional way, MSB (Bit 7) on the most left and LSB (Bit 0) most right (0101'1010 = 0x5A = 90).

*Example: Reading coils 100 up to 111 of device 17*

Byte	Request	Answer
1	Slave address	0x11
2	Function code	0x01
3	Start address	0x00
4	99 = Coil 100	0x63
5	Number of registers:	0x00
6	100...111 => 12	0x0C
7	Checksum	crc_l
8	CRC16	crc_h

The start address of the request plus the bit position in the answer bytes corresponds to the coil address. Started bytes are filled with zeros.

	Hex	Binary	Coil 8	Coil 7	Coil 6	Coil 5	Coil 4	Coil 3	Coil 2	Coil 1
Byte 1	0x53	01010011b	OFF	ON	OFF	ON	OFF	OFF	ON	ON

	Hex	Binary	-	-	-	-	Coil 12	Coil 11	Coil 10	Coil 9
Byte 2	0x03	00000011b	-	-	-	-	OFF	OFF	ON	ON


## Reading float numbers (REAL): Function 0x03, Read Holding Register

There is no representation for floating point numbers in the Modbus specification. But as a matter of principle any desired data structure can be casted to a sequence of 16Bit registers.


The IEEE 754 standard as the most often used standard for the representation of floating numbers is applied. 32 and 64 Bit numbers are used:

- The first register contains the bits 0 – 15
- The second register contains the bits 16 – 31
- The third register contains the bits 32 – 47
- The fourth register contains the bits 48 – 63

32-Bit Float (REAL32)

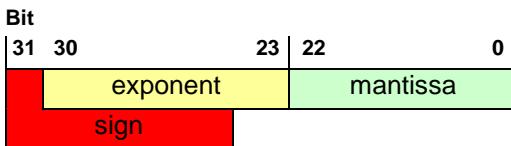

64-Bit Float (REAL64)

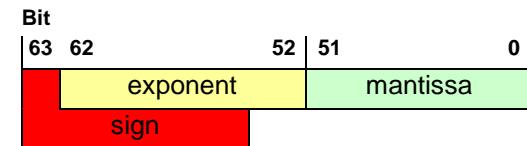

Example: Reading voltage U1N on register address 102 of device 17.

Byte	Request	Answer
1	Slave address	0x11
2	Function code	0x03
3	Start address	0x00
4	(102-1)	0x65
5	Number of registers:	0x00
6	2	0x02
7	Checksum	crc_l
8	CRC16	crc_h
9		CRC16

0x436B		0xE878	
0	1 0 0 0 0 0 1 1 0	1 1 0 1 0 1 1 1 1 0 1 0 0 0 0 1 1 1 0 0 0	
+ Exponent: 134-127=7	Mantissa=1.1101011110100001111000b=1,84303188323974609375d		

$$\rightarrow U1N = +1,84303188323974609375 \cdot 2^7 = 234,908V$$

## 3 Mapping

### 3.1 Address space

The address space may be divided in 4 address spaces in accordance with the 4 data types.

Space	Access	Function code	
Coil / 0x	readable / writable	0x01 0x05 0x0F	Read Coil Status Force Single Coil Force Multiple Coils
Discrete input / 1x	read only	0x02	Read Input Status <sup>1)</sup>
Input register / 3x	read only	0x04	Read Input Register <sup>1)</sup>
Holding register / 4x	readable / writable	0x03 0x06 0x10	Read Holding Register Force Single Register <sup>1)</sup> Preset Multiple Register

1) not implemented

To reduce the number of commands the device image has been mapped using „Holding register“ if possible. Quantities normally addressed as a single bit information are implemented as „Coil“ or „Discrete input“.

### 3.2 Used addresses

4x addresses	# Reg.	Description	Access
100 – 193	94	Instantaneous values general	R
230 – 247	18	Instantaneous values THD/TDD (up to FW version 1.0x.807)	R
250 – 837	588	Instantaneous values of harmonics (up to FW version 1.0x.807)	R
850 – 885	36	Instantaneous values of imbalance analysis acc. Fortescue	R
900 – 947	48	Instantaneous values of extended power analysis	R
1000 – 1081	82	Timestamps of minimum/maximum of instantaneous values	R
1100 – 1181	82	Minimum/maximum of instantaneous values	R
1200 – 1811	612	Maximum values of harmonic analysis	R
1850 – 1865	16	Maximum values of imbalance analysis acc. Fortescue	R
1870 – 1909	40	Timestamps of maximum values of extended power analysis	R
1920 – 1959	40	Maximum values of extended power analysis	R
2000 – 2099	100	Power mean-values: Trend, last value, minimum / maximum value	R
2150 – 2293	144	User-defined mean-values: Trend, last value, minimum / maximum	R
2300 – 2323	24	Bimetal current: Present value, timestamp and slave-pointer	R
2600 – 2631	32	Reading meter contents of standard quantities (REAL64)	R
2640 – 2735	48	Reading meter contents of user-defined quantities (REAL64)	R
2740 – 2741	2	Reading AM2000 operating hour counter	R
2742 – 2747	6	Reading free operating hour counters 1...3	R
2750 – 2781	32	Setting meter contents of standard quantities	W
2790 – 2885	48	Setting meter contents of user-defined quantities	W
2900 – 2931	32	Setting analog outputs (remote control)	W
3100 – 3567	468	Harmonics voltage/current (50.-89.) (up to FW version 1.0x.807)	R
3600 – 4067	468	Maximum values of harmonics (50.-89.) (up to FW version 1.0x.807)	R
4100 – 4115	16	Reading meter contents of standard quantities (REAL32)	R
4120 – 4167	48	Reading meter contents of user-defined quantities (REAL32)	R
4200 – 4229	30	Instantaneous values THD/TDD (from FW version 1.0x.875)	R
4230 – 6209	1980	Instantaneous values of harmonics (from FW version 1.0x.875)	R
6250 – 6271	22	Timestamps min/max values harmonic analysis (from FW version 1.0x.875)	R
6300 – 6321	22	Maximum values THD /TDD (from FW version 1.0x.875)	R
6326 – 8301	1976	Maximum values harmonics (from FW version 1.0x.875)	R

0x addresses	# Coils	Description	Access
1 – 5	5	Reset of min/max values group 1...5	W
20	1	Reset of summary alarm	W
30 – 32	3	Reset of operating hour counters 1...3	W
50 – 59	10	Remote I/O	W
100 – 111	12	State of limit values 1-12	R
140 – 147	8	State of monitoring functions 1...8	R
170 – 171	2	State of summary alarm	R
180	1	State of energy meter tariff	R

**Access:** R = readable, W = writable

### 3.3 Used Syntax

<b>Address 4x / 0x</b>	Start address of described data block (Register, Coil or Input Status)
<b>Time</b>	4x register address of a timestamp, typically of a minimum / maximum value
<b>Value</b>	4x register address of a measured value, typically for minimum / maximum values
<b>Reset</b>	Coil 0x register address to reset a corresponding measured quantity
<b>Name</b>	Unique name of a variable or structure
<b>Type</b>	<b>Data type of variable</b> UINT32: 32-bit integer without sign REAL32 (32-bit float) REAL64 (64-bit float) CHAR[...]:String with/without termination (NULL) TIME: seconds since 1970/1/1 (UINT32) COIL: Bit information
<b>Default</b>	Value when delivering, after a hardware reset or if quantity is not available
<b>Description</b>	Description of the quantity
14   2L   3G   3P   3U   3A   4U   4O	Availability of the measured quantities, depending on the connected system 14 = single phase system or 4-wire balanced load 2L = two phase system (split phase) 3G = 3-wire balanced load 3P = 3-wire balanced load, phase shift (2U,1I) <b>available for AM3000 only</b> 3U = 3-wire unbalanced load 3A = 3-wire balanced load, Aron connection 4U = 4-wire unbalanced load 4O = 4-wire unbalanced load, Open-Y connection

## 4 Device information

### 4.1 Device identification

The type of the connected device may be identified using the function **Report Slave ID** (0x11).

Device address	Function	CRC	
ADDR	0x11	Low-Byte	High-Byte

Device answer:

Device address	Function	#Bytes	Device ID	Data1	Data2	CRC	
ADDR	0x11	3	<sid>			Low-Byte	High-Byte

0x01	0x00	VR660	Temperature controller
0x02	0x00	A200R	Display unit temperature controller
0x03	0x01	CAM	Measurement unit power quantities
0x04	0xFF	APLUS	Multifunctional display unit
0x05	0x00	V604s	Universal transmitter
0x05	0x01	VB604s	Universal transmitter
0x05	0x02	VC604s	Universal transmitter
0x05	0x03	VQ604s	Universal transmitter
0x07	0x00	VS30	Temperature transmitter
0x08	0x00	DM5S	Multi-transducer DM5S
0x08	0x01	DM5F	Multi-transducer DM5F
0x0A	0xFF	HW730	Angular transmitter
0x0B	0xFF	AM1000	Multifunctional display unit
0x0C	0xFF	AM2000	Multifunctional display unit
0x0D	0xFF	AM3000	Multifunctional display unit
0x0E	0xFF	PQ3000	Power quality display unit

The value for Data2 is reserved for future extensions.

## 5 Measurements

### 5.1 General instantaneous values

Address 4x	Name	14	2L	3G	3P	3U	3A	4U	4O	Type	Description
100	U	●	●	-	-	●	-	-	-	REAL32	System voltage [V]
102		-	●	-	-	-	-	●	●		Voltage phase L1 to N [V]
104		-	●	-	-	-	-	●	●		Voltage phase L2 to N [V]
106		-	-	-	-	-	-	●	●		Voltage phase L3 to N [V]
108		-	-	●	●	-	●	●	●		Voltage phase L1 to L2 [V]
110		-	-	●	●	-	●	●	●		Voltage phase L2 to L3 [V]
112		-	-	●	●	-	●	●	●		Voltage phase L3 to L1 [V]
114		-	-	-	-	-	-	●	●		Zero displacement voltage in 4-wire systems [V]
116	I	●	-	●	●	●	-	-	-	REAL32	System current [A]
118		-	●	-	-	-	●	●	●		Current in phase L1 [A]
120		-	●	-	-	-	●	●	●		Current in phase L2 [A]
122		-	-	-	-	-	●	●	●		Current in phase L3 [A]
124		-	●	-	-	-	-	●	●		Neutral current [A]
126	P	●	●	●	●	●	●	●	●	REAL32	Active power system [W]
128		-	●	-	-	-	-	●	●		Active power phase 1 (L1 – N) [W]
130		-	●	-	-	-	-	●	●		Active power phase 2 (L2 – N) [W]
132		-	-	-	-	-	-	●	●		Active power phase 3 (L3 – N) [W]
134	Q	●	●	●	●	●	●	●	●	REAL32	Reactive power system [var]
136		-	●	-	-	-	-	●	●		Reactive power phase 1 (L1 – N) [var]
138		-	●	-	-	-	-	●	●		Reactive power phase 2 (L2 – N) [var]
140		-	-	-	-	-	-	●	●		Reactive power phase 3 (L3 – N) [var]
142	S	●	●	●	●	●	●	●	●	REAL32	Apparent power system S [VA]
144		-	●	-	-	-	-	●	●		Reactive power phase 1 (L1 – N) [VA]
146		-	●	-	-	-	-	●	●		Reactive power phase 2 (L2 – N) [VA]
148		-	-	-	-	-	-	●	●		Reactive power phase 3 (L3 – N) [VA]
150	F	●	●	●	●	●	●	●	●	REAL32	System frequency [Hz]
152	PF	●	●	●	●	●	●	●	●	REAL32	PF = P / S, Power factor system
154		-	●	-	-	-	-	●	●		Power factor phase 1 (L1 – N)
156		-	●	-	-	-	-	●	●		Power factor phase 2 (L2 – N)
158		-	-	-	-	-	-	●	●		Power factor phase 3 (L3 – N)
160	QF	●	●	●	●	●	●	●	●	REAL32	QF = Q / S, Reactive power factor system
162		-	●	-	-	-	-	●	●		Reactive power factor phase 1 (L1 – N)
164		-	●	-	-	-	-	●	●		Reactive power factor phase 2 (L2 – N)
166		-	-	-	-	-	-	●	●		Reactive power factor phase 3 (L3 – N)
168	LF	●	●	●	●	●	●	●	●	REAL32	sign(Q) · (1 – abs(PF)), Load factor system
170		-	●	-	-	-	-	●	●		Load factor phase 1 (L1 – N)
172		-	●	-	-	-	-	●	●		Load factor phase 2 (L2 – N)
174		-	-	-	-	-	-	●	●		Load factor phase 3 (L3 – N)
176	U_MEAN	-	●	●	●	-	●	●	-	REAL32	Average value of voltages ( $U_{1x}+U_{2x}+U_{3x}$ )/3 [V]
178		-	●	-	-	-	-	●	●		Average value of currents ( $I_1+I_2+I_3$ )/3 [A]
180	UF12	-	-	●	●	-	●	●	●	REAL32	Phase angle voltage U1-U2 [°]
182		-	-	●	●	-	●	●	●		Phase angle voltage U2-U3 [°]
184		-	-	●	●	-	●	●	●		Phase angle voltage U3-U1 [°]
186	DEV_UMAX	-	●	●	●	-	●	●	●	REAL32	Max. deviation from the average value of voltages [V]
188	DEV_IMAX	-	●	-	-	-	●	●	●	REAL32	Max. deviation from the average value of currents [A]
190	IMS	●	●	●	●	●	●	●	●	REAL32	Average value of currents with sign of P [A]
192	IPE <sup>1)</sup>	-	-	-	-	-	-	●	●	REAL32	Earth current [A]

<sup>1)</sup> Available for AM3000 only

## 5.2 System analysis

### 5.2.1 Instantaneous values of harmonic analysis (up to version 1.0x.807)

Address 4x	Name	14	2L	3G	3P	3U	3A	4U	4O	Type	Description
230	THD_U1x	U	U1N	U12	U	U12	U12	U1N	U1N	REAL32	Total Harmonic Distortion [%]
		-	U2N	U23	-	U23	U23	U2N	U2N		Total Harmonic Distortion [%]
		-	-	U31	-	U31	U31	U3N	U3N		Total Harmonic Distortion [%]
236	TDD_I1	I	I1	I	I	I1	I1	I1	I1	REAL32	Total Demand Distortion [%]
		-	I2	-	-	I2	I2	I2	I2		Total Demand Distortion [%]
		-	-	-	-	I3	I3	I3	I3		Total Demand Distortion [%]
242	THD_I1	I	I1	I	I	I1	I1	I1	I1	REAL32	Total Harmonic Distortion [%]
		-	I2	-	-	I2	I2	I2	I2		Total Harmonic Distortion [%]
		-	-	-	-	I3	I3	I3	I3		Total Harmonic Distortion [%]

► THD\_U: Harmonic content related to the fundamental of the RMS value of the voltage

► TDD\_I: Harmonic content related to the **rated value** of the current

► THD\_I: Harmonic content related to the fundamental of the RMS value of the current

Address 4x	Name	14	2L	3G	3G	3U	3A	4U	4O	Type	Description
250	H2_U1X ..... H50_U1X	U	U1N	U12	U	U12	U12	U1N	U1N	REAL32	Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]
		-	U2N	U23	-	U23	U23	U2N	U2N		Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]
348	H2_U2X ..... H50_U2X	-	U2N	U23	-	U23	U23	U2N	U2N	REAL32	Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]
		-	-	U31	-	U31	U31	U3N	U3N		Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]
446	H2_U3X ..... H50_U3X	-	-	U31	-	U31	U31	U3N	U3N	REAL32	Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]
		I	I1	I	I	I1	I1	I1	I1		Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]
544	H2_I1X ..... H50_I1X	I	I1	I	I	I1	I1	I1	I1	REAL32	Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]
		-	I2	-	-	I2	I2	I2	I2		Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]
642	H2_I2X ..... H50_I2X	-	-	-	-	I3	I3	I3	I3	REAL32	Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]
		-	-	-	-	I3	I3	I3	I3		Content of 2 <sup>nd</sup> harmonic [%] ..... Content of 50 <sup>th</sup> harmonic [%]

Address 4x	Name	14	2L	3G	3P	3U	3A	4U	4O	Type	Description
3100	H51_U1X ..... H89_U1X	U	U1N	U12	U	U12	U12	U1N	U1N	REAL32	Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]
		-	U2N	U23	-	U23	U23	U2N	U2N		Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]
3178	H51_U2X ..... H89_U2X	-	U2N	U23	-	U23	U23	U2N	U2N	REAL32	Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]
		-	-	U31	-	U31	U31	U3N	U3N		Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]
3256	H51_U3X ..... H89_U3X	-	-	U31	-	U31	U31	U3N	U3N	REAL32	Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]
		I	I1	I	I	I1	I1	I1	I1		Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]
3334	H51_I1X ..... H89_I1X	I	I1	I	I	I1	I1	I1	I1	REAL32	Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]
		-	I2	-	-	I2	I2	I2	I2		Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]
3412	H51_I2X ..... H89_I2X	-	-	-	-	I3	I3	I3	I3	REAL32	Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]
		-	-	-	-	I3	I3	I3	I3		Content of 51 <sup>st</sup> harmonic [%] ..... Content of 89 <sup>th</sup> harmonic [%]

► Hi\_Uxy: Harmonic content of the voltage related to the fundamental 100 %

► Hi\_Ixy: Harmonic content of the current related to the **rated** current

► At rated frequency 60Hz harmonics are available up to the 75<sup>th</sup> only, the other values are 0.0

## 5.2.2 Instantaneous values of harmonic analysis (from version 1.0x.875)

Address 4x	Name	Type	Description
4200	THD_U1N	REAL32	Total Harmonic Distortion Voltage U1N [%]
4202	THD_U2N		Total Harmonic Distortion Voltage U2N [%]
4204	THD_U3N		Total Harmonic Distortion Voltage U3N [%]
4206	THD_U12	REAL32	Total Harmonic Distortion Voltage U12 [%]
4208	THD_U23		Total Harmonic Distortion Voltage U23 [%]
4210	THD_U31		Total Harmonic Distortion Voltage U31 [%]
4212	THD_UNE	REAL32	Total Harmonic Distortion Voltage U31 [%] <sup>1)</sup>
4214	TDD_I1	REAL32	Total Demand Distortion current I1 [%]
4216	TDD_I2		Total Demand Distortion current I2 [%]
4218	TDD_I3		Total Demand Distortion current I3 [%]
4220	TDD_IN	REAL32	Total Demand Distortion current IN [%]
4222	THD_I1	REAL32	Total Harmonic Distortion current I1 [%]
4224	THD_I2		Total Harmonic Distortion current I2 [%]
4226	THD_I3		Total Harmonic Distortion current I3 [%]
4228	THD_IN	REAL32	Total Harmonic Distortion current IN [%] <sup>1)</sup>

<sup>1)</sup> For AM3000 only (not implemented yet)

- THD\_U: Harmonic content related to the fundamental of the RMS value of the voltage
- TDD\_I: Harmonic content related to the **rated value** of the current
- THD\_I: Harmonic content related to the fundamental of the RMS value of the current

Address 4x	Name	Type	Description
4234	H2_U1N	REAL32	Voltage U1N: Content 2 <sup>nd</sup> harmonic [%]
4408	H89_U1N		Voltage U1N: Content 89 <sup>th</sup> harmonic [%]
4414	H2_U2N	REAL32	Voltage U2N: Content 2 <sup>nd</sup> harmonic [%]
4588	H89_U2N		Voltage U2N: Content 89 <sup>th</sup> harmonic [%]
4594	H2_U3N	REAL32	Voltage U3N: Content 2 <sup>nd</sup> harmonic [%]
4768	H89_U3N		Voltage U3N: Content 89 <sup>th</sup> harmonic [%]
4774	H2_U12	REAL32	Voltage U12: Content 2 <sup>nd</sup> harmonic [%]
4948	H89_U12		Voltage U12: Content 89 <sup>th</sup> harmonic [%]
4954	H2_U23	REAL32	Voltage U23: Content 2 <sup>nd</sup> harmonic [%]
5128	H89_U23		Voltage U23: Content 89 <sup>th</sup> harmonic [%]
5134	H2_U31	REAL32	Voltage U31: Content 2 <sup>nd</sup> harmonic [%]
5308	H89_U31		Voltage U31: Content 89 <sup>th</sup> harmonic [%]
5314	H2_UNE	REAL32	Voltage UNE: Content 2 <sup>nd</sup> harmonic [%] <sup>1)</sup>
5488	H89_UNE		Voltage UNE: Content 89 <sup>th</sup> harmonic [%] <sup>1)</sup>
5494	H2_I1	REAL32	Current I1: Content 2 <sup>nd</sup> harmonic [%]
5668	H89_I1		Current I1: Content 89 <sup>th</sup> harmonic [%]
5674	H2_I2	REAL32	Current I2: Content 2 <sup>nd</sup> harmonic [%]
5848	H89_I2		Current I2: Content 89 <sup>th</sup> harmonic [%]
5854	H2_I3	REAL32	Current I3: Content 2 <sup>nd</sup> harmonic [%]
6028	H89_I3		Current I3: Content 89 <sup>th</sup> harmonic [%]
6034	H2_IN	REAL32	Current IN: Content 2 <sup>nd</sup> harmonic [%] <sup>1)</sup>
6208	H89_IN		Current IN: Content 89 <sup>th</sup> harmonic [%] <sup>1)</sup>

<sup>1)</sup> For AM3000 only (not implemented yet)

- Hi\_Uxy: Harmonic content of the voltage related to the fundamental 100 %
- Hi\_Ix: Harmonic content of the current related to the **rated** current
- At rated frequency 60Hz harmonics are available up to the 75<sup>th</sup> only, the other values are 0.0

### 5.2.3 Instantaneous values of imbalance analysis acc. Fortescue

Address 4x	Name	14	2L	3G	3P	3U	3A	4U	4O	Type	Description
850	UR1	-	-	●	-	●	●	●	-	REAL32	Voltage [V]: Positive sequence
852		-	-	●	-	●	●	●	-		Voltage [V]: Negative sequence
854		-	-	-	-	-	-	●	-		Voltage [V]: Zero sequence
856	IR1	-	-	-	-	●	-	●	●	REAL32	Current [A]: Positive sequence
858		-	-	-	-	●	-	●	●		Current [A]: Negative sequence
860		-	-	-	-	-	-	●	●		Current [A]: Zero sequence
862	UNB_UR2_UR1	-	-	●	-	●	●	●	-	REAL32	Imbalance factor voltage: UR2/UR1 [%]
864		-	-	-	-	●	-	●	●		Imbalance factor current: IR2/IR1 [%]
866	UNB_U0_UR1	-	-	-	-	-	-	●	-	REAL32	Imbalance factor voltage: U0/UR1 [%]
868		-	-	-	-	-	-	●	●		Imbalance factor current: I0/IR1 [%]

### 5.2.4 Instantaneous values of extended power analysis

Address 4x	Name	14	2L	3G	3G	3U	3A	4U	4O	Type	Description
900	P_H1	●	●	●	●	●	●	●	●	REAL32	Fundamental active power, system [W]
902		-	●	-	-	-	-	●	●		Fundamental active power, L1 [W]
904		-	●	-	-	-	-	●	●		Fundamental active power, L2 [W]
906		-	-	-	-	-	-	●	●		Fundamental active power, L3 [W]
908	Q_H1	●	●	●	●	●	●	●	●	REAL32	Reactive power of fundamental, system [var]
910		-	●	-	-	-	-	●	●		Reactive power of fundamental, phase L1 [var]
912		-	●	-	-	-	-	●	●		Reactive power of fundamental, phase L2 [var]
914		-	-	-	-	-	-	●	●		Reactive power of fundamental, phase L3 [var]
924	S_H1	●	●	●	●	●	●	●	●	REAL32	Fundamental apparent power, system [VA]
926		-	●	-	-	-	-	●	●		Fundamental apparent power, L1 [VA]
928		-	●	-	-	-	-	●	●		Fundamental apparent power, L2 [VA]
930		-	-	-	-	-	-	●	●		Fundamental apparent power, L3 [VA]
924	D	●	●	●	●	●	●	●	●	REAL32	Distortion reactive power, system [var]
926		-	●	-	-	-	-	●	●		Distortion reactive power, phase L1 [var]
928		-	●	-	-	-	-	●	●		Distortion reactive power, phase L2 [var]
930		-	-	-	-	-	-	●	●		Distortion reactive power, phase L3 [var]
932	CPHI	●	●	●	●	●	●	●	●	REAL32	$\cos(\varphi)$ of fundamental, system
934		-	●	-	-	-	-	●	●		$\cos(\varphi)$ of fundamental, phase L1
936		-	●	-	-	-	-	●	●		$\cos(\varphi)$ of fundamental, phase L2
938		-	-	-	-	-	-	●	●		$\cos(\varphi)$ of fundamental, phase L3
940	TPHI	●	●	●	●	●	●	●	●	REAL32	$\tan(\varphi)$ of fundamental, system
942		-	●	-	-	-	-	●	●		$\tan(\varphi)$ of fundamental, phase L1
944		-	●	-	-	-	-	●	●		$\tan(\varphi)$ of fundamental, phase L2
946		-	-	-	-	-	-	●	●		$\tan(\varphi)$ of fundamental, phase L3

### 5.3 Minimum / maximum values of system quantities

Time [TIME]	Value [REAL32]	Name	14	2L	3G	3P	3U	3A	4U	4O	Description
1000	1100	U_MAX	●	●	-	●	-	-	-	-	Maximum value of U [V]
1002	1102	U1N_MAX	-	●	-	-	-	-	●	●	Maximum value of U1N [V]
1004	1104	U2N_MAX	-	●	-	-	-	-	●	●	Maximum value of U2N [V]
1006	1106	U3N_MAX	-	-	-	-	-	-	●	●	Maximum value of U3N [V]
1008	1108	U12_MAX	-	-	●	-	●	●	●	●	Maximum value of U12 [V]
1010	1110	U23_MAX	-	-	●	-	●	●	●	●	Maximum value of U23 [V]
1012	1112	U31_MAX	-	-	●	-	●	●	●	●	Maximum value of U31 [V]
1014	1114	UNE_MAX	-	-	-	-	-	-	●	●	Maximum value of UNE [V]
1016	1116	I_MAX	●	-	●	●	-	-	-	-	Maximum value of I [A]
1018	1118	I1_MAX	-	●	-	-	●	●	●	●	Maximum value of I1 [A]
1020	1120	I2_MAX	-	-	-	-	●	●	●	●	Maximum value of I2 [A]
1022	1122	I3_MAX	-	-	-	-	●	●	●	●	Maximum value of I3 [A]
1024	1124	IN_MAX	-	●	-	-	-	-	●	●	Maximum value of IN [A]
1026	1126	P_MAX	●	●	●	●	●	●	●	●	Maximum value of P [W]
1028	1128	P1_MAX	-	●	-	-	-	-	●	●	Maximum value of P1 [W]
1030	1130	P2_MAX	-	●	-	-	-	-	●	●	Maximum value of P2 [W]
1032	1132	P3_MAX	-	-	-	-	-	-	●	●	Maximum value of P3 [W]
1034	1134	Q_MAX	●	●	●	●	●	●	●	●	Maximum value of Q [var]
1036	1136	Q1_MAX	-	●	-	-	-	-	●	●	Maximum value of Q1 [var]
1038	1138	Q2_MAX	-	●	-	-	-	-	●	●	Maximum value of Q2 [var]
1040	1140	Q3_MAX	-	-	-	-	-	-	●	●	Maximum value of Q3 [var]
1042	1142	S_MAX	●	●	●	●	●	●	●	●	Maximum value of S [VA]
1044	1144	S1_MAX	-	●	-	-	-	-	●	●	Maximum value of S1 [VA]
1046	1146	S2_MAX	-	●	-	-	-	-	●	●	Maximum value of S2 [VA]
1048	1148	S3_MAX	-	-	-	-	-	-	●	●	Maximum value of S3 [VA]
1050	1150	F_MAX	●	●	●	●	●	●	●	●	Maximum value of F [Hz]
1052	1152	DEV_UMAX_MAX	-	-	●	-	●	●	●	●	Maximum value of DEV_UMAX [V]
1054	1154	DEV_IMAX_MAX	-	-	-	-	●	●	●	●	Maximum value of DEV_IMAX [A]
1056	1156	U_MIN	●	●	-	●	-	-	-	-	Minimum value of U [V]
1058	1158	U1N_MIN	-	●	-	-	-	-	●	●	Minimum value of U1N [V]
1060	1160	U2N_MIN	-	●	-	-	-	-	●	●	Minimum value of U2N [V]
1062	1162	U3N_MIN	-	-	-	-	-	-	●	●	Minimum value of U3N [V]
1064	1164	U12_MIN	-	-	●	-	●	●	●	●	Minimum value of U12 [V]
1066	1166	U23_MIN	-	-	●	-	●	●	●	●	Minimum value of U23 [V]
1068	1168	U31_MIN	-	-	●	-	●	●	●	●	Minimum value of U31 [V]
1070	1170	PF_MIN_QI	●	●	●	●	●	●	●	●	min. power factor quadrant I
1072	1172	PF_MIN_QIV	●	●	●	●	●	●	●	●	min. power factor quadrant IV
1074	1174	PF_MIN_QIII	●	●	●	●	●	●	●	●	min. power factor quadrant III
1076	1176	PF_MIN_QII	●	●	●	●	●	●	●	●	min. power factor quadrant II
1078	1178	F_MIN	●	●	●	●	●	●	●	●	Minimum value of F [Hz]
1080	1180	IPE_MAX 1)	-	-	-	-	-	-	●	●	Maximum value of IPE [A]

► Resetting of min/max values in groups, see [Resetting of min/max values](#)

► A timestamp "1.1.1970" indicates that the associated measurement is invalid.

<sup>1)</sup> Available for AM3000 only

## 5.4 Minimum / maximum values of system analysis

### 5.4.1 Maximum values of harmonic analysis (up to version 1.0x.807)

Time [TIME]	Value [REAL32]	Name	14	2L	3G	3P	3U	3A	4U	4O	Description
1200	1212	THD_U1X_MAX	U	U1N	U12	U	U12	U12	U1N	U1N	Max. THD value phase 1 [%]
1202	1214		-	U2N	U23	-	U23	U23	U2N	U2N	Max. THD value phase 2 [%]
1204	1216		-	-	U31	-	U31	U31	U3N	U3N	Max. THD value phase 3 [%]
1206	1218		I	I1	I	I	I1	I1	I1	I1	Max. TDD value phase 1 [%]
1208	1220		-	I2	-	-	I2	I2	I2	I2	Max. TDD value phase 2 [%]
1210	1222		-	-	-	-	I3	I3	I3	I3	Max. TDD value phase 3 [%]

Time [TIME]	Value [REAL32]	Name	14	2L	3G	3G	3U	3A	4U	4O	Description
1200	1224	H2_U1X_MAX	U	U1N	U12	U	U12	U12	U1N	U1N	Max. content of 2 <sup>nd</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 50 <sup>th</sup> harmonic [%]
1202	1322	H2_U2X_MAX	-	U2N	U23	-	U23	U23	U2N	U2N	Max. content of 2 <sup>nd</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 50 <sup>th</sup> harmonic [%]
1204	1420	H2_U3X_MAX	-	-	U31	-	U31	U31	U3N	U3N	Max. content of 2 <sup>nd</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 50 <sup>th</sup> harmonic [%]
1206	1518	H2_I1X_MAX	I	I1	I	I	I1	I1	I1	I1	Max. content of 2 <sup>nd</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 50 <sup>th</sup> harmonic [%]
1208	1616	H2_I2X_MAX	-	I2	-	-	I2	I2	I2	I2	Max. content of 2 <sup>nd</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 50 <sup>th</sup> harmonic [%]
1210	1714	H2_I3X_MAX	-	-	-	-	I3	I3	I3	I3	Max. content of 2 <sup>nd</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 50 <sup>th</sup> harmonic [%]

Time [TIME]	Value [REAL32]	Name	14	2L	3G	3P	3U	3A	4U	4O	Description
1200	3600	H51_U1X_MAX	U	U1N	U12	U	U12	U12	U1N	U1N	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1202	3676	H89_U1X_MAX	-	U2N	U23	-	U23	U23	U2N	U2N	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1204	3678	H51_U2X_MAX	-	U2N	U23	-	U23	U23	U2N	U2N	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1206	3754	H89_U2X_MAX	-	U2N	U23	-	U23	U23	U2N	U2N	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1208	3756	H51_U3X_MAX	-	-	U31	-	U31	U31	U3N	U3N	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1206	3832	H89_U3X_MAX	-	-	U31	-	U31	U31	U3N	U3N	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1206	3834	H51_I1X_MAX	I	I1	I	I	I1	I1	I1	I1	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1208	3910	H89_I1X_MAX	I	I1	I	I	I1	I1	I1	I1	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1208	3912	H51_I2X_MAX	-	I2	-	-	I2	I2	I2	I2	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1208	3988	H89_I2X_MAX	-	I2	-	-	I2	I2	I2	I2	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]
1210	3990	H51_I3X_MAX	-	-	-	-	I3	I3	I3	I3	Max. content of 51 <sup>st</sup> harmonic [%]
	.....		.....	.....	.....	.....	.....	.....	.....	.....	Max. content of 89 <sup>th</sup> harmonic [%]

- The maximum values of the harmonic analysis arise from monitoring the maximum values of THD resp. TDD. The maximum values of the individual harmonics are not monitored separately, but stored when a maximum value of THD or TDD is recognized. The image of the maximum harmonics therefore always corresponds to the associated THD resp. TDD.
- At rated frequency 60Hz only harmonics up to the 75<sup>th</sup> are available, the other values are 0.0
- Resetting of min/max values in groups, see [Resetting of min/max values](#)
- A timestamp "1.1.1970" indicates that the associated measurement is invalid.

The individual harmonics are implemented as 32-bit float numbers (2 registers per value).

#### 5.4.2 Maximum values of harmonic analysis (from version 1.0x.875)

Time [TIME]	Value [REAL32]	Name	Description
6250	6300	THD_U1N_MAX	max. THD value voltage U1N [%]
6252	6302	THD_U2N_MAX	max. THD value voltage U2N [%]
6254	6304	THD_U3N_MAX	max. THD value voltage U3N [%]
6256	6306	THD_U12_MAX	max. THD value voltage U12 [%]
6258	6308	THD_U23_MAX	max. THD value voltage U23 [%]
6260	6310	THD_U31_MAX	max. THD value voltage U31 [%]
6262	6312	THD_UNE_MAX	max. THD value voltage UNE [%] <sup>1)</sup>
6264	6314	TDD_I1_MAX	max. TDD value current I1 [%]
6266	6316	TDD_I2_MAX	max. TDD value current I2 [%]
6268	6318	TDD_I3_MAX	max. TDD value current I3 [%]
6270	6320	TDD_IN_MAX	max. TDD value current IN [%] <sup>1)</sup>

Time [TIME]	Value [REAL32]	Name	Description
6250	6326	H2_U1N_MAX	Voltage U1N: Max. content 2 <sup>nd</sup> harmonic [%]
.....	.....	.....	.....
6252	6500	H89_U1N_MAX	Voltage U1N: Max. content 89 <sup>th</sup> harmonic [%]
6254	6506	H2_U2N_MAX	Voltage U2N: Max. content 2 <sup>nd</sup> harmonic [%]
.....	.....	.....	.....
6256	6680	H89_U2N_MAX	Voltage U2N: Max. content 89 <sup>th</sup> harmonic [%]
6258	6686	H2_U3N_MAX	Voltage U3N: Max. content 2 <sup>nd</sup> harmonic [%]
.....	.....	.....	.....
6260	6860	H89_U3N_MAX	Voltage U3N: Max. content 89 <sup>th</sup> harmonic [%]
6262	6866	H2_U12_MAX	Voltage U12: Max. content 2 <sup>nd</sup> harmonic [%]
.....	.....	.....	.....
6264	7040	H89_U12_MAX	Voltage U12: Max. content 89 <sup>th</sup> harmonic [%]
6266	7046	H2_U23_MAX	Voltage U23: Max. content 2 <sup>nd</sup> harmonic [%]
.....	.....	.....	.....
6268	7220	H89_U23_MAX	Voltage U23: Max. content 89 <sup>th</sup> harmonic [%]
6270	7226	H2_U31_MAX	Voltage U31: Max. content 2 <sup>nd</sup> harmonic [%]
.....	.....	.....	.....
6272	7400	H89_U31_MAX	Voltage U31: Max. content 89 <sup>th</sup> harmonic [%]
6274	7406	H2_UNE_MAX	Voltage UNE: Max. content 2 <sup>nd</sup> harmonic [%] <sup>1)</sup>
.....	.....	.....	.....
6276	7580	H89_UNE_MAX	Voltage UNE: Max. content 89 <sup>th</sup> harmonic [%] <sup>1)</sup>
6278	7586	H2_I1X_MAX	Current I1: Max. content 2 <sup>nd</sup> harmonic [%]
.....	.....	.....	.....
6280	7760	H89_I1X_MAX	Current I1: Max. content 89 <sup>th</sup> harmonic [%]
6282	7766	H2_I2X_MAX	Current I2: Max. content 2 <sup>nd</sup> harmonic [%]
.....	.....	.....	.....
6284	7940	H89_I2X_MAX	Current I2: Max. content 89 <sup>th</sup> harmonic [%]
6286	7946	H2_I3X_MAX	Current I3: Max. content 2 <sup>nd</sup> harmonic [%]
.....	.....	.....	.....
6288	8120	H89_I3X_MAX	Current I3: Max. content 89 <sup>th</sup> harmonic [%]
6290	8126	H2_IN_MAX	Current IN: Max. content 2 <sup>nd</sup> harmonic [%] <sup>1)</sup>
.....	.....	.....	.....
6292	8300	H89_IN_MAX	Current IN: Max. content 89 <sup>th</sup> harmonic [%] <sup>1)</sup>

<sup>1)</sup> For AM3000 only (not implemented yet)

- The maximum values of the harmonic analysis arise from monitoring the maximum values of THD resp. TDD. The maximum values of the individual harmonics are not monitored separately, but stored when a maximum value of THD or TDD is recognized. The image of the maximum harmonics therefore always corresponds to the associated THD resp. TDD.
- At rated frequency 60Hz only harmonics up to the 75<sup>th</sup> are available, the other values are 0.0
- Resetting of min/max values in groups, see [Resetting of min/max values](#)
- A timestamp "1.1.1970" indicates that the associated measurement is invalid.

The individual harmonics are implemented as 32-bit float numbers (2 registers per value).

### 5.4.3 Maximum values of imbalance analysis acc. Fortescue

Time [TIME]	Value [REAL32]	Name	14	2L	3G	3P	3U	3A	4U	4O	Description
1850	1858	UNB_UR2_UR1_MAX	-	-	●	-	●	●	●	-	max. imbalance UR2/UR1 [%] max. imbalance IR2/IR1 [%] max. imbalance U0/UR1 [%] max. imbalance I0/IR1 [%]
1852	1860	UNB_IR2_IR1_MAX	-	-	-	-	-	-	●	●	
1854	1862	UNB_U0_UR1_MAX	-	-	-	-	●	-	●	-	
1856	1864	UNB_I0_IR1_MAX	-	-	-	-	-	-	●	●	

► Resetting of min/max values in groups, see [Resetting of min/max values](#)

► A timestamp "1.1.1970" indicates that the associated measurement is invalid.

The imbalance maximum values are implemented as 32-bit float numbers (2 registers per value).

### 5.4.4 Maximum values of extended power analysis

Time [TIME]	Value [REAL32]	Name	14	2L	3G	3P	3U	3A	4U	4O	Description
1870	1920	P_MAX_H1	●	●	●	●	●	●	●	●	Max. active power of fundamental, system [W] Max. active power of fundamental, phase L1 [W] Max. active power of fundamental, phase L2 [W] Max. active power of fundamental, phase L3 [W]
1872	1922	P1_MAX_H1	-	●	-	-	-	-	●	●	
1874	1924	P2_MAX_H1	-	●	-	-	-	-	●	●	
1876	1926	P3_MAX_H1	-	-	-	-	-	-	●	●	
1878	1928	Q_MAX_H1	●	●	●	●	●	●	●	●	Max. reactive power fundamental, system [var] Max. reactive power fundamental, phase L1 [var] Max. reactive power fundamental, phase L2 [var] Max. reactive power fundamental, phase L3 [var]
1880	1930	Q1_MAX_H1	-	●	-	-	-	-	●	●	
1882	1932	Q2_MAX_H1	-	●	-	-	-	-	●	●	
1884	1934	Q3_MAX_H1	-	-	-	-	-	-	●	●	
1886	1936	Q_MAX_H1	●	●	●	●	●	●	●	●	Max. apparent power of fundamental, system [VA] Max. apparent power fundamental, phase L1 [VA] Max. apparent power fundamental, phase L2 [VA] Max. apparent power fundamental, phase L3 [VA]
1888	1938	Q1_MAX_H1	-	●	-	-	-	-	●	●	
1890	1940	Q2_MAX_H1	-	●	-	-	-	-	●	●	
1892	1942	Q3_MAX_H1	-	-	-	-	-	-	●	●	
1894	1944	D_MAX	●	●	●	●	●	●	●	●	Max. distortion reactive power, system [var] Max. distortion reactive power, phase L1 [var] Max. distortion reactive power, phase L2 [var] Max. distortion reactive power, phase L3 [var]
1896	1946	D1_MAX	-	●	-	-	-	-	●	●	
1898	1948	D2_MAX	-	●	-	-	-	-	●	●	
1900	1950	D3_MAX	-	-	-	-	-	-	●	●	
1902	1952	CPHI_MIN_QI	●	●	●	●	●	●	●	●	min. cos( $\phi$ ) quadrant I (*)
1904	1954	CPHI_MIN_QIV	●	●	●	●	●	●	●	●	min. cos( $\phi$ ) quadrant IV (*)
1906	1956	CPHI_MIN_QIII	●	●	●	●	●	●	●	●	min. cos( $\phi$ ) quadrant III (*)
1908	1958	CPHI_MIN_QII	●	●	●	●	●	●	●	●	min. cos( $\phi$ ) quadrant II (*)

(\*) min. cos( $\phi$ ) of the system fundamental in all 4 quadrants

All values are implemented as 32-bit float numbers (2 registers per value).

► Resetting of min/max values in groups, see [Resetting of min/max values](#)

► A timestamp "1.1.1970" indicates that the associated measurement is invalid.

## 5.5 Mean-values: Trend, Last values, minimum / maximum values

### 5.5.1 Mean values of power (standard quantities), averaging interval t1

	Trend	Mean-value	Maximum		Minimum		
Name	[REAL32]	Last ..... - 4 [REAL32]	Time [TIME]	Value [REAL32]	Time [TIME]	Value [REAL32]	Description
AVG_P_I_IV	2000	2010... 2018	2060	2080	2070	2090	Mean-value P, quadrant I+IV [W]
AVG_P_II_III	2002	2020... 2028	2062	2082	2072	2092	Mean-value P, quadrant II+III [W]
AVG_Q_I_II	2004	2030... 2038	2064	2084	2074	2094	Mean-value Q, quadrant I+II [var]
AVG_Q_III_IV	2006	2040... 2048	2066	2086	2076	2096	Mean-value Q, quadrant III+IV [var]
AVG_S	2008	2050... 2058	2068	2088	2078	2098	Mean-value S [VA]

- ▶ Resetting of min/max values in groups, see [Resetting of min/max values](#)
- ▶ A timestamp "1.1.1970" indicates that the associated measurement is invalid.
- ▶ For each of the standard quantities the mean-value for the last interval and the 4 previous values are provided.

### 5.5.2 User-defined mean values, averaging interval t2

	Trend	Mean-value	Maximum		Minimum		
Name	[REAL32]	Last [REAL32]	Time [TIME]	Value [REAL32]	Time [TIME]	Value [REAL32]	Description
AVG_1	2150	2174	2198	2246	2222	2270	Config. mean-value 1
AVG_2	2152	2176	2200	2248	2224	2272	Config. mean-value 2
AVG_3	2154	2178	2202	2250	2226	2274	Config. mean-value 3
AVG_4	2156	2180	2204	2252	2228	2276	Config. mean-value 4
AVG_5	2158	2182	2206	2254	2230	2278	Config. mean-value 5
AVG_6	2160	2184	2208	2256	2232	2280	Config. mean-value 6
AVG_7	2162	2186	2210	2258	2234	2282	Config. mean-value 7
AVG_8	2164	2188	2212	2260	2236	2284	Config. mean-value 8
AVG_9	2166	2190	2214	2262	2238	2286	Config. mean-value 9
AVG_10	2168	2192	2216	2264	2240	2288	Config. mean-value 10
AVG_11	2170	2194	2218	2266	2242	2290	Config. mean-value 11
AVG_12	2172	2196	2220	2268	2244	2292	Config. mean-value 12

- ▶ Resetting of min/max values in groups, see [Resetting of min/max values](#)
- ▶ A timestamp "1.1.1970" indicates that the associated measurement is invalid.

### 5.5.3 Bimetal current, averaging interval t3

Name	[REAL32]	Value		Maximum									Description
		Time [TIME]	Value [REAL32]	14	2L	3G	3P	3U	3A	4U	4O		
IB	2300	2308	2316	●	-	●	●	-	-	-	-	-	Damped current in balanced systems [A]
	2302	2310	2318	-	●	-	-	●	●	●	●	●	
	2304	2312	2320	-	●	-	-	●	●	●	●	●	
	2306	2314	2322	-	-	-	-	●	●	●	●	●	

- ▶ Resetting of min/max values in groups, see [Resetting of min/max values](#)
- ▶ A timestamp "1.1.1970" indicates that the associated measurement is invalid.

## 5.6 Resetting of min/max values

Min/max values may be reset in groups via coils.

Address 0x	Name	Type	Group to be reset
1	MM_RES1	COIL	- Min/max of voltages, currents, frequency
2	MM_RES2	COIL	- Min/max of active, reactive, apparent power - Min/max of fundamental and distortion reactive power - Minimum values of load factors, cosφ
3	MM_RES3	COIL	- Min/Max values of power mean-values / configurable mean-values - Bimetal slave pointers
4	MM_RES4	COIL	- Maximum of THD U/I, TDD I, individual harmonics
5	MM_RES5	COIL	- Maximum values of imbalance analysis

## 5.7 Present state of limit values

Address 0x	Name	Type	Description	
100	LIMIT_ST1	COIL	State of limit value 1 (0=OFF, 1=ON)	read only
101	LIMIT_ST2		State of limit value 2 (0=OFF, 1=ON)	
102	LIMIT_ST3		State of limit value 3 (0=OFF, 1=ON)	
103	LIMIT_ST4		State of limit value 4 (0=OFF, 1=ON)	
104	LIMIT_ST5		State of limit value 5 (0=OFF, 1=ON)	
105	LIMIT_ST6		State of limit value 6 (0=OFF, 1=ON)	
106	LIMIT_ST7		State of limit value 7 (0=OFF, 1=ON)	
107	LIMIT_ST8		State of limit value 8 (0=OFF, 1=ON)	
108	LIMIT_ST9		State of limit value 9 (0=OFF, 1=ON)	
109	LIMIT_ST10		State of limit value 10 (0=OFF, 1=ON)	
110	LIMIT_ST11		State of limit value 11 (0=OFF, 1=ON)	
111	LIMIT_ST12		State of limit value 12 (0=OFF, 1=ON)	

## 5.8 Present state of monitoring functions

Address 0x	Name	Type	Description	
140	MFUN_ST1	COIL	State of monitoring function 1 (0=inactive, 1=active)	read only
141	MFUN_ST2		State of monitoring function 2 (0=inactive, 1=active)	
142	MFUN_ST3		State of monitoring function 3 (0=inactive, 1=active)	
143	MFUN_ST4		State of monitoring function 4 (0=inactive, 1=active)	
144	MFUN_ST5		State of monitoring function 5 (0=inactive, 1=active)	
145	MFUN_ST6		State of monitoring function 6 (0=inactive, 1=active)	
146	MFUN_ST7		State of monitoring function 7 (0=inactive, 1=active)	
147	MFUN_ST8		State of monitoring function 8 (0=inactive, 1=active)	

## 5.9 Summary alarm

The summary alarm represents the over-all alarm state of the device. It is the AND combination of all defined monitoring functions enabled for the summary alarm and is active if at least one function is in the alarm state. The summary alarm is used for showing the alarm state on the display and can also activate a logic output (e.g. digital output or relay).

Via interface the summary alarm may be influenced as follows:

- **Resetting** the logic output of the summary alarm: The output will be reset even if there summary alarm is active.

Address 0x	Name	Type	Description
170	SA_STATE	COIL	State of summary alarm (0=inactive, 1=active)
171	SA_RES_STATE	COIL	Logic output of summary alarm (0=inactive or reset, 1=active)
20	SA_RESET	COIL	For <b>Resetting</b> the logic output of the summary alarm

## 6 Energy meters

Meter contents may be read in two different formats:

- REAL64 numbers (4 registers per value): High resolution
- REAL32 numbers (2 registers per value): Reduced resolution

All meter contents are scaled in the basic unit of the appropriate base quantity (Ah, Wh, VAh, varh)

### 6.1 Meter contents of standard quantities

Reading [REAL64]	Reading [REAL32]	Writing [REAL64]	Name	14	2L	3G	3G	3U	3A	4U	4O	Description
2600	4100	2750	P_I_IV_HT	●	●	●	●	●	●	●	●	Active energy QI+IV, high tariff [Wh]
2604	4102	2754	P_II_III_HT	●	●	●	●	●	●	●	●	Active energy QII+III, high tariff [Wh]
2608	4104	2758	Q_I_II_HT	●	●	●	●	●	●	●	●	Reactive energy QI+II, high tariff [varh]
2612	4106	2762	Q_III_IV_HT	●	●	●	●	●	●	●	●	Reactive energy QIII+IV, high tariff [varh]
2616	4108	2766	P_I_IV_LT	●	●	●	●	●	●	●	●	Active energy QI+IV, low tariff [Wh]
2620	4110	2770	P_II_III_LT	●	●	●	●	●	●	●	●	Active energy QII+III, low tariff [Wh]
2624	4112	2774	Q_I_II_LT	●	●	●	●	●	●	●	●	Reactive energy QI+II, low tariff [varh]
2628	4114	2778	Q_III_IV_LT	●	●	●	●	●	●	●	●	Reactive energy QIII+IV, low tariff [varh]

### 6.2 Meter contents of user-defined quantities

Reading [REAL64]	Reading [REAL32]	Writing [REAL64]	Name	Description							
2640	4120	2790	METER1_HT	User-defined meter 1, high tariff							
2644	4122	2794	METER2_HT	User-defined meter 2, high tariff							
2648	4124	2798	METER3_HT	User-defined meter 3, high tariff							
2652	4126	2802	METER4_HT	User-defined meter 4, high tariff							
2656	4128	2806	METER5_HT	User-defined meter 5, high tariff							
2660	4130	2810	METER6_HT	User-defined meter 6, high tariff							
2664	4132	2814	METER7_HT	User-defined meter 7, high tariff							
2668	4134	2818	METER8_HT	User-defined meter 8, high tariff							
2672	4136	2822	METER9_HT	User-defined meter 9, high tariff							
2676	4138	2826	METER10_HT	User-defined meter 10, high tariff							
2680	4140	2830	METER11_HT	User-defined meter 11, high tariff							
2684	4142	2834	METER12_HT	User-defined meter 12, high tariff							

Reading [REAL64]	Reading [REAL32]	Writing [REAL64]	Name	Description							
2688	4144	2838	METER1_NT	User-defined meter 1, low tariff							
2692	4146	2842	METER2_NT	User-defined meter 2, low tariff							
2696	4148	2846	METER3_NT	User-defined meter 3, low tariff							
2700	4150	2850	METER4_NT	User-defined meter 4, low tariff							
2704	4152	2854	METER5_NT	User-defined meter 5, low tariff							
2708	4154	2858	METER6_NT	User-defined meter 6, low tariff							
2712	4156	2862	METER7_NT	User-defined meter 7, low tariff							
2716	4158	2866	METER8_NT	User-defined meter 8, low tariff							
2720	4160	2870	METER9_NT	User-defined meter 9, low tariff							
2724	4162	2874	METER10_NT	User-defined meter 10, low tariff							
2728	4164	2878	METER11_NT	User-defined meter 11, low tariff							
2732	4166	2882	METER12_NT	User-defined meter 12, low tariff							

### 6.3 Present tariff of meters

The device supports two tariffs, high and low tariff. The same tariff is used for both, standard meters and free selectable meters. The tariff can be defined via digital input 0.1. The present state of this digital input therefore represents the active tariff.

Reading [COIL]	Name	Description	
180	DIGIN0_1	<b>Tariff situation</b> 0: high tariff 1: low tariff	read only

## 7 Operating hour counters

The operating hour counters have a resolution of [s]. This allow to measure operating times up to 136 years, whereby an overflow is excluded.

The operating hour counter of the device itself starts to count as soon as the power supply is applied to the device. The meter is designed as endless counter and can't be reset.

The resettable operating hour counters 1...3 count if the associated condition is fulfilled. Possible conditions are:

- always (power supply switched on)
- never (counter inactive)
- if a measured value goes above or below a certain limit value
- fulfilled monitoring function

Reading [UINT32]	Reset [COIL]	Description	Description
2740	-	OPR_CNTR	Operating hour counter of the device [s]
2742	30	OPR_CNTR1	Resettable operating hour counter 1 [s]
2744	31	OPR_CNTR2	Resettable operating hour counter 2 [s]
2746	32	OPR_CNTR3	Resettable operating hour counter 3 [s]

*The resettable operating hour counters are available for AM1000 and AM3000 only.*

## 8 Remote interface

All relays or digital outputs **not used** for the normal device functionality may be used for other purposes. Driving is performed via the configuration interface, e.g. by means of a Modbus master software.

Address 0x	Name	Type	Description	
50	STAT_O1	COIL	State of digital output 0.1	write only
51	STAT_O2	COIL	State of digital output 0.2	
52	STAT_O3	COIL	State of relay 1.1	
53	STAT_O4	COIL	State of relay 1.2	
54	STAT_O5	COIL	State of relay 2.1	
55	STAT_O6	COIL	State of relay 2.2	
56	STAT_O7	COIL	State of relay 3.1	
57	STAT_O8	COIL	State of relay 3.2	
58	STAT_O9	COIL	State of relay 4.1	
59	STAT_O10	COIL	State of relay 4.2	

- The relay outputs are available for device versions with appropriate relay modules only

### Analog outputs

Address 4x	Name	Type	Description	
2900	AOUT1_1	REAL32	Analog output 1.1 [mA]	write only
2902	AOUT1_2	REAL32	Analog output 1.2 [mA]	
2904	AOUT1_3	REAL32	Analog output 1.3 [mA]	
2906	AOUT1_4	REAL32	Analog output 1.4 [mA]	
2908	AOUT2_1	REAL32	Analog output 2.1 [mA]	
2910	AOUT2_2	REAL32	Analog output 2.2 [mA]	
2912	AOUT2_3	REAL32	Analog output 2.3 [mA]	
2914	AOUT2_4	REAL32	Analog output 2.4 [mA]	
2916	AOUT3_1	REAL32	Analog output 3.1 [mA]	
2918	AOUT3_2	REAL32	Analog output 3.2 [mA]	
2920	AOUT3_3	REAL32	Analog output 3.3 [mA]	
2922	AOUT3_4	REAL32	Analog output 3.4 [mA]	
2924	AOUT4_1	REAL32	Analog output 4.1 [mA]	
2926	AOUT4_2	REAL32	Analog output 4.2 [mA]	
2928	AOUT4_3	REAL32	Analog output 4.3 [mA]	
2930	AOUT4_4	REAL32	Analog output 4.4 [mA]	

- Analog outputs are available for device versions with appropriate analog output modules only