# TOSHIBA

# 32 Bit RISC Microcontroller TX03 Series

# TMPM330FDFG/FYFG/FWFG

**TOSHIBA CORPORATION** 

© 2010 TOSHIBA CORPORATION All Rights Reserved

ARM, ARM Powered, AMBA, ADK, ARM9TDMI, TDMI, PrimeCell, RealView, Thumb, Cortex, Coresight, ARM9, ARM926EJ-S, Embedded Trace Macrocell, ETM, AHB, APB, and KEIL are registered trademarks or trademarks of ARM Limited in the EU and other countries.



#### Introduction: Notes on the description of SFR (Special Function Register) under this specification

An SFR (Special Function Register) is a control register for periperal circuits (IP).

The SFR addressses of IPs are described in the chapter on memory map, and the details of SFR are given in the chapter of each IP.

Definition of SFR used in this specification is in accordance with the following rules.

- a. SFR table of each IP as an example
  - · SFR tables in each chapter of IP provides register names, addresses and brief descriptions.
  - All registers have a 32-bit unique address and the addresses of the registers are defined as follows, with some exceptions: "Base address + (Unique) address"

		Base Address = 0x0000_0000
Register name	Address(Base+)	
Control register SAMCR		0x0004
		0x000C

Note: SAMCR register address is 32 bits wide from the address 0x0000\_0004 (Base Address(0x00000000) + unique address (0x0004)).

#### b. SFR(register)

- Each register basically consists of a 32-bit register (some exceptions).
- The description of each register provides bits, bit symbols, types, initial values after reset and functions.

Note: The register shown above is an example for explanation purpose and not for demonstration purpose. This register does not exist in this microcontroller.

#### 1.2.2 SAMCR(Control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	МС	DE
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	MODE				TDATA			
After reset	0	0	0	1	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-10	-	R	"0" can be read.
9-7	MODE[2:0]	R/W	Operation mode settings 000 : Sample mode 0 001 : Sample mode 1 010 : Sample mode 2 011 : Sample mode 3
			The settings other than those above: Reserved
6-0	TDATA[6:0]	W	Transmitted data

#### Note: The Type is divided into three as shown below.

R/W	READ WRITE
R	READ
W	WRITE

#### c. Data descriptopn

Meanings of symbols used in the SFR description are as shown below.

- x:channel numbers/ports
- n,m:bit numbers

#### d. Register descriptoption

Registers are described as shown below.

Register name <Bit Symbol>

Exmaple: SAMCR<MODE>="000" or SAMCR<MODE[2:0]>="000"

<MODE[2:0]> indicates bit 2 to bit 0 in bit symbol mode (3bit width).

• Register name [Bit]

Example: SAMCR[9:7]="000"

It indicates bit 9 to bit 7 of the register SAMCR (32 bit width).

# **Revision History**

Date	Revision	Comment
2010/4/26	1	First Release
2010/10/6	2	Contents Revised

# **Table of Contents**

# Introduction: Notes on the description of SFR (Special Function Register) under this specification

#### TMPM330FDFG/FYFG/FWFG

1.1	Features	
	Block Diagram	
	Pin Layout (Top view)	
	Pin names and Functions	
1.4	1 Sorted by Pin	6
1.4.	2 Sorted by Port	
1.5	Pin Numbers and Power Supply Pins	

#### 2. Processor Core

2.1	Information on the processor core	19
2.2	Configurable Options	19
	Exceptions/ Interruptions	
2.3.	.1 Number of Interrupt Inputs	19
2.3.	2 Number of Priority Level Interrupt Bits	20
2.3.	3 SysTick	20
2.3.	3 SysTick 4 SYSRESETREQ	20
2.3	5 LOCKUP	20
2.3.	6 Auxiliary Fault Status register	20
2.4	Events	21
2.5	Power Management	21
	Exclusive access	

#### 3. Debug Interface

3.1	Specification Overview	
3.2	ŚWJ-DP	23
3.3	ЕТМ	23
3.4	Pin Functions	
3.5	Peripheral Functions in Halt Mode	
3.6	Reset Vector Break	
3.7	Connection with a Debug Tool	
3.7	.1 About connection with debug tool	
3.7	.2 Important points of using debug interface pins used as general-purpose ports	

#### 4. Memory Map



#### 5. Reset

5.1	Cold reset	
	Warm reset	
	1 Reset period	
5.2.2	2 After reset	

#### 6. Clock/Mode control

6.1	Features	
6.2	Registers	
6.2.	8	
6.2.	-6	
6.2.		
6.2.	4 CGSTBYCR (Standby control register).	
6.2.	.5 CGPLLSEL (PLL Selection Register)	40
6.2.	6 CGCKSEL (System clock selection register)	41
6.3	Clock control	
6.3.	1 Clock System Block Diagram	
6.3.	2 Initial Values after Reset	
6.3.	3 Clock system Diagram	
6.3.	4 Clock Multiplication Circuit (PLL)	
6.3.	5 Warm-up function	44
6.3.	~	46
	6.3.6.1 High speed clock	
6.3	6.3.6.2 Low speed clock 7 Prescaler Clock Control	16
6.3.		
	•	
	Modes and Mode Transitions	
6.4.		
6.5	Operation mode	49
6.5.	1 NORMAL mode	
6.5.	2 SLOW mode	
6.6	Low Power Consumption Modes	
6.6.	1 IDLE mode	
6.6.	2 SLEEP mode	
6.6.	3 STOP mode	51
6.6.	4 Low power Consumption Mode Setting	51
6.6.	5 Operational Status in Each Mode	
6.6.	6 Releasing the Low Power Consumption Mode	
6.6.	7 Warm-up	54
6.6.	or or or or other or other oth	55
	6.6.8.1 Transition of operation modes: NORMAL $\rightarrow$ STOP $\rightarrow$ NORMAL	
	6.6.8.2 Transition of operation modes: NORMAL $\rightarrow$ SLEEP $\rightarrow$ NORMAL	
6	6.6.8.3 Transition of operation modes: $SLOW \rightarrow STOP \rightarrow SLOW$	

6.6.8.4 Transition of operation modes: SLOW  $\rightarrow$  SLEEP  $\rightarrow$  SLOW

#### 7. Exceptions

7.1 0	Dverview	
7.1.1	Exception Types	
7.1.2	Handling Flowchart	

	7.1.2.1	Exception Request and Detection	
	7.1.2.2	Exception Handling and Branch to the Interrupt Service Routine (Pre-emption)	
	7.1.2.3	Executing an ISR	
	7.1.2.4	Exception exit	
7.2		t Exceptions	
7.3	Non	-Maskable Interrupts (NMI)	64
7.4	SvsT	]ick	64
7.5	•	rupts	
		A	
/.:		terrupt Sources	
	7.5.1.1	Interrupt Route	
	7.5.1.2 7.5.1.3	Generation Transmission	
	7.5.1.4	Precautions when using external interrupt pins	
	7.5.1.5	List of Interrupt Sources	
	7.5.1.6	Active level	
7.5		errupt Handling	69
/	7.5.2.1	Flowchart	
	7.5.2.2	Preparation	
	7.5.2.3	Detection by Clock Generator	
	7.5.2.4	Detection by CPU	
	7.5.2.5	CPU processing	
	7.5.2.6	Interrupt Service Routine (ISR)	
7.6	Exce	ption/Interrupt-Related Registers	74
7.0		gister List	
		VIC Registers	
/	7.6.2.1	SysTick Control and Status Register	
	7.6.2.2	SysTick Reload Value Register	
	7.6.2.3	SysTick Current Value Register	
	7.6.2.4	SysTick Calibration Value Register	
	7.6.2.5	Interrupt Set-Enable Register 1	
	7.6.2.6	Interrupt Set-Enable Register 2	
	7.6.2.7	Interrupt Clear-Enable Register 1	
	7.6.2.8	Interrupt Clear-Enable Register 2	
	7.6.2.9	Interrupt Set-Pending Register 1	
	7.6.2.10	Interrupt Set-Pending Register 2 Interrupt Clear-Pending Register 1	
	7.6.2.11	Interrupt Clear-Pending Register 2	
	7.6.2.12	Interrupt Priority Register	
	7.6.2.14	Vector Table Offset Register	
	7.6.2.15	Application Interrupt and Reset Control Register	
	7.6.2.16	System Handler Priority Register	
	7.6.2.17	System Handler Control and State Register	
7.0	6.3 Cl	ock generator registers	
	7.6.3.1	CGIMCGA(CG Interrupt Mode Control Register A)	
	7.6.3.2	CGIMCGB(CG Interrupt Mode Control Register B)	
	7.6.3.3	CGIMCGC(CG Interrupt Mode Control Register C)	
	7.6.3.4	CGIMCGD(CG Interrupt Mode Control Register D)	
	7.6.3.5	CGICRCG(CG Interrupt Request Clear Register)	
	7.6.3.6	CGNMIFLG(NMI Flag Register)	

#### 7.6.3.7 CGRSTFLG (Reset Flag Register)

# 8. Input/Output Ports

8.1 Port Functions	
8.1.1 Function Lists	
8.1.2 Port Registers Outline	
<ul><li>8.1.2 Port Registers Outline</li><li>8.1.3 Port States in STOP Mode</li></ul>	
8.1.4 Precautions for Mode Transition between STOP and SLEEP	
8.2 Port functions.	
8.2.1 Port A (PA0 to PA7)	
8.2.1.1 Port A Circuit Type	
8.2.1.2 Port A register	
8.2.1.3 PADATA (Port A data register)	
8.2.1.4 PACR (Port A output control register)	
8.2.1.5 PAFR1 (Port A function register 1)	
8.2.1.6 PAPUP (Port A pull-up control register)	
8.2.1.7 PAPDN (Port A pull-down control register)	
8.2.1.8 PAIE (Port A input control register)	
8.2.2 Port B (PB0 to PB7)	

8.2.2.1 Port B Circuit Type 8.2.2.2 Port B Register 8.2.2.3 PBDATA (Port B data register) 8.2.2.4 PBCR (Port B output control register) 8.2.2.5 PBFR1 (Port B function register 1) 8.2.2.6 PBPUP (Port B pull-up control register) 8.2.2.7 PBIE (Port B input control register) 8.2.3 Port C (PC0 to PC3)......117 Port C Circuit Type 8231 Port C Register 8.2.3.2 PCDATA (Port C data register) 8.2.3.3 PCPUP (Port C pull-up control register) 8.2.3.4 PCIE (Port C input control register) 8.2.3.5 8.2.4.1 Port D Circuit Type 8.2.4.2 Port D Register PDDATA (Port D data register) 8.2.4.3 8.2.4.4 PDFR1 (Port D function register 1) 8245 PDPUP (Port D pull-up control register) 8.2.4.6 PDIE (Port D input control register) 8.2.5.1 Port E Circuit Type 8.2.5.2 Port E Register 8.2.5.3 PEDATA (Port E data register) 8.2.5.4 PECR (Port E output control register) 8.2.5.5 PEFR1(Port E function register 1) PEFR2(Port E function register 2) 8.2.5.6 8.2.5.7 PEOD (Port E open drain control register) 8.2.5.8 PEPUP (Port E pull-up control register) 8.2.5.9 PEIE (Port E input control register) Port F Circuit Type 8261 Port F Register 8.2.6.2 PFDATA (Port F data register) 8.2.6.3 PFCR (Port F output control register) 8.2.6.4 PFFR1(Port F function register 1) 8.2.6.5 PFFR2(Port F function register 2) 8266 8.2.6.7 PFOD (Port F open drain control register) PFPUP (Port F pull-up control register) 8268 PFIE (Port F input control register) 8.2.6.9 8.2.7 Port G (PG0 to PG7).. 8.2.7.1 Port G Circuit Type 8.2.7.2 Port G Register 8.2.7.3 PGDATA (Port G data register) 8.2.7.4 PGCR (Port G output control register) 8.2.7.5 PGFR1(Port G function register 1) 8.2.7.6 PGOD (Port G open drain control register) 8.2.7.7 PGPUP (Port G pull-up control register) 8.2.7.8 PGIE (Port G input control register) 8.2.8.1 Port H Circuit Type 8.2.8.2 Port H Register 8.2.8.3 PHDATA (Port H data register) 8.2.8.4 PHCR (Port H output control register) 8.2.8.5 PHFR1(Port H function register 1) 8.2.8.6 PHPUP (Port H pull-up control register) 8.2.8.7 PHIE (Port H input control register) 8291 Port I Circuit Type 8292 Port I Register 8.2.9.3 PIDATA(Port I data register) 8294 PICR (Port I output control register) 8.2.9.5 PIFR1(Port I function register 1) 8296 PIPUP (Port I pull-up control register) 8.2.9.7 PIIE (Port I input control register) 8.2.10 Port J (PJ0 to PJ7)..... 8.2.10.1 Port J Circuit Type Port J Register 8.2.10.2 8.2.10.3 PJDATA (Port J data register) 8.2.10.4 PJCR (Port J output control register) 8.2.10.5 PJFR1(Port J function register 1) 8.2.10.6 PJPUP (Port J pull-up control register) 8.2.10.7 PJIE (Port J input control register)

Port K Circuit Type

Port K Register

8.2.11.1

8.2.11.2

8.2.	.11.3 PKDATA(Port K data register)	
	.11.4 PKCR (Port K output control register)	
8.2.	.11.5 PKFR1(Port K function register 1)	
	.11.6 PKFR2(Port K function register 2)	
	.11.7 PKPUP (Port K pull-up control register)	
	.11.8 PKIE (Port K input control register)	1.5.5
8.3 B	Block Diagrams of Ports	
8.3.1	Port Types	
8.3.2	Туре Т1	
8.3.3	Туре Т2	
8.3.4	Туре Т3	
8.3.5	Туре Т4	
8.3.6	Туре5 Т5	
8.3.7	Туре Тб	
8.3.8	Туре Т7	
8.3.9	Туре Т8	
8.3.10	51	
8.3.11	51	
8.3.12	51	
8.3.13	51	
8.3.14	51 -	
8.3.15	51	
8.3.16	51	
8.3.17	51	
8.3.18	51	
8.3.19	51	
8.4 A	Appendix (Port setting List)	
8.4.1	Port A Setting	
8.4.2	Port B Setting	
8.4.3	Port C Setting	
8.4.4	Port D Setting	
8.4.5	Port E Setting	
8.4.6	Port F Setting	
8.4.7	Port G Setting	
8.4.8	Port H Setting	
8.4.9	Port I Setting	
8.4.10	Port J Setting	
8.4.11	Port K Setting	

# 9. 16-bit Timer/Event Counters(TMRB)

9.1	Outline	
9.2	Differences in the Specifications	
	Configuration	
9.4	Registers	
9.4.1		
9.4.2	2 TBxEN (Enable register)	
9.4.3	3 TBxRUN(RUN register)	
9.4.4	- (	
9.4.5	- (	
9.4.6		
9.4.7	7 TBxST(Status register)	
9.4.8		
9.4.9		
9.4.1		
9.4.1		
9.4.1		
9.4.1	13 TBxCP1(Capture register 1)	
9.5	Description of Operations for Each Circuit	
9.5.1	1 Prescaler	
9.5.2	2 Up-counter (UC)	
9.5.3	3 Timer registers (TBxRG0, TBxRG1)	
9.5.4	4 Capture	

9.5.5	Capture registers (TBxCP0, TBxCP1)	
9.5.6	Up-counter capture register (TBxUC)	
9.5.7	Comparators (CP0, CP1)	
9.5.8	Timer Flip-flop (TBxFF0)	
9.5.9	Capture interrupt (INTCAPx0, INTCAPx1)	
9.6 D	escription of Operations for Each Mode	
9.6.1	16-bit Interval Timer Mode	
9.6.2	16-bit Event Counter Mode	
9.6.3	16-bit PPG (Programmable Pulse Generation) Output Mode	
9.6.4	Timer synchronous mode	
9.7 A	pplications using the Capture Function	
9.7.1	One-shot pulse output triggered by an external pulse	
9.7.2	Frequency measurement	
9.7.3	Pulse width measurement	
9.7.4	Time Difference Measurement	

#### 10. Serial Channel (SIO/UART)

10.1	Overview	
10.2	Difference in the Specifications of SIO Modules	
10.3	Configuration	
10.4	Registers Description	
10.4	e i	
10.4	6	
10.4		
10.4		
10.4	.5 SCxMOD0 (Mode Control Register 0)	219
10.4	······································	
10.4	······································	
10.4		
10.4		
10.4		
10.4		
10.4		
10.4		
10.5	Operation in Each Mode	230
10.6	Data Format	231
10.6	1 Data Format List	231
10.6	2 Parity Control	232
	0.6.2.1 Transmission	
	0.6.2.2 Receiving Data	
10.6		
10.7	Clock Control	233
10.7		
10.7		237
-	0.7.2.1 Baud Rate Generator 0.7.2.2 Clock Selection Circuit	
-		241
10.8		
10.8	6	
10.8 10.8		
10.9	8	
10.10	Error Flag	242
10.1	0.1 OERR Flag	242
10.1	0.2 PERR Flag	243
10.1	9	
10.11	Receive	244
10.1	1.1 Receive Counter	244
10.1	1.2 Receive Control Unit	244
	0.11.2.1 I/O interface mode	
1	0.11.2.2 UART Mode	

10.11.3 Receive Operation	ł
10.11.3.1 Receive Buffer	
10.11.3.2 Receive FIFO Operation	
10.11.3.3 I/O interface mode with SCLK output	
10.11.3.4 Read Received Data	
10.11.3.5 Wake-up Function	
10.11.3.6 Overrun Error	
10.12 Transmission	
10.12.1 Transmission Counter	
10.12.2 Transmission Control	i
10.12.2.1 I/O Interface Mode	
10.12.2.2 UART Mode	
10.12.3 Transmit Operation	
10.12.3.1 Operation of Transmission Buffer	
10.12.3.2     Transmit FIFO Operation       10.12.3.3     I/O interface Mode/Transmission by SCLK Output	
10.12.3.4 Under-nue error	
10.13 Handshake function	252
10.14 Interrupt/Error Generation Timing	
10.14.1 RX Interrupts	
10.14.1.1 Single Buffer / Double Buffer	
10.14.1.2 FIFO	
10.14.2 TX interrupts	
10.14.2.1 Single Buffer / Double Buffer 10.14.2.2 FIFO	
10.14.3 Error Generation	
10.14.3.1 UART Mode	
10.14.3.2 IO Interface Mode	
10.15 Software Reset	255
10.16 Operation in Each Mode	
10.16.1 Mode 0 (I/O interface mode)	
10.16.1.1 Transmitting Data	
10.10.1.1 Transmitting Data 10.16.1.2 Receive	
10.16.1.3 Transmit and Receive (Full-duplex)	
10.16.2 Mode 1 (7-bit UART mode)	!
10.16.3 Mode 2 (8-bit UART mode)	
10.16.4 Mode 3 (9-bit UART mode)	
10.16.4.1 Wakeup function	
10.16.4.2 Protocol	

# **<u>11.</u>** Serial Bus Interface (I2C/SIO)

11.1 C	Configuration	
11.2 R	Register	
11.2.1		
11.3 Ľ	2C Bus Mode Data Format	
11.4 C	Control Registers in the I2C Bus Mode	
11.4.1	SBIxCR0(Control register 0)	
11.4.2	SBIxCR1(Control register 1)	
11.4.3	SBIxCR2(Control register 2)	
11.4.4	SBIxSR (Status Register)	
11.4.5	SBIxBR0(Serial bus interface baud rate register 0)	
11.4.6	SBIxDBR (Serial bus interface data buffer register)	
11.4.7	SBIxI2CAR (I2Cbus address register)	
11.5 C	Control in the I2C Bus Mode	
11.5.1	Serial Clock	
11.5.1	.1 Clock source	
11.5.1		
11.5.2	Setting the Acknowledgement Mode	
11.5.3	Setting the Number of Bits per Transfer	
11.5.4	Slave Addressing and Address Recognition Mode	
11.5.5	Operating mode	
11.5.6	Configuring the SBI as a Transmitter or a Receiver	
11.5.7	Configuring the SBI as a Master or a Slave	
11.5.8	Generating Start and Stop Conditions	

11.5.9 Interrupt Service Request and Release..... 285 11.5.10 11.5.11 11 5 12 11.5.13 11.5.14 11.5.15 11.5.16 11.6 11.6.1 11.6.2 11.6.2.1 Master mode 11.6.2.2 Slave mode 11.6.3 11.6.3.1 Master mode ( $\langle MST \rangle = "1"$ ) Slave mode (<MST> = "0") 11632 1164 11.6.5 11.7 11.7.1 1172 11.7.3 11.7.4 1175 11.7.6 11.8 11811 Clock source Shift Edge 11.8.1.2 11.8.2.1 8-bit transmit mode 11.8.2.2 8-bit receive mode 11.8.2.3 8-bit transmit/receive mode 11.8.2.4 Data retention time of the last bit at the end of transmission

#### 12. Consumer Electronics Control (CEC)

12.1	Outline	
12.1.1	Reception	
12.1.2	Transmission	
12.1.3	Precautions	
12.2	Block Diagram	
12.3	Registers	
12.3.1	8	
12.3.2	CECEN (CEC Enable Register)	
12.3.3	CECADD (Logical Address Register )	
12.3.4	CECRESET (Software Reset Register)	
12.3.5	CECREN (Receive Enable Register)	
12.3.6	CECRBUF (Receive Buffer Register)	
12.3.7	CECRCR1 (Receive Control Register 1)	
12.3.8	CECRCR2 (Receive Control Register 2)	
12.3.9	CECRCR3 (Receive Control Register 3 )	
12.3.1	0 CECTEN (Transmit Enable Register)	
12.3.1	1 CECTBUF (Transmit Buffer Register)	
12.3.1	2 CECTCR (Transmit Control Register)	
12.3.1	3 CECRSTAT (Receive Interrupt Status Register)	
12.3.14	4 CECTSTAT (Transmit Interrupt Status Register)	
12.4	Operations	
12.4.1	Sampling clock	
12.4.2	Reception	
12.4	4.2.1 Basic Operation	
12.4	4.2.2 Preconfiguration	

12.4.2.3Enabling Reception12.4.2.4Detecting Error Interrupt



#### 13. Remote control signal preprocessor (RMC)

13.1 Basic operation	
13.1.1 Reception of Remote Control Signal	
13.2 Block Diagram	
13.3 Registers.	
13.3.1 Register List	
13.3.2 RMCxEN (Enable Register)	
13.3.3 RMCxREN (Receive Enable Register)	
13.3.4 RMCxRBUF1(Receive Data Buffer Register 1)	
13.3.5 RMCxRBUF2(Receive Data Buffer Register 2)	
13.3.6 RMCxRBUF3(Receive Data Buffer Register 3)	
13.3.7 RMCxRCR1(Receive Control Register 1)	
13.3.8 RMCxRCR2(Receive Control Register 2)	
13.3.9 RMCxRCR3(Receive Control Register 3)	
13.3.10 RMCxRCR4(Receive Control Register 4)	
13.3.11 RMCxRSTAT (Receive Status Register)	
13.4 Operation Description	
13.4.1 Reception of Remote Control Signal	
13.4.1.1 Sampling clock	
13.4.1.2 Basic operation	
13.4.1.3 Preparation	
13.4.1.4 Enabling Reception	
13.4.1.5 Stopping Reception	
13.4.1.6 Receiving Remote Control Signal without Leader in Waiting Leader	
13.4.1.7 A Leader only with Low Width	

13.4.1.8 Receiving a Remote Control Signal in a Phase Method

#### 14. Analog/Digital Converter (ADC)

14.1	Dutline	
14.2 (	Configuration	
	Registers	
14.3.1	Register list	
14.3.2	ADCBAS (Conversion Accuracy Setting Register)	
14.3.3	ADCLK (Conversion Clock Setting Register)	
14.3.4	ADMOD0 (Mode Control Register 0)	
14.3.5	ADMOD1 (Mode Control Register 1)	
14.3.6	ADMOD2 (Mode Control Register 2)	
14.3.7	ADMOD4 (Mode Control Register 4)	
14.3.8	ADMOD3 (Mode Control Register 3)	
14.3.9	ADMOD5 (Mode Control Register 5)	
14.3.10		
14.3.11	ADREG19 (AD Conversion Result Register 19)	
14.3.12	ADREG2A (AD Conversion Result Register 2A)	
14.3.13	ADREG3B (AD Conversion Result Register 3B)	
14.3.14	ADREG4C (AD Conversion Result Register 4C)	
14.3.15	ADREG5D (AD Conversion Result Register 5D)	
14.3.16	ADREG6E (AD Conversion Result Register 6E)	
14.3.17	ADREG7F (AD Conversion Result Register 7F)	
14.3.18	ADREGSP (AD Conversion Result Register SP)	

14.3.19	ADCMP0 (AD Conversion Result Comparison Register 0)	
14.3.20	ADCMP1 (AD Conversion Result Comparison Register 1)	
14.4 D	escription of Operations	
14.4.2	Analog Reference Voltage AD Conversion Mode	
14.4.2		
14.4.2	.2 Top-priority AD conversion	
14.4.3	AD Monitor Function	
14.4.4	Selecting the Input Channel	
14.4.5	AD Conversion Details	
14.4.5	.1 Starting AD Conversion	
14.4.5	.2 AD Conversion	
14.4.5	.3 Top-priority AD conversion during normal AD conversion	
14.4.5	.4 Stopping Repeat Conversion Mode	
14.4.5	.5 Reactivating normal AD conversion	
14.4.5	.6 Conversion completion	

- 14.4.5.5 14.4.5.6 14.4.5.7
- Interrupt generation timings and AD conversion result storage register

# 15. Watchdog Timer(WDT)

15.1 Configuration	
15.2 Register	
15.2.1 WDMOD(Watchdog Timer Mode Register)	
15.2.2 WDCR (Watchdog Timer Control Register)	
15.3 Operations	
15.3.1 Basic Operation	
15.3.2 Operation Mode and Status	
15.4 Operation when malfunction (runaway) is detected	
15.4.1 INTWDT interrupt generation.	
15.4.2 Internal reset generation	
15.5 Control register	
15.5.1 Watchdog Timer Mode Register (WDMOD)	
15.5.2 Watchdog Timer Control Register(WDCR)	
15.5.3 Setting example	
15.5.3.1 Disabling control	
15.5.3.2 Enabling control	
15.5.3.3 Watchdog timer clearing control	
15.5.3.4 Detection time of watchdog timer	

# 16. Real Time Clock (RTC)

16.1 Function 16.2 Block Diagram	107
16.3 Detailed Description Register	
16.3.1 Register List	
16.3.2 Control Register	
16.3.3 Detailed Description of Control Register	
16.3.3.1 RTCSECR (Second column register (for PAGE0 only))	
16.3.3.2 RTCMINR (Minute column register (PAGE0/1))	
16.3.3.3 RTCHOURR (Hour column register(PAGE0/1))	
16.3.3.4 RTCDAYR (Day of the week column register(PAGE0/1))	
16.3.3.5 RTCDATER (Day column register (for PAGE0/1 only))	
16.3.3.6 RTCMONTHR (Month column register (for PAGE0 only))	
16.3.3.7 RTCMONTHR (Selection of 24-hour clock or 12-hour clock24(for PAGE1 only))	
16.3.3.8 RTCYEARR (Year column register (for PAGE0 only))	
16.3.3.9 RTCYEARR (Leap year register (for PAGE1 only))	
16.3.3.10 RTCPAGER(PAGE register(PAGE0/1))	
16.3.3.11 RTCRESTR (Reset register (for PAGE0/1))	
16.4 Operational Description	
16.4.1 Reading clock data	
16.4.2 Writing clock data	
16.4.3 Entering the Low Power Consumption Mode	

16.5	Alarm function	
16.5.1	"Low" pulse (when the alarm register corresponds with the clock)	
16.5.2	1Hz cycle "Low" pulse1 Hz	
	16Hz cycle "Low" pulse16 Hz	

# 17. Flash Memory Operation

17.11       Features       423         17.12       Block Diagram of the Flash Memory Section.       425         17.2       Operation Mode.	17.1 Flash Memory	
17.2       Operation Mode.	· ·	
17.2       Operation Mode.	17.1.2 Block Diagram of the Flash Memory Section	
17.2.1       Reset Operation.       427         17.2.2       User Boot Mode (Single chip mode).       428         17.2.1       (1-A) Method 1: Storing a Programming Routine in the Flash Memory       428         17.2.2       (1-B) Method 2: Transferring a Programming Routine from an External Host       436         17.2.3       Single Boot Mode.       439         17.2.4       Configuration for Single Boot Mode.       439         17.2.5       Memory Map.       440         17.2.6       Interface specification.       441         17.2.7       Data Transfer Format.       442         17.2.8       Restrictions on internal memories.       442         17.2.9       Transfer Format for Single Boot Mode commands.       442         17.2.9       Transfer Format for Single Boot Mode commands.       442         17.2.9       Transfer Format for Single Boot Mode commands.       442         17.2.9       The Show Product Information       442         17.2.9       The Show Product Information       442         17.2.9       The Show Product Information Command       449         17.2.10       Operation of Boot Program.       449         17.2.10       RAM Transfer Command       449         17.2.10       Row Transfer Form	e ,	
17.2.2       User Boot Mode (Single chip mode)	$\mathbf{r}$	
17.2.1       (1-A) Method 1: Storing a Programming Routine in the Flash Memory         17.2.2       (1-B) Method 2: Transferring a Programming Routine from an External Host         17.2.3       Single Boot Mode.       436         17.2.3       (1-A) Using the Program in the On-Chip Boot ROM       439         17.2.4       Configuration for Single Boot Mode.       439         17.2.5       Memory Map.       440         17.2.6       Interface specification.       441         17.2.7       Data Transfer Format.       442         17.2.9       Transfer Format for Single Boot Mode commands.       442         17.2.9       Transfer Format for Single Boot Mode commands.       442         17.2.9.1       RAM Transfer       442         17.2.9.2       Show Flash Memory SUM       172.94         17.2.9.3       Transfer Format for the Show Product Information       172.94         17.2.10       Operation of Boot Program       449         17.2.10       RAM Transfer Command       449         17.2.10       Show Flash Memory SUM Command       172.10.4         17.2.10       Show Product Information Command       172.10.5         17.2.10       Show Product Information Command       172.10.7         17.2.10.4       Chip and Protection Bit E	1	
17.2.2       (1-B) Method 2: Transferring a Programming Routine from an External Host         17.2.3       Single Boot Mode		
17.2.3       Single Boot Mode.       436         17.2.4       Configuration for Single Boot Mode       439         17.2.5       Memory Map.       440         17.2.6       Interface specification.       441         17.2.7       Data Transfer Format.       442         17.2.8       Restrictions on internal memories.       442         17.2.9       Transfer Format.       442         17.2.9       Insafer       442         17.2.9.1       RAM Transfer       442         17.2.9.2       Show Flash Memory SUM       442         17.2.9.3       Transfer Format for the Show Product Information       17.2.9.4         17.2.10       Operation of Boot Program.       449         17.2.10       Operation of Boot Program.       449         17.2.10.1       RAM Transfer Command       449         17.2.10.2       Show Flash Memory SUM Command       449         17.2.10.3       Show Product Information Command       449         17.2.10.4       Chip Erase and Protect Bit Erase       449         17.2.10.5       Acknowledge Responses       17.2.10.5       Acknowledge Responses         17.2.10.4       Chip Erase Command       449       17.2.10.6       Acknowledge Responses       463 </td <td></td> <td></td>		
17.2.4       Configuration for Single Boot Mode       439         17.2.5       Memory Map       440         17.2.6       Interface specification       441         17.2.6       Interface specification       441         17.2.7       Data Transfer Format       442         17.2.8       Restrictions on internal memories       442         17.2.9       Transfer Format       442         17.2.9.1       RAM Transfer       442         17.2.9.2       Show Flash Memory SUM       442         17.2.9.3       Transfer Format for the Show Product Information       442         17.2.9.4       Chip Erase and Protect Bit Erase       449         17.2.10       Operation of Boot Program       449         17.2.10.3       Show Product Information Command       449         17.2.10.4       Chip and Protection Bit Erase Command       449         17.2.10.5       Acknowledge Responses       449         17.2.10.4       Obit Program Mode       449         17.2.10.5       Acknowledge Responses       449         17.2.10.4       Chip and Protection Bit Erase Command       449         17.2.10.5       Acknowledge Responses       451         17.2.10.6       Determination of a Serial Operatio		
17.2.5       Memory Map.       440         17.2.6       Interface specification.       441         17.2.7       Data Transfer Format.       442         17.2.8       Restrictions on internal memories.       442         17.2.9       Transfer Format for Single Boot Mode commands.       442         17.2.9       Transfer Format for Single Boot Mode commands.       442         17.2.9       Transfer Format for the Show Product Information       442         17.2.9.3       Transfer Format for the Show Product Information       72.9.0         17.2.10       Operation of Boot Program.       449         17.2.10.1       RAM Transfer Command       449         17.2.10.2       Show Flash Memory SUM Command       449         17.2.10.3       Show Product Information Command       449         17.2.10.4       Chip and Protection Bit Erase Command       449         17.2.10.5       Acknowledge Response       72.10.1       Frash Memory Sum Command         17.2.10.6       Determination of a Strial Operation Mode       72.10.2       Frash Memory Sum Command         17.2.10.9       Checksum Calculation       116       463       463         17.3.1       Block Configuration       464       463         17.3.1.1       Block	17.2.3.1 (2-A) Using the Program in the On-Chip Boot ROM	
17.2.6       Interface specification       441         17.2.7       Data Transfer Format       442         17.2.8       Restrictions on internal memories       442         17.2.9       Transfer Format for Single Boot Mode commands       442         17.2.9.1       RAM Transfer       442         17.2.9.2       Show Flash Memory SUM       442         17.2.9.3       Transfer Format for the Show Product Information       17.2.94         17.2.10       Operation of Boot Program       449         17.2.10.1       RAM Transfer Command       449         17.2.10.2       Show Flash Memory SUM Command       449         17.2.10.3       Show Froduct Information Command       449         17.2.10.4       Chip Barse command       449         17.2.10.5       Acknowledge Responses       449         17.2.10.6       Determination of a Serial Operation Mode       17.2.10.8       Calculation         17.2.10.8       Calculation of the Show Flash Memory Sum Command       17.2.10.9       Checksum Calculation         17.2.10.8       Calculation       Transfer Forgram Flowchart       463         17.3       On-board Program Flowchart       463       464         17.3.1.1       Block Configuration       464       17.3	17.2.4 Configuration for Single Boot Mode	
17.2.7       Data Transfer Format	17.2.5 Memory Map	
17.2.8       Restrictions on internal memories.       442         17.2.9       Transfer Format for Single Boot Mode commands.       442         17.2.9.1       RAM Transfer       442         17.2.9.2       Show Flash Memory SUM       442         17.2.9.3       Transfer Format for the Show Product Information       17.2.9.3         17.2.9.4       Chip Erase and Protect Bit Erase       449         17.2.10       Operation of Boot Program.       449         17.2.10.1       RAM Transfer Command       449         17.2.10.2       Show Flash Memory SUM Command       449         17.2.10.3       Show Product Information Command       449         17.2.10.4       Chip and Protection Bit Erase Command       449         17.2.10.5       Acknowledge Responses       449         17.2.10.6       Determination of a Serial Operation Mode       472.10.7         17.2.10.7       Password       472.10.9       Checksum Calculation         17.2.10.9       Checksum Calculation       463       463         17.3       On-board Programming of Flash Memory (Rewrite/Erase)       464         17.3.1       Block Configuration       464         17.3.1       Block Configuration       464         17.3.1       Block Co	17.2.6 Interface specification	
17.2.9       Transfer Format for Single Boot Mode commands	17.2.7 Data Transfer Format	
17.2.9       Transfer Format for Single Boot Mode commands	17.2.8 Restrictions on internal memories.	
17.2.9.1       RAM Transfer         17.2.9.2       Show Flash Memory SUM         17.2.9.3       Transfer Format for the Show Product Information         17.2.9.4       Chip Erase and Protect Bit Erase         17.2.10       Operation of Boot Program		
17.2.9.3       Transfer Format for the Show Product Information         17.2.9.4       Chip Erase and Protect Bit Erase         17.2.10       Operation of Boot Program	e	· · · · · · · · · · · · · · · · · · ·
17.2.9.4       Chip Erase and Protect Bit Erase         17.2.10       Operation of Boot Program	17.2.9.2 Show Flash Memory SUM	
17.2.10       Operation of Boot Program	17.2.9.3 Transfer Format for the Show Product Information	
17.2.10.1       RAM Transfer Command         17.2.10.2       Show Flash Memory SUM Command         17.2.10.3       Show Product Information Command         17.2.10.4       Chip and Protection Bit Erase Command         17.2.10.5       Acknowledge Responses         17.2.10.6       Determination of a Serial Operation Mode         17.2.10.7       Password         17.2.10.8       Calculation of the Show Flash Memory Sum Command         17.2.10.9       Checksum Calculation         17.2.11       General Boot Program Flowchart	17.2.9.4 Chip Erase and Protect Bit Erase	
17.2.10.2       Show Flash Memory SUM Command         17.2.10.3       Show Product Information Command         17.2.10.4       Chip and Protection Bit Erase Command         17.2.10.5       Acknowledge Responses         17.2.10.6       Determination of a Serial Operation Mode         17.2.10.7       Password         17.2.10.8       Calculation of the Show Flash Memory Sum Command         17.2.10.9       Checksum Calculation         17.2.11       General Boot Program Flowchart.         17.3       On-board Programming of Flash Memory (Rewrite/Erase)         464         17.3.1       Flash Memory.         464         17.3.1.1       Block Configuration         17.3.1.2       Basic operation         17.3.1.3       Reset(Hardware reset)         17.3.1.4       Commands         17.3.1.5       Flash control/ status register         17.3.1.6       List of Command Sequences         17.3.1.7       Address bit configuration for bus write cycles		
17.2.10.3       Show Product Information Command         17.2.10.4       Chip and Protection Bit Erase Command         17.2.10.5       Acknowledge Responses         17.2.10.6       Determination of a Serial Operation Mode         17.2.10.7       Password         17.2.10.8       Calculation of the Show Flash Memory Sum Command         17.2.10.9       Checksum Calculation         17.2.11       General Boot Program Flowchart.         463       463         17.3       On-board Programming of Flash Memory (Rewrite/Erase).         464       17.3.1         17.3.1.1       Block Configuration         17.3.1.2       Basic operation         17.3.1.3       Reset(Hardware reset)         17.3.1.4       Commands         17.3.1.5       Flash control/ status register         17.3.1.6       List of Command Sequences         17.3.1.7       Address bit configuration for bus write cycles		
17.2.10.4       Chip and Protection Bit Erase Command         17.2.10.5       Acknowledge Responses         17.2.10.6       Determination of a Serial Operation Mode         17.2.10.7       Password         17.2.10.8       Calculation of the Show Flash Memory Sum Command         17.2.10.9       Checksum Calculation         17.2.11       General Boot Program Flowchart		
17.2.10.5       Acknowledge Responses         17.2.10.6       Determination of a Serial Operation Mode         17.2.10.7       Password         17.2.10.8       Calculation of the Show Flash Memory Sum Command         17.2.10.9       Checksum Calculation         17.2.10.9       Checksum Calculation         17.2.11       General Boot Program Flowchart		
17.2.10.6       Determination of a Serial Operation Mode         17.2.10.7       Password         17.2.10.8       Calculation of the Show Flash Memory Sum Command         17.2.10.9       Checksum Calculation         17.2.11       General Boot Program Flowchart		
17.2.10.7       Password         17.2.10.8       Calculation of the Show Flash Memory Sum Command         17.2.10.9       Checksum Calculation         17.2.11       General Boot Program Flowchart		
17.2.10.8       Calculation of the Show Flash Memory Sum Command         17.2.10.9       Checksum Calculation         17.2.11       General Boot Program Flowchart	•	
17.2.10.9       Checksum Calculation         17.2.11       General Boot Program Flowchart		
17.2.11       General Boot Program Flowchart	5	
<b>17.3</b> On-board Programming of Flash Memory (Rewrite/Erase)		163
17.3.1       Flash Memory		
<ul> <li>17.3.1.1 Block Configuration</li> <li>17.3.1.2 Basic operation</li> <li>17.3.1.3 Reset(Hardware reset)</li> <li>17.3.1.4 Commands</li> <li>17.3.1.5 Flash control/ status register</li> <li>17.3.1.6 List of Command Sequences</li> <li>17.3.1.7 Address bit configuration for bus write cycles</li> </ul>		
<ul> <li>17.3.1.2 Basic operation</li> <li>17.3.1.3 Reset(Hardware reset)</li> <li>17.3.1.4 Commands</li> <li>17.3.1.5 Flash control/ status register</li> <li>17.3.1.6 List of Command Sequences</li> <li>17.3.1.7 Address bit configuration for bus write cycles</li> </ul>		
<ul> <li>17.3.1.3 Reset(Hardware reset)</li> <li>17.3.1.4 Commands</li> <li>17.3.1.5 Flash control/ status register</li> <li>17.3.1.6 List of Command Sequences</li> <li>17.3.1.7 Address bit configuration for bus write cycles</li> </ul>		
<ul> <li>17.3.1.4 Commands</li> <li>17.3.1.5 Flash control/ status register</li> <li>17.3.1.6 List of Command Sequences</li> <li>17.3.1.7 Address bit configuration for bus write cycles</li> </ul>		
<ul> <li>17.3.1.5 Flash control/ status register</li> <li>17.3.1.6 List of Command Sequences</li> <li>17.3.1.7 Address bit configuration for bus write cycles</li> </ul>		
<ul><li>17.3.1.6 List of Command Sequences</li><li>17.3.1.7 Address bit configuration for bus write cycles</li></ul>		
17.3.1.7 Address bit configuration for bus write cycles	6	
1/.3.1.6 FIOWCHAIL	17.3.1.8 Flowchart	

# **18. ROM protection**

18.1	Outline	
	Future	
18.2.1	Write/ erase-protection function	
18.2.2	Security function	
18.3 I	Register	
18.3.1	FCFLCS (Flash control register)	
18.3.2	FCSECBIT(Security bit register)	
18.4 V	Writing and erasing	
18.4.1	Protection bits	
18.4.2	Security bit	

#### **19. Electrical Characteristics**

19.1 Absolute Maximum Ratings	
19.2 DC Electrical Characteristics (1/3)	
19.3 DC Electrical Characteristics (2/3)	
19.4 DC Electrical Characteristics (3/3)	
19.4.1 TMPM330FDFG/TMPM330FYFG	
19.4.2 TMPM330FWFG	
19.5 10-bit ADC Electrical Characteristics	
19.6 AC Electrical Characteristics	
19.6.1 AC measurement condition.	
19.6.2 Serial Channel (SIO/UART) 19.6.2.1 I/O Interface mode	
19.6.3 Serial Bus Interface(I2C/SIO)	492
19.6.5 Serial Dus Interface(12C/SIO)	
19.6.3.2 Clock-Synchronous 8-Bit SIO mode	
19.6.4 Event Counter	
19.6.5 Capture	
19.6.6 External Interrupt	
19.6.7 NMI	
19.6.8 SCOUT Pin AC Characteristic	
19.6.9 Debug Communication	
19.6.9.1 SWD Interface 19.6.9.2 JTAG Interface	
19.6.10 ETM Trace	497
19.7 Flash Characteristics	
19.7.1 Rewriting	
19.8 Recommended Oscillation Circuit	
19.8.1 Ceramic oscillator 19.8.2 Crystal oscillator	
19.9 Handling Precaution	
19.9.1 Solderability	
19.9.2 Power-on sequence	

#### 20. Port Section Equivalent Circuit Schematic

20.1	PA0, PB1 to 2, PE1 to 3, PE5 to 6, PF1 to 7, PG0 to 6, PH0 to 7, PI6 to 7, PJ0	to 3, PJ6 to 7
	PA1	
20.3	PA2 to 7, PB0, PB3 to 7, PE0, PE4, PF0, PG7, PI0 to 5, PJ4 to 5, PK1 to 2	
20.4	PC0 to 3, PD4 to 7	
20.5	PD0 to 3	
20.6	РКО	
20.7	NMI, MODE	
20.8	RESET	
20.9	X1, X2	504
20.10	XT1, XT2	504
	VREFH, AVSS	

#### 21. Package Dimensions

# TMPM330FDFG/FYFG/FWFG

The TMPM330FDFG/FYFG/FWFG is a 32-bit RISC microprocessor series with an ARM Cortex<sup>™</sup>-M3 microprocessor core.

Product Name	ROM (FLASH) RAM		Package
TMPM330FDFG	512 Kbyte	32 Kbyte	
TMPM330FYFG	256 Kbyte	16 Kbyte	LQFP100-P-1414-0.50H
TMPM330FWFG	128 Kbyte	8 Kbyte	

Features of the TMPM330FDFG/FYFG/FWFG are as follows:

#### 1.1 Features

- 1. ARM Cortex-M3 microprocessor core
  - a. Improved code efficiency has been realized through the use of Thumb $\mathbb{R}$  -2 instruction.
    - · New 16-bit Thumb instructions for improved program flow
    - New 32-bit Thumb instructions for improved performance
    - New Thumb mixed 16-/32-bit instruction set can produce faster, more efficient code.
  - b. Both high performance and low power consumption have been achieved.

[High performance]

- A 32-bit multiplication  $(32 \times 32 = 32 \text{ bit})$  can be executed with one clock.
- · Division takes between 2 and 12 cycles depending on dividend and devisor

[Low power consumption]

- Optimized design using a low power consumption library
- Standby function that stops the operation of the micro controller core
- c. High-speed interrupt response suitable for real-time control
  - An interruptible long instruction.
  - Stack push automatically handled by hardware.
- 2. On Chip program memory and data memory

Product name	On chip Flash ROM	On chip RAM
TMPM330FDFG	512 Kbyte	32 Kbyte
TMPM330FYFG	256 Kbyte	16 Kbyte
TMPM330FWFG	128 Kbyte	8 Kbyte

- 3. 16-bit timer (TMRB): 10 channels
  - 16-bit interval timer mode
  - 16-bit event counter mode
  - 16-bit PPG output
  - Input capture function
- 4. Real time clock (RTC): 1 channel
  - Clock (hour, minute and second)
  - Calendar (month, week, date and leap year)

- Time correction + or 30seconds (by software)
- Alarm (Alarm output)
- Alarm interrupt
- 5. Watchdog timer (WDT): 1 channel

Watchdog timer (WDT) generates a reset or a non-maskable interrupt (NMI).

6. General-purpose serial interface (SIO/UART): 3 channels

Either UART mode or synchronous mode can be selected (4byte FIFO equipped)

7. Serial bus interface (I2C/SIO): 3channels

Either I2C bus mode or synchronous mode can be selected.

8. CEC function (CEC): 1 channel

Transmission and reception per 1 byte.

9. Remote control signal preprocessor (RMC): 2 channels

Can receive up to 72bit data at a time

- 10. 10-bit AD converter (ADC): 12 channels
  - Start by an internal timer trigger
  - Fixed channel/scan mode
  - Single/repeat mode
  - AD monitoring 2ch
  - Conversion speed 1.15µsec. (@fsys = 40MHz)
- 11. Interrupt source
  - Internal: 42 factors...The order of precedence can be set over 7 levels
    - (except the watchdog timer interrupt).
  - External: 8 factors...The order of precedence can be set over 7 levels.
- 12. Non-maskable interrupt (NMI)

Non-maskable interrupt (NMI) is generated by a watchdog timer or a NMI pin.

- 13. Input/ output ports (PORT): 78 pins
- 14. Standby mode
  - Standby modes: IDLE, SLOW, SLEEP, STOP
  - Sub clock operation(32.768kHz):SLOW, SLEEP
- 15. Clock generator (CG)
  - On-chip PLL (quadrupled)
  - Clock gear function: The high-speed clock can be divided into 1/1, 1/2, 1/4 or 1/8.
- 16. Endian

Little endian

- 17. Maximum operating frequency: 40 MHz
- 18. Operating voltage range

2.7 V to 3.6 V (with on-chip regulator)

- 19. Temperature range
  - -20 to 85 degrees (except during Flash writing/ erasing)
  - 0 to 70 degrees (during Flash writing/ erasing)
- 20. Package

LQFP100-P-1414-0.50H (14mm × 14mm, 0.5mm pitch)

# 1.2 Block Diagram

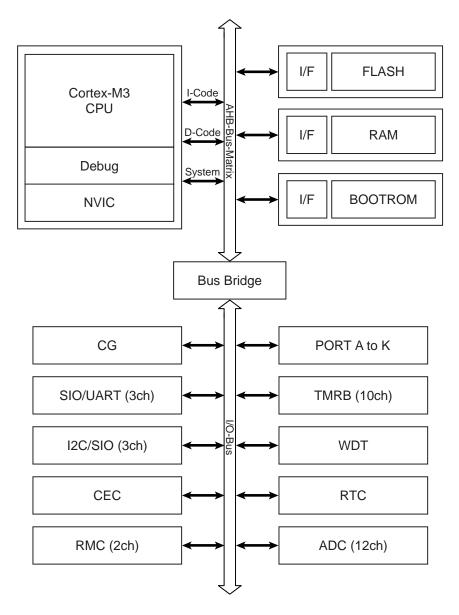


Figure 1-1 TMPM330FDFG/FYFG/FWFGBlock Diagram

# 1.3 Pin Layout (Top view)

Figure 1-2 shows the pin layout of TMPM330FDFG/FYFG/FWFG.

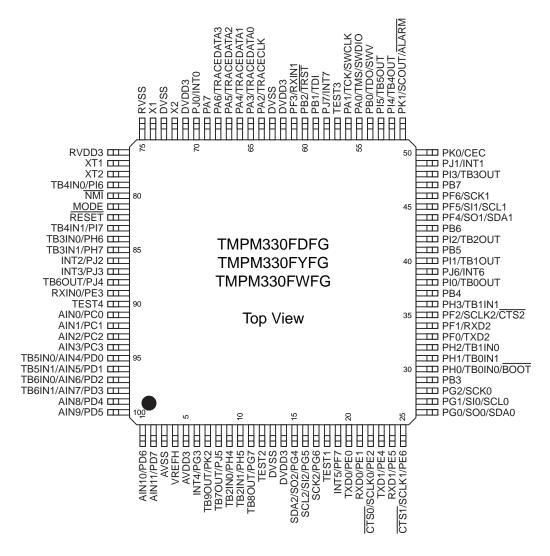


Figure 1-2 Pin Layout (LQFP100)

# 1.4 Pin names and Functions

Table 1-1 and Table 1-2 sort the input and output pins of the TMPM330FDFG/FYFG/FWFG by pin or port. Each table includes alternate pin names and functions for multi-function pins.

### 1.4.1 Sorted by Pin

#### Table 1-1 Pin Names and Functions Sorted by Pin (1/6)

Туре	Pin No.	Pin Name	Input/ Out- put	Function
Function	1	PD6 AIN10	1	Input port Analog input
Function	2	PD7 AIN11	1	Input port Analog input
PS	3	AVSS	I	AD converter: GND pin (0V) (note) AVSS must be connected to GND even if the A/D converter is not used.
PS	4	VREFH	1	Supplying the AD converter with a reference power supply. (note) VREFH must be connected to power supply even if A/D converter is not used.
PS	5	AVDD3	1	Supplying the AD converter with a power supply. (note) AVDD must be connected to power supply even if A/D converter is not used.
Function	6	PG3 INT4	1/O 1	I/O port External interrupt pin
Function	7	PK2 TB9OUT	1/O O	I/O port Timer B output
Function	8	PJ5 TB7OUT	1/O O	I/O port Timer B output
Function	9	PH4 TB2IN0	I/O I	I/O port Inputting the timer B capture trigger
Function	10	PH5 TB2IN1	I/O I	I/O port Inputting the timer B capture trigger
Function	11	PG7 TB8OUT	1/O O	I/O port Timer B output
Test	12	TEST2	-	TEST pin: (note) TEST pin must be left OPEN.
PS	13	DVSS	-	GND pin
PS	14	DVDD3	-	Power supply pin
Function	15	PG4 SDA2/SO2	I/O I/O	I/O port If the serial bus interface operates -in the I2C mode: data pin -in the SIO mode: data pin
Function	16	PG5 SCL2/SI2	1/O 1/O	I/O port If the serial bus interface operates -in the I2C mode: clock pin -in the SIO mode: data pin
Function	17	PG6 SCK2	I/O I/O	I/O port Inputting and outputting a clock if the serial bus interface operates in the SIO mode.
Test	18	TEST1	-	TEST pin: (note) TEST pin must be left OPEN.

Table 1-1 Pin Names and Functions Sorted by Pin (2/6)
---

Туре	Pin No.	Pin Name	Input/ Out- put	Function	
Function	19	PF7 INT5	I/O I	I/O port External interrupt pin	
Function	20	PE0 TXD0	1/O O	I/O port Sending serial data	
Function	21	PE1 RXD0	I/O I	I/O port Receiving serial data	
Function	22	PE2 SCLK0 CTS0	I/O I/O I	I/O port Serial clock input/ output Handshake input pin	
Function	23	PE4 TXD1	I/O O	I/O port Sending serial data	
Function	24	PE5 RXD1	I/O I	I/O port Receiving serial data	
Function	25	PE6 SCLK1 CTS1	I/O I/O I	I/O port Serial clock input/ output Handshake input pin	
Function	26	PG0 SDA0/SO0	I/O I/O	I/O port -in the I2C mode: data pin -in the SIO mode: data pin	
Function	27	PG1 SCL0/SI0	I/O I/O	I/O port -in the I2C mode: clock pin -in the SIO mode: data pin	
Function	28	PG2 SCK0	I/O I/O		
Function	29	PB3	I/O	I/O port	
Function/ Control	30	30       PH0       I/O       I/O port         30       TB0IN0       I       Inputting the timer B capture trigger         BOOT       I       Setting a single boot mode:         (note) This pin goes into single boot mode by sampling "Low" at the rise of a RESET signal.		Inputting the timer B capture trigger Setting a single boot mode:	
Function	31	PH1 TB0IN1	I/O I	I/O port Inputting the timer B capture trigger	
Function	32	PH2 TB1IN0	I/O I	I/O port Inputting the timer B capture trigger	
Function	33	PF0 TXD2	1/O O		
Function	34	PF1 RXD2	I/O I	I/O port Receiving serial data	
Function	35	PF2 SCLK2 CTS2	I/O I/O I	I/O port Serial clock input/ output Handshake input pin	

Туре	Pin No.	Pin Name	Input/ Out- put	Function	
Function	36	PH3 TB1IN1	I/O I	I/O port Inputting the timer B capture trigger	
Function	37	PB4	I/O	I/O port	
Function	38	PI0 TB0OUT	I/O O	I/O port Timer B output	
Function	39	PJ6 INT6	I/O I	I/O port External interrupt pin	
Function	40	PI1 TB1OUT	I/O O	I/O port Timer B output	
Function	41	PB5	I/O	I/O port	
Function	42	PI2 TB2OUT	I/O O	I/O port Timer B output	
Function	43	PB6	I/O	I/O port	
Function	44	PF4 SDA1/SO1	1/O 1/O	I/O port -in the I2C mode: data pin -in the SIO mode: data pin	
Function	45	PF5 SCL1/SI1	1/0 1/0	I/O port -in the I2C mode: clock pin -in the SIO mode: data pin	
Function	46	PF6 SCK1	I/O I/O	I/O port Inputting and outputting a clock if the serial bus interface operates in the SIO mode.	
Function	47	PB7	I/O	I/O port	
Function	48	PI3 TB3OUT	1/O O	I/O port Timer B output	
Function	49	PJ1 INT1	I/O I	I/O port External interrupt pin	
Function	50	PK0 CEC	1/O 1/O	I/O port CEC Pin (note) Nch open drain port.	
Function	51	PK1 SCOUT ALARM	1/O O O	I/O port System clock output Alarm output	
Function	52	PI4 TB4OUT	1/O O	I/O port Timer B output	
Function	53	PI5 TB5OUT	I/O O	I/O port Timer B output	
Function/ Debug	54	PB0 TDO/SWV	I/O O	I/O port Debug pin	
Function/ Debug	55	PA0 TMS/SWDIO	I/O I/O	I/O port Debug pin	

#### Table 1-1 Pin Names and Functions Sorted by Pin (3/6)

Туре	Pin No.	Pin Name	Input/ Out- put	Function			
Function/ Debug	56	PA1 TCK/SWCLK	I/O I	I/O port Debug pin			
Test	57	TEST3	-	TEST pin: (note) TEST pin must be left OPEN.			
Function	58	PJ7 INT7	I/O I	I/O port External interrupt pin			
Function/ Debug	59	PB1 TDI	I/O I	I/O port Debug pin			
Function/ Debug	60	PB2 TRST	I/O I	I/O port Debug pin			
Function	61	PF3 RXIN1	I/O I	I/O port Inputting signal to remote controller			
PS	62	DVDD3	-	Power supply pin			
PS	63	DVSS	-	GND pin			
Function/ Debug	64	PA2 TRACECLK	1/O O	I/O port Debug pin			
Function/ Debug	65	PA3 TRACEDA- TA0	I/O O	I/O port Debug pin			
Function/ Debug	66	PA4 TRACEDA- TA1	1/O O	I/O port Debug pin			
Function/ Debug	67	PA5 TRACEDA- TA2	1/O O	I/O port Debug pin			
Function/ Debug	68	PA6 TRACEDA- TA3	1/O O	I/O port Debug pin			
Function	69	PA7	I/O	I/O port			
Function	70	PJ0 INT0	I/O I	I/O port External interrupt pin			
PS	71	DVDD3	-	Power supply pin			
Clock	72	X2	0	Connected to a high-speed oscillator.			
PS	73	DVSS	-	GND pin			
Clock	74	X1	1	Connected to a high-speed oscillator.			
PS	75	RVSS	-	GND pin			
PS	76	RVDD3	-	Power supply pin			
Clock	77	XT1	1	Connected to a low-speed oscillator.			
Clock	78	XT2	0	Connected to a low-speed oscillator.			

Туре	Pin No.	Pin Name	Input/ Out- put	Function			
Function	79	PI6 TB4IN0	I/O I	I/O port Inputting the timer B capture trigger			
Function	80	NMI	I	Non-maskable interrupt (note) With a noise filter (about 30ns (typical value))			
Control	81	MODE	I	Mode pin: (note) MODE pin must be connected to GND.			
Function	82	RESET	I	Reset input pin (note) With a pull-up and a noise filter (about 30ns (typical value))			
Function	83	PI7 TB4IN1	I/O I	I/O port Inputting the timer B capture trigger			
Function	84	PH6 TB3IN0	I/O I	I/O port Inputting the timer B capture trigger			
Function	85	PH7 TB3IN1	I/O I	I/O port Inputting the timer B capture trigger			
Function	86	PJ2 INT2	I/O I	I/O port External interrupt pin			
Function	87	PJ3 INT3	I/O I	I/O port External interrupt pin			
Function	88	PJ4 TB6OUT	1/O O	I/O port Timer B output			
Function	89	PE3 RXIN0	I/O I	I/O port Inputting signal to remote controller			
Test	90	TEST4	-	TEST pin: (note) TEST pin must be left OPEN.			
Function	91	PC0 AIN0	1	Input port Analog input			
Function	92	PC1 AIN1	1	Input port Analog input			
Function	93	PC2 AIN2	 	Input port Analog input			
Function	94	PC3 AIN3	1	Input port Analog input			
Function	95	PD0 AIN4 TB5IN0	   	Input port Analog input Inputting the timer B capture trigger			
Function	96	PD1 AIN5 TB5IN1	   	Input port Analog input Inputting the timer B capture trigger			

Table 1 1	Din Nomee	and Eurotiana	Cortod by	/ Din /	e (e)
	FIII Names	and Functions	Solled D	угш(	0/0)

Туре	Pin No.	Pin Name	Input/ Out- put	Function		
Function	97	PD2 AIN6 TB6IN0	   	Input port Analog input Inputting the timer B capture trigger		
Function	98	PD3 AIN7 TB6IN1	   	Input port Analog input Inputting the timer B capture trigger		
Function	99	PD4 AIN8	1	Input port Analog input		
Function	100	PD5 AIN9	 	Input port Analog input		

# 1.4.2 Sorted by Port

#### Table 1-2 Pin Names and Functions Sorted by Port (1/6)

PORT	Туре	Pin No.	Pin Name	Input/ Out- put	Function
PORT A	Function/ Debug	55	PA0 TMS/SWDIO	1/O 1/O	I/O port Debug pin
PORT A	Function/ Debug	56	PA1 TCK/SWCLK	I/O I	I/O port Debug pin
PORT A	Function/ Debug	64	PA2 TRACECLK	1/O O	I/O port Debug pin
PORT A	Function/ Debug	65	PA3 TRACEDA- TA0	I/O O	I/O port Debug pin
PORT A	Function/ Debug	66	PA4 TRACEDA- TA1	I/O O	I/O port Debug pin
PORT A	Function/ Debug	67	PA5 TRACEDA- TA2	I/O O	I/O port Debug pin
PORT A	Function/ Debug	68	PA6 TRACEDA- TA3	I/O O	I/O port Debug pin
PORT A	Function	69	PA7	I/O	I/O port
PORT B	Function/ Debug	54	PB0 TDO/SWV	1/O O	I/O port Debug pin
PORT B	Function/ Debug	59	PB1 TDI	I/O I	I/O port Debug pin
PORT B	Function/ Debug	60	PB2 TRST	I/O I	I/O port Debug pin
PORT B	Function	29	PB3	I/O	I/O port
PORT B	Function	37	PB4	I/O	I/O port
PORT B	Function	41	PB5	I/O	I/O port
PORT B	Function	43	PB6	I/O	I/O port
PORT B	Function	47	PB7	I/O	I/O port
PORT C	Function	91	PC0 AIN0	l I	Input port Analog input
PORT C	Function	92	PC1 AIN1	l I	Input port Analog input
PORT C	Function	93	PC2 AIN2	 	Input port Analog input
PORT C	Function	94	PC3 AIN3	1	Input port Analog input
PORT D	Function	95	PD0 AIN4 TB5IN0	   	Input port Analog input Inputting the timer B capture trigger

#### Table 1-2 Pin Names and Functions Sorted by Port (2/6)

PORT	Туре	Pin No.	Pin Name	Input/ Out- put	Function
PORT D	Function	96	PD1 AIN5 TB5IN1	   	Input port Analog input Inputting the timer B capture trigger
PORT D	Function	97	PD2 AIN6 TB6IN0	   	Input port Analog input Inputting the timer B capture trigger
PORT D	Function	98	PD3 AIN7 TB6IN1	   	Input port Analog input Inputting the timer B capture trigger
PORT D	Function	99	PD4 AIN8	l I	Input port Analog input
PORT D	Function	100	PD5 AIN9	1	Input port Analog input
PORT D	Function	1	PD6 AIN10	1	Input port Analog input
PORT D	Function	2	PD7 AIN11	1	Input port Analog input
PORT E	Function	20	PE0 TXD0	1/O O	I/O port Sending serial data
PORT E	Function	21	PE1 RXD0	I/O I	I/O port Receiving serial data
PORT E	Function	22	PE2 SCLK0 CTS0	I/O I/O I	I/O port Serial clock input/ output Handshake input pin
PORT E	Function	89	PE3 RXIN0	I/O I	I/O port Inputting signal to remote controller
PORT E	Function	23	PE4 TXD1	1/O O	I/O port Sending serial data
PORT E	Function	24	PE5 RXD1	I/O I	I/O port Receiving serial data
PORT E	Function	25	PE6 SCLK1 CTS1	I/O I/O I	I/O port Serial clock input/ output Handshake input pin
PORT F	Function	33	PF0 TXD2	1/O O	I/O port Sending serial data
PORT F	Function	34	PF1 RXD2	I/O I	I/O port Receiving serial data
PORT F	Function	35	PF2 SCLK2 CTS2	I/O I/O I	I/O port Serial clock input/ output Handshake input pin
PORT F	Function	61	PF3 RXIN1	I/O I	I/O port Inputting signal to remote controller

PORT	Туре	Pin No.	Pin Name	Input/ Out- put	Function
PORT F	Function	44	PF4 SDA1/SO1	I/O I/O	I/O port -in the I2C mode: data pin -in the SIO mode: data pin
PORT F	Function	45	PF5 SCL1/SI1	I/O I/O	I/O port -in the I2C mode: clock pin -in the SIO mode: data pin
PORT F	Function	46	PF6 SCK1	1/O 1/O	I/O port Inputting and outputting a clock if the serial bus interface operates in the SIO mode.
PORT F	Function	19	PF7 INT5	I/O I	I/O port External interrupt pin
PORT G	Function	26	PG0 SDA0/SO0	I/O I/O	I/O port -in the I2C mode: data pin -in the SIO mode: data pin
PORT G	Function	27	PG1 SCL0/SI0	I/O I/O	I/O port -in the I2C mode: clock pin -in the SIO mode: data pin
PORT G	Function	28	PG2 SCK0	1/O 1/O	I/O port Inputting and outputting a clock if the serial bus interface operates in the SIO mode.
PORT G	Function	6	PG3 INT4	I/O I	I/O port External interrupt pin
PORT G	Function	15	PG4 SDA2/SO2	I/O I/O	I/O port If the serial bus interface operates -in the I2C mode: data pin -in the SIO mode: data pin
PORT G	Function	16	PG5 SCL2/SI2	1/O 1/O	I/O port If the serial bus interface operates -in the I2C mode: clock pin -in the SIO mode: data pin
PORT G	Function	17	PG6 SCK2	1/O 1/O	I/O port Inputting and outputting a clock if the serial bus interface operates in the SIO mode.
PORT G	Function	11	PG7 TB8OUT	1/O O	I/O port Timer B output
PORT H	Function/ Control	30	РН0 ТВОІN0 ВООТ	I/O I I	I/O port Inputting the timer B capture trigger Setting a single boot mode: This pin goes into single boot mode by sampling "Low" at the rise of a RESET signal.
PORT H	Function	31	PH1 TB0IN1	I/O I	I/O port Inputting the timer B capture trigger
PORT H	Function	32	PH2 TB1IN0	I/O I	I/O port Inputting the timer B capture trigger
PORT H	Function	36	PH3 TB1IN1	I/O I	I/O port Inputting the timer B capture trigger

#### Table 1-2 Pin Names and Functions Sorted by Port (4/6)

PORT	Туре	Pin No.	Pin Name	Input/ Out- put	Function
PORT H	Function	9	PH4 TB2IN0	I/O I	I/O port Inputting the timer B capture trigger
PORT H	Function	10	PH5 TB2IN1	I/O I	I/O port Inputting the timer B capture trigger
PORT H	Function	84	PH6 TB3IN0	I/O I	I/O port Inputting the timer B capture trigger
PORT H	Function	85	PH7 TB3IN1	I/O I	I/O port Inputting the timer B capture trigger
PORT I	Function	38	PI0 TB0OUT	I/O O	I/O port Timer B output
PORT I	Function	40	PI1 TB1OUT	I/O O	I/O port Timer B output
PORT I	Function	42	PI2 TB2OUT	I/O O	I/O port Timer B output
PORT I	Function	48	PI3 TB3OUT	I/O O	I/O port Timer B output
PORT I	Function	52	PI4 TB4OUT	I/O O	I/O port Timer B output
PORT I	Function	53	PI5 TB5OUT	I/O O	I/O port Timer B output
PORT I	Function	79	PI6 TB4IN0	I/O I	I/O port Inputting the timer B capture trigger
PORT I	Function	83	PI7 TB4IN1	I/O I	I/O port Inputting the timer B capture trigger
PORT J	Function	70	PJ0 INT0	I/O I	I/O port External interrupt pin
PORT J	Function	49	PJ1 INT1	I/O I	I/O port External interrupt pin
PORT J	Function	86	PJ2 INT2	I/O I	I/O port External interrupt pin
PORT J	Function	87	PJ3 INT3	I/O I	I/O port External interrupt pin
PORT J	Function	88	PJ4 TB6OUT	1/O O	I/O port Timer B output
PORT J	Function	8	PJ5 TB7OUT	1/O O	I/O port Timer B output
PORT J	Function	39	PJ6 INT6	I/O I	I/O port External interrupt pin
PORT J	Function	58	PJ7 INT7	I/O I	I/O port External interrupt pin

PORT	Туре	Pin No.	Pin Name	Input/ Out- put	Function
PORT K	Function	50	PK0 CEC	I/O I/O	I/O port CEC Pin (note) Nch open drain port.
PORT K	Function	51	PK1 SCOUT ALARM	I/O O O	I/O port System clock output Alarm output
PORT K	Function	7	PK2 TB9OUT	1/O O	I/O port Timer B output
-	Function	82	RESET	I	Reset input pin (note) With a pull-up and a noise filter (about 30ns (typical value))
-	Function	80	NMI	I	Non-maskable interrupt (note) With a noise filter (about 30ns (typical value))
-	Control	81	MODE	I	Mode pin: (note) MODE pin must be connected to GND.
-	Clock	72	X2	0	Connected to a high-speed oscillator.
-	Clock	74	X1	I	Connected to a high-speed oscillator.
-	Clock	77	XT1	I	Connected to a low-speed oscillator.
-	Clock	78	XT2	0	Connected to a low-speed oscillator.
-	Test	12	TEST2	-	TEST pin: (note) TEST pin must be left OPEN.
-	Test	18	TEST1	-	TEST pin: (note) TEST pin must be left OPEN.
-	Test	57	TEST3	-	TEST pin: (note) TEST pin must be left OPEN.
-	Test	90	TEST4	-	TEST pin: (note) TEST pin must be left OPEN.
-	PS	3	AVSS	I	AD converter: GND pin (0V) (note) AVSS must be connected to GND even if the A/D converter is not used.
-	PS	4	VREFH	I	Supplying the AD converter with a reference power supply. (note) VREFH must be connected to power supply even if A/D converter is not used.
-	PS	5	AVDD3	I	Supplying the AD converter with a power supply. (note) AVDD must be connected to power supply even if A/D converter is not used.
-	PS	13	DVSS	-	GND pin
-	PS	14	DVDD3	-	Power supply pin
-	PS	62	DVDD3	-	Power supply pin
-	PS	63	DVSS	-	GND pin

### Table 1-2 Pin Names and Functions Sorted by Port (6/6)

PORT	Туре	Pin No.	Pin Name	Input/ Out- put	Function
-	PS	71	DVDD3	-	Power supply pin
-	PS	73	DVSS	-	GND pin
-	PS	75	RVSS	-	GND pin
-	PS	76	RVDD3	-	Power supply pin

# 1.5 Pin Numbers and Power Supply Pins

Table 1-3 Pin Numbers and Power Supplies
--

Power supply	Voltage range	Pin No.	Pin name
DVDD3		14, 62,71	PA,PB,PE,PF,PG,PH,PI,PJ,PK,X1,X2,XT1, XT2,RESET,NMI,MODE
AVDD3	2.7 to 3.6V	5	PC,PD
RVDD3		76	-

# 2. Processor Core

The TX03 series has a high-performance 32-bit processor core (the ARM Cortex-M3 processor core). For information on the operations of this processor core, please refer to the "Cortex-M3 Technical Reference Manual" issued by ARM Limited. This chapter describes the functions unique to the TX03 series that are not explained in that document.

## 2.1 Information on the processor core

The following table shows the revision of the processor core in the TMPM330FDFG/FYFG/FWFG.

Refer to the detailed information about the CPU core and architecture, refer to the ARM manual "Cortex-M series processors" in the following URL:

http://infocenter.arm.com/help/index.jsp

Product Name	Core Revision
TMPM330FDFG TMPM330FYFG	r1p1-00rel0
TMPM330FWFG	r1p1-01rel0

## 2.2 Configurable Options

The Cortex-M3 core has optional blocks. The optional blocks of the revision r1p1 are ETM<sup>™</sup> and MPU. The following tables shows the configurable options in the TMPM330FDFG/FYFG/FWFG.

Configurable Options	Implementation
MPU	Not implementable
ETM	Implementable

## 2.3 Exceptions/ Interruptions

Exceptions and interruptions are described in the following section.

### 2.3.1 Number of Interrupt Inputs

The number of interrupt inputs can optionally be defined from 1 to 240 in the Cortex-M3 core.

TMPM330FDFG/FYFG/FWFG has 50 interrupt inputs. The number of interrupt inputs is reflected in <IN-TLINESNUM[4:0]> bit of NVIC register. In this product, if read <INTLINESNUM[4:0]> bit, "0y00001" is read out.

### 2.3.2 Number of Priority Level Interrupt Bits

The Cortex-M3 core can optionally configure the number of priority level interrupt bits from 3 bits to 8 bits.

TMPM330FDFG/FYFG/FWFG has three priority level interrupt bits. The number of priority level interrupt bits is used for assigning a priority level in the interrupt priority registers and system handler priority registers.

### 2.3.3 SysTick

The Cortex-M3 core has a SysTick timer which can generate SysTick exception.

In the TMPM330FDFG/FYFG/FWFG, the clock that is input from X1 pin dividing by 32 is used as a count clock for the Systic timer. SysTick calibration register can set a calibration value to measure 10ms. In this product, when 8MHz is input to X1 pin, calibration value is set to 0x9C4 which can measure 10ms. Additionally, if this value is read as "0" both of <NOREF> bit and <SKEW> bit, it indicates that external reference clock are available and the calibration value is accurate as 10ms.

### 2.3.4 SYSRESETREQ

The Cortex-M3 core outputs SYSRESETREQ signal when <SYSRESETREQ> bit of Application Interrupt and Reset Control Register are set.

TMPM330FDFG/FYFG/FWFG provides the same operation when SYSRESETREQ signal are output.

Note: Do not reset with <SYSRESETREQ> in SLOW mode.

### 2.3.5 LOCKUP

When irreparable exception generates, the Cortex-M3 core outputs LOCKUP signal to show a serious error included in software.

TMPM330FDFG/FYFG/FWFG does not use this signal. To return from LOCKUP status, it is necessary to use non-maskable interruput (NMI) or reset.

### 2.3.6 Auxiliary Fault Status register

The Cortex-M3 core provides auxiliary fault status registers to supply additional system fault information to software.

However, TMPM330FDFG/FYFG/FWFG is not defined this function. If auxiliary fault status register is read, always "0x0000\_0000" is read out.

## 2.4 Events

The Cortex-M3 core has event output signals and event input signals. An event output signal is output by SEV instruction execution. If an event is input, the core returns from low-power consumption mode caused by WFE instruction.

TMPM330FDFG/FYFG/FWFG does not use event output signals and event input signals. Please do not use SEV instruction and WFE instruction.

## 2.5 Power Management

The Cortex-M3 core provides power management system which uses SLEEPING signals and SLEEPDEEP signals. SLEEPDEEP signals are output when <SLEEPDEEP> bit of System Control Register is set.

These signals are output in the following circumstances:

-Wait-For-Interrupt (WFI) instruction execution

-Wait-For-Event (WFE) instruction execution

-the timing when interrupt-service-routine (ISR) exit in case that <SLEEPONEXIT> bit of System Control Register is set.

TMPM330FDFG/FYFG/FWFG does not use SLEEPDEEP signals so that <SLEEPDEEP> bit must not be set. And also event signals are not used so that please do not use WFE instruction.

For detail of power management, refer to the Chapter "Clock/Mode control."

## 2.6 Exclusive access

In Cortex-M3 core, the DCode bus system supports exclusive access. However TMPM330FDFG/FYFG/FWFG does not use this function.

- 2. Processor Core
- 2.6 Exclusive access

# 3. Debug Interface

## 3.1 Specification Overview

TMPM330FDFG/FYFG/FWFG contains the Serial Wire JTAG Debug Port (SWJ-DP) unit for interfacing with the debugging tools and the Embedded Trace Macrocell<sup>TM</sup>(ETM) unit for instruction trace output.Trace data is output to the dedicated pins(TRACEDATA[3:0], SWV) for the debugging via the on-chip Trace Port Interface Unit (TPIU).

For details about SWJ-DP, ETM and TPIU, refer to "Cortex-M3 Technical Reference Manual" .

## 3.2 SWJ-DP

SWJ-DP supports the Serial Wire Debug Port (SWDCK, SWDIO) and the JTAG Debug Port (TDI, TDO, TMS, TCK, TRST).

## 3.3 ETM

ETM supports four data signal pins (TRACEDATA[3:0]), one clock signal pin (TRACECLK) and trace output from SWV.

## 3.4 Pin Functions

The debug interface pins can also be used as general-purpose ports.

The PA0 and PA1 pins are shared between the JTAG debug port function and the Serial Wire Debug Port function. The PB0 pin is shared between the JTAG debug port function and the SWV trace output function.

SWJ-DP	General-				SW Debug Function			
Pin Name	purpose Port Name	I / O Explanation		I/O	Explanation			
TMS / SWDIO	PA0	Input	JTAG Test Mode Selection	1/0	Serial Wire Data Input/Output			
TCK / SWCLK	PA1	Input	JTAG Test Check	Input	Serial Wire Clock			
TDO / SWV	PB0	Output	JTAG Test Data Output	(Output)(Note)	(Serial Wire Viewer Output)			
TDI	PB1	Input	JTAG Test Data Input	-	-			
TRST	PB2	Input	JTAG Test RESET	-	-			
TRACECLK	PA2	Output	Т	RACE Clock Outp	ut			
TRACEDATA0	PA3	Output	ЯТ	RACE DATA Outpu	utO			
TRACEDATA1	PA4	Output	TRACE DATA Output1					
TRACEDATA2	PA5	Output	TRACE DATA Output2					
TRACEDATA3	PA6	Output	TRACE DATA Output3					

Table 3-1 SWJ-DP,ETM Debug Functions

#### Note: When SWV function is enabled.

After reset, PA0, PA1, PB0, PB1 and PB2 pins are configured as debug port function pins. The functions of other debug interface pins need to be programmed as required.

When using a low power consumption mode, take note of the following points.

- Note 1: If PA0 and PB0 are configured as TMS/SWDIO and TDO/SWV, output continues to be enabled even in STOP mode regardless of the setting of the CGSTBYCR<DRVE> bit.
- Note 2: If PA1 is configured as a debug function pin, it prevents a low power consumption mode from being fully effective. Configure PA1 to function as a general-purpose port if the debug function is not used.

Table 3-2 summarizes the debug interface pin and related port settings after reset.

DetNess		Value of Related port settings after reset							
Port Name (Bit Name)	Debug Function	Function (PxFR)	Input (PxIE)	Output (PxCR)	Pull-up (PxPUP)	Pull-down (PxPDN)			
PA0	TMS/SWDIO	1	1	1	1	-			
PA1	TCK/SWCLK	1	1	0	-	1			
PB0	TDO/SWV	1	0	1	0	-			
PB1	TDI	1	1	0	1	-			
PB2	TRST	1	1	0	1	-			
PA2	TRACECLK	0	0	0	0	-			
PA3	TRACEDATA0	0	0	0	0	-			
PA4	TRACEDATA1	0	0	0	0	-			
PA5	TRACEDATA2	0	0	0	0	-			
PA6	TRACEDATA3	0	0	0	0	-			

### Table 3-2 Debug Interface Pins and Related Port Settings after Reset

- : Don't care

## 3.5 Peripheral Functions in Halt Mode

When the Cortex-M3 core enters in the halt mode, the watchdog-timer (WDT) automatically stops. Other peripheral functions continue to operate.

## 3.6 Reset Vector Break

TMPM330FDFG/FYFG/FWFG is prohibited from transmission with debug tools while reset caused by  $\overline{\text{RESET}}$  pin is effective. When setting a stop by using reset vector, set the following procedure after reset; set break points from the debug tools, then set the application interrupt and the <SYSRESETREQ> bit of the reset control register to reset again.

Note: Do not reset with <SYSRESETREQ> in SLOW mode.

## 3.7 Connection with a Debug Tool

### 3.7.1 About connection with debug tool

Concerning a connection with debug tools, refer to manufactures recommendations.

Debug interface pins contain a pull-up resistor and a pull-down resistor. When debug interface pins are connected with external pull-up or pull-down, please pay attention to input level.

### 3.7.2 Important points of using debug interface pins used as general-purpose ports

TMPM330FDFG/FYFG/FWFG is prohibited from transmission with debug tools while reset caused by  $\overline{\text{RE-SET}}$  pin is effective. Therefor it cannot change to the debug mode.

The PA0, PA1, PB0, PB1 and PB2 ports are the debug interface pins after reset however if these pins are changed to the general-purpose port immediately after reset, the control from the debug tools are not accepted under some circumstances. When changing the settings, please pay attention to the status of debug interface pins.

		Debug interface pins							
	TRST	TDI	TDO / SWV	TCK / SWCLK	TMS / SWDIO	TRACE DATA[3:0]	TRACE CLK		
JTAG+SW (After reset)	0	о	о	о	0	×	×		
JTAG+SW (without TRST)	×	ο	ο	о	0	×	×		
JTAG+TRACE	0	0	0	0	0	0	0		
SW	×	×	×	о	0	×	×		
SW+SWV	×	×	0	о	0	×	×		
Debugging function disabled	×	×	×	×	×	×	×		

#### Table 3-3 Table of using debug interface pins

o : Enabled × : Disabled (Usable as general-purpose port)

# 4. Memory Map

## 4.1 Memory map

The memory maps for theTMPM330FDFG/FYFG/FWFG are based on the ARM Cortex-M3 processor core memory map.

The internal ROM is mapped to the code of the Cortex-M3 core memory, the internal RAM is mapped to the SRAM region and the special function register (SFR) is mapped to the peripheral region respectively.

The special function register (SFR) indicates I/O ports and control registers for the peripheral function. The SRAM and SFR regions are all included in the bit-band region.

The CPU register region is the processor core's internal register region.

For more information on each region, see the "Cortex-M3 Technical Reference Manual".

Note that access to regions indicated as "Fault" causes a memory fault if memory faults are enabled or a hard fault if memory faults are disabled. Do not access the vendor-specific region.

## 4.1.1 Memory map of the TMPM330FDFG

Figure 4-1shows the memory map of the TMPM330FDFG.


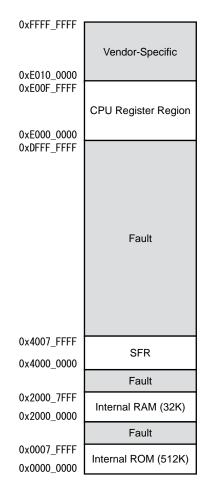


Figure 4-1 Memory Map (TMPM330FDFG)

## 4.1.2 Memory Map of TMPM330FYFG

Figure 4-2 shows the memory map of the TMPM330FYFG.

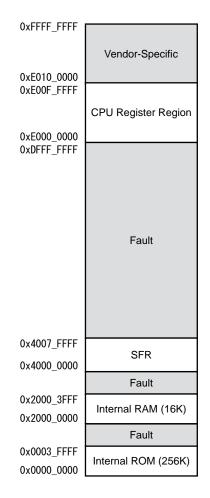

## Figure 4-2 Memory Map (TMPM330FYFG)

Note: In addition to 256KB flash area, the TMPM330FYFG provides 128-word data/ password area (1 page) for Show Product Information command in the address range 0x0007\_FE00 - 0x0007\_FFFF. See the Chapter "Flash Memory Operation" for details on the single boot mode. Do not Access to the range from 0x0004\_0000 through the password area.

## 4.1.3 Memory Map of TMPM330FWFG

0xFFFF\_FFFF Vencor-Specific 0xE010\_0000 0xE00F\_FFFF CPU Register Region 0xE000\_0000 0xDFFF\_FFF Fault 0x4007\_FFFF SFR 0x4000\_0000 Fault 0x2000\_1FFF Internal RAM (8K) 0x2000\_0000 Fault 0x0001\_FFFF Internal ROM (128K) 0x0000\_0000

Figure 4-3 shows the memory map of the TMPM330FWFG.

Figure 4-3 Memory Map (TMPM330FWFG)

## 4.2 SFR area detail

This section contains the list of addresses in the SFR area ( $0x4000\_0000$  through  $0x4007\_FFFF$ ) assigned to peripheral function.

Access to the Reserved areas in the Table 4-1 is prohibited. As for the SFR area, reading the areas not described in the Table 4-1 yields undefined value. Writing these area is ignored.

Start Address	End Address	Peripheral	R	eserv	ed
0x4000_0000	0x4000_02BF	PORT(A to K)	0x4000_0190 0x4000_01D0 0x4000_0210 0x4000_0250	to to to to	0x4000_0193 0x4000_01D3 0x4000_0213 0x4000_0253
0x4001_0000	0x4001_027F	TMRB(10ch)			
0x4002_0000	0x4002_007F	I2C/SIO(3ch)			
0x4002_0080	0x4002_013F	SIO/UART(3ch)			
0x4003_0000	0x4003_007F	ADC(12ch)	0x4003_0024	-	0x4003_002F
0x4004_0000	0x4004_003F	WDT			
0x4004_0100	0x4004_013F	RTC	0x4004_010D		
0x4004_0200	0x4004_023F	CG	0x4004_0230	to	0x4004_023F
0x4004_0300	0x4004_033F	CEC			
0x4004_0400	0x4004_047F	RMC(2ch)	0x4004_0428 0x4004_0468	to to	0x4004_0433 0x4004_0473
0x4004_0500	0x4004_053F	FLASH	0x4004_0504 0x4004_0524	to to	0x4004_0507 0x4004_052B
0x4004_0540	0x4004_05BF	Reserved	0x4004_0540 0x4004_0550 0x4004_0560	to to to	0x4004_0547 0x4004_0553 0x4004_0593
0x4004_0700	0x4004_073F	Reserved	0x4004_0700	to	0x4004_0707

Table 4-1 SFR area detail

- 4. Memory Map
- 4.2 SFR area detail

# 5. Reset

The TMPM330FDFG/FYFG/FWFG has three reset sources: an external reset pin ( $\overline{\text{RESET}}$ ), a watchdog timer (WDT) and the setting  $\langle \text{SYSRESETREQ} \rangle$  in the Application Interrupt and Reset Control Register.

For reset from the WDT, refer to the chapter on the WDT.

For reset from <SYSRESETREQ>, refer to "Cortex-M3 Technical Reference Manual".

Note: Do not reset with <SYSRESETREQ> in SLOW mode.

## 5.1 Cold reset

The power-on sequence must consider the time for the internal regulator and oscillator to be stable. In the TMPM330FDFG/FYFG/FWFG, the internal regulator requires at least 700 µs to be stable.

The time required to achieve stable oscillation varies with system. At cold reset, the external reset pin must be kept "Low" for a duration of time sufficiently long enough for the internal regulator and oscillator to be stable.

Figure 5-1 shows the power-on sequence.

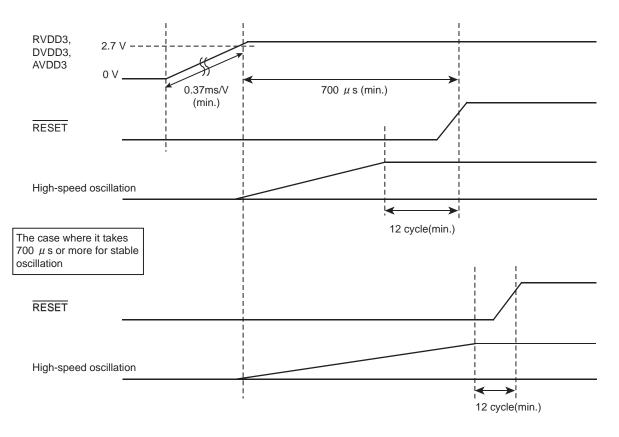


Figure 5-1 Cold Reset Sequence

Note 1: The power supply must be raised (from 0V to 2.7V) at a speed of 0.37ms/V or slower.

Note 2: Turn on the power while the RESET pin is fixed to "Low". Release the reset while all the power supplies are stabilized within operating voltage.

## 5.2 Warm reset

### 5.2.1 Reset period

As a precondition, ensure that the power supply voltage is within the operating range and the internal high-frequency oscillator is providing stable oscillation.

To reset the TMPM330FDFG/FYFG/FWFG, assert the RESET signal (active low) for a minimum duration of 12 system clocks.

### 5.2.2 After reset

A warm reset initializes the majority of the Cortex-M3 processor core's system control registers and internal function registers.

The processor core's system debug components (FPB, DWT, ITM) register, the clock generator's CGRSTFLG register and the FCSECBIT register are initialized by a only cold reset.

After reset, the PLL multiplication circuit is inactive and must be enabled in the CGPLLSEL register if needed.

When the reset exception handling is completed, the program branches to the reset interrupt service routine.

Note: The reset operation may alter the internal RAM state.

# 6. Clock/Mode control

## 6.1 Features

The clock/mode control block enables to select clock gear, prescaler clock and warm-up of the PLL clock multiplication circuit and oscillator.

There is also the low power consumption mode which can reduce power consumption by mode transitions.

This chapter describes how to control clock operating modes and mode transitions.

The clock/mode control block has the following functions:

- Controls the system clock
- Controls the prescaler clock
- Controls the PLL multiplication circuit
- Controls the warm-up timer

In addition to NORMAL mode, the TMPM330FDFG/FYFG/FWFG can operate in three types of low power mode to reduce power consumption according to its usage conditions.

## 6.2 Registers

## 6.2.1 Register List

The following table shows the CG-related registers and addresses.

		Base Address = 0x4004_0200
Register name		Address (Base+)
System control register	CGSYSCR	0x0000
Oscillation control register	CGOSCCR	0x0004
Standby control register	CGSTBYCR	0x0008
PLL selection register	CGPLLSEL	0x000C
System clock selection register	CGCKSEL	0x0010

6.2.2 CGSYSCR (System control register)	
---	--

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	SCC	SEL
After reset	0	0	0	0	0	0	0	1
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	FPSEL	-		PRCK	
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-		GEAR	
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-18	-	R	Read as 0.
17-16	SCOSEL[1:0]	R/W	SCOUT out
			00: fs
			01: fsys/2
			10: fsys
			11: φΤ0
			Enables to output the specified clock from SCOUT pin.
15-13	-	R	Read as 0.
12	FPSEL	R/W	fperiph
			0: fgear
			1: fc
			Specifies the source clock to fperiph.
11	-	R	Read as 0.
10-8	PRCK[2:0]	R/W	Prescaler clock
			000: fperiph
			001: fperiph/2
			010: fperiph/4
			011: fperiph/8
			100: fperiph/16
			101: fperiph/32
			110: Reserved
			111: Reserved
			Specifies the prescaler clock to peripheral I/O.
7-3	-	R	Read as 0.
2-0	GEAR[2:0]	R/W	High-speed clock gear (fc) gear
			000: fc
			001: Reserved
			010: Reserved
			011: Reserved
			100: fc/2
			101: fc/4
			110: fc/8
			111: Reserved

Page 37

#### 6.2 Registers

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	XTEN	XEN
After reset	0	0	0	0	0	0	1	1
	7	6	5	4	3	2	1	0
bit symbol	-		WUPT			PLLON	WUEF	WUEON
After reset	0	0	0	1	0	0	0	0

## 6.2.3 CGOSCCR (Oscillation control register)

Bit	Bit Symbol	Туре		Function
31-14	-	R	Read as 0.	
13-12	-	R/W	Write "0".	
11-10	-	R	Read as 0	
9	XTEN	R/W	Low-speed oscillator	
			0: Stop	
			1:Oscillation	
8	XEN	R/W	High-speed oscillator	
			0: stop	
			1:Oscillation	
7	-	R	Read as 0	
6-4	WUPT[2:0]	R/W	Warm-up time	
			X1 XT	1
			000: No warm-up 00	0:No warm-up
			001: 2 <sup>10</sup> / input freq. 00	1: 2 <sup>6</sup> / input freq.
			010: 2 <sup>11</sup> / input freq. 01	0: 2 <sup>7</sup> / input freq.
			011: 2 <sup>12</sup> / input freq. 01	1: 2 <sup>8</sup> / input freq.
			100: 2 <sup>13</sup> /input freq. 10	0: 2 <sup>15</sup> / input freq.
			101: 2 <sup>14</sup> / input freq. 10	1: 2 <sup>16</sup> / input freq.
			110: 2 <sup>15</sup> / input freq. 11	0: 2 <sup>17</sup> / input freq.
			111: 2 <sup>16</sup> / input freq. 11	1: 2 <sup>18</sup> / input freq.
3	WUPSEL	R/W	Warm-up counter	
			0: X1	
			1: XT1	
			Specifies the oscillator to warm-up.	
			A clock generated by the specified os	scillator is used for the warm-up timer count.
2	PLLON	R/W	PLL operation	
			0: Stop	
			1: Oscillation	
			Specifies operation of the PLL.	
			It stops after reset.Setting the bit is re	equired.
1	WUEF	R	Status of Warm-up timer (WUP)	
			0:Warm-up completed	
			1: Warm-up operation	
			Enables to monitor the status of the v	warm-up timer.
0	WUEON	W	Operation of warm-up timer	
			0: don't care	
			1: starting warm-up	
			Enables to start the warm-up timer.	

	6.2.4	CGSTBYCR (Standby control register)
--	-------	-------------------------------------

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	DRVE
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	RXTEN	RXEN
After reset	0	0	0	0	0	0	0	1
		•	-	4	3	2	1	0
	7	6	5	4	3	2	1	0
bit symbol	7	-	-	-	-	2	STBY	0

Bit	Bit Symbol	Туре	Function
31-18	-	R	Read as 0.
17	-	R/W	Write "0".
16	DRVE	R/W	Pin status in STOP mode. 0: Inactive 1:Active
15-10	-	R	Read as 0
9	RXTEN	R/W	Low-speed oscillator operation after releasing the STOP mode. 0: Stop 1:Oscillation
8	RXEN	R/W	High-speed oscillator operation after releasing the STOP mode. 0: Stop 1:Oscillation
7-3	-	R	Read as 0.
2-0	STBY[2:0]	R/W	Low power consumption mode 000: Reserved 001: STOP 010: SLEEP 011: IDLE 100: Reserved 101: Reserved 110: Reserved 111: Reserved 111: Reserved

#### 6.2 Registers

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	PLLSEL
After reset	0	0	0	0	0	0	0	0

## 6.2.5 CGPLLSEL (PLL Selection Register)

Bit	Bit Symbol	Туре	Function
31-1	-	R	Read as 0.
0	PLLSEL	R/W	Use of PLL
			0: Disuse. X1 selected
			1: Use
			Specifies use or disuse of the clock multiplied by the PLL.
			"X1" is automatically set after reset. Resetting is required when using the PLL.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	SYSCK	SYSCKFLG
After reset	0	0	0	0	0	0	0	0

# 6.2.6 CGCKSEL (System clock selection register)

Bit	Bit Symbol	Туре	Function
31-2	-	R	Read as 0.
1	SYSCK	R/W	System clock 0: High-speed (fc) 1: Low-speed (fs) Enables to specify the system clock.
			Setting CGOSCCR <xen> and <xten> to "1" in advance is required.</xten></xen>
0	SYSCKFLG	R	System clock status 0: High-speed (fc) 1: Low-speed (fs) Shows the status of the system clock. Switching the oscillator with <sysck> generates time lag to complete. If the output of the oscillator specified in <sysck> is read out by <sysclkflg>, the switching has been completed.</sysclkflg></sysck></sysck>

## 6.3 Clock control

### 6.3.1 Clock System Block Diagram

Each clock is defined as follows:

fosc	: Clock input from the X1 and X2 pins
fs	: Clock input from the XT1 and XT2 (low-speed clock)
fpll	: Clock quadrupled by PLL
fc	: Clock specified by CGPLLSEL <pllsel> (high-speed clock)</pllsel>
fgear	: Clock specified by CGSYSCR <gear[2:0]></gear[2:0]>
fsys	: Clock specified by CGCKSEL <sysck> (system clock)</sysck>
fperiph	: Clock specified by CGSYSCR <fpsel></fpsel>
φT0	: Clock specified by CGSYSCR <prck[2:0]> (prescaler clock)</prck[2:0]>

The high-speed clock fc and the prescaler clock  $\Phi$ T0 are dividable as follows.

High-speed clock	: fc, fc/2, fc/4, fc/8
Prescaler clock	: fperiph, fperiph/2, fperiph/4, fperiph/8, fperiph/16, fperiph/32

CPU uses the following clocks. HCLK and FCLK stop in the low power consumption mode (IDLE,SLEEP,STOP.)

HCLK,FCLK	: fsys
STCLK (Systick timer)	: fosc/32

### 6.3.2 Initial Values after Reset

Reset operation initializes the clock configuration as follows.

High-speed oscillator	: oscillating
Low-speed oscillator	: oscillating
PLL (phase locked loop circuit)	: stop
High-speed clock gear	: fc (no frequency dividing)

Reset operation causes all the clock configurations excluding the low-speed clock (fs) to be the same as fosc.

fc = fosc fsys = fosc φT0 = fosc

For example, reset operation configures fsys as 10MHz when a 10MHz oscillator is connected to the X1 or X2 pin.

### 6.3.3 Clock system Diagram

Figure 6-1 shows the clock system diagram.

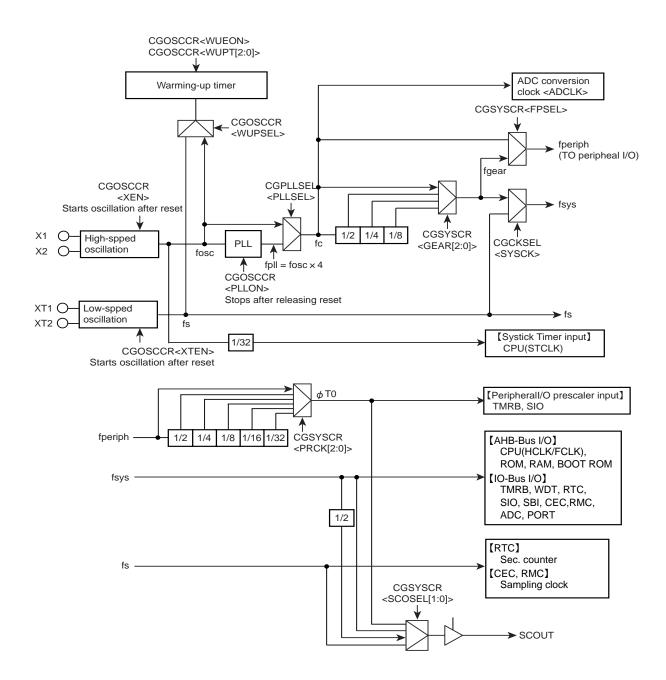


Figure 6-1 Clock Block Diagram

The input clocks to selector shown with an arrow are set as default after reset.

### 6.3.4 Clock Multiplication Circuit (PLL)

This circuit outputs the fpll clock that is quadruple of the high-speed oscillator output clock (fosc.) As a result, the input frequency to oscillator can be low, and the internal clock be made high-speed.

The PLL is disabled after reset. To enable the PLL, set "1" to the CGOSCCR<PLLON> bit.

The PLL requires a certain amount of time to be stabilized, which should be secured using the warm-up function.

Note: It takes approximately 200µs for the PLL to be stabilized.

#### 6.3.5 Warm-up function

The warm-up function secures the stability time for the oscillator and the PLL with the warm-up timer.

The warm-up function is used when returning from STOP/SLEEP mode.

In this case, an interrupt for returning from the low power consumption mode triggers the automatic timer count. After the specified time is reached, the system clock is output and the CPU starts operation.

In STOP/ SLEEP modes, the PLL is disabled. When returning from these modes, configure the warm-up time in consideration of the stability time of the PLL and the internal oscillator.

How to configure the warm-up function.

Specify the count up clock for the warm-up counter in the CGOSCCR<WUPSEL> bit.

The warm-up time can be selected by setting the CGOSCCR<WUPT[2:0]>.

The CGOSCCR<WUEON><WUEF> is used to confirm the start and completion of warm-up through software (instruction). After the completion of warm-up is confirmed, switch the system clock by setting the CGCKSEL<SYSCK>.

When clock switching occurs, the current system clock can be checked by monitoring the CGCKSEL<SYSCKFLG>

Table 6-1 shows the warm-up time.

Table 6-1 Warm-up Time (fosc = 10MHz, fs = 32.768kHz)

Warm-up time options CGOSCCR <wupt[2:0]></wupt[2:0]>	High-speed clock (fosc) CGOSCCR <wupsel> = "0"</wupsel>		Low-speed clock (fs) CGOSCCR <wupsel> = "1"</wupsel>	
000	- Without WUP		-	With WUP
001	2 <sup>10</sup> /input frequency	102.4 (µs)	2 <sup>6</sup> /input frequency	1.953 (ms)
010	2 <sup>11</sup> /input frequency	204.8 (µs)	2 <sup>7</sup> /input frequency	3.906 (ms)
011	2 <sup>12</sup> /input frequency 409.6 (µs)		2 <sup>8</sup> /input frequency	7.813 (ms)
100	2 <sup>13</sup> /input frequency	819.2 (µs)	2 <sup>15</sup> /input frequency	1.0 (s)
101	2 <sup>14</sup> /input frequency	1.638 (ms)	2 <sup>16</sup> /input frequency	2.0 (s)
110	2 <sup>15</sup> /input frequency	3.277 (ms)	217/input frequency	4.0 (s)
111	2 <sup>16</sup> /input frequency	6.554 (ms)	2 <sup>18</sup> /input frequency	8.0 (s)

Note: The warm-up timer operates according to the oscillation clock, and it may contain errors if there is any fluctuation in the oscillation frequency. Therefore, the warm-up time should be taken as approximate time.

# TOSHIBA

The following are the examples of the warm-up function configuration.

#### <Example1> Securing the stability time for the PLL

CGOSCCR <wupsel> = "0"</wupsel>	: Specify the warm-up counter
CGOSCCR <wupt[2:0]> = "010"</wupt[2:0]>	: Specify the warm-up time (204.8µs)
CGOSCCR <wueon> = "1"</wueon>	: Start the warm-up timer (WUP)
CGOSCCR <wuef> Read</wuef>	: Wait until the state becomes "0" (warm-up is finished)

#### <Example2> Transition from the NORMAL mode to the SLOW mode

CGOSCCR <wupsel> = "1"</wupsel>	: Specify the warm-up counter
CGOSCCR <wupt[2:0]> = "xxx"</wupt[2:0]>	: Specify the warm-up time
CGOSCCR <xten> = "1"</xten>	: Enable the low-speed oscillation (fs)
CGOSCCR <wueon> = "1"</wueon>	: Start the warm-up timer
CGOSCCR <wuef> Read</wuef>	: Wait until the state becomes "0" (warm-up is finished)
CGCKSEL <sysck> = "1"</sysck>	: Switch the system clock to low speed (fs)
CGCKSEL <sysckflg> Read</sysckflg>	: Confirm that the current state is "1" (the current system clock is fs)
CGOSCCR <xen> = "0"</xen>	: Disable the high-speed oscillation (fosc)

#### <Example3> Transition from the SLOW mode to the NORMAL mode

CGOSCCR <wupsel> = "0"</wupsel>	: Specify the warm-up counter
CGOSCCR <wupt[2:0]> = "xxx"</wupt[2:0]>	: Specify the warm-up time
CGOSCCR <xen> = "1"</xen>	: Enable the high-speed oscillation (fosc)
CGOSCCR <wueon> = "1"</wueon>	:Start the warm-up timer
CGOSCCR <wuef> Read</wuef>	: Wait until the state becomes "0" (warm-up is finished)
CGCKSEL <sysck> = "0"</sysck>	: Switch the system clock to high speed (fgear)
CGCKSEL <sysckflg> Read</sysckflg>	: Confirm that the current state is "0" (the current system clock is fgear)
CGOSCCR <xten> = "0"</xten>	: Disable the low-speed oscillation (fs)

Note: When switching the system clock, ensure that the switching has been completed by reading the CGSYSCR<SYSCKFLG>.

### 6.3.6 System Clock

The TMPM330FDFG/FYFG/FWFG offers two selectable system clocks: low-speed or high-speed. The high-speed clock is dividable.

- Note 1: Switching of clock gear is executed when a value is written to the CGSYSCR<GEAR[2:0]> register. The actual switching takes place after a slight delay.
- Note 2: The CEC function uses the low-speed clock as a sampling clock. The allowable margin of error when the CEC function is used is approximately ±4% at 32.768 kHz.

#### 6.3.6.1 High speed clock

- Input frequency from X1 and X2: 8MHz to 10MHz
- · Allows for oscillator connection or external clock input
- Clock gear: 1/1, 1/2, 1/4, 1/8 (after reset: 1/1)

#### Table 6-2 Range of High Speed frequency

Input freq. X1, X2		Max oper-	After reset		k gear (CC	G) PLL = @	DON	Clock	gear (CG	6) PLL = @	OFF
				(PLL = OFF, CG = 1/1)	1/1	1/2	1/4	1/8	1/1	1/2	1/4
8MHz	4 1411-	40 141-	8	32	16	8	4	8	4	2	1
10MHz	1 MHz	40 MHz	10	40	20	10	5	10	5	2.5	1.25

# Note: PLL=ON/OFF setting: available in CGOSCCR<PLLON> Clock gear setting: available in CGSYSCR<GEAR[2:0]>.

#### 6.3.6.2 Low speed clock

Input frequency from XT1 and XT2

#### Table 6-3 Range of Low Speed Frequency

Input Frequency	Maximum Operating	Minimum Operating
Range	Frequency	Frequency
30 to 34 (kHz)	34 kHz	30 kHz

### 6.3.7 Prescaler Clock Control

Each peripheral function has a prescaler for dividing a clock. As the clock  $\varphi T0$  to be input to each prescaler, the "fperiph" clock specified in the CGSYSCR<FPSEL> can be divided according to the setting in the CGSYSCR<PRCK[2:0]>. After the controller is reset, fperiph/1 is selected as  $\varphi T0$ .

Note: To use the clock gear, ensure that you make the time setting such that prescaler output φTn from each peripheral function is slower than fsys (φTn < fsys). Do not switch the clock gear while the timer counter or other peripheral function is operating.

### 6.3.8 System Clock Pin Output Function

The TX03 enables to output the system clock from a pin. The PK1/SCOUT pin can output the low speed clock fs, the system clock fsys and fsys/2, and the prescaler input clock for peripheral I/O  $\phi$ T0. By setting the port K registers, the PKCR<PK1C> and PKFR1<PK1F1> to "1", the PK1/SCOUT pin (pin number 51) becomes the SCOUT output pin. The output clock is selected by setting the CGSYSCR<SCOSEL[1:0]>.

Table 6-4 shows the pin status in each mode when the SCOUT pin is set to the SCOUT output.

#### Table 6-4 SCOUT Output Status in Each Mode

Mode			Low p	ower consumption	mode
SCOUT selection CGSYSCR	NORMAL	SLOW	IDLE	SLEEP	STOP
<scosel[1:0]> = "00"</scosel[1:0]>	Output the fs clock				
<scosel[1:0]> = "01"</scosel[1:0]>	Output the fsys/2 clock				
<scosel[1:0]> = "10"</scosel[1:0]>	Output the fsys clock				
<scosel[1:0]> = "11"</scosel[1:0]>	Output the φT0 clock	Fixed to "0" or "1".			

Note: The phase difference (AC timing) between the system clock output by the SCOUT and the internal clock is not guaranteed.

## 6.4 Modes and Mode Transitions

### 6.4.1 Mode Transitions

The NORMAL mode and the SLOW mode use the high-speed and low-speed clocks for the system clock respectively.

The IDLE, SLEEP and STOP modes can be used as the low power consumption mode that enables to reduce power consumption by halting processor core operation.

When the low-speed clock is not used, the SLOW and SLEEP modes cannot be used.

Figure 6-2 shows a mode transition diagram.

For a detail of sleep-on-exit, refer to "Cortex-M3 Technical Reference Manual."

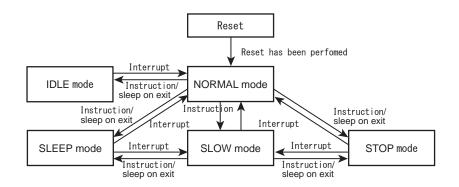


Figure 6-2 Mode Transition Diagram

## 6.5 Operation mode

Two operation modes, NORMAL and SLOW, are available. The features of each mode are described in the following section.

### 6.5.1 NORMAL mode

This mode is to operate the CPU core and the peripheral hardware by using the high-speed clock.

It is shifted to the NORMAL mode after reset. The low-speed clock can also be used.

### 6.5.2 SLOW mode

This mode is to operate the CPU core and the peripheral hardware by using the low-speed clock with highspeed clock stopped. The SLOW mode reduces power consumption compared to the NORMAL mode.

This mode allows only the following peripheral functions to operate: I/O ports, real-time clock (RTC), CEC and remote control signal preprocessor (RMC).

- Note 1: Be sure to stop peripheral functions except for the CPU, RTC, I/O ports, CEC and RMC before switching to the SLOW mode.
- Note 2: In the slow mode, be sure not to perform reset using the Application Interrupt and Reset Control Register <SYSRESETREQ> of the Cortex-M3 NVIC register.

## 6.6 Low Power Consumption Modes

The TX03 has three low power consumption modes: IDLE, SLEEP and STOP. To shift to the low power consumption mode, specify the mode in the system control register CGSTBYCR<STBY[2:0]> and execute the WFI (Wait For Interrupt) instruction. In this case, execute reset or generate the interrupt to release the mode. Releasing by the interrupt requires settings in advance. See the chapter "Exceptions" for details.

- Note 1: The TX03 does not offer any event for releasing the low power consumption mode. Transition to the low power consumption mode by executing the WFE (Wait For Event) instruction is prohibited.
- Note 2: The TX03 does not support the low power consumption mode configured with the SLEEPDEEP bit in the Cortex-M3 core. Setting the <SLEEPDEEP> bit of the system control register is prohibited.

The features of each mode are described as follows.

### 6.6.1 IDLE mode

Only the CPU is stopped in this mode.

Each peripheral function has one bit in its control register for enabling or disabling operation in the IDLE mode.

When the IDLE mode is entered, peripheral functions for which operation in the IDLE mode is disabled stop operation and hold the state at that time.

The following peripheral functions can be enabled or disabled in the IDLE mode. For setting details, see the chapter on each peripheral function.

- 16-bit timer/event counter (TMRB)
- Serial channel (SIO/UART)
- Serial bus interface (I2C/SIO)
- CEC
- Remote control signal preprocessor (RMC)
- Analog Digital converter (ADC)
- Watch dog timer (WDT)

### 6.6.2 SLEEP mode

In the SLEEP mode, the internal low-speed oscillator, real time clock, CEC and RMC can be operated.

By releasing the SLEEP mode, the device returns to the preceding mode of the SLEEP mode and starts operation.

Note: When PA1 (pin number 56) is configured as a debug function pin, it prevents the low power consumption mode from being fully effective. Configure PA1 to function as a general-purpose port if the debug function is not used.

### 6.6.3 STOP mode

All the internal circuits including the internal oscillator are brought to a stop in the STOP mode.

By releasing the STOP mode, the device returns to the preceding mode of the STOP mode and starts operation.

The STOP mode enables to select the pin status by setting the CGSTBYCR<DRVE>.Table 6-5 shows the pin status in the STOP mode.

#### Note: When PA1 (pin number 56) is configured as a debug function pin, it prevents the low power consumption mode from being fully effective. Configure PA1 to function as a general-purpose port when the debug function is not used.

Table 6-5 Pin States in the STOP Mode

	Pin Name	I/O	<drve> = 0</drve>	<drve> = 1</drve>
	X1, XT1	Input only	×	×
Not Ports	Not X2, XT2		"High" level output.	"High" level output.
1 0113	RESET, NMI, MODE	Input only	0	0
	PA0, PB0 [When used as a debug pin (PxFRn <pxmfn>=1) and output is enabled (PxCR<pxmc>=1)] (Note)</pxmc></pxmfn>	Input	×	Depends on (PxIE[m])
		Output	Enabled when data is valid. Disabled when data is invalid.	
Ports	PF7, PG3, PJ0, PJ1, PJ2, PJ3, PJ6, PJ7	Input	0	0
1 0113	[When used as an interrupt pin (PxFRn <pxmfn>=1) and input is enabled (PxIE<pxmie>=1)] (Note)</pxmie></pxmfn>	Output	×	Depends on (PxCR[m])
	ather part size	Input	×	Depends on (PxIE[m])
	other port pins	Output	×	Depends on (PxCR[m])

o : Input or output enabled.

× : Input or output disabled.

Note:x: port number / m: corresponding bit / n: function register number

### 6.6.4 Low power Consumption Mode Setting

The low power consumption mode is specified by the setting of the standby control register CGSTBYCR<STBY[2:0]>.

Table 6-6 shows the mode setting in the <STBY[2:0]>.

Mode	CGSTBYCR
Mode	<stby[2:0]></stby[2:0]>
STOP	001
SLEEP	010
IDLE	011

Table 6-6 Low power consumption mode setting

Note: Do not set any value other than those shown above in <STBY[2:0]>.

### 6.6.5 Operational Status in Each Mode

Table 6-7 show the operational status in each mode.

For I/O port, "o" and " $\times$ " indicate that input/output is enabled and disabled respectively.

For other functions, "o" and "×" indicate that clock is supplied and is not supplied respectively.

Table 6-7 Operational Status in Each Mode

Block	NORMAL	SLOW	IDLE	SLEEP	STOP
Processor core	0	0	×	×	×
I/O port	0	0	o	0	* (Note 3)
ADC	0	× (Note 1)		×	×
SIO	0	× (Note 1)	ON/OFF select-	×	×
SBI	0	× (Note 1)	able for each	×	×
TMRB	0	× (Note 1)	module	×	×
WDT	0	× (Note 1)		×	×
CEC	0	0	0	0	×
RMC	0	0	o	0	×
RTC	0	0	o	0	×
CG	0	0	о	0	×
PLL	0	×	0	×	×
High-speed oscilla- tor (fc)	0	* (Note 2)	o	×	×
Low-speed oscillator (fs)	0	0	o	0	×

Note 1: In the SLOW mode, the ADC, SIO, SBI, TMRB and WDT cannot be used and must be stopped.

Note 2: The high-speed oscillator does not stop automatically and must be stopped by setting the CGOSCCR<XEN> bit.

Note 3: The status depends on the CGSTBYCR<DRVE> bit.

## 6.6.6 Releasing the Low Power Consumption Mode

The low power consumption mode can be released by an interrupt request, Non-Maskable Interrupt (NMI) or reset. The release source that can be used is determined by the low power consumption mode selected.

Details are shown in Table 6-8.

Table 6-8 Release Source in	ו Each Mode	
-----------------------------	-------------	--

	Low pow	ver consumption mode	IDLE	SLEEP	STOP
		INT0 to 7 (Note1)	0	0	0
		INTRTC	о	о	×
		INTTB0 to 9	о	×	×
		INTCAP00 to 60, 01 to 61	о	×	×
	Interrupt	INTRX0 to 2, INTTX0 to 2	о	×	×
Release		INTSBI0 to 2	0	×	×
source			INTCECRX, INTCECTX	0	о
		INTRMCRX0, 1	0	0	×
		INTAD/INTADHP/INTADM0, 1	о	×	×
	NMI (INTWDT)		0	×	×
	NMI (NMI	pin)	0	0	0
	RESET (R	ESET pin)	0	0	0

o: Starts the interrupt handling after the mode is released. (The reset initializes the LSI)

×: Unavailable

- Note 1: To release the low power consumption mode by using the level mode interrupt, keep the level until the interrupt handling is started. Changing the level before then will prevent the interrupt handling from starting properly.
- Note 2: For shifting to the low power consumption mode, set the CPU to prohibit all the interrupts other than the release source. If not, releasing may be executed by an unspecified interrupt.

#### • Release by interrupt request

To release the low power consumption mode by an interrupt, the CPU must be set in advance to detect the interrupt. In addition to the setting in the CPU, the clock generator must be set to detect the interrupt to be used to release the SLEEP and STOP modes.

<u>Release by Non-Maskable Interrupt (NMI)</u>

There are two kinds of NMI sources: WDT interrupt (INTWDT) and NMI pin. INTWDT can only be used in the IDLE mode. The NMI pin can be used to release all the lower power consumption modes.

Release by reset

Any low power consumption mode can be released by reset from the  $\overline{\text{RESET}}$  pin. After that, the mode switches to the NORMAL mode and all the registers are initialized as is the case with normal reset.

Note that returning to the STOP mode by reset does not induce the automatic warm-up. Keep the reset signal valid until the oscillator operation becomes stable.

Refer to "Interrupts" for details.

### 6.6.7 Warm-up

Mode transition may require the warm-up so that the internal oscillator provides stable oscillation.

In the mode transition from STOP to the NORMAL/SLOW or from SLEEP to NORMAL, the warm-up counter is activated automatically. And then the system clock output is started after the elapse of configured warm-up time. It is necessary to select a oscillator to be used for warm-up in the CGOSCCR<WUPSEL> and to set a warm-up time in the CGOSCCR<WUPT[2:0]> before executing the instruction to enter the STOP/ SLEEP mode.

# Note: In STOP/ SLEEP modes, the PLL is disabled. When returning from these modes, configure the warm-up time in consideration of the stability time of the PLL and the internal oscillator. It takes approximately 200µs for the PLL to be stabilized.

In the transition from NORMAL to SLOW/ SLEEP, the warm-up is required so that the internal oscillator to stabilize if the low-speed clock is disabled. Enable the low-speed clock and then activate the warm-up by software.

In the transition from SLOW to NORMAL when the high-speed clock is disabled, enable the high-speed clock and then activate the warm-up.

Table 6-9 shows whether the warm-up setting of each mode transition is required or not.

Mode transition	Warm-up setting
$NORMAL \to IDLE$	Not required
$NORMAL \to SLEEP$	(Note1)
$NORMAL \to SLOW$	(Note 1)
$NORMAL \to STOP$	Not required
$IDLE \to NORMAL$	Not required
$SLEEP \to NORMAL$	Auto-warm-up
$SLEEP \to SLOW$	Not required
$SLOW \to NORMAL$	(Note 2)
$SLOW \to SLEEP$	Not required
$SLOW \to STOP$	Not required
$STOP \to NORMAL$	Auto-warm-up (Note 3)
$STOP \to SLOW$	Auto-warm-up

#### Table 6-9 Warm-up setting in mode transition

- Note 1: If the low-speed clock is disabled, enable the low-speed clock and then activate the warm-up by software.
- Note 2: If the high-speed clock is disabled, enable the high-speed clock and then activate the warm-up by software.
- Note 3: Returning to NORMAL mode by reset does not induce the automatic warm-up. Keep the reset signal valid until the oscillator operation becomes stable.


## 6.6.8 Clock Operations in Mode Transition

The clock operations in mode transition are described in Chapter 6.6.8.1 to 6.6.8.4.

### 6.6.8.1 Transition of operation modes: NORMAL $\rightarrow$ STOP $\rightarrow$ NORMAL

When returning to the NORMAL mode from the STOP mode, the warm-up is activated automatically. It is necessary to set the warm-up time before entering the STOP mode.


Returning to the NORMAL mode by reset does not induce the automatic warm-up. Keep the reset signal asserted until the oscillator operation becomes stable.

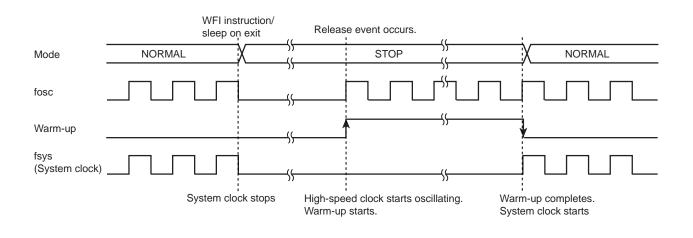

### 6.6.8.2 Transition of operation modes: NORMAL $\rightarrow$ SLEEP $\rightarrow$ NORMAL


When returning to the NORMAL mode from the SLEEP mode, the warm-up is activated automatically. It is necessary to set the warm-up time before entering the SLEEP mode.

Returning to the NORMAL mode by reset does not induce the automatic warm-up. Keep the reset signal asserted until the oscillator operation becomes stable.

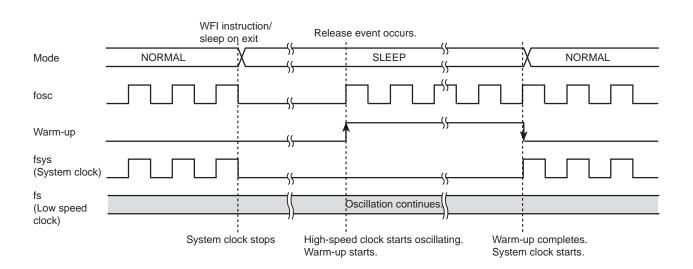


### 6.6.8.3 Transition of operation modes: SLOW $\rightarrow$ STOP $\rightarrow$ SLOW

The warm-up is activated automatically. It is necessary to set the warm-up time before entering the STOP mode.

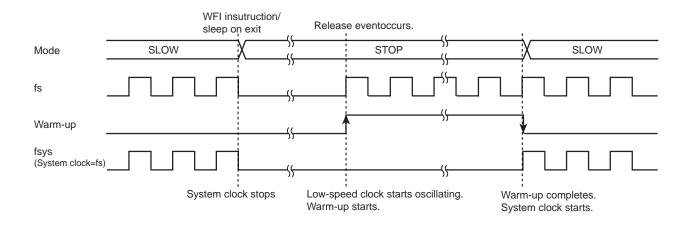

6.6.8.4 Transition of operation modes: SLOW  $\rightarrow$  SLEEP  $\rightarrow$  SLOW

The low-speed clock continues oscillation in the SLEEP mode. There is no need to make a warm-up setting.

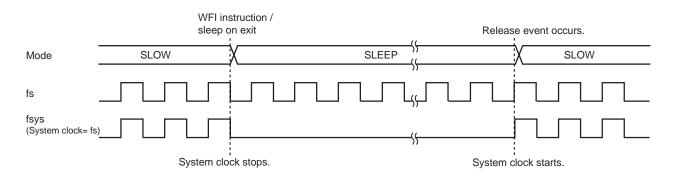

## 7. Exceptions

This chapter describes features, types and handling of exceptions.

Exceptions have close relation to the CPU core. Refer to "Cortex-M3 Technical Reference Manual" if needed.

## 7.1 Overview

An exception causes the CPU to stop the currently executing process and handle another process.

There are two types of exceptions: those that are generated when some error condition occurs or when an instruction to generate an exception is executed; and those that are generated by hardware, such as an interrupt request signal from an external pin or peripheral function.

All exceptions are handled by the Nested Vectored Interrupt Controller (NVIC) in the CPU according to the respective priority levels. When an exception occurs, the CPU stores the current state to the stack and branches to the corresponding interrupt service routine (ISR). Upon completion of the ISR, the information stored to the stack is automatically restored.


## 7.1.1 Exception Types

The following types of exceptions exist in the Cortex-M3.


For detailed descriptions on each exception, refer to "Cortex-M3 Technical Reference Manual".

- Reset
- Non-Maskable Interrupt (NMI)
- Hard Fault
- Memory Management
- Bus Fault
- Usage Fault
- SVCall (Supervisor Call)
- Debug Monitor
- PendSV
- SysTick
- External Interrupt

### 7.1.2 Handling Flowchart



Each step is described later in this chapter.

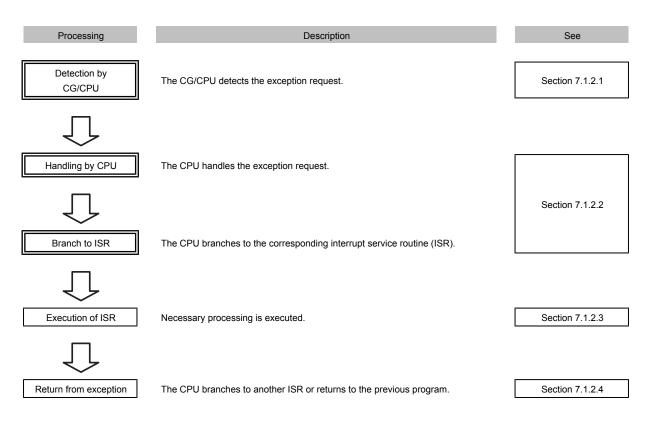

### 7.1.2.1 Exception Request and Detection

### (1) Exception occurrence

Exception sources include instruction execution by the CPU, memory accesses, and interrupt requests from external interrupt pins or peripheral functions.

An exception occurs when the CPU executes an instruction that causes an exception or when an error condition occurs during instruction execution.

An exception also occurs by an instruction fetch from the Execute Never (XN) region or an access violation to the Fault region.

An interrupt request is generated from an external interrupt pin or peripheral function. For interrupts that are used for releasing a standby mode, relevant settings must be made in the clock generator. For details, refer to "7.5 Interrupts".

### (2) Exception detection

If multiple exceptions occur simultaneously, the CPU takes the exception with the highest priority.

Table 7-1 shows the priority of exceptions. "Configurable" means that you can assign a priority level to that exception. Memory Management, Bus Fault and Usage Fault exceptions can be enabled or disabled. If a disabled exception occurs, it is handled as Hard Fault.

Table 7-1 Exception Types and Priority

No.	Exception type	Priority	Description
1	Reset	-3 (highest)	Reset pin, WDT or SYSRETREQ
2	Non-Maskable Interrupt	-2	NMI pin or WDT
3	Hard Fault	-1	Fault that cannot activate because a higher-priority fault is being handled or it is disabled
4	Memory Management	Configurable	Exception from the Memory Protection Unit (MPU) (Note 1) Instruction fetch from the Execute Never (XN) region
5	Bus Fault	Configurable	Access violation to the Hard Fault region of the memory map
6	Usage Fault	Configurable	Undefined instruction execution or other faults related to instruction ex- ecution
7~10	Reserved	-	
11	SVCall	Configurable	System service call with SVC instruction
12	Debug Monitor	Configurable	Debug monitor when the CPU is not faulting
13	Reserved	-	
14	PendSV	Configurable	Pendable system service request
15	SysTick	Configurable	Notification from system timer
16~	External Interrupt	Configurable	External interrupt pin or peripheral function (Note 2)

Note 1: This product does not contain the MPU.

Note 2: External interrupts have different sources and numbers in each product. For details, see "7.5.1.5 List of Interrupt Sources".

### (3) Priority setting

Priority levels

The external interrupt priority is set to the interrupt priority register and other exceptions are set to <PRI\_n> bit in the system handler priority register.

The configuration <PRI\_n> can be changed, and the number of bits required for setting the priority varies from 3 bits to 8 bits depending on products. Thus, the range of priority values you can specify is different depending on products.

In the case of 8-bit configuration, the priority can be configured in the range from 0 to 255. The highest priority is "0". If multiple elements with the same priority exist, the smaller the number, the higher the priority becomes.

#### Note: <PRI\_n> bit is defined as a 3-bit configuration with this product.

Priority grouping

The priority group can be split into groups. By setting the <PRIGROUP> of the application interrupt and reset control register, <PRI\_n> can be divided into the pre-emption priority and the sub priority.

A priority is compared with the pre-emption priority. If the priority is the same as the preemption priority, then it is compared with the sub priority. If the sub priority is the same as the priority, the smaller the exception number, the higher the priority. 7.1 Overview

The Table 7-2 shows the priority group setting. The pre-emption priority and the sub priority in the table are the number in the case that  $\langle PRI_n \rangle$  is defined as an 8-bit configuration.

	<pri_n[7:0]></pri_n[7:0]>		Number of	Number of
<prigroup[2:0]> setting</prigroup[2:0]>	Pre-emption field	Subpriority field	pre-emption priorities	Number of subpriorities
000	[7:1]	[0]	128	2
001	[7:2]	[1:0]	64	4
010	[7:3]	[2:0]	32	8
011	[7:4]	[3:0]	16	16
100	[7:5]	[4:0]	8	32
101	[7:6]	[5:0]	4	64
110	[7]	[6:0]	2	128
111	None	[7:0]	1	256

### Table 7-2 Priority grouping setting

Note: If the configuration of <PRI\_n> is less than 8 bits, the lower bit is "0". For the example, in the case of 3-bit configuration, the priority is set as <PRI\_n[7:5]> and <PRI\_n[4:0]> is "00000".

7.1.2.2 Exception Handling and Branch to the Interrupt Service Routine (Pre-emption)

When an exception occurs, the CPU suspends the currently executing process and branches to the interrupt service routine. This is called "pre-emption".

### (1) Stacking

When the CPU detects an exception, it pushes the contents of the following eight registers to the stack in the following order:

- Program Counter (PC)
- Program Status Register (xPSR)
- r0 r3
- r12
- Link Register (LR)

The SP is decremented by eight words by the completion of the stack push. The following shows the state of the stack after the register contents have been pushed.

$\text{Old SP} \rightarrow$	<previous></previous>
	xPSR
	PC
	LR
	r12
	r3
	r2
	r1
$SP \to$	rO

### (2) Fetching an ISR

The CPU enables instruction to fetch the interrupt processing with data store to the register.

Prepare a vector table containing the top addresses of ISRs for each exception. After reset, the vector table is located at address 0x0000\_0000 in the Code area. By setting the Vector Table Offset Register, you can place the vector table at any address in the Code or SRAM space.

The vector table should also contain the initial value of the main stack.

### (3) Late-arriving

If the CPU detects a higher priority exception before executing the ISR for a previous exception, the CPU handles the higher priority exception first. This is called "late-arriving".

A late-arriving exception causes the CPU to fetch a new vector address for branching to the corresponding ISR, but the CPU does not newly push the register contents to the stack.

### (4) Vector table

The vector table is configured as shown below.

You must always set the first four words (stack top address, reset ISR address, NMI ISR address, and Hard Fault ISR address). Set ISR addresses for other exceptions if necessary.

Offset	Exception	Contents	Setting
0x00	Reset	Initial value of the main stack	Required
0x04	Reset	ISR address	Required
0x08	Non-Maskable Interrupt	ISR address	Required
0x0C	Hard Fault	ISR address	Required
0x10	Memory Management	ISR address	Optional
0x14	Bus Fault	ISR address	Optional
0x18	Usage Fault	ISR address	Optional
0x1C ~ 0x28	Reserved		
0x2C	SVCall	ISR address	Optional
0x30	Debug Monitor	ISR address	Optional
0x34	Reserved		
0x38	PendSV	ISR address	Optional
0x3C	SysTick	ISR address	Optional
0x40	External Interrupt	ISR address	Optional

### 7.1.2.3 Executing an ISR

An ISR performs necessary processing for the corresponding exception. ISRs must be prepared by the user.

An ISR may need to include code for clearing the interrupt request so that the same interrupt will not occur again upon return to normal program execution.

For details about interrupt handling, see "7.5 Interrupts".

If a higher priority exception occurs during ISR execution for the current exception, the CPU abandons the currently executing ISR and services the newly detected exception.

### 7.1.2.4 Exception exit

### (1) Execution after returning from an ISR

When returning from an ISR, the CPU takes one of the following actions:

· Tail-chaining

If a pending exception exists and there are no stacked exceptions or the pending exception has higher priority than all stacked exceptions, the CPU returns to the ISR of the pending exception.

In this case, the CPU skips the pop of eight registers and push of eight registers when exiting one ISR and entering another. This is called "tail-chaining".

• Returning to the last stacked ISR

If there are no pending exceptions or if the highest priority stacked exception is of higher priority than the highest priority pending exception, the CPU returns to the last stacked ISR.

· Returning to the previous program

If there are no pending or stacked exceptions, the CPU returns to the previous program.

### (2) Exception exit sequence

When returning from an ISR, the CPU performs the following operations:

• Pop eight registers

Pops the eight registers (PC, xPSR, r0 to r3, r12 and LR) from the stack and adjust the SP.

Load current active interrupt number

Loads the current active interrupt number from the stacked xPSR. The CPU uses this to track which interrupt to return to.

Select SP

If returning to an exception (Handler Mode), SP is SP\_main. If returning to Thread Mode, SP can be SP\_main or SP\_process.

## 7.2 Reset Exceptions

Reset exceptions are generated from the following three sources.

Use the Reset Flag (CGRSTFLG) Register of the Clock Generator to identify the source of a reset.

• External reset pin

A reset exception occurs when an external reset pin changes from "Low" to "High".

• Reset exception by WDT

The watchdog timer (WDT) has a reset generating feature. For details, see the chapter on the WDT.

Reset exception by SYSRESETREQ

A reset can be generated by setting the SYSRESETREQ bit in the NVIC's Application Interrupt and Reset Control Register.

Note: Do not reset with <SYSRESETREQ> in SLOW mode.

## 7.3 Non-Maskable Interrupts (NMI)

Non-maskable interrupts are generated from the following two sources.

Use the NMI Flag (CGNMIFLG) Register of the clock generator to identify the source of a non-maskable interrupt.

• External  $\overline{\text{NMI}}$  pin

A non-maskable interrupt is generated when an external MII pin changes from "High" to "Low".

· Non-maskable interrupt by WDT

The watchdog timer (WDT) has a non-maskable interrupt generating feature. For details, see the chapter on the WDT.

## 7.4 SysTick

SysTick provides interrupt features using the CPU's system timer.

When you set a value in the SysTick Reload Value Register and enable the SysTick features in the SysTick Control and Status Register, the counter loads with the value set in the Reload Value Register and begins counting down. When the counter reaches "0", a SysTick exception occurs. You may be pending exceptions and use a flag to know when the timer reaches "0".

The SysTick Calibration Value Register holds a reload value for counting 10 ms with the system timer. The count clock frequency varies with each product, and so the value set in the SysTick Calibration Value Register also varies with each product.

Note: In this product, the system timer counts based on a clock obtained by dividing the clock input from the X1 pin by 32. The SysTick Calibration Value Register is set to 0x9C4, which provides 10 ms timing when the clock input from X1 is 8 MHz.

## 7.5 Interrupts

This chapter describes routes, sources and required settings of interrupts.

The CPU is notified of interrupt requests by the interrupt signal from each interrupt source.

It sets priority on interrupts and handles an interrupt request with the highest priority.

Interrupt requests for clearing a standby mode are notified to the CPU via the clock generator. Therefore, appropriate settings must be made in the clock generator.

### 7.5.1 Interrupt Sources

7.5.1.1 Interrupt Route

Figure 7-1 shows an interrupt request route.

The interrupts issued by the peripheral function that is not used to release standby are directly input to the CPU (route1).

The peripheral function interrupts used to release standby (route 2) and interrupts from the external interrupt pin (route 3) are input to the clock generator and are input to the CPU through the logic for releasing standby (route 4 and 5).

If interrupts from the external interrupt pins are not used to release standby, they are directly input to the CPU, not through the logic for standby release (route 6).

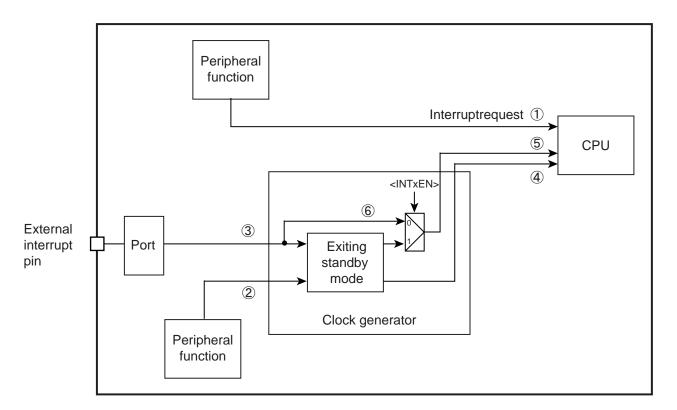


Figure 7-1 Interrupt Route

### 7.5.1.2 Generation

An interrupt request is generated from an external pin or peripheral function assigned as an interrupt source or by setting the NVIC's Interrupt Set-Pending Register.

• From external pin

Set the port control register so that the external pin can perform as an interrupt function pin.

• From peripheral function

Set the peripheral function to make it possible to output interrupt requests.

See the chapter of each peripheral function for details.

• By setting Interrupt Set-Pending Register (forced pending)

An interrupt request can be generated by setting the relevant bit of the Interrupt Set-Pending Register.

### 7.5.1.3 Transmission

An interrupt signal from an external pin or peripheral function is directly sent to the CPU unless it is used to exit a standby mode.

Interrupt requests from interrupt sources that can be used for clearing a standby mode are transmitted to the CPU via the clock generator. For these interrupt sources, appropriate settings must be made in the clock generator in advance. External interrupt sources not used for exiting a standby mode can be used without setting the clock generator.

### 7.5.1.4 Precautions when using external interrupt pins

If you use external interrupts, be aware the followings not to generate unexpected interrupts.

If input disabled (PxIE<PxmIE>="0"), inputs from external interrupt pins are "High". Also, if external interrupts are not used as a trigger to release standby (route 6 of "Figure 7-1 Interrupt Route"), input signals from the external interrupt pins are directly sent to the CPU. Since the CPU recognizes "High" input as an interrupt, interrupts occur if corresponding interrupts are enabled by the CPU as inputs are being disabled.

To use the external interrupt without setting it as a standby trigger, set the interrupt pin input as "Low" and enable it. Then, enable interrupts on the CPU.

## 7.5.1.5 List of Interrupt Sources

Table 7-3 shows the list of interrupt sources.

## Table 7-3 List of Interrupt Sources

No.		Interrupt Source	active level (Clearing standby)	CG interrupt mode control register
0	INT0	Interrupt pin (PJ0/70pin)		
1	INT1	Interrupt pin (PJ1/49pin)		000000
2	INT2	Interrupt pin (PJ2/86pin)		CGIMCGA
3	INT3	Interrupt pin (PJ3/87pin)	Selectable	
4	INT4	Interrupt pin (PG3/6pin)	COMOOD	
5	INT5	Interrupt pin (PF7/19pin)		CGIMCGB
6	INTRX0	Serial reception (channel.0)		
7	INTTX0	Serial transmission (channel.0)		
8	INTRX1	Serial reception (channel.1)		
9	INTTX1	Serial transmission (channel.1)		
10	INTSBI0	Serial bus interface 0		
11	INTSBI1	Serial bus interface 1		
12	INTCECRX	CEC reception		CGIMCGB
13	INTCECTX	CEC transmission	Rising edge	CGIMCGD
14	INTRMCRX0	Remote control signal reception (channel.0)		CGIMCGB
15	INTADHP	Highest priority AD conversion complete interrupt		
16	INTADM0	AD conversion monitoring function interrupt 0		
17	INTADM1	AD conversion monitoring function interrupt 1		
18	INTTB0	16-bit TMRB match detection 0		
19	INTTB1	16-bit TMRB match detection 1		
20	INTTB2	16-bit TMRB match detection 2		
21	INTTB3	16-bit TMRB match detection 3		
22	INTTB4	16-bit TMRB match detection 4	•	
23	INTTB5 16-bit TMRB match detection 5			
24	INTTB6	16-bit TMRB match detection 6		
25	INTRTC	Real time clock	Falling edge	CGIMCGC
26	INTCAP00	16-bit TMRB input capture 00		
27	INTCAP01	16-bit TMRB input capture 01		
28	INTCAP10	16-bit TMRB input capture 10		
29	INTCAP11	16-bit TMRB input capture 11		
30	INTCAP50	16-bit TMRB input capture 50		
31	INTCAP51	16-bit TMRB input capture 51		
32	INTCAP60	16-bit TMRB input capture 60		
33	INTCAP61	16-bit TMRB input capture 61		
34	INT6	Interrupt pin (PJ6/39pin)		0011/000
35	INT7	Interrupt pin (PJ7/58pin)	Selectable	CGIMCGC
36	INTRX2	Serial reception (channel.2)		
37	INTTX2	Serial transmission (channel.2)		
38	INTSBI2	Serial bus interface 2		
39	INTRMCRX1	Remote control signal reception (channel.1)	Rising edge	CGIMCGC

7.5 Interrupts

No.		Interrupt Source	active level (Clearing standby)	CG interrupt mode control register
40	INTTB7	16-bit TMRB match detection 7		
41	INTTB8	16-bit TMRB match detection 8		
42	INTTB9	16-bit TMRB match detection 9		
43	INTCAP20	16-bit TMRB input capture 20		
44	INTCAP21	16-bit TMRB input capture 21		
45	INTCAP30	16-bit TMRB input capture 30		
46	INTCAP31	16-bit TMRB input capture 31		
47	INTCAP40	16-bit TMRB input capture 40		
48	INTCAP41 16-bit TMRB input capture 41			
49	INTAD	A/D conversion completion		

### Table 7-3 List of Interrupt Sources

### 7.5.1.6 Active level

The active level indicates which change in signal of an interrupt source triggers an interrupt. The CPU recognizes interrupt signals in "High" level as interrupt. Interrupt signals directly sent from peripheral functions to the CPU are configured to output "High" to indicate an interrupt request.

Active level is set to the clock generator for interrupts which can be a trigger to release standby. Interrupt requests from peripheral functions are set as rising-edge or falling-edge triggered. Interrupt requests from interrupt pins can be set as level-sensitive ("High" or "Low") or edge-triggered (rising or falling).

If an interrupt source is used for clearing a standby mode, setting the relevant clock generator register is also required. Enable the CGIMCGx<INTxEN> bit and specify the active level in the CGIMCGx<EMCGx> bits. You must set the active level for interrupt requests from each peripheral function as shown in Table 7-3.

An interrupt request detected by the clock generator is notified to the CPU with a signal in "High" level.

Note: For the CEC reception/transmission, remote control signal reception and real time clock interrupts, set the <INTxEN> bit to "1" and specify the active level, even when they are not used for clearing a standby mode.


## TOSHIBA


## 7.5.2 Interrupt Handling

### 7.5.2.1 Flowchart

The following shows how an interrupt is handled.

In the following descriptions, indicates hardware handling. indicates software handling.

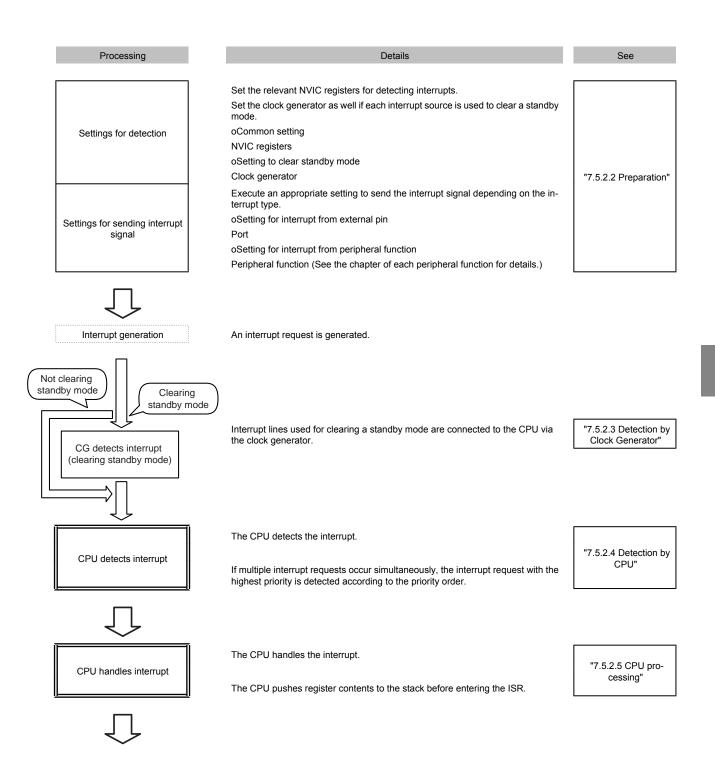

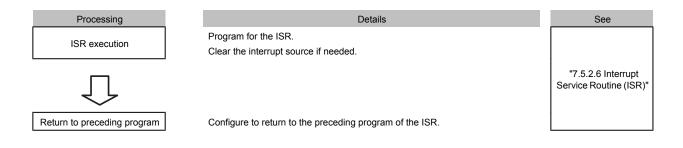

### 7.5.2.2 Preparation

When preparing for an interrupt, you need to pay attention to the order of configuration to avoid any unexpected interrupt on the way.

Initiating an interrupt or changing its configuration must be implemented in the following order basically. Disable the interrupt by the CPU. Configure from the farthest route from the CPU. Then enable the interrupt by the CPU.

To configure the clock generator, you must follow the order indicated here not to cause any unexpected interrupt. First, configure the precondition. Secondly, clear the data related to the interrupt in the clock generator and then enable the interrupt.

The following sections are listed in the order of interrupt handling and describe how to configure them.

- 1. Disabling interrupt by CPU
- 2. CPU registers setting
- 3. Preconfiguration (1) (Interrupt from external pin)
- 4. Preconfiguration (2) (Interrupt from peripheral function)
- 5. Preconfiguration (3) (Interrupt Set-Pending Register)
- 6. Configuring the clock generator
- 7. Enabling interrupt by CPU

### (1) Disabling interrupt by CPU

To make the CPU for not accepting any interrupt, write "1" to the corresponding bit of the PRIMASK Register. All interrupts and exceptions other than non-maskable interrupts and hard faults can be masked.

Use "MSR" instruction to set this register.

Interrupt mask register		
PRIMASK	←	"1" (interrupt disabled)

Note 1: PRIMASK register cannot be modified by the user access level.

Note 2: If a fault causes when "1" is set to the PRIMASK register, it is treated as a hard fault.

### (2) CPU registers setting

You can assign a priority level by writing to <PRI\_n> field in an Interrupt Priority Register of the NVIC register.

Each interrupt source is provided with eight bits for assigning a priority level from 0 to 255, but the number of bits actually used varies with each product. Priority level 0 is the highest priority level. If multiple sources have the same priority, the smallest-numbered interrupt source has the highest priority.

You can assign grouping priority by using the PRIGROUP field in the Application Interrupt and Reset Control Register.

NVIC register		
<pri_n></pri_n>	←	"priority"
<prigroup></prigroup>	Ļ	"group priority"(This is configurable if required.)

Note: "n" indicates the corresponding exceptions/interrupts.

This product uses three bits for assigning a priority level.

#### (3) Preconfiguration (1) (Interrupt from external pin)

Set "1" to the port function register of the corresponding pin. Setting PxFRn[m] allows the pin to be used as the function pin. Setting PxIE[m] allows the pin to be used as the input port.

Port register		
PxFRn <pxmfn></pxmfn>	Ļ	"1"
PxIE <pxmie></pxmie>	÷	"1"

Note: x: port number / m: corresponding bit / n: function register number

In modes other than STOP mode, setting PxIE to enable input enables the corresponding interrupt input regardless of the PxFR setting. Be careful not to enable interrupts that are not used. Also, be aware of the description of "7.5.1.4 Precautions when using external interrupt pins".

#### (4) Preconfiguration (2) (Interrupt from peripheral function)

The setting varies depending on the peripheral function to be used. See the chapter of each peripheral function for details.

### (5) Preconfiguration (3) (Interrupt Set-Pending Register)

To generate an interrupt by using the Interrupt Set-Pending Register, set "1" to the corresponding bit of this register.

NVIC register					
Interrupt Set-Pending [m]	Ļ	"1"			

Note: m: corresponding bit

(6) Configuring the clock generator

For an interrupt source to be used for exiting a standby mode, you need to set the active level and enable interrupts in the CGIMCG register of the clock generator. The CGIMCG register is capable of configuring each source.

Before enabling an interrupt, clear the corresponding interrupt request already held. This can avoid unexpected interrupt. To clear corresponding interrupt request, write a value corresponding to the interrupt to be used to the CGICRCG register.See "7.6.3.5 CGICRCG(CG Interrupt Request Clear Register)" for each value.

Interrupt requests from external pins can be used without setting the clock generator if they are not used for exiting a standby mode. However, an "High" pulse or "High"-level signal must be input so that the CPU can detect it as an interrupt request. Also, be aware of the description of "7.5.1.4 Precautions when using external interrupt pins".

Clock generator register						
CGIMCGn <emcgm></emcgm>	Ļ	active level				
CGICRCG <icrcg></icrcg>	←	Value corresponding to the interrupt to be used				
CGIMCGn <intmen></intmen>	Ļ	"1" (interrupt enabled)				

Note: n: register number / m: number assigned to interrupt source

### (7) Enabling interrupt by CPU

Enable the interrupt by the CPU as shown below.

Clear the suspended interrupt in the Interrupt Clear-Pending Register. Enable the intended interrupt with the Interrupt Set-Enable Register. Each bit of the register is assigned to a single interrupt source.

Writing "1" to the corresponding bit of the Interrupt Clear-Pending Register clears the suspended interrupt. Writing "1" to the corresponding bit of the Interrupt Set-Enable Register enables the intended interrupt.

To generate interrupts in the Interrupt Set-Pending Register setting, factors to trigger interrupts are lost if pending interrupts are cleared. Thus, this operation is not necessary.

At the end, PRIMASK register is zero cleared.

NVIC register							
Interrupt Clear-Pending [m]	←	"1"					
Interrupt Set-Enable [m]	←	"1"					
Interrupt mask register	Interrupt mask register						
PRIMASK	←	"0"					

Note 1: m : corresponding bit

Note 2: PRIMASK register cannot be modified by the user access level.

### 7.5.2.3 Detection by Clock Generator

If an interrupt source is used for exiting a standby mode, an interrupt request is detected according to the active level specified in the clock generator, and is notified to the CPU.

An edge-triggered interrupt request, once detected, is held in the clock generator. A level-sensitive interrupt request must be held at the active level until it is detected, otherwise the interrupt request will cease to exist when the signal level changes from active to inactive.

When the clock generator detects an interrupt request, it keeps sending the interrupt signal in "High" level to the CPU until the interrupt request is cleared in the CG Interrupt Request Clear (CGICRCG) Register. If a standby mode is exited without clearing the interrupt request, the same interrupt will be detected again when normal operation is resumed. Be sure to clear each interrupt request in the ISR.

### 7.5.2.4 Detection by CPU

The CPU detects an interrupt request with the highest priority.

### 7.5.2.5 CPU processing

On detecting an interrupt, the CPU pushes the contents of PC, PSR, r0-r3, r12 and LR to the stack then enter the ISR.

### 7.5.2.6 Interrupt Service Routine (ISR)

An ISR requires specific programming according to the application to be used. This section describes what is recommended at the service routine programming and how the source is cleared.

### (1) Pushing during ISR

An ISR normally pushes register contents to the stack and handles an interrupt as required. The Cortex-M3 core automatically pushes the contents of PC, PSR, r0-r3, r12 and LR to the stack. No extra programming is required for them.

Push the contents of other registers if needed.

Interrupt requests with higher priority and exceptions such as NMI are accepted even when an ISR is being executed. We recommend you to push the contents of general-purpose registers that might be rewritten.

### (2) Clearing an interrupt source

If an interrupt source is used for clearing a standby mode, each interrupt request must be cleared with the CG Interrupt Request Clear (CGICRCG) Register.

If an interrupt source is set as level-sensitive, an interrupt request continues to exist until it is cleared at its source. Therefore, the interrupt source must be cleared. Clearing the interrupt source automatically clears the interrupt request signal from the clock generator.

If an interrupt is set as edge-sensitive, clear an interrupt request by setting the corresponding value in the CGICRCG register. When an active edge occurs again, a new interrupt request will be detected.

## 7.6 Exception/Interrupt-Related Registers

The CPU's NVIC registers and clock generator registers described in this chapter are shown below with their respective addresses.

## 7.6.1 Register List

NVIC registers	Base Address = 0xE000_E000
Register name	Address
SysTick Control and Status Register	0x0010
SysTick Reload Value Register	0x0014
SysTick Current Value Register	0x0018
SysTick Calibration Value Register	0x001C
Interrupt Set-Enable Register 1	0x0100
Interrupt Set-Enable Register 2	0x0104
Interrupt Clear-Enable Register 1	0x0180
Interrupt Clear-Enable Register 2	0x0184
Interrupt Set-Pending Register 1	0x0200
Interrupt Set-Pending Register 2	0x0204
Interrupt Clear-Pending Register 1	0x0280
Interrupt Clear-Pending Register 2	0x0284
Interrupt Priority Register	0x0400 ~ 0x0430
Vector Table Offset Register	0x0D08
Application Interrupt and Reset Control Register	0x0D0C
System Handler Priority Register	0x0D18, 0x0D1C, 0x0D20
System Handler Control and State Register	0x0D24

Clock generator registers		Base Address = 0x4004_0200
Register name		Address
CG Interrupt Request Clear Register	CGICRCG	0x0014
NMI Flag Register	CGNMIFLG	0x0018
Reset Flag Register	CGRSTFLG	0x001C
CG Interrupt Mode Control Register A	CGIMCGA	0x0020
CG Interrupt Mode Control Register B	CGIMCGB	0x0024
CG Interrupt Mode Control Register C	CGIMCGC	0x0028
CG Interrupt Mode Control Register D	CGIMCGD	0x002C
Reserved	-	0x0030
Reserved	-	0x0034
Reserved	-	0x0038
Reserved	-	0x003C

Note: Access to the "Reserved" areas is prohibited.

## 7.6.2 NVIC Registers

## 7.6.2.1 SysTick Control and Status Register

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	COUNTFLAG
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	CLKSOURCE	TICKINT	ENABLE
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-17	-	R	Read as 0.
16	COUNTFLAG	R/W	0: Timer not counted to 0 1: Timer counted to 0 Returns "1" if timer counted to "0" since last time this was read. Clears on read of any part of the SysTick Control and Status Register.
15-3	-	R	Read as 0.
2	CLKSOURCE	R/W	0: External reference clock 1: CPU clock
1	TICKINT	R/W	0: Do not pend SysTick 1: Pend SysTick
0	ENABLE	R/W	0: Disable 1: Enable If "1" is set, it reloads with the value of the Reload Value Register and starts operation.

	31	30	29	28	27	26	25	24				
bit symbol	-	-	-	-	-	-	-	-				
After reset	0	0	0	0	0	0	0	0				
	23	22	21	20	19	18	17	16				
bit symbol		RELOAD										
After reset		Undefined										
	15	14	13	12	11	10	9	8				
bit symbol				REL	OAD							
After reset				Unde	efined	_	-					
	7	6	5	4	3	2	1	0				
bit symbol		RELOAD										
After reset				Unde	efined							

### 7.6.2.2 SysTick Reload Value Register

Bit	Bit Symbol	Туре	Function
31-24	-	R	Read as 0.
23-0	RELOAD	R/W	Reload value Set the value to load into the SysTick Current Value Register when the timer reaches "0".

Note: In this product, the system timer counts based on a clock obtained by dividing the clock input from the X1 pin by 32.

## 7.6.2.3 SysTick Current Value Register

	31	30	29	28	27	26	25	24			
bit symbol	-	-	-	-	-	-	-	-			
After reset	0	0	0	0	0	0	0	0			
	23	22	21	20	19	18	17	16			
bit symbol	CURRENT										
After reset				Unde	efined						
	15	14	13	12	11	10	9	8			
bit symbol		-		CUR	RENT						
After reset				Unde	efined						
	7	6	5	4	3	2	1	0			
bit symbol		CURRENT									
After reset				Unde	efined						

Bit	Bit Symbol	Туре	Function
31-24	-	R	Read as 0.
23-0	CURRENT	R/W	[Read] Current SysTick timer value
			[Write] Clear
			Writing to this register with any value clears it to 0.
			Clearing this register also clears the <countflag> bit of the SysTick Control and Status Register.</countflag>

	31	30	29	28	27	26	25	24		
bit symbol	NOREF	SKEW	-	-	-	-	-	-		
After reset	0	0	0	0	0	0	0	0		
	23	22	21	20	19	18	17	16		
bit symbol	TENMS									
After reset	0	0	0	0	0	0	0	0		
	15	14	13	12	11	10	9	8		
bit symbol				TEN	MS					
After reset	0	0	0	0	1	0	0	1		
	7	6	5	4	3	2	1	0		
bit symbol				TEN	MS					
After reset	1	1	0	0	0	1	0	0		

### 7.6.2.4 SysTick Calibration Value Register

Bit	Bit Symbol	Туре	Function
31	NOREF	R	0: Reference clock provided
			1: No reference clock
30	SKEW	R	0: Calibration value is 10 ms.
			1: Calibration value is not 10 ms.
29-24	-	R	Read as 0.
23-0	TENMS	R	Calibration value
			Reload value to use for 10 ms timing (0x9C4). (Note)

Note: In this product, the system timer counts based on a clock obtained by dividing the clock input from the X1 pin by 32. The SysTick Calibration Value Register is set to a value that provides 10 ms timing when the cock input from X1 is 8 MHz.

	31	30	29	28	27	26	25	24
bit symbol	SETENA SETENA (Interrupt 31) (Interrupt 30)		SETENA (Interrupt 29)	SETENA (Interrupt 28)	SETENA (Interrupt 27)	SETENA (Interrupt 26)	SETENA (Interrupt 25)	SETENA (Interrupt 24)
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	SETENA (Interrupt 23	SETENA (Interrupt 22)	SETENA (Interrupt 21)	SETENA (Interrupt 20)	SETENA (Interrupt 19)	SETENA (Interrupt 18)	SETENA (Interrupt 17)	SETENA (Interrupt 16)
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	15 SETENA (Interrupt 15)	14 SETENA (Interrupt 14)	13 SETENA (Interrupt 13)	12 SETENA (Interrupt 12)	11 SETENA (Interrupt 11)	10 SETENA (Interrupt 10)	9 SETENA (Interrupt 9)	8 SETENA (Interrupt 8)
bit symbol After reset	SETENA	SETENA	SETENA	SETENA	SETENA	SETENA	SETENA	SETENA
	SETENA (Interrupt 15)	SETENA (Interrupt 14)	SETENA (Interrupt 13)	SETENA (Interrupt 12)	SETENA (Interrupt 11)	SETENA (Interrupt 10)	SETENA (Interrupt 9)	SETENA (Interrupt 8)
	SETENA (Interrupt 15) 0	SETENA (Interrupt 14) 0	SETENA (Interrupt 13) 0	SETENA (Interrupt 12) 0	SETENA (Interrupt 11) 0	SETENA (Interrupt 10) 0	SETENA (Interrupt 9)	SETENA (Interrupt 8) 0

## 7.6.2.5 Interrupt Set-Enable Register 1

Bit	Bit Symbol	Туре	Function
31-0	SETENA	R/W	Interrupt number [31:0]
			[Write]
			1: Enable
			[Read]
			0: Disabled
			1: Enabled
			Each bit corresponds to the specified number of interrupts.
			Writing "1" to a bit in this register enables the corresponding interrupt. Writing "0" has no effect.
			Reading the bits can see the enable/disable condition of the corresponding interrupts.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	SETENA (Interrupt 49)	SETENA (Interrupt 48)
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	SETENA (Interrupt 47)	SETENA (Interrupt 46)	SETENA (Interrupt 45)	SETENA (Interrupt 44)	SETENA (Interrupt 43)	SETENA (Interrupt 42)	SETENA (Interrupt 41)	SETENA (Interrupt 40)
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	SETENA (Interrupt 39)	SETENA (Interrupt 38)	SETENA (Interrupt 37)	SETENA (Interrupt 36)	SETENA (Interrupt 35)	SETENA (Interrupt 34)	SETENA (Interrupt 33)	SETENA (Interrupt 32)
After reset	0	0	0	0	0	0	0	0

## 7.6.2.6 Interrupt Set-Enable Register 2

Bit	Bit Symbol	Туре	Function
31-18	-	R	Read as 0.
17-0	SETENA	R/W	Interrupt number [49:32] [Write] 1: Enable [Read] 0: Disabled 1: Enable
			Each bit corresponds to the specified number of interrupts. Writing "1" to a bit in this register enables the corresponding interrupt. Writing "0" has no effect. Reading the bits can see the enable/disable condition of the corresponding interrupts.

	31	30	29	28	27	26	25	24
bit symbol	CLRENA (Interrupt 31)	CLRENA (Interrupt 30)	CLRENA (Interrupt 29)	CLRENA (Interrupt 28)	CLRENA (Interrupt 27)	CLRENA (Interrupt 26)	CLRENA (Interrupt 25)	CLRENA (Interrupt 24)
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	CLRENA (Interrupt 23)	CLRENA (Interrupt 22)	CLRENA (Interrupt 21)	CLRENA (Interrupt 20)	CLRENA (Interrupt 19)	CLRENA (Interrupt 18)	CLRENA (Interrupt 17)	CLRENA (Interrupt 16)
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	CLRENA (Interrupt 15)	CLRENA (Interrupt 14)	CLRENA (Interrupt 13)	CLRENA (Interrupt 12)	CLRENA (Interrupt 11)	CLRENA (Interrupt 10)	CLRENA (Interrupt 9)	CLRENA (Interrupt 8)
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	CLRENA (Interrupt 7)	CLRENA (Interrupt 6)	CLRENA (Interrupt 5)	CLRENA (Interrupt 4)	CLRENA (Interrupt 3)	CLRENA (Interrupt 2)	CLRENA (Interrupt 1)	CLRENA (Interrupt 0)
After reset	0	0	0	0	0	0	0	0

## 7.6.2.7 Interrupt Clear-Enable Register 1

Bit	Bit Symbol	Туре	Function
31-0	CLRENA	R/W	Interrupt number [31:0]
			[Write]
			1: Disabled
			[Read]
			0: Disabled
			1: Enable
			Each bit corresponds to the specified number of interrupts. It can be performed to enable interrupts and to check if interrupts are disabled.
			Writing "1" to a bit in this register disables the corresponding interrupt. Writing "0" has no effect.
			Reading the bits can see the enable/disable condition of the corresponding interrupts.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	CLRENA (Interrupt 49)	CLRENA (Interrupt 48)
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	CLRENA (Interrupt 47)	CLRENA (Interrupt 46)	CLRENA (Interrupt 45)	CLRENA (Interrupt 44)	CLRENA (Interrupt 43)	CLRENA (Interrupt 42)	CLRENA (Interrupt 41)	CLRENA (Interrupt 40)
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	CLRENA (Interrupt 39)	CLRENA (Interrupt 38)	CLRENA (Interrupt 37)	CLRENA (Interrupt 36)	CLRENA (Interrupt 35)	CLRENA (Interrupt 34)	CLRENA (Interrupt 33)	CLRENA (Interrupt 32)
After reset	0	0	0	0	0	0	0	0

## 7.6.2.8 Interrupt Clear-Enable Register 2

Bit	Bit Symbol Typ	/pe Function
31-18	- R	Read as 0.
17-0	CLRENA R/W	<ul> <li>[Write]</li> <li>1: Disabled</li> <li>[Read]</li> <li>0: Disabled</li> <li>1: Enable</li> <li>Each bit corresponds to the specified number of interrupts. It can be performed to enable interrupts and to check if interrupts are disabled.</li> <li>Writing "1" to a bit in this register disables the corresponding interrupt. Writing "0" has no effect.</li> </ul>
		1: Disabled [Read] 0: Disabled 1: Enable Each bit corresponds to the specified number of interrupts. It can be performed to enable interrupts and if interrupts are disabled.

	31	30	29	28	27	26	25	24
hit ovmbol	SETPEND							
bit symbol	(Interrupt 31)	(Interrupt 30)	(Interrupt 29)	(Interrupt 28)	(Interrupt 27)	(Interrupt 26)	(Interrupt 25)	(Interrupt 24)
After reset	Undefined							
	23	22	21	20	19	18	17	16
hit ovrahol	SETPEND							
bit symbol	(Interrupt 23)	(Interrupt 22)	(Interrupt 21)	(Interrupt 20)	(Interrupt 19)	(Interrupt 18)	(Interrupt 17)	(Interrupt 16)
After reset	Undefined							
	15	14	13	12	11	10	9	8
hit ovmbol	SETPEND							
bit symbol	(Interrupt 15)	(Interrupt 14)	(Interrupt 13)	(Interrupt 12)	(Interrupt 11)	(Interrupt 10)	(Interrupt 9)	(Interrupt 8)
After reset	Undefined							
	7	6	5	4	3	2	1	0
hit ovrahol	SETPEND							
bit symbol	(Interrupt 7)	(Interrupt 6)	(Interrupt 5)	(Interrupt 4)	(Interrupt 3)	(Interrupt 2)	(Interrupt 1)	(Interrupt 0)
After reset	Undefined							

## 7.6.2.9 Interrupt Set-Pending Register 1

Bit	Bit Symbol	Туре	Function
31-0	SETPEND	R/W	Interrupt number [31:0]
			[Write]
			1: Pend
			[Read]
			0: Not pending
			1: Pending
			Each bit corresponds to the specified number can force interrupts into the pending state and determines which interrupts are currently pending.
			Writing "1" to a bit in this register pends the corresponding interrupt. However, writing "1" has no effect on
			an interrupt that is already pending or is disabled. Writing "0" has no effect.
			Reading the bit returns the current state of the corresponding interrupts.
			Writing "1" to a corresponding bit in the Interrupt Clear-Pending Register clears the bit in this register.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	SETPEND (Interrupt 49)	SETPEND (Interrupt 48)
After reset	0	0	0	0	0	0	Undefined	Undefined
	15	14	13	12	11	10	9	8
bit symbol	SETPEND (Interrupt 47)	SETPEND (Interrupt 46)	SETPEND (Interrupt 45)	SETPEND (Interrupt 44)	SETPEND (Interrupt 43)	SETPEND (Interrupt 42)	SETPEND (Interrupt 41)	SETPEND (Interrupt 40)
After reset	Undefined							
	7	6	5	4	3	2	1	0
bit symbol	SETPEND (Interrupt 39)	SETPEND (Interrupt 38)	SETPEND (Interrupt 37)	SETPEND (Interrupt 36)	SETPEND (Interrupt 35)	SETPEND (Interrupt 34)	SETPEND (Interrupt 33)	SETPEND (Interrupt 32)
After reset	Undefined							

## 7.6.2.10 Interrupt Set-Pending Register 2

Bit	Bit Symbol	Туре	Function
31-18	-	R	Read as 0.
17-0	SETPEND	R/W	Interrupt number [49:32] [Write] 1: Pend [Read] 0: Not pending 1: Pending Each bit corresponds to the specified number can force interrupts into the pending state and determines which interrupts are currently pending. Writing "1" to a bit in this register pends the corresponding interrupt. However, writing "1" has no effect on an interrupt that is already pending or is disabled. Writing "0" has no effect. Reading the bit returns the current state of the corresponding interrupts. Clear and Interrupt Set-Pending Register bit by writing "1" to the corresponding bit in the Interrupt Clear-Pending Register.

	31	30	29	28	27	26	25	24
bit symbol	CLRPEND							
bit symbol	(Interrupt 31)	(Interrupt 30)	(Interrupt 29)	(Interrupt 28)	(Interrupt 27)	(Interrupt 26)	(Interrupt 25)	(Interrupt 24)
After reset	Undefined							
	23	22	21	20	19	18	17	16
hit ovrahol	CLRPEND							
bit symbol	(Interrupt 23)	(Interrupt 22)	(Interrupt 21)	(Interrupt 20)	(Interrupt 19)	(Interrupt 18)	(Interrupt 17)	(Interrupt 16)
After reset	Undefined							
	15	14	13	12	11	10	9	8
hit ovmbol	CLRPEND							
bit symbol	(Interrupt 15)	(Interrupt 14)	(Interrupt 13)	(Interrupt 12)	(Interrupt 11)	(Interrupt 10)	(Interrupt 9)	(Interrupt 8)
After reset	Undefined							
	7	6	5	4	3	2	1	0
hit ovmbol	CLRPEND							
bit symbol	(Interrupt 7)	(Interrupt 6)	(Interrupt 5)	(Interrupt 4)	(Interrupt 3)	(Interrupt 2)	(Interrupt 1)	(Interrupt 0)
After reset	Undefined							

## 7.6.2.11 Interrupt Clear-Pending Register 1

Bit	Bit Symbol	Туре	Function
31-0	CLRPEND	R/W	Interrupt number [31:0]
			[Write]
			1: Clear pending interrupt
			[Read]
			0: Not pending
			1: Pending
			Each bit corresponds to the specified number can force interrupts into the pending state and determines which interrupts are currently pending.
			Writing "1" to a bit in this register clears the corresponding pending interrupt. However, writing "1" has no effect on an interrupt that is already being serviced. Writing "0" has no effect.
			Reading the bit returns the current state of the corresponding interrupts.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	CLRPEND (Interrupt 49)	CLRPEND (Interrupt 48)
After reset	0	0	0	0	0	0	Undefined	Undefined
	15	14	13	12	11	10	9	8
bit symbol	CLRPEND (Interrupt 47)	CLRPEND (Interrupt 46)	CLRPEND (Interrupt 45)	CLRPEND (Interrupt 44)	CLRPEND (Interrupt 43)	CLRPEND (Interrupt 42)	CLRPEND (Interrupt 41)	CLRPEND (Interrupt 40)
After reset	Undefined							
	7	6	5	4	3	2	1	0
bit symbol	CLRPEND (Interrupt 39)	CLRPEND (Interrupt 38)	CLRPEND (Interrupt 37)	CLRPEND (Interrupt 36)	CLRPEND (Interrupt 35)	CLRPEND (Interrupt 34)	CLRPEND (Interrupt 33)	CLRPEND (Interrupt 32)
After reset	Undefined							

## 7.6.2.12 Interrupt Clear-Pending Register 2

Bit	Bit Symbol	Туре	Function
31-18	-	R	Read as 0.
17-0	CLRPEND	R/W	Interrupt number [49:32] [Write] 1: Clear pending interrupt [Read] 0: Not pending 1: Pending Each bit corresponds to the specified number can force interrupts into the pending state and determines which interrupts are currently pending. Writing "1" to a bit in this register clears the corresponding pending interrupt. However, writing "1" has no effect on an interrupt that is already being serviced. Writing "0" has no effect. Reading the bit returns the current state of the corresponding interrupts.

### 7.6.2.13 Interrupt Priority Register

Each interrupt is provided with eight bits of an Interrupt Priority Register.

The following shows the addresses of the Interrupt Priority Registers corresponding to interrupt numbers.

	31 24	23 16	15 8	7 0
0xE000_E400	PRI_3	PRI_2	PRI_1	PRI_0
0xE000_E404	PRI_7	PRI_6	PRI_5	PRI_4
0xE000_E408	PRI_11	PRI_10	PRI_9	PRI_8
0xE000_E40C	PRI_15	PRI_14	PRI_13	PRI_12
0xE000_E410	PRI_19	PRI_18	PRI_17	PRI_16
0xE000_E414	PRI_23	PRI_22	PRI_21	PRI_20
0xE000_E418	PRI_27	PRI_26	PRI_25	PRI_24
0xE000_E41C	PRI_31	PRI_30	PRI_29	PRI_28
0xE000_E420	PRI_35	PRI_34	PRI_33	PRI_32
0xE000_E424	PRI_39	PRI_38	PRI_37	PRI_36
0xE000_E428	PRI_43	PRI_42	PRI_41	PRI_40
0xE000_E42C	PRI_47	PRI_46	PRI_45	PRI_44
0xE000_E430	_	_	PRI_49	PRI_48

The number of bits to be used for assigning a priority varies with each product. This product uses three bits for assigning a priority.

The following shows the fields of the Interrupt Priority Registers for interrupt numbers 0 to 3. The Interrupt Priority Registers for all other interrupt numbers have the identical fields. Unused bits return "0" when read, and writing to unused bits has no effect.

	31	30	29	28	27	26	25	24
bit symbol		PRI_3		-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol		PRI_2		-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol		PRI_1		-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PRI_0			-	-	-	-	-
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-29	PRI_3	R/W	Priority of interrupt number 3
28-24	-	R	Read as 0.
23-21	PRI_2	R/W	Priority of interrupt number 2
20-16	-	R	Read as 0.
15-13	PRI_1	R/W	Priority of interrupt number 1
12-8	-	R	Read as 0.
7-5	PRI_0	R/W	Priority of interrupt number 0
4-0	-	R	Read as 0.

	31	30	29	28	27	26	25	24
bit symbol	-	-	TBLBASE			TBLOFF		
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol				TBL	OFF			
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol		-		TBL	OFF			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	TBLOFF	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0

## 7.6.2.14 Vector Table Offset Register

Bit	Bit Symbol	Туре	Function
31-30	-	R	Read as 0.
29	TBLBASE	R/W	Table base The vector table is in: 0: Code space 1: SRAM space
28-7	TBLOFF	R/W	Offset value Set the offset value from the top of the space specified in TBLBASE. The offset must be aligned based on the number of exceptions in the table. This means that the minimum alignment is 32 words that you can use for up to 16 interrupts. For more interrupts, you must adjust the alignment by rounding up to the next power of two.
6-0	-	R	Read as 0.

	31	30	29	28	27	26	25	24		
bit symbol	VECTKEY/VECTKEYSTAT									
After reset	0	0	0	0	0	0 0 0				
	23	22	21	20	19	18	17	16		
bit symbol				VECTKEY/VE	ECTKEYSTAT					
After reset	0	0	0	0	0	0	0	0		
	15	14	13	12	11	10	9	8		
bit symbol	ENDIANESS	-	-	-	-		PRIGROUP			
After reset	0	0	0	0	0	0	0	0		
	7	6	5	4	3	2	1	0		
bit symbol	-	-	-	-	-	SYSRESET REQ	VECTCLR ACTIVE	VECTRESET		
After reset	0	0	0	0	0	0	0	0		

### 7.6.2.15 Application Interrupt and Reset Control Register

Bit	Bit Symbol	Туре	Function
31-16	VECTKEY (Write)/ VECTKEY- STAT(Read)	R/W	Register key [Write] Writing to this register requires 0x5FA in the <vectkey> field. [Read] Read as 0xFA05.</vectkey>
15	ENDIANESS	R/W	Endianness bit:(Note1) 1: big endian 0: little endian
14-11	-	R	Read as 0.
10-8	PRIGROUP	R/W	Interrupt priority grouping 000: seven bits of pre-emption priority, one bit of subpriority 001: six bits of pre-emption priority, two bits of subpriority 010: five bits of pre-emption priority, three bits of subpriority 011: four bits of pre-emption priority, four bits of subpriority 100: three bits of pre-emption priority, five bits of subpriority 101: two bits of pre-emption priority, six bits of subpriority 101: one bit of pre-emption priority, seven bits of subpriority 110: one bit of pre-emption priority, seven bits of subpriority 111: no pre-emption priority, eight bits of subpriority The bit configuration to split the interrupt priority register <pri_n> into pre-emption priority and sub priority.</pri_n>
7-3	-	R	Read as 0.
2	SYSRESET REQ	R/W	System Reset Request. 1=CPU outputs a SYSRESETREQ signal. (note2)
1	VECTCLR ACTIVE	R/W	Clear active vector bit 1: clear all state information for active NMI, fault, and interrupts 0: do not clear. This bit self-clears. It is the responsibility of the application to reinitialize the stack.
0	VECTRESET	R/W	System Reset bit 1: reset system 0: do not reset system Resets the system, with the exception of debug components (FPB, DWT and ITM) by setting "1" and this bit is also zero cleared.

Note 1: Little-endian is the default memory format for this product.

Note 2: When SYSRESETREQ is output, warm reset is performed on this product. <SYSRESETREQ> is cleared by warm reset.

#### 7.6.2.16 System Handler Priority Register

Each exception is provided with eight bits of a System Handler Priority Register.

The following shows the addresses of the System Handler Priority Registers corresponding to each exception.

	31 24	23 16	15 8	7 0
0.000 5018	PRI_7	PRI_6	PRI_5	PRI_4
0xE000_ED18		(Usage Fault)	(Bus Fault)	(Memory Management)
0	PRI_11	PRI_10	PRI_9	PRI_8
0xE000_ED1C	(SVCall)			
0.000 5000	PRI_15	PRI_14	PRI_13	PRI_12
0xE000_ED20	(SysTick)	(PendSV)		(Debug Monitor)

The number of bits to be used for assigning a priority varies with each product. This product uses three bits for assigning a priority.

The following shows the fields of the System Handler Priority Registers for Memory Management, Bus Fault and Usage Fault. Unused bits return "0" when read, and writing to unused bits has no effect.

	31	30	29	28	27	26	25	24
bit symbol		PRI_7		-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol		PRI_6		-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol		PRI_5		-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol		PRI_4		-	-	-	-	-
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-29	PRI_7	R/W	Reserved
28-24	-	R	Read as 0.
23-21	PRI_6	R/W	Priority of Usage Fault
20-16	-	R	Read as 0.
15-13	PRI_5	R/W	Priority of Bus Fault
12-8	-	R	Read as 0.
7-5	PRI_4	R/W	Priority of Memory Management
4-0	-	R	Read as 0.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	USGFAULT ENA	BUSFAULT ENA	MEMFAULT ENA
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	SVCALL PENDED	BUSFAULT PENDED	MEMFAULT PENDED	USGFAULT PENDED	SYSTICKACT	PENDSVACT	-	MONITOR ACT
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	SVCALLACT	-	-	-	USGFAULT ACT	-	BUSFAULT ACT	MEMFAULT ACT
After reset	0	0	0	0	0	0	0	0

### 7.6.2.17 System Handler Control and State Register

Bit	Bit Symbol	Туре	Function
31-19	-	R	Read as 0.
18	USGFAULT ENA	R/W	Usage Fault 0: Disabled 1: Enable
17	BUSFAUL TENA	R/W	Bus Fault 0: Disabled 1: Enable
16	MEMFAULT ENA	R/W	Memory Management 0: Disabled 1: Enable
15	SVCALL PENDED	R/W	SVCall 0: Not pended 1: Pended
14	BUSFAULT PENDED	R/W	Bus Fault 0: Not pended 1: Pended
13	MEMFAULT PENDED	R/W	Memory Management 0: Not pended 1: Pended
12	USGFAULT PENDED	R/W	Usage Fault 0: Not pended 1: Pended
11	SYSTICKACT	R/W	SysTick 0: Inactive 1: Active
10	PENDSVACT	R/W	PendSV 0: Inactive 1: Active
9	-	R	Read as 0.
8	MONITORACT	R/W	Debug Monitor 0: Inactive 1: Active
7	SVCALLACT	R/W	SVCall 0: Inactive 1: Active
6-4	-	R	Read as 0.

Bit	Bit Symbol	Туре	Function
3	USGFAULT	R/W	Usage Fault
	ACT		0: Inactive
			1: Active
2	-	R	Read as 0.
1	BUSFAULT	R/W	Bus Fault
	ACT		0: Inactive
			1: Active
0	MEMFAULT	R/W	Memory Management
	ACT		0: Inactive
			1: Active

Note: You must clear or set the active bits with extreme caution because clearing and setting these bits does not repair stack contents.

# 7.6.3 Clock generator registers

# 7.6.3.1 CGIMCGA(CG Interrupt Mode Control Register A)

	31	30	29	28	27	26	25	24
bit symbol	-		EMCG3		EM	ST3	-	INT3EN
After reset	0	0	1	0	0	0	Undefined	0
	23	22	21	20	19	18	17	16
bit symbol	-		EMCG2		EM	ST2	-	INT2EN
After reset	0	0	1	0	0	0	Undefined	0
	15	14	13	12	11	10	9	8
bit symbol	-		EMCG1		EMST1		-	INT1EN
After reset	0	0	1	0	0	0	Undefined	0
	7	6	5	4	3	2	1	0
bit symbol	-		EMCG0		EM	ST0	-	INT0EN
After reset	0	0	1	0	0	0	Undefined	0

Bit	Bit Symbol	Туре	Function
31	-	R	Read as 0.
30-28	EMCG3[2:0]	R/W	active level setting of INT3 standby clear request. (101~111: setting prohibited) 000: "Low" level 001: "High" level 010: Falling edge 011: Rising edge 100: Both edges
27-26	EMST3[1:0]	R	active level of INT3 standby clear request 00: - 01: Rising edge 10: Falling edge 11: Both edges
25	-	R	Reads as undefined.
24	INT3EN	R/W	INT3 clear input 0:Disable 1: Enable
23	-	R	Read as 0.
22-20	EMCG2[2:0]	R/W	active level setting of INT2 standby clear request. (101~111: setting prohibited) 000: "Low" level 001: "High" level 010: Falling edge 011: Rising edge 100: Both edges
19-18	EMST2[1:0]	R	active level of INT2 standby clear request 00: - 01: Rising edge 10: Falling edge 11: Both edges
17	-	R	Reads as undefined.
16	INT2EN	R/W	INT2 clear input 0:Disable 1: Enable
15	-	R	Read as 0.

Bit	Bit Symbol	Туре	Function
14-12	EMCG1[2:0]	R/W	active level setting of INT1 standby clear request. (101~111: setting prohibited) 000: "Low" level 001: "High" level 010: Falling edge 011: Rising edge 100: Both edges
11-10	EMST1[1:0]	R	active level of INT1 standby clear request 00: - 01: Rising edge 10: Falling edge 11: Both edges
9	-	R	Reads as undefined.
8	INT1EN	R/W	INT1 clear input 0:Disable 1: Enable
7	-	R	Read as 0.
6-4	EMCG0[2:0]	R/W	active level setting of INT0 standby clear request. (101~111: setting prohibited) 000: "Low" level 001: "High" level 010: Falling edge 011: Rising edge 100: Both edges
3-2	EMST0[1:0]	R	active level of INT0 standby clear request 00: - 01: Rising edge 10: Falling edge 11: Both edges
1	-	R	Reads as undefined.
0	INTOEN	R/W	INT0 clear input 0:Disable 1: Enable

Note 1: <EMSTx> is effective only when <EMCGx[2:0]> is set to "100" for both rising and falling edge. The active level used for the reset of standby can be checked by referring <EMSTx>. If interrupts are cleared with the CGICRCG register, <EMSTx> is also cleared.

Note 2: Please specify the bit for the edge first and then specify the bit for the <INTxEN>. Setting them simultaneously is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-		EMCG7		EM	ST7	-	INT7EN
After reset	0	0	1	0	0	0	Undefined	0
	23	22	21	20	19	18	17	16
bit symbol	-		EMCG6		EM	ST6	-	INT6EN
After reset	0	0	1	0	0	0	Undefined	0
	15	14	13	12	11	10	9	8
bit symbol	-		EMCG5		EM	ST5	-	INT5EN
After reset	0	0	1	0	0	0	Undefined	0
	7	6	5	4	3	2	1	0
bit symbol	-		EMCG4		EM	ST4	-	INT4EN
After reset	0	0	1	0	0	0	Undefined	0

# 7.6.3.2 CGIMCGB(CG Interrupt Mode Control Register B)

Bit	Bit Symbol	Туре	Function
31	-	R	Read as 0.
30-28	EMCG7[2:0]	R/W	active level setting of INTRMCRX0 standby clear request
			Set it as shown below. 011: Rising edge
27-26	EMST7[1:0]	R	active level of INTRMCRX0 standby clear request
27-20		n.	00: -
			01: Rising edge
			10: Falling edge
			11: Both edges
25	-	R	Reads as undefined.
24	INT7EN	R/W	INTRMCRX0 clear input
			0:Disable
			1: Enable
23	-	R	Read as 0.
22-20	EMCG6[2:0]	R/W	active level setting of INTCECRX standby clear request
			Set it as shown below. 011: Rising edge
19-18	EMST6[1:0]	R	active level of INTCECRX standby clear request
19-10		n.	00: -
			01: Rising edge
			10: Falling edge
			11: Both edges
17	-	R	Reads as undefined.
16	INT6EN	R/W	INTCECRX clear input
			0:Disable
			1: Enable
15	-	R	Read as 0.
14-12	EMCG5[2:0]	R/W	active level setting of INT5 standby clear request (101~111: setting prohibited)
			001: "High" level 010: Falling edge
			011: Rising edge
			100: Both edges
11-10	EMST5[1:0]	R	active level of INT5 standby clear request
			00: -
			01: Rising edge
			10: Falling edge
			11: Both edges
9	-	R	Reads as undefined.

Bit	Bit Symbol	Туре	Function
8	INT5EN	R/W	INT5 clear input
			0:Disable
			1: Enable
7	-	R	Read as 0.
6-4	EMCG4[2:0]	R/W	active level setting of INT4 standby clear request (101~111: setting prohibited)
			000: "Low" level
			001: "High" level
			010: Falling edge
			011: Rising edge
			100: Both edges
3-2	EMST4[1:0]	R	active level of INT4 standby clear request
			00: -
			01: Rising edge
			10: Falling edge
			11: Both edges
1	-	R	Reads as undefined.
0	INT4EN	R/W	INT4 clear input
			0:Disable
			1: Enable

Note 1: <EMSTx> is effective only when <EMCGx[2:0]> is set to "100" for both rising and falling edge. The active level used for the reset of standby can be checked by referring <EMSTx>. If interrupts are cleared with the CGICRCG register, <EMSTx> is also cleared.

Note 2: Please specify the bit for the edge first and then specify the bit for the <INTxEN>. Setting them simultaneously is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-		EMCGB	_	EM	STB	-	INTBEN
After reset	0	0	1	0	0	0	Undefined	0
	23	22	21	20	19	18	17	16
bit symbol	-		EMCGA		EM	STA	-	INTAEN
After reset	0	0	1	0	0	0	Undefined	0
	15	14	13	12	11	10	9	8
bit symbol	-		EMCG9		EM	ST9	-	INT9EN
After reset	0	0	1	0	0	0	Undefined	0
	7	6	5	4	3	2	1	0
bit symbol	-		EMCG8		EM	ST8	-	INT8EN
After reset	0	0	1	0	0	0	Undefined	0

# 7.6.3.3 CGIMCGC(CG Interrupt Mode Control Register C)

Bit	Bit Symbol	Туре	Function
31	-	R	Read as 0.
30-28	EMCGB[2:0]	R/W	active level setting of INTRMCRX1 standby clear request. Set it as shown below. 011: Rising edge
27-26	EMSTB[1:0]	R	active level of INTRMCRX1 standby clear request. 00: - 01: Rising edge 10: Falling edge 11: Both edges
25	-	R	Reads as undefined.
24	INTBEN	R/W	INTRMCRX1 clear input 0:Disable 1: Enable
23	-	R	Read as 0.
22-20	EMCGA[2:0]	R/W	active level setting of INT7 standby clear request. (101~111: setting prohibited) 000: "Low" level 001: "High" level 010: Falling edge 011: Rising edge 100: Both edges
19-18	EMSTA[1:0]	R	active level of INT7 standby clear request. 00: - 01: Rising edge 10: Falling edge 11: Both edges
17	-	R	Reads as undefined.
16	INTAEN	R/W	INT7clear input 0:Disable 1: Enable
15	-	R	Read as 0.
14-12	EMCG9[2:0]	R/W	active level setting of INT6 standby clear request. (101~111: setting prohibited) 000: "Low" level 001: "High" level 010: Falling edge 011: Rising edge 100: Both edges

Bit	Bit Symbol	Туре	Function
11-10	EMST9[1:0]	R	active level of INT6 standby clear request.
			00: -
			01: Rising edge
			10: Falling edge
			11: Both edges
9	-	R	Reads as undefined.
8	INT9EN	R/W	INT6 clear input
			0:Disable
			1: Enable
7	-	R	Read as 0.
6-4	EMCG8[2:0]	R/W	active level setting of INTRTC standby clear request.
			Set it as shown below.
			010: Falling edge
3-2	EMST8[1:0]	R	active level of INTRTC standby clear request.
			00: -
			01: Rising edge
			10: Falling edge
			11: Both edges
1	-	R	Reads as undefined.
0	INT8EN	R/W	INTRTC clear input
			0:Disable
			1: Enable

Note 1: <EMSTx> is effective only when <EMCGx[2:0]> is set to "100" for both rising and falling edge. The active level used for the reset of standby can be checked by referring <EMSTx>. If interrupts are cleared with the CGICRCG register, <EMSTx> is also cleared.

Note 2: Please specify the bit for the edge first and then specify the bit for the <INTxEN>. Setting them simultaneously is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	1	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	1	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	1	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	EMCGC			EM	STC	-	INTCEN
After reset	0	0	1	0	0	0	Undefined	0

#### 7.6.3.4 CGIMCGD(CG Interrupt Mode Control Register D)

Bit	Bit Symbol	Туре	Function					
31	-	R	Read as 0.					
30-28	-	R/W	rite any value.					
27-25	-	R	Read as 0.					
24	-	R/W	Write as 0.					
23	-	R	Read as 0.					
22-20	-	R/W	Write any value.					
19-17	-	R	Read as 0.					
16	-	R/W	Write as 0.					
15	-	R	Read as 0.					
14-12	-	R/W	Write any value.					
11-9	-	R	Read as 0.					
8	-	R/W	Write as 0.					
7	-	R	Read as 0.					
6-4	EMCGC[2:0]	R/W	active level setting of INTCECTX standby clear request.					
			Set it as shown below.					
			011: Rising edge					
3-2	EMSTC[1:0]	R	active level of INTCECTX standby clear request.					
			00: -					
			01: Rising edge					
			10: Falling edge					
			11: Both edges					
1	-	R	Reads as undefined.					
0	INTCEN	R/W	INTCECTX Clear input					
			0:Disable					
			1: Enable					

Note 1: <EMSTx> is effective only when <EMCGx[2:0]> is set to "100" for both rising and falling edge. The active level used for the reset of standby can be checked by referring <EMSTx>. If interrupts are cleared with the CGICRCG register, <EMSTx> is also cleared.

Note 2: Please specify the bit for the edge first and then specify the bit for the <INTxEN>. Setting them simultaneously is prohibited.

7.6.3.5	CGICRCG(CG Interrupt Request Clear Register)
1.0.3.3	CGICRCG(CG Interrupt Request Clear Register

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-			ICRCG		
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-5	-	R	Read as 0.
<u>31-5</u> 4-0	- ICRCG[4:0]	R W	Read as 0.         Clear interrupt requests.         0_0000: INT0         0_0001: INT1         0_0010: INT2         0_0010: INT3         0_0100: INT4         0_0101: INT5         0_0110: INTCECRX         0_0111: INTRMCRX0         0_1000: INTRTC         0_1001: INT6
			0_1010: INT7 0_1011: INTRMCRX1 0_1100: INTCECTX 0_1101 to 1_1111: setting prohibited. Read as 0.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	NMIFLG1	NMIFLG0
After reset	0	0	0	0	0	0	0	0

### 7.6.3.6 CGNMIFLG(NMI Flag Register)

Bit	Bit Symbol	Туре	Function
31-2	-	R	Read as 0.
1	NMIFLG1	R	NMI source generation flag         0: not applicable         1: generated from NMI pin
0	NMIFLG0	R	NMI source generation flag 0: not applicable 1: generated from WDT

Note: <NMIFLG> are cleared to "0" when they are read.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After pin reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After pin reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After pin reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	SYSRSTF	-	WDTRSTF	PINRSTF	PONRSTF
After pin reset	0	0	0	0	0	0	1	1/0

### 7.6.3.7 CGRSTFLG (Reset Flag Register)

Bit	Bit Symbol	Туре	Function
31-5	-	R	Read as 0.
4	SYSRSTF	R/W	Debug reset flag(Note1)
			0: "0" is written
			1: Reset from SYSRESETREQ
3	-	R/W	Write as 0.
2	WDTRSTF	R/W	WDT reset flag
			0: "0" is written
			1: Reset from WDT
1	PINRSTF	R/W	RESET pin flag
			0: "0" is written
			1: Reset from RESET pin
0	PONRSTF	R/W	Power-on flag
			0: "0" is written
			1: "1" is set to this bit in initial reset state right after power-on.

Note 1: This flag indicates a reset generated by the SYSRESETREQ bit of the Application Interrupt and Reset Control Register of the CPU's NVIC.

Note 2: This register is not cleared automatically. Write "0" to clear the register.

# 8. Input/Output Ports

# 8.1 Port Functions

### 8.1.1 Function Lists

TMPM330FDFG/FYFG/FWFG has 78 ports. Besides the ports function, these ports can be used as I/O pins for peripheral functions.

Table 8-1, Table 8-2 and Table 8-3 show the port function table.

Port	Pin	Input/ Output	Pull-up Pull-down	Schmitt input	Noise Filter	Program- mable Open-drain	Function pin
	PA0	I/O	Pull-up	0	-	-	TMS/ SWDIO
	PA1	I/O	Pull-down	-	-	-	TCK/ SWCLK
	PA2	I/O	Pull-up	-	-	-	TRACECLK
Port A	PA3	I/O	Pull-up	-	-	-	TRACEDATA0
ΡοπΑ	PA4	I/O	Pull-up	-	-	-	TRACEDATA1
	PA5	I/O	Pull-up	-	-	-	TRACEDATA2
	PA6	I/O	Pull-up	-	-	-	TRACEDATA3
	PA7	I/O	Pull-up	-	-	-	-
	PB0	I/O	Pull-up	-	_	-	TDO/ SWV
	PB1	I/O	Pull-up	-	-	-	TDI
	PB2	I/O	Pull-up	0	-	-	TRST
D. (D	PB3	I/O	Pull-up	-	-	-	-
Port B	PB4	I/O	Pull-up	-	-	-	-
	PB5	I/O	Pull-up	-	-	-	-
	PB6	I/O	Pull-up	-	-	-	-
	PB7	I/O	Pull-up	-	-	-	-
	PC0	Input	Pull-up	-	-	-	AINO
	PC1	Input	Pull-up	-	-	-	AIN1
Port C	PC2	Input	Pull-up	-	-	-	AIN2
	PC3	Input	Pull-up	-	-	-	AIN3

### Table 8-1 Port Function List (Port A-Port C)

o : Exist

- : Not exist

Note: The noise elimination width of the noise filter is approximately 30 ns under typical conditions.

8.1 Port Functions

Port	Pin	Input/Out- put	Pull-up Pull-down	Schmitt Input	Noise Filter	Program- mable Open-drain	Function pin
	PD0	Input	Pull-up	-	-	-	AIN4, TB5IN0
	PD1	Input	Pull-up	-	-	-	AIN5, TB5IN1
	PD2	Input	Pull-up	-	-	-	AIN6, TB6IN0
Dent D	PD3	Input	Pull-up	-	-	-	AIN7, TB6IN1
Port D	PD4	Input	Pull-up	-	-	-	AIN8
	PD5	Input	Pull-up	-	-	-	AIN9
	PD6	Input	Pull-up	-	-	-	AIN10
	PD7	Input	Pull-up	-	-	-	AIN11
	PE0	I/O	Pull-up	-	-	0	TXD0
Port E	PE1	I/O	Pull-up	0	-	0	RXD0
	PE2	I/O	Pull-up	0	-	0	SCLK0, CTSO
	PE3	I/O	Pull-up	0	-	0	RXIN0
	PE4	I/O	Pull-up	-	-	0	TXD1
	PE5	I/O	Pull-up	0	-	0	RXD1
	PE6	I/O	Pull-up	0	-	0	SCLK1, CTS1
	PF0	I/O	Pull-up	-	-	0	TXD2
Ī	PF1	I/O	Pull-up	0	-	0	RXD2
ľ	PF2	I/O	Pull-up	0	-	0	SCLK2, CTS2
Ī	PF3	1/0	Pull-up	0	-	0	RXIN1
Port F	PF4	I/O	Pull-up	0	-	0	SDA1/ SO1
	PF5	I/O	Pull-up	0	-	0	SCL1/SI1
	PF6	I/O	Pull-up	0	-	0	SCK1
Ī	PF7	I/O	Pull-up	0	0	0	INT5
	PG0	I/O	Pull-up	0	-	0	SDA0/ SO0
ľ	PG1	I/O	Pull-up	0	-	0	SCL0/ SI0
	PG2	I/O	Pull-up	0	-	0	SCK0
	PG3	I/O	Pull-up	0	0	0	INT4
Port G	PG4	I/O	Pull-up	0	-	0	SDA2/ SO2
ľ	PG5	I/O	Pull-up	0	-	0	SCL2/ SI2
ľ	PG6	I/O	Pull-up	0	-	0	SCK2
	PG7	I/O	Pull-up	_	_	0	TB8OUT

### Table 8-2 Port Function List (Port D-Port G)

o : Exist

- : Not exist

Note: The noise elimination width of the noise filter is approximately 30 ns under typical conditions.

# TOSHIBA

Port	Pin	Input/Out- put	Pull-up Pull-down	Schmitt input	Noise Filter	Program- mable Open-drain	Function pin	
	PH0	I/O	Pull-up	0	-	-	TB0IN0, BOOT	
	PH1	I/O	Pull-up	0	-	-	TB0IN1	
	PH2	I/O	Pull-up	0	-	-	TB1IN0	
Port H	PH3	I/O	Pull-up	0	-	-	TB1IN1	
Port H	PH4	I/O	Pull-up	0	-	-	TB2IN0	
	PH5	I/O	Pull-up	0	-	-	TB2IN1	
	PH6	I/O	Pull-up	0	-	-	TB3IN0	
	PH7	I/O	Pull-up	0	-	-	TB3IN1	
	PI0	I/O	Pull-up	_	-	-	TB0OUT	
	PI1	I/O	Pull-up	-	-	-	TB1OUT	
	Pl2	I/O	Pull-up	-	-	-	TB2OUT	
Darth	PI3	I/O	Pull-up	-	-	-	TB3OUT	
Port I	Pl4	I/O	Pull-up	-	-	-	TB4OUT	
	PI5	I/O	Pull-up	-	-	-	TB5OUT	
	Pl6	I/O	Pull-up	0	-	-	TB4IN0	
	PI7	I/O	Pull-up	0	-	-	TB4IN1	
	PJ0	I/O	Pull-up	0	о	-	INTO	
	PJ1	I/O	Pull-up	0	0	-	INT1	
	PJ2	I/O	Pull-up	0	0	-	INT2	
D. ( )	PJ3	I/O	Pull-up	0	0	-	INT3	
Port J	PJ4	I/O	Pull-up	-	-	-	TB6OUT	
	PJ5	I/O	Pull-up	-	-	-	TB7OUT	
	PJ6	I/O	Pull-up	0	0	-	INT6	
	PJ7	I/O	Pull-up	0	0	-	INT7	
	PK0	I/O	-	0	-	o (Note1)	CEC	
Port K	PK1	I/O	Pull-up	-	-	-	SCOUT, ALARM	
	PK2	I/O	Pull-up	-	-	-	TB9OUT	

### Table 8-3 Port Function List (Port H-Port K)

o : Exist

- : Not exist

Note 1: N-ch open drain port.

Note 2: The noise elimination width of the noise filter is approximately 30 ns under typical conditions.

# 8.1.2 Port Registers Outline

The following registers need to be configured to use ports.

• PxDATA: Port x data register

To read/ write port data.

- PxCR: Port x output control register To control output.
   PxIE needs to be configured to control input.
- PxFRn: Port x function register n

To set functions. An assigned function can be activated by setting "1".

• PxOD: Port x open drain control register

To control the programmable open drain.

Programmable open drain is function to be materialized pseudo-open-drain by setting the PxOD. When PxOD is set "1",output buffer is disabled and pseudo-open-drain is materialized.

- PxPUP: Port x pull-up control register To control program pull ups.
- PxPDN: Port x pull-down control register To control programmable pull downs.
- PxIE: Port x input control register

To control inputs.

For avoided through current, default setting prohibits inputs.

# 8.1.3 Port States in STOP Mode

Input and output in STOP mode are enabled/disabled by the CGSTBYCR<DRVE> bit.

If PxIE or PxCR is enabled with <DRVE>=1, input or output is enabled respectively in STOP mode.If <DRVE>=0, both input and output are disabled in STOP mode except for some ports even if PxIE or PxCR are enabled.

Table 8-4 shows the pin conditions in STOP mode.

#### Table 8-4 Port conditions in STOP mode

	Pin Name	I/O	<drve> = 0</drve>	<drve> = 1</drve>	
Exclud-	X1, XT1	Input only	×	×	
ing port	X2, XT2	Output only	"High" Level Output	"High" Level Output	
port	RESET, NMI, MODE	Input only	0	0	
	PA0, PB0	Input	×	Depends on PxIE[m]	
	[When used for debug (PxFRn <pxmfn>=1) and output is enabled (PxCR<pxmc>=1)] (note)</pxmc></pxmfn>	Output	Enabled when data is valid. Disabled when data is invalid.		
Dert	PF7, PG3, PJ0 to PJ3, PJ6, PJ7	Input	0	0	
Port	[When used for interrupt (PxFRn <pxmfn>=1) and input is enabled (PxIE<pxmie>=1)] (note)</pxmie></pxmfn>	Output	x	Depends on PxCR[m].	
	Other perto	Input	×	Depends on PxIE[m].	
	Other ports	Output	×	Depends on PxCR[m].	

o :Input or output enabled

× :Input or output disabled

Note:"x" indicates a port number, "m" a corresponding bit and "n" a function register number.

# 8.1.4 Precautions for Mode Transition between STOP and SLEEP

If PA1 is configured as a debug function pin of TCK/SWCLK, it prevents the low power consumption mode from being fully effective.

Configure PA1 to function as a general-purpose port if the debug function is not used.

This chapter describes the port registers detail.

This chapter describes only "circuit type" reading circuit configuration. For detailed circuit diagram, refer to "8.3 Block Diagrams of Ports".

### 8.2.1 Port A (PA0 to PA7)

The port A is a general-purpose, 8-bit input/output port. For this port, inputs and outputs can be specified in units of bits. Besides the general-purpose input/output function, the port A performs the debug interface and the debug trace output.

PA0 and PA1 are assigned as the debug interface after reset. PA0 is initialized as the TMS/SWDIO pin with input, output and pull-up enabled. PA1 is initialized as the TCK/SWCLK pin with input and pull-down enabled. Pins from PA2 to PA7 operate as general-purpose-ports, and input, output and pull-up are disabled.

- Note 1: If PA0 is configured as the TMS/SWDIO pin, output is enabled even in STOP mode regardless of the CGSTBYCR<DRVE> bit setting
- Note 2: If PA1 is configured as the TCK/SWCLK pin, it prevents the low power consumption mode from being fully effective. Configure PA1 to function as a general-purpose port if the TCK/SWCLK is not used.

#### 8.2.1.1 Port A Circuit Type

	7	6	5	4	3	2	1	0
Туре	T1	Т9	Т9	Т9	Т9	Т9	T6	T12

#### 8.2.1.2 Port A register

		Base Address = 0x4000_0000
Register name		Address (Base+)
Port A data register	PADATA	0x0000
Port A output control register	PACR	0x0004
Port A function register 1	PAFR1	0x0008
Port A pull-up control register	PAPUP	0x002C
Port A pull-down control register	PAPDN	0x0030
Port A input control register	PAIE	0x0038

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PA7	PA6	PA5	PA4	PA3	PA2	PA1	PA0
After reset	0	0	0	0	0	0	0	0

### 8.2.1.3 PADATA (Port A data register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PA7-PA0	R/W	Port A data register.

### 8.2.1.4 PACR (Port A output control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PA7C	PA6C	PA5C	PA4C	PA3C	PA2C	PA1C	PA0C
After reset	0	0	0	0	0	0	0	1

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PA7C-PA0C	R/W	Output
			0: disable
			1: enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	PA6F1	PA5F1	PA4F1	PA3F1	PA2F1	PA1F1	PA0F1
After reset	0	0	0	0	0	0	1	1

# 8.2.1.5 PAFR1 (Port A function register 1)

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6	PA6F1	R/W	0: PORT
			1: TRACEDATA3
5	PA5F1	R/W	0: PORT
			1: TRACEDATA2
4	PA4F1	R/W	0: PORT
			1: TRACEDATA1
3	PA3F1	R/W	0: PORT
			1: TRACEDATA0
2	PA2F1	R/W	0: PORT
			1: TRACECLK
1	PA1F1	R/W	0: PORT
			1: TCK/SWCLK
0	PA0F1	R/W	0: PORT
			1: TMS/SWDIO

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PA7UP	PA6UP	PA5UP	PA4UP	PA3UP	PA2UP	-	PA0UP
After reset	0	0	0	0	0	0	0	1

### 8.2.1.6 PAPUP (Port A pull-up control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-2	PA7UP-PA2UP	R/W	Pull-up 0: Disable 1: Enable
1	-	R	Read as 0.
0	PA0UP	R/W	Pull-up 0:Disable 1:Enable

# 8.2.1.7 PAPDN (Port A pull-down control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	PA1DN	-
After reset	0	0	0	0	0	0	1	0

Bit	Bit Symbol	Туре	Function
31-2	-	R	Read as 0.
1	PA1DN	R/W	Pull-down 0: Disable 1: Enable
0	-	R	Read as 0.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PA7IE	PA6IE	PA5IE	PA4IE	PA3IE	PA2IE	PA1IE	PA0IE
After reset	0	0	0	0	0	0	1	1

### 8.2.1.8 PAIE (Port A input control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PA7IE-PA0IE	R/W	Input 0: DIsable 1: Enable

### 8.2.2 Port B (PB0 to PB7)

The port B is a general-purpose, 8-bit input/output port. For this port, inputs and outputs can be specified in units of bits. Besides the general-purpose input/output function, the port B performs the debug interface.

Reset configures PB0, PB1 and PB2 as debug interface.PB0 is initialized as the TDO/SWV pin with output enabled. PB1 is initialized as the TDI pin with input and pull-up enabled. PB2 is initialized as the TRST pin with input and pull-up enabled.PB3 to PB7 are initialized as general-purpose ports with input, output and pull-up disabled.

Note: If PB0 is configured as the TDO/SWV pin, output is enabled even in STOP mode regardless of the CGSTBYCR<DRVE> bit setting.

#### 8.2.2.1 Port B Circuit Type

	7	6	5	4	3	2	1	0
Туре	T1	T1	T1	T1	T1	T2	T2	T11

#### 8.2.2.2 Port B Register

Base Address = 0x4000\_0040

Register name	Address (Base+)		
Port B data register	PBDATA	0x0000	
Port B output control register	PBCR	0x0004	
Port B function register 1	PBFR1	0x0008	
Port B pull-up control register	PBPUP	0x002C	
Port B input control register	PBIE	0x0038	

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PB7	PB6	PB5	PB4	PB3	PB2	PB1	PB0
After reset	0	0	0	0	0	0	0	0

### 8.2.2.3 PBDATA (Port B data register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PB7-PB0	R/W	Port B data register.

# 8.2.2.4 PBCR (Port B output control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PB7C	PB6C	PB5C	PB4C	PB3C	PB2C	PB1C	PB0C
After reset	0	0	0	0	0	0	0	1

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PB7C-PB0C	R/W	Output
			0: Disable
			1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	PB2F1	PB1F1	PB0F1
After reset	0	0	0	0	0	1	1	1

### 8.2.2.5 PBFR1 (Port B function register 1)

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2	PB2F1	R/W	0: PORT 1: TRST
1	PB1F1	R/W	0: PORT 1: TDI
0	PB0F1	R/W	0: PORT 1: TDO/SWV

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PB7UP	PB6UP	PB5UP	PB4UP	PB3UP	PB2UP	PB1UP	PB0UP
After reset	0	0	0	0	0	1	1	0

### 8.2.2.6 PBPUP (Port B pull-up control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PB7UP-PB0UP	R/W	Pull-up 0: Disable 1: Enable

# 8.2.2.7 PBIE (Port B input control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PB7IE	PB6IE	PB5IE	PB4IE	PB3IE	PB2IE	PB1IE	PB0IE
After reset	0	0	0	0	0	1	1	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PB7IE-PB0IE	R/W	Input
			0: Disable
			1: Enable

### 8.2.3 Port C (PC0 to PC3)

The port C is a 4-bit input port. Besides the general-purpose input function, the port C functions as analog input pins of the AD converter.

Reset initializes all bits of the port C as general-purpose input ports with input and pull-up disabled.

To use the Port C as an analog input of the AD converter, disable input on PCIE and disable pull-up on PCPUP.

Note: Unless you use all the bits of port C and port D as analog input pins, conversion accuracy may be reduced. Be sure to verify that this causes no problem on your system.

#### 8.2.3.1 Port C Circuit Type

	7	6	5	4	3	2	1	0
Туре	-	-	-	-	T17	T17	T17	T17

#### 8.2.3.2 Port C Register

Base Address = 0x4000\_0080

Register name	Address (Base+)	
Port C data register	PCDATA	0x0000
Port C pull-up control register	PCPUP	0x002C
Port C input control register	PCIE	0x0038

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	PC3	PC2	PC1	PC0
After reset	0	0	0	0	1	1	1	1

### 8.2.3.3 PCDATA (Port C data register)

Bit	Bit Symbol	Туре	Function
31-4	-	R	Read as 0.
3-0	PC3-PC0	R	Port C data register.

### 8.2.3.4 PCPUP (Port C pull-up control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	PC3UP	PC2UP	PC1UP	PC0UP
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-4	-	R	Read as 0.
3-0	PC3UP-PC0UP	R/W	Pull-up
			0: Disable
			1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	PC3IE	PC2IE	PC1IE	PC0IE
After reset	0	0	0	0	0	0	0	0

# 8.2.3.5 PCIE (Port C input control register)

Bit	Bit Symbol	Туре	Function
31-4	-	R	Read as 0.
3-0	PC3IE-PC0IE	R/W	input 0: Disable 1: Enable

### 8.2.4 Port D (PD0 to PD7)

The port D is an 8-bit input port. Besides the general-purpose input function, the port D receives an analog input of the AD converter and a 16-bit timer input.

Reset initializes all bits of the port D as general-purpose input ports with input and pull-up disabled.

Set the PDFR1 and PDIE when you use the port D as input pins of the 16-bit timer.

To use the Port D as an analog input of the AD converter, disable input on PDIE and disable pull-up on PDPUP.

Note: Unless you use all the bits of port C and port D as analog input pins, conversion accuracy may be reduced. Be sure to verify that this causes no problem on your system.

#### 8.2.4.1 Port D Circuit Type

	7	6	5	4	3	2	1	0
Туре	T17	T17	T17	T17	T18	T18	T18	T18

#### 8.2.4.2 Port D Register

Base Address = 0x4000\_00C0

Register name		Address (Base+)
Port D data register	PDDATA	0x0000
Port D function register 1	PDFR1	0x0008
Port D pull-up control register	PDPUP	0x002C
Port D input control register	PDIE	0x0038

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PD7	PD6	PD5	PD4	PD3	PD2	PD1	PD0
After reset	1	1	1	1	1	1	1	1

### 8.2.4.3 PDDATA (Port D data register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PD7-PD0	R	Port D data register.

# 8.2.4.4 PDFR1 (Port D function register 1)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	PD3F1	PD2F1	PD1F1	PD0F1
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-4	-	R	Read as 0.
3	PD3F1	R/W	0: PORT
			1: TB6IN1
2	PD2F1	R/W	0: PORT
			1: TB6IN0
1	PD1F1	R/W	0: PORT
			1: TB5IN1
0	PD0F1	R/W	0: PORT
			1: TB5IN0

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PD7UP	PD6UP	PD5UP	PD4UP	PD3UP	PD2UP	PD1UP	PD0UP
After reset	0	0	0	0	0	0	0	0

### 8.2.4.5 PDPUP (Port D pull-up control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PD7UP-PD0UP	R/W	Pull-up 0: Disable
			1: Enable

### 8.2.4.6 PDIE (Port D input control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PD7IE	PD6IE	PD5IE	PD4IE	PD3IE	PD2IE	PD1IE	PD0IE
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PD7IE-PD0IE	R/W	Input 0: Disable
			1: Enable

### 8.2.5 Port E (PE0 to PE6)

The port E is a general-purpose, 7-bit input/output port. For this port, inputs and outputs can be specified in units of bits.

Besides the general-purpose port function, the port E performs the serial interface function and the remote control signal preprocessor input function.

Reset initializes all bits of the port E as general-purpose ports with input, output and pull-up disabled.

The port E has two types of function register. If you use the port E as a general-purpose port, set "0" to the corresponding bit of the two registers. If you use the port E as other than a general-purpose port, set "1" to the corresponding bit of the function register. Do not set "1" to the both function registers at the same time.

### 8.2.5.1 Port E Circuit Type

	7	6	5	4	3	2	1	0
Туре	-	T16	T4	T10	T4	T16	T4	T10

#### 8.2.5.2 Port E Register

		Base Address = 0x4000_0100
Register name	Address (Base+)	
Port E data register	PEDATA	0x0000
Port E output control register	PECR	0x0004
Port E function register 1	PEFR1	0x0008
Port E function register 2	PEFR2	0x000C
Port E open drain control register	PEOD	0x0028
Port E pull-up control register	PEPUP	0x002C
Port E input control register	PEIE	0x0038

Page 123

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	PE6	PE5	PE4	PE3	PE2	PE1	PE0
After reset	0	0	0	0	0	0	0	0

### 8.2.5.3 PEDATA (Port E data register)

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6-0	PE6-PE0	R/W	Port E data register

# 8.2.5.4 PECR (Port E output control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	PE6C	PE5C	PE4C	PE3C	PE2C	PE1C	PE0C
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6-0	PE6C-PE0C	R/W	Output
			0: Disable
			1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	PE6F1	PE5F1	PE4F1	PE3F1	PE2F1	PE1F1	PE0F1
After reset	0	0	0	0	0	0	0	0

### 8.2.5.5 PEFR1(Port E function register 1)

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6	PE6F1	R/W	0: PORT
			1: SCLK1
5	PE5F1	R/W	0: PORT
			1: RXD1
4	PE4F1	R/W	0: PORT
			1: TXD1
3	PE3F1	R/W	0: PORT
			1: RXINO
2	PE2F1	R/W	0: PORT
			1: SCLK0
1	PE1F1	R/W	0: PORT
			1: RXD0
0	PE0F1	R/W	0: PORT
			1: TXD0

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	PE6F2	-	-	-	PE2F2	-	-
After reset	0	0	0	0	0	0	0	0

### 8.2.5.6 PEFR2(Port E function register 2)

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6	PE6F2	R/W	0: PORT 1: CTS1
5-3	-	R	Read as 0.
2	PE2F2	R/W	0: PORT 1: CTS0
1-0	-	R	Read as 0.

## 8.2.5.7 PEOD (Port E open drain control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	PE6OD	PE5OD	PE4OD	PE3OD	PE2OD	PE10D	PE0OD
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6-0	PE6OD- PE0OD	R/W	0: CMOS 1: Open-drain

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	PE6UP	PE5UP	PE4UP	PE3UP	PE2UP	PE1UP	PE0UP
After reset	0	0	0	0	0	0	0	0

### 8.2.5.8 PEPUP (Port E pull-up control register)

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6-0	PE6UP-PE0UP	R/W	Pull-up
			0: Disable
			1: Enable

### 8.2.5.9 PEIE (Port E input control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	PE6IE	PE5IE	PE4IE	PE3IE	PE2IE	PE1IE	PE0IE
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6-0	PE6IE-PE0IE	R/W	Input 0: Disable 1: Enable

### 8.2.6 Port F (PF0 to PF7)

The port F is a general-purpose, 8-bit input/output port. For this port, inputs and outputs can be specified in units of bits. Besides the general-purpose port function, the port F performs the functions of the serial interface, the remote control signal preprocessor, the serial bus interface and the external interrupt input.

Reset initializes all bits of the port F as general-purpose ports with input, output and pull-up disabled.

The port F has two types of function register. If you use the port F as a general-purpose port, set "0" to the corresponding bit of the two registers. If you use the port F as other than a general-purpose port, set "1" to the corresponding bit of the function register. Do not set "1" to the both function registers at the same time.

To use the external interrupt input for releasing STOP mode, select this function in the PFFR1 and enable input in the PFIE register.

These settings enable the interrupt input even if the CGSTBYCR<DRVE> bit in the clock/mode control block is set to stop driving of pins during STOP mode.

Note: In modes other than STOP mode, interrupt input is enabled regardless of the PFFR register setting if input is enabled in PxIE. Make sure to disable unused interrupts when programming the device.

#### 8.2.6.1 Port F Circuit Type

	7	6	5	4	3	2	1	0
Туре	Т8	T13	T13	T13	T4	T16	T4	T10

#### 8.2.6.2 Port F Register

		Base Address = 0x4000_0140
Register name	Address (Base+)	
Port F data register	PFDATA	0x0000
Port F output control register	PFCR	0x0004
Port F function register 1	PFFR1	0x0008
Port F function register 2	PFFR2	0x000C
Port F open drain control register	PFOD	0x0028
Port F pull-up control register	PFPUP	0x002C
Port F input control register	PFIE	0x0038

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PF7	PF6	PF5	PF4	PF3	PF2	PF1	PF0
After reset	0	0	0	0	0	0	0	0

### 8.2.6.3 PFDATA (Port F data register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PF7-PF0	R/W	Port F data register

### 8.2.6.4 PFCR (Port F output control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PF7C	PF6C	PF5C	PF4C	PF3C	PF2C	PF1C	PF0C
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PF7C-PF0C	R/W	Output 0: Disable 1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PF7F1	PF6F1	PF5F1	PF4F1	PF3F1	PF2F1	PF1F1	PF0F1
After reset	0	0	0	0	0	0	0	0

### 8.2.6.5 PFFR1(Port F function register 1)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	PF7F1	R/W	0: PORT
			1: INT5
6	PF6F1	R/W	0: PORT
			1: SCK1
5	PF5F1	R/W	0: PORT
			1: SI1/SCL1
4	PF4F1	R/W	0: PORT
			1: SO1/SDA1
3	PF3F1	R/W	0: PORT
			1: RXIN1
2	PF2F1	R/W	0: PORT
			1: SCLK2
1	PF1F1	R/W	0: PORT
			1: RXD2
0	PF0F1	R/W	0: PORT
			1: TXD2

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	PF2F2	-	-
After reset	0	0	0	0	0	0	0	0

### 8.2.6.6 PFFR2(Port F function register 2)

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2	PF2F2	R/W	0: PORT 1: CTS2
1-0	-	R	Read as 0.

### 8.2.6.7 PFOD (Port F open drain control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PF7OD	PF6OD	PF5OD	PF4OD	PF3OD	PF2OD	PF10D	PF0OD
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PF7OD-PF0OD	R/W	0: CMOS
			1: Open-drain

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PF7UP	PF6UP	PF5UP	PF4UP	PF3UP	PF2UP	PF1UP	<b>PF0UP</b>
After reset	0	0	0	0	0	0	0	0

### 8.2.6.8 PFPUP (Port F pull-up control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PF7UP-PF0UP	R/W	Pull-up
			0: Disable
			1: Enable

### 8.2.6.9 PFIE (Port F input control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PF7IE	PF6IE	PF5IE	PF4IE	PF3IE	PF2IE	PF1IE	PF0IE
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PF7IE-PF0IE	R/W	Input 0: Disable
			1: Enable

### 8.2.7 Port G (PG0 to PG7)

The port G is a general-purpose, 8-bit input/output port. For this port, inputs and outputs can be specified in units of bits.

Besides the general-purpose port function, the port G performs the functions of the serial bus interface, the external interrupt input, and the 16-bit timer output.

Reset initializes all bits of the port G as general-purpose ports with input, output and pull-up disabled.

To use the external interrupt input for releasing STOP mode, select function in the PGFR register and enable input in the PGIE register.

These settings enable the interrupt input even if the CGSTBYCR<DRVE> bit in the clock/mode control block is set to stop driving of pins during STOP mode.

Note: In modes other than STOP mode, interrupt input is enabled regardless of the PGFR register setting if input is enabled in PGIE. Make sure to disable unused interrupts when programming the device.

### 8.2.7.1 Port G Circuit Type

	7	6	5	4	3	2	1	0
Туре	T10	T13	T13	T13	Т8	T13	T13	T13

#### 8.2.7.2 Port G Register

		Base Address = 0x4000_0180
Register name	Address (Base+)	
Port G data register	PGDATA	0x0000
Port G output control register	PGCR	0x0004
Port G function register 1	PGFR1	0x0008
Reserved	-	0x0010
Port G open drain control register	PGOD	0x0028
Port G pull-up control register	PGPUP	0x002C
Port G input control register	PGIE	0x0038

Note: Access to the "reserved" areas is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PG7	PG6	PG5	PG4	PG3	PG2	PG1	PG0
After reset	0	0	0	0	0	0	0	0

### 8.2.7.3 PGDATA (Port G data register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PG7-PG0	R/W	Port G data register.

### 8.2.7.4 PGCR (Port G output control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PG7C	PG6C	PG5C	PG4C	PG3C	PG2C	PG1C	PG0C
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PG7C-PG0C	R/W	Output 0: Disable 1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PG7F1	PG6F1	PG5F1	PG4F1	PG3F1	PG2F1	PG1F1	PG0F1
After reset	0	0	0	0	0	0	0	0

### 8.2.7.5 PGFR1(Port G function register 1)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	PG7F1	R/W	0: PORT
			1: TB8OUT
6	PG6F1	R/W	0: PORT
			1: SCK2
5	PG5F1	R/W	0: PORT
			1: SI2/SCL2
4	PG4F1	R/W	0: PORT
			1: SO2/SDA2
3	PG3F1	R/W	0: PORT
			1: INT4
2	PG2F1	R/W	0: PORT
			1: SCK0
1	PG1F1	R/W	0: PORT
			1: SI0/SCL0
0	PG0F1	R/W	0: PORT
			1: SO0/SDA0

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PG70D	PG6OD	PG5OD	PG40D	PG3OD	PG2OD	PG10D	PG0OD
After reset	0	0	0	0	0	0	0	0

### 8.2.7.6 PGOD (Port G open drain control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PG7OD- PG0OD	R/W	0: CMOS 1: Open-drain

### 8.2.7.7 PGPUP (Port G pull-up control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PG7UP	PG6UP	PG5UP	PG4UP	PG3UP	PG2UP	PG1UP	PG0UP
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PG7UP- PG0UP	R/W	Pull-up 0: Disable 1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PG7IE	PG6IE	PG5IE	PG4IE	PG3IE	PG2IE	PG1IE	PG0IE
After reset	0	0	0	0	0	0	0	0

### 8.2.7.8 PGIE (Port G input control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PG7IE-PG0IE	R/W	Input 0: Disable 1: Enable

### 8.2.8 Port H (PH0 to PH7)

The port H is a general-purpose, 8-bit input/output port. For this port, inputs and outputs can be specified in units of bits. Besides the general-purpose port function, the port H performs the functions of the 16-bit timer input and the operation mode setting.

While a reset signal is in "Low" state, the  $\lceil PH0/\overline{BOOT} \rfloor$  input and pull-up are enabled. At the rising edge of the reset signal, if  $\lceil PH0 \rfloor$  is "High", the device enters single mode and boots from the on-chip flash memory. If  $\lceil PH0 \rfloor$  is "Low", the device enters single BOOT mode and boots from the internal BOOT program.For details of single boot mode, refer to "Flash Memory Operation".

Reset initializes PH0 to PH7 bits of the port H as general-purpose ports with input and output disabled.Pullup is enabled for PH0 and disabled for PH1 to PH7.

#### 8.2.8.1 Port H Circuit Type

	7	6	5	4	3	2	1	0
Туре	Т3	T5						

### 8.2.8.2 Port H Register

		Base Address = 0x4000_01C0
Register name		Address (Base+)
Port H data register	PHDATA	0x0000
Port H output control register	PHCR	0x0004
Port H function register 1	PHFR1	0x0008
Reserved	-	0x0010
Port H pull-up control register	PHPUP	0x002C
Port H input control register	PHIE	0x0038

Note: Access to the "reserved" areas is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PH7	PH6	PH5	PH4	PH3	PH2	PH1	PH0
After reset	0	0	0	0	0	0	0	0

### 8.2.8.3 PHDATA (Port H data register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PH7-PH0	R/W	Port H data register.

### 8.2.8.4 PHCR (Port H output control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PH7C	PH6C	PH5C	PH4C	PH3C	PH2C	PH1C	PH0C
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PH7C-PH0C	R/W	Output
			0: Disable
			1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PH7F1	PH6F1	PH5F1	PH4F1	PH3F1	PH2F1	PH1F1	PH0F1
After reset	0	0	0	0	0	0	0	0

### 8.2.8.5 PHFR1(Port H function register 1)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	PH7F1	R/W	0: PORT
			1: TB3IN1
6	PH6F1	R/W	0: PORT
			1: TB3IN0
5	PH5F1	R/W	0: PORT
			1: TB2IN1
4	PH4F1	R/W	0: PORT
			1: TB2IN0
3	PH3F1	R/W	0: PORT
			1: TB1IN1
2	PH2F1	R/W	0: PORT
			1: TB1IN0
1	PH1F1	R/W	0: PORT
			1: TB0IN1
0	PH0F1	R/W	0: PORT
			1: TB0IN0

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PH7UP	PH6UP	PH5UP	PH4UP	PH3UP	PH2UP	PH1UP	PH0UP
After reset	0	0	0	0	0	0	0	1

### 8.2.8.6 PHPUP (Port H pull-up control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PH7UP-PH0UP	R/W	Pull-up
			0: Disable
			1: Enable

### 8.2.8.7 PHIE (Port H input control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PH7IE	PH6IE	PH5IE	PH4IE	PH3IE	PH2IE	PH1IE	PHOIE
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PH7IE-PH0IE	R/W	Input
			0: Disable
			1: Enable

### 8.2.9 Port I (PI0 to PI7)

The port I is a general-purpose, 8-bit input/output port. For this port, inputs and outputs can be specified in units of bits. Besides the general-purpose port function, the port I performs the 16-bit timer input/output function.

Reset initializes all bits of the port I as general-purpose ports with input, output and pull-up disabled.

#### 8.2.9.1 Port I Circuit Type

	7	6	5	4	3	2	1	0
Туре	Т3	Т3	Т9	Т9	Т9	Т9	Т9	Т9

#### 8.2.9.2 Port I Register

		Base Address = 0x4000_0200
Register name		Address (Base+)
Port I data register	PIDATA	0x0000
Port I output control register	PICR	0x0004
Port I function register 1	PIFR1	0x0008
Reserve	-	0x0010
Port I pull-up control register	PIPUP	0x002C
Port I input control register	PIIE	0x0038

Note: Access to the "reserved" areas is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PI7	PI6	PI5	PI4	PI3	PI2	PI1	P10
After reset	0	0	0	0	0	0	0	0

### 8.2.9.3 PIDATA(Port I data register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PI7-PI0	R/W	Port I data register.

### 8.2.9.4 PICR (Port I output control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PI7C	PI6C	PI5C	PI4C	PI3C	PI2C	PI1C	PI0C
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PI7C-PI0C	R/W	Output
			0: Disable
			1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PI7F1	PI6F1	PI5F1	PI4F1	PI3F1	PI2F1	PI1F1	PI0F1
After reset	0	0	0	0	0	0	0	0

### 8.2.9.5 PIFR1(Port I function register 1)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	PI7F1	R/W	0: PORT
			1: TB4IN1
6	PI6F1	R/W	0: PORT
			1: TB4IN0
5	PI5F1	R/W	0: PORT
			1: TB5OUT
4	PI4F1	R/W	0: PORT
			1: TB4OUT
3	PI3F1	R/W	0: PORT
			1: TB3OUT
2	PI2F1	R/W	0: PORT
			1: TB2OUT
1	PI1F1	R/W	0: PORT
			1: TB1OUT
0	PI0F1	R/W	0: PORT
			1: TB0OUT

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PI7UP	PI6UP	PI5UP	PI4UP	PI3UP	PI2UP	PI1UP	PIOUP
After reset	0	0	0	0	0	0	0	0

### 8.2.9.6 PIPUP (Port I pull-up control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PI7UP-PI0UP	R/W	Pull-up 0: Disable
			1: Enable

### 8.2.9.7 PIIE (Port I input control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PI7IE	PI6IE	PI5IE	PI4IE	PI3IE	PI2IE	PI1IE	PI0IE
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PI7IE-PI0IE	R/W	Input
			0: Disable
			1: Enable

### 8.2.10 Port J (PJ0 to PJ7)

The port J is a general-purpose, 8-bit input/output port. For this port, inputs and outputs can be specified in units of bits. Besides the general-purpose port function, the port J performs the functions of the 16-bit timer output and the external interrupt input.

Reset initializes all bits of the port J as to perform as the general-purpose ports with input, output and pull-up disabled.

To use the external interrupt input for releasing STOP mode, select this function in the PJFR1 register and enable input in the PJIE register.

These settings enable the interrupt input even if the CGSTBYCR<DRVE> bit in the clock/mode control block is set to stop driving of pins during STOP mode.

Note: In modes other than STOP mode, interrupt input is enabled regardless of the PJFR register setting if input is enabled in PJIE. Make sure to disable unused interrupts when programming the device.

#### 8.2.10.1 Port J Circuit Type

	7	6	5	4	3	2	1	0
Туре	T7	T7	Т9	Т9	T7	T7	T7	T7

#### 8.2.10.2 Port J Register

Base Address = 0x4000\_0240 Register name Address (Base+) Port J data register PJDATA 0x0000 PJCR Port J output control register 0x0004 Port J function register 1 PJFR1 0x0008 Reserved 0x0010 -Port J pull-up control register PJPUP 0x002C Port J input control register PJIE 0x0038

Note: Access to the "reserved" areas is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PJ7	PJ6	PJ5	PJ4	PJ3	PJ2	PJ1	PJ0
After reset	0	0	0	0	0	0	0	0

### 8.2.10.3 PJDATA (Port J data register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PJ7-PJ0	R/W	Port J data register.

### 8.2.10.4 PJCR (Port J output control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PJ7C	PJ6C	PJ5C	PJ4C	PJ3C	PJ2C	PJ1C	PJ0C
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PJ7C-PJ0C	R/W	Output 0: Disable
			1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PJ7F1	PJ6F1	PJ5F1	PJ4F1	PJ3F1	PJ2F1	PJ1F1	PJ0F1
After reset	0	0	0	0	0	0	0	0

### 8.2.10.5 PJFR1(Port J function register 1)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	PJ7F1	R/W	0: PORT
			1: INT7
6	PJ6F1	R/W	0: PORT
			1: INT6
5	PJ5F1	R/W	0: PORT
			1: TB7OUT
4	PJ4F1	R/W	0: PORT
			1: TB6OUT
3	PJ3F1	R/W	0: PORT
			1: INT3
2	PJ2F1	R/W	0: PORT
			1: INT2
1	PJ1F1	R/W	0: PORT
			1: INT1
0	PJ0F1	R/W	0: PORT
			1: INTO

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PJ7UP	PJ6UP	PJ5UP	PJ4UP	PJ3UP	PJ2UP	PJ1UP	PJOUP
After reset	0	0	0	0	0	0	0	0

### 8.2.10.6 PJPUP (Port J pull-up control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PJ7UP-PJ0UP	R/W	Pull-up 0: Disable 1: Enable

### 8.2.10.7 PJIE (Port J input control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	PJ7IE	PJ6IE	PJ5IE	PJ4IE	PJ3IE	PJ2IE	PJ1IE	PJ0IE
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	PJ7IE-PJ0IE	R/W	Input 0: Disable 1: Enable

### 8.2.11 Port K (PK0 to PK2)

The port K is a general-purpose, 3-bit input/output port. For this port, inputs and outputs can be specified in units of bits.

Besides the general-purpose port function, the port K performs the functions of the 16-bit timer output, the CEC input, the clock output and the alarm output.

Reset initializes all bits of the port K as general-purpose ports with input, output and pull-up disabled.

Note: PK0 is an N-ch open drain port.

#### 8.2.11.1 Port K Circuit Type

	7	6	5	4	3	2	1	0
Туре	-	-	-	-	-	Т9	T15	T14

### 8.2.11.2 Port K Register

Base Address = 0x4000\_0280

Register name	Register name						
Port K data register	PKDATA	0x0000					
Port K output control register	PKCR	0x0004					
Port K function register 1	PKFR1	0x0008					
Port K function register 2	PKFR2	0x000C					
Port K pull-up control register	PKPUP	0x002C					
Port K input control register	PKIE	0x0038					

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	PK2	PK1	PK0
After reset	0	0	0	0	0	0	0	0

### 8.2.11.3 PKDATA(Port K data register)

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2-0	PK2-PK0	R/W	Port K data register.

### 8.2.11.4 PKCR (Port K output control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	PK2C	PK1C	PK0C
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2-0	PK2C-PK0C	R/W	Output
			0: Disable
[			1: Enable

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	PK2F1	PK1F1	PK0F1
After reset	0	0	0	0	0	0	0	0

### 8.2.11.5 PKFR1(Port K function register 1)

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2	PK2F1	R/W	0: PORT
			1: TB9OUT
1	PK1F1	R/W	0: PORT
			1: SCOUT
0	PK0F1	R/W	0: PORT
			1: CEC

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	PK1F2	-
After reset	0	0	0	0	0	0	0	0

### 8.2.11.6 PKFR2(Port K function register 2)

Bit	Bit Symbol	Туре	Function
31-2	-	R	Read as 0.
1	PK1F2	R/W	
			1: ALARM
0	-	R	Read as 0.

## 8.2.11.7 PKPUP (Port K pull-up control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	PK2UP	PK1UP	-
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2-1	PK2UP-PK1UP	R/W	Pull-up 0: Disable 1: Enable
0	-	R	Read as 0.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
						DICOLE	DIKUE	DICOLE
bit symbol	-	-	-	-	-	PK2IE	PK1IE	PK0IE

### 8.2.11.8 PKIE (Port K input control register)

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2-0	PK2IE-PK0IE	R/W	Input 0: Disable 1: Enable

Note

BOOT input enabled during

reset

Function output triggered by

enable signal Function output triggered by

enable signal

Nch open drain port

\_

\_

0

\_

\_

0

\_

\_

#### **Block Diagrams of Ports** 8.3

#### Port Types 8.3.1

The ports are classified as shown below. Please refer to the following pages for the block diagrams of each port type.

Dot lines in the figure indicate the part of the equivalent circuit described in the "Block diagrams of ports".

R

NoR

R

-

R

R

R

R

\_

\_

\_

\_

\_

\_

\_

\_

Туре	GP Port	Function 1	Function 2	Analog	Pull-up	Pull-down	Programma- ble open-drain
T1	I/O	-	-	-	R	-	-
T2	I/O	Input	-	-	NoR	-	-
Т3	I/O	Input	-	-	R	-	-
T4	I/O	Input	-	-	R	-	о
T5	I/O	Input	-	-	NoR	-	-
T6	I/O	Input	-	-	-	NoR	-
T7	I/O	Input (int)	-	-	R	-	-
Т8	I/O	Input (int)	-	-	R	-	0
Т9	I/O	Output	-	-	R	-	-
T10	I/O	Output	-	-	R	-	0

\_

\_

\_

\_

Output

Input

\_

\_

\_

\_

\_

\_

\_

\_

0

о

### Table 8-5 Function Lists

int: Interrupt input

I/O

I/O

I/O

I/O

I/O

I/O

Input

Input

Output

I/O

I/O

I/O

Output

I/O

\_

Input

T11

T12

T13

T14

T15

T16

T17

T18

-: Not exist

o: Exist

R: Forced disable during reset.

NoR: Unaffected by reset.

8.3.2 Type T1

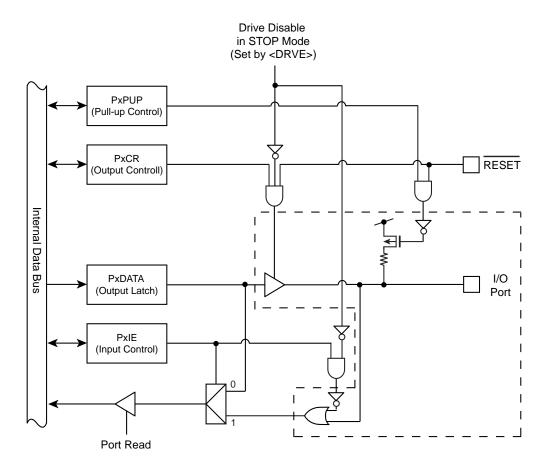


Figure 8-1 Port Type T1

# 8.3.3 Type T2

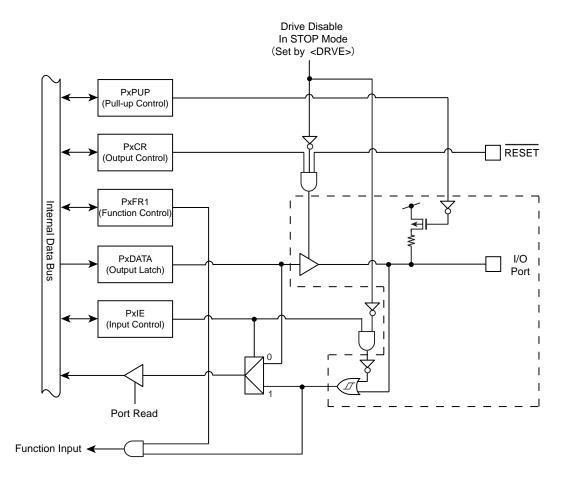


Figure 8-2 Port type T2

# 8.3.4 Type T3

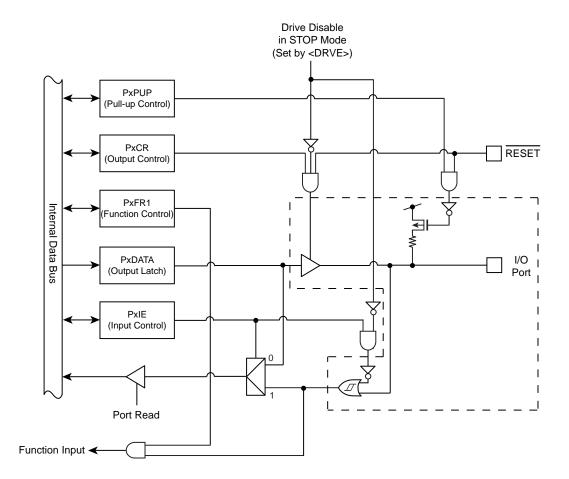


Figure 8-3 Port Type T3

# 8.3.5 Type T4

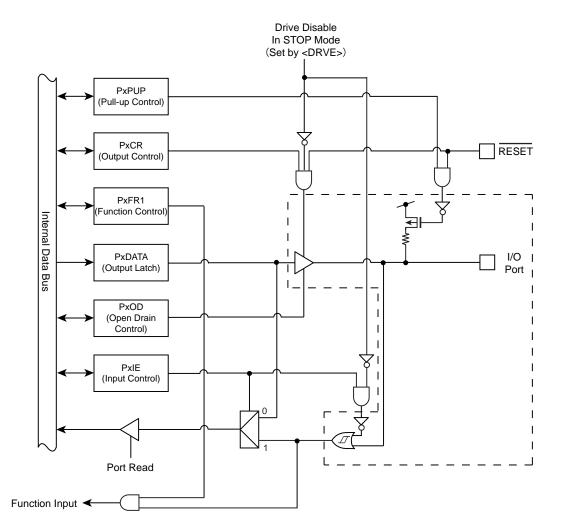


Figure 8-4 Port Type T4

# 8.3.6 Type5 T5

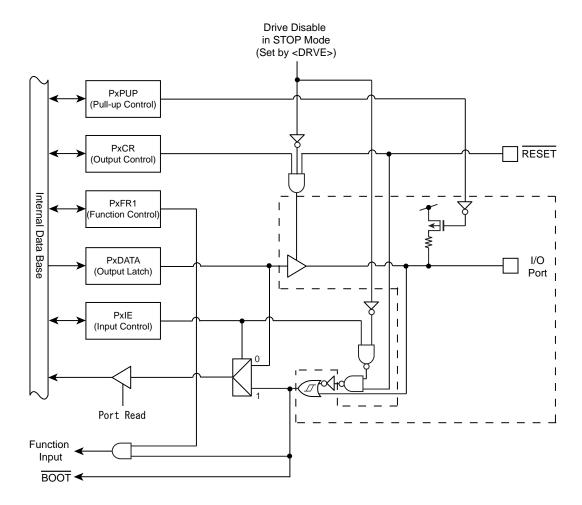


Figure 8-5 Port Type T5

### 8.3.7 Type T6

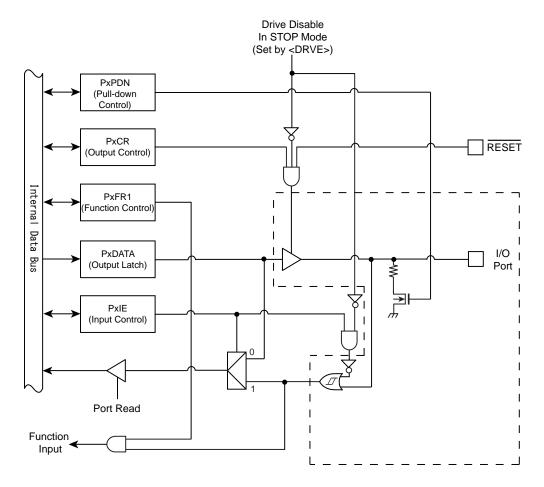


Figure 8-6 Port Type T6

### 8.3.8 Type T7

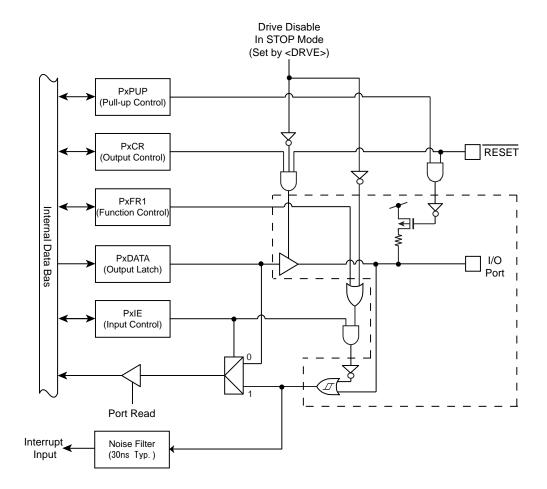


Figure 8-7 Port Type T7

### 8.3.9 Type T8

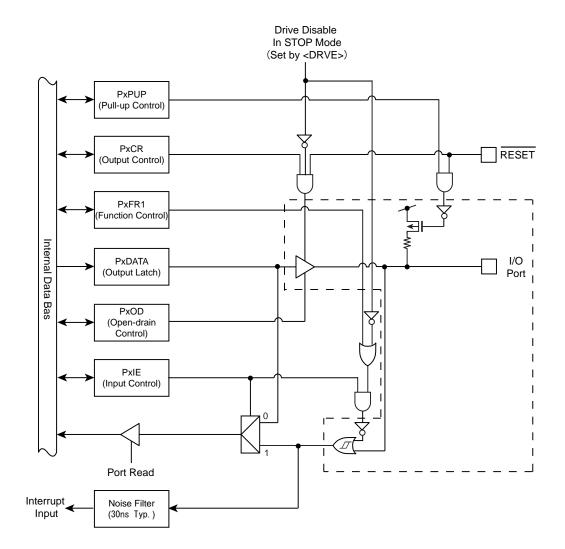


Figure 8-8 Port Type T8

### 8.3.10 Type T9


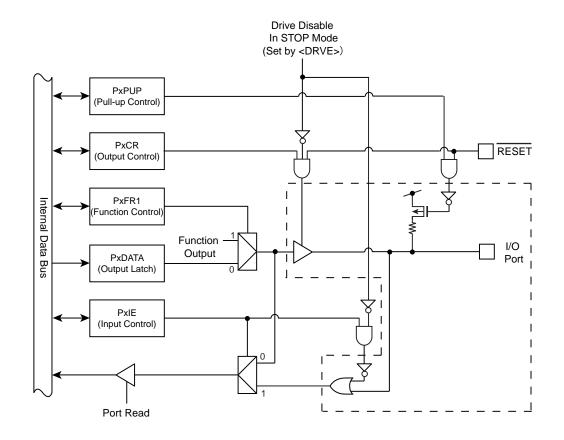



Figure 8-9 Port Type T9

### 8.3.11 Type T10



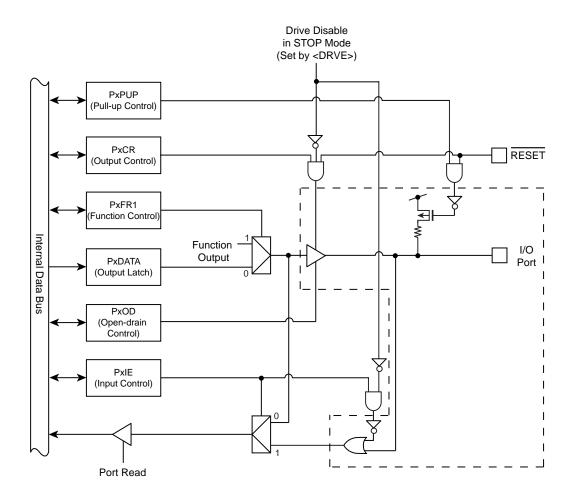

### 8.3.12 Type T11

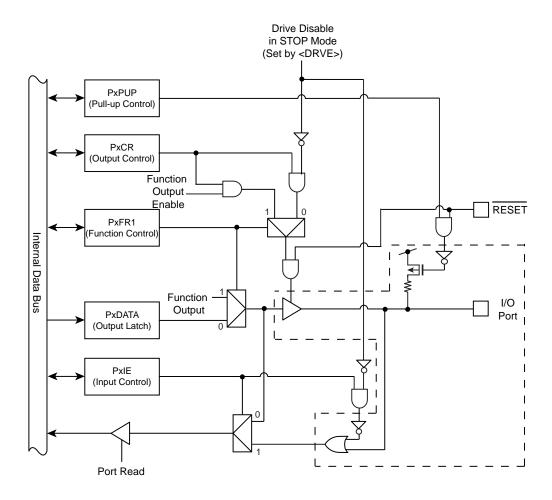



### 8.3.13 Type T12

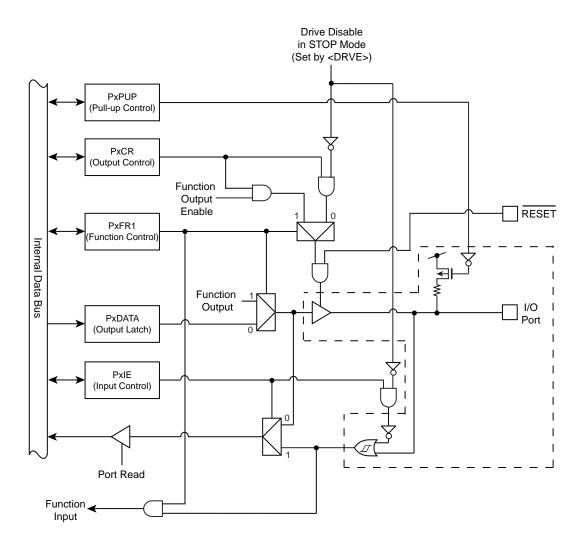


Figure 8-12 Port Type T12

### 8.3.14 Type T13

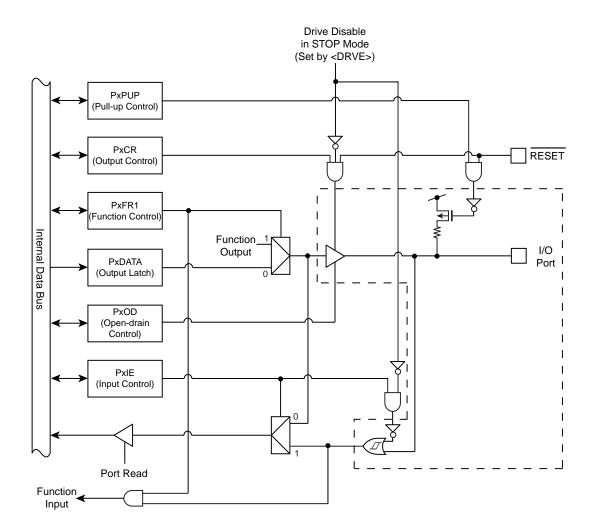


Figure 8-13 Port Type T13

### 8.3.15 Type T14

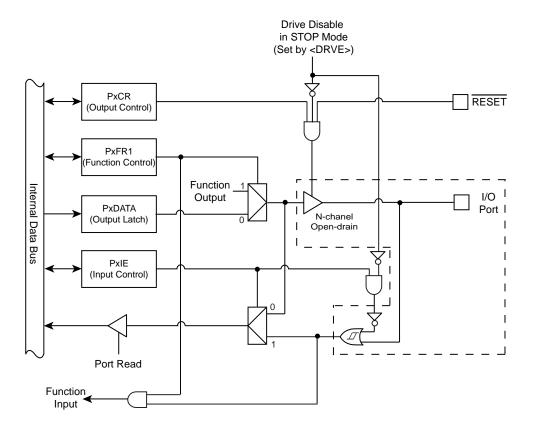


Figure 8-14 Port Type T14

### 8.3.16 Type T15

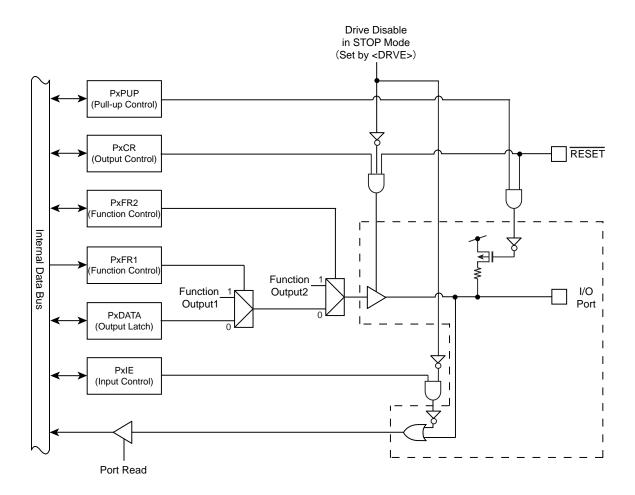


Figure 8-15 Port Type T15

### 8.3.17 Type T16

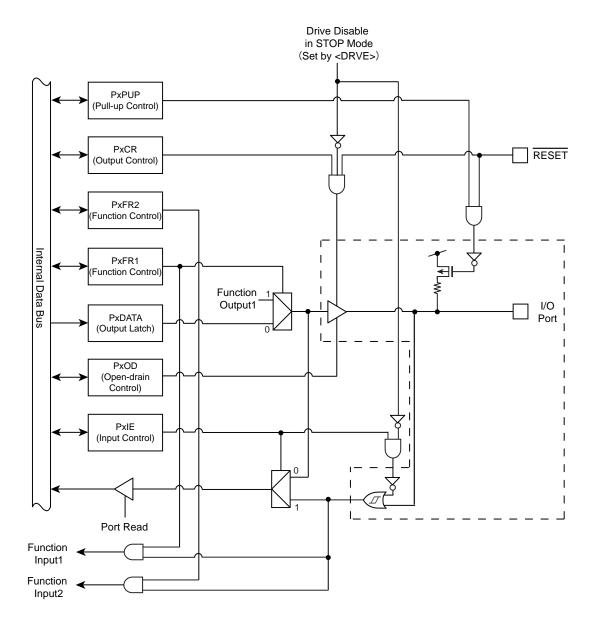


Figure 8-16 Port Type T16

# 8.3.18 Type T17

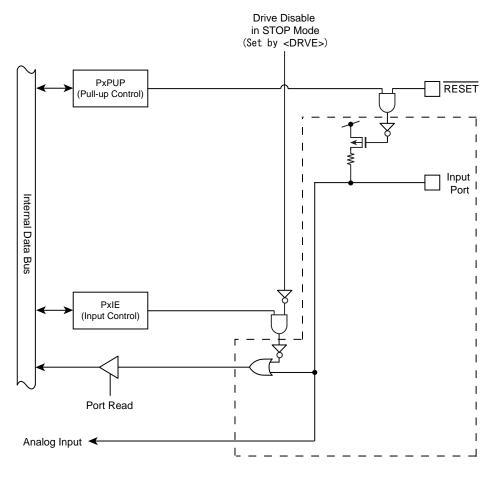


Figure 8-17 Port Type T17

### 8.3.19 Type T18

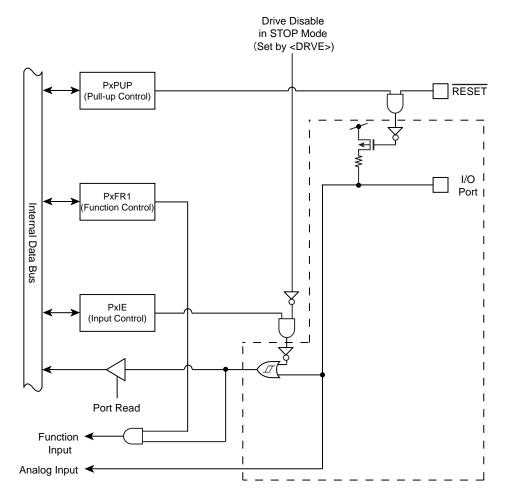


Figure 8-18 Port TypeT18

# 8.4 Appendix (Port setting List)

The following table shows the register setting for each function.

Initialization of the ports where the [•] does not exist in the "After reset" field is set to "0" for all register settings. Setting for the bit "x" can be arbitrarily-specified.

#### 8.4.1 Port A Setting

Table 8-6 Port Setting List (Port A)

Pin	Port Type	Function	After reset	PACR	PAFR1	PAPUP	PAPDN	PAIE
		Input Port		0	0	x	0	1
PA0	T12	Output Port		1	0	x	0	0
FAU	112	TMS(Input)/ SWDIO(I/O)		1	1	1	0	1
		Input Port		0	0	0	x	1
PA1	т6	Output Port		1	0	0	x	0
Γ Α Ι	10	TCK(Input)/ SWCLK(Input)		0	1	0	1	1
		Input Port		0	0	x	0	1
PA2	Т9	Output Port		1	0	x	0	0
		TRACECLK(Output)		1	1	x	0	0
		Input Port		0	0	x	0	1
PA3	Т9	Output Port		1	0	x	0	0
		TRACEDATA0(Output)		1	1	x	0	0
		Input Port		0	0	x	0	1
PA4	Т9	Output Port		1	0	x	0	0
		TRACEDATA1(Output)		1	1	х	0	0
		Input Port		0	0	x	0	1
PA5	Т9	Output Port		1	0	x	0	0
		TRACEDATA2(Output)		1	1	x	0	0
		Input Port		0	0	х	0	1
PA6	Т9	Output Port		1	0	х	0	0
		TRACEDATA3(Output)		1	1	х	0	0
PA7	T1	Input Port		0	0	x	0	1
PAI		Output Port		1	0	x	0	0

# TOSHIBA

# 8.4.2 Port B Setting

#### Table 8-7 Port Setting List (Port B)

Pin	Port Type	Function	After re- set	PBCR	PBFR1	PBPUP	PBIE
		Input Port		0	0	x	1
PB0	T11	Output Port		1	0	x	0
FBU I	111	TDO(Output)/ SWV(Output)		1	1	0	0
		Input Port		0	0	x	1
PB1	T2	Output Port		1	0	x	0
		TDI(Input)	-	0	1	1	1
		Input Port		0	0	x	1
PB2	T2	Output Port		1	0	x	0
		TRST(Input)	-	0	1	1	1
PB3	T1	Input Port		0	0	x	1
PBJ	11	Output Port		1	0	x	0
PB4	T1	Input Port		0	0	x	1
PB4	11	Output Port		1	0	x	0
555	<b>T</b> 4	Input Port		0	0	x	1
PB5	T1	Output Port		1	0	x	0
PB6	T1	Input Port		0	0	х	1
PB0	11	Output Port		1	0	x	0
007	τ4	Input Port		0	0	x	1
PB7	T1	Output Port		1	0	х	0

### 8.4.3 Port C Setting

#### Table 8-8 Port Setting List (Port C)

Pin	Port Type	Function	After re- set	PCPUP	PCIE
DCO	T47	Input Port		x	1
PC0	T17	Analog Input	-	0	0
PC1	T17	Input Port		x	1
PC1	117	Analog Input	-	0	0
DOD	T47	Input Port		x	1
PC2	T17	Analog Input	-	0	0
DOD	T47	Input Port		x	1
PC3	T17	Analog Input	•	0	0

### 8.4.4 Port D Setting

#### Table 8-9 Port Setting List (Port D)

Pin	Port Type	Function	After re- set	PDFR1	PDPUP	PDIE
		Input Port		0	x	1
PD0	T18	TB5IN0(Input)		1	х	1
		Analog Input	-	x	0	1 0 1 1 0 1 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 1 0 1 1 0 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 1 1 0 1 1 1 1 1 1 1 1 1 1 1 1 1
		Input Port		0	x	1
PD1	T18	TB5IN1(Input)		1	х	x     1       x     1       0     0       x     1       x
		Analog Input	•	x	0	0
		Input Port		0	х	1
PD2	T18	TB6IN0(Input)		1	х	1
		Analog Input		x	0	0
		Input Port		0	х	1
PD3	T18	TB6IN1(Input)		1	х	1
		Analog Input	-	x	0	0
PD4	T17	Input Port		0	х	1
PD4	117	Analog Input		x	0	1 0 1 1 0 1 1 0 1 1 0 1 0 1 0 1 0 1 0 1
555	<b>T</b> 4 <b>7</b>	Input Port		0	х	1
PD5	T17	Analog Input		x	0	0
PD6	T17	Input Port		0	х	1
PD6	117	Analog Input	-	x	0	0
007	T47	Input Port		0	х	1
PD7	T17	Analog Input	•	х	0	0

# 8.4.5 Port E Setting

Table 8-10 Port Setting List (Port E)

Pin	Port Type	Function	After re- set	PECR	PEFR1	PEFR2	PEOD	PEPUP	PEIE
		Input Port		0	0	0	x	x	1
PE0	T10	Output Port		1	0	0	x	x	0
		TXD0(Output)		1	1	0	x	x	0
		Input Port		0	0	0	x	x	1
PE1	T4	Output Port		1	0	0	x	x	0
		RXD0(Input)		0	1	0	x	x	1
		Input Port		0	0	0	x	x	1
		Output Port		1	0	0	x	x	0
PE2	T16	SCLK0(Input)		0	1	0	х	x	1
		SCLK0(Output)		1	1	0	х	x	0
		CTS0(Input)		0	0	1	х	x	1
		Input Port		0	0	0	х	x	1
PE3	T4	Output Port		1	0	0	х	x	0
		RXIN0(Input)		0	1	0	х	x	1
		Input Port		0	0	0	х	x	1
PE4	T10	Output Port		1	0	0	х	x	0
		TXD1(Output)		1	1	0	x	x	0
		Input Port		0	0	0	х	x	1
PE5	T4	Output Port		1	0	0	х	x	0 1 1 0 1 1 0 0 0
		RXD1(Input)		0	1	0	х	x	1
		Input Port		0	0	0	х	х	1
		Output Port		1	0	0	х	х	0
PE6	T16	SCLK1(Input)		0	1	0	х	х	1
		SCLK1(Output)		1	1	0	х	х	0
		CTS1(Input)		0	0	1	х	х	1

# 8.4.6 Port F Setting

Pin	Port Type	Function	After re- set	PFCR	PFFR1	PFFR2	PFOD	PFPUP	PFIE
		Input Port		0	0	0	x	x	1
PF0	T10	Output Port		1	0	0	x	x	0
		TXD2(Output)		1	1	0	x	x	0
		Input Port		0	0	0	x	x	1
PF1	T4	Output Port		1	0	0	x	x	0
		RXD2(Input)		0	1	0	x	x	1
		Input Port		0	0	0	x	x	1
		Output Port		1	0	0	x	x	0
PF2	T16	SCLK2(Input)		0	1	1	x	x	1
		SCLK2(Output)		1	1	0	x	x	0
		CTS2(Input)		0	0	0	x	x	1
		Input Port		0	0	0	x	x	1
PF3	T4	Output Port		1	0	0	x	x	0
		RXIN1(Input)		0	1	0	x	x	1
		Input Port		0	0	0	x	x	1
	<b>T</b> 40	Output Port		1	0	0	x	x	0
PF4	T13	SO1(Output)		1	1	0	x	x	0
		SDA1(Input/Output)		1	1	0	1	x	1
		Input Port		0	0	0	x	x	1
DEC	T13	Output Port		1	0	0	x	x	0
PF5	113	SI1(Input)		0	1	0	x	x	1
		SCL1(Input/Output)		1	1	0	1	x	1
		Input Port		0	0	0	x	x	1
PF6	T40	Output Port		1	0	0	x	x	0
210	T13	SCK1(Input)		0	1	0	x	х	1
		SCK1(Output)		1	1	0	x	х	0
		Input Port		0	0	0	x	x	1
PF7	Т8	Output Port		1	0	0	x	x	0
		INT5(Input)		0	1	0	x	x	1

### 8.4.7 Port G Setting

Pin	Port Type	Function	After re- set	PGCR	PGFR1	PGOD	PGPUP	PGIE
		Input Port		0	0	x	x	1
DOA	T10	Output Port		1	0	x	x	0
PG0	T13	SO0(Output)		1	1	x	x	0
		SDA0(Input/Output)		1	1	1	x	1
		Input Port		0	0	х	x	1
DO1	T10	Output Port		1	0	x	x	0
PG1	T13	SI0(Input)		0	1	x	x	1
		SCL0(Input/Output)		1	1	1	x	1
		Input Port		0	0	x	x	1
500		Output Port		1	0	x	x	0
PG2	T13	SCK0(Input)		0	1	x	x	1
		SCK0(Output)		1	1	x	x	0
		Input Port		0	0	x	x	1
PG3	Т8	Output Port		1	0	x	x	0
		INT4(Input)		0	1	x	x	1
		Input Port		0	0	x	x	1
504	<b>T</b> 10	Output Port		1	0	x	x	0
PG4	T13	SO2(Output)		1	1	x	x	0
		SDA2(Input/Output)		1	1	1	x	1
		Input Port		0	0	x	x	1
DOF	<b>T</b> 10	Output Port		1	0	x	x	1         0         0         1         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         0         1         1         0         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1          1           1
PG5	T13	SI2(Input)		0	1	x	x	1
		SCL2(Input/Output)		1	1	1	x	1
		Input Port		0	0	x	x	1
DOA	<b>T</b> 10	Output Port		1	0	x	x	1         0         1         1         0         1 <td< td=""></td<>
PG6	T13	SCK2(Input)		0	1	х	x	1
		SCK2(Output)		1	1	х	х	0
		Input Port		0	0	х	х	1
PG7	T10	Output Port		1	0	х	х	0
		TB8OUT(Output)		1	1	x	x	0

#### 8.4.8 Port H Setting

#### Table 8-13 Port Setting List (Port H)

Pin	Port Type	Function	After re- set	PHCR	PHFR1	PHPUP	PHIE
		Input Port		0	0	x	1
PH0	T5	Output Port		1	0	x	0
		TB0IN0(Input)		0	1	x	1
	PH1 T3	Input Port		0	0	x	1
PH1		Output Port		1	0	x	0
		TB0IN1(Input)		0	1	x	1
	Input Port		0	0	x	1	
PH2	Т3	Output Port		1	0	x	0
		TB1IN0(Input)		0	1	x	1
		Input Port		0	0	x	1
PH3	Т3	Output Port		1	0	x	0
		TB1IN1(Input)		0	1	x	1
PH4	Т3	Input Port		0	0	x	1
		Output Port		1	0	x	0
		TB2IN0(Input)		0	1	x	1
PH5	Т3	Input Port		0	0	x	1
		Output Port		1	0	x	0
		TB2IN1(Input)		0	1	x	1
PH6	Т3	Input Port		0	0	x	1
		Output Port		1	0	x	0
		TB3IN0(Input)		0	1	x	1
PH7	Т3	Input Port		0	0	x	1
		Output Port		1	0	x	0
		TB3IN1(Input)		0	1	x	1

Note: The PH0 input and pull-up are enabled and act as BOOT input pin while a RESET is in "Low" state.

# 8.4.9 Port I Setting

#### Table 8-14 Port Setting List (Port I)

Pin	Port Type	Function	After re- set	PICR	PIFR1	PIPUP	PIIE
		Input Port		0	0	x	1
PI0	PI0 T9	Output Port		1	0	x	0
		TB0OUT(Output)		1	1	x	0
		Input Port		0	0	x	1
PI1	Т9	Output Port		1	0	x	0
		TB1OUT(Output)		1	1	x	0
		Input Port		0	0	x	1
Pl2	Т9	Output Port		1	0	x	0
		TB2OUT(Output)		1	1	x	0
		Input Port		0	0	x	1
PI3	Т9	Output Port		1	0	x	0
		TB3OUT(Output)		1	1	x	0
		Input Port		0	0	x	1 0 0 1 0
PI4	Т9	Output Port		1	0	x	0
		TB4OUT(Output)		1	1	x	0
		Input Port		0	0	x	1
PI5	Т9	Output Port		1	0	x	0
		TB5OUT(Output)		1	1	x	0
		Input Port		0	0	x	1
PI6	Т3	Output Port		1	0	x	0
		TB4IN0(Input)		0	1	x	1
		Input Port		0	0	х	1
PI7	Т3	Output Port		1	0	х	0
		TB4IN1(Input)		0	1	х	1

# 8.4.10 Port J Setting

#### Table 8-15 Port Setting List (Port J)

pin	Port Type	Function	After re- set	PJCR	PJFR1	PJPUP	PJIE
		Input Port		0	0	x	PJIE 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 0 1 0 0 0 0
PJ0	T7	Output Port		1	0	x	0
		INT0(Input)		0	1	x	1
		Input Port		0	0	x	1
PJ1	T7	Output Port		1	0	x	0
		INT1(Input)		0	1	x	1
		Input Port		0	0	x	1
PJ2	T7	Output Port		1	0	x	0
		INT2(Input)		0	1	x	1
		Input Port		0	0	x	1
PJ3	T7	Output Port		1	0	x	0
		INT3(Input)		0	1	x	1
		Input Port		0	0	x	1 0 1 1 0
PJ4	Т9	Output Port		1	0	x	0
		TB6OUT(Output)		1	1	x	0
		Input Port		0	0	x	1
PJ5	Т9	Output Port		1	0	x	0
		TB7OUT(Output)		1	1	x	0
		Input Port		0	0	x	1
PJ6	T7	Output Port		1	0	x	0
		INT6(Input)		0	1	х	1
		Input Port		0	0	х	1
PJ7	Т7	Output Port		1	0	x	0
		INT7(Input)		0	1	х	1

# 8.4.11 Port K Setting

#### Table 8-16 Port Setting List (Port K)

Pin	Port Type	Function	After re- set	PKCR	PKFR1	PKFR2	PKPUP	PKIE
		Input Port		0	0	0	0	1
PK0	T14	Output Port		1	0	0	0	0
		CEC(Input/Output)		1	1	0	0	1
		Input Port		0	0	0	x	1
PK1	T15	Output Port		1	0	0	х	0
PNI		SCOUT(Output)		1	1	0	x	0
		ALARM(Output)		1	0	1	x	0
		Input Port		0	0	0	x	1
PK2	Т9	Output Port		1	0	0	x	0
		TB9OUT(Output)		1	1	0	x	0

Note: PK0 is an N-ch open drain port.

- 8. Input/Output Ports
- 8.4 Appendix (Port setting List)

# TOSHIBA

# 9. 16-bit Timer/Event Counters(TMRB)

### 9.1 Outline

TMRB operate in the following four operation modes:

- 16-bit interval timer mode
- 16-bit event counter mode
- 16-bit programmable pulse generation mode (PPG)
- Timer synchronous mode

The use of the capture function allows TMRB to perform the following three measurements.

- Frequency measurement
- Pulse width measurement
- Time difference measurement

In the following explanation of this section, "x" indicates a channel number.

# 9.2 Differences in the Specifications

TMPM330FDFG/FYFG/FWFG contains 10-channel of TMRB.

Each channel functions independently and the channels operate in the same way except for the differences in their specification as shown in Table 9-1.

Some of the channels can put the capture trigger and the synchronous start trigger on other channels.


- 1. The flip-flop output of TMRB 7 through TMRB 9 can be used as the capture trigger of other channels.
  - TB7OUT  $\rightarrow$  available for TMRB0 through TMRB1
  - TB8OUT  $\rightarrow$  available for TMRB2 through TMRB4
  - TB9OUT  $\rightarrow$  available for TMRB5 through TMRB6
- 2. The start trigger of the timer synchronous mode (with TBxRUN)
  - TMRB0  $\rightarrow$  can start TMRB0 through TMRB3 synchronously
  - TMRB4  $\rightarrow$  can start TMRB4 through TMRB7 synchronously

Table 9-1	Differences i	in the S	Specifications	of TMRB Modules
-----------	---------------	----------	----------------	-----------------

Specification		Extern	al pins		Trigger function	on between timers	Interrupt	
Channel		nal clock/ gger input pins	Timer flip-f	lop output pin	Capture	Synchronous	Capture	TMRB
Channel	Signal	Port (Pin number)	Signal	Port (Pin number)	trigger	start trigger channel	interrupt	interrupt
TMRB0	TB0IN0 TB0IN1	PH0 (30) PH1 (31)	TB0OUT	PI0 (38)	TB7OUT	-	INTCAP00 INTCAP01	INTTB0
TMRB1	TB1IN0 TB1IN1	PH2 (32) PH3 (36)	TB1OUT	PI1 (40)	TB7OUT	TMRB0	INTCAP10 INTCAP11	INTTB1
TMRB2	TB2IN0 TB2IN1	PH4 (9) PH5 (10)	TB2OUT	PI2 (42)	TB8OUT	TMRB0	INTCAP20 INTCAP21	INTTB2
TMRB3	TB3IN0 TB3IN1	PH6 (84) PH7 (85)	TB3OUT	PI3 (48)	TB8OUT	TMRB0	INTCAP30 INTCAP31	INTTB3
TMRB4	TB4IN0 TB4IN1	Pl6 (79) Pl7 (83)	TB4OUT	PI4 (52)	TB8OUT	-	INTCAP40 INTCAP41	INTTB4
TMRB5	TB5IN0 TB5IN1	PD0 (95) PD1 (96)	TB5OUT	PI5 (53)	TB9OUT	TMRB4	INTCAP50 INTCAP51	INTTB5
TMRB6	TB6IN0 TB6IN1	PD2 (97) PD3 (98)	TB6OUT	PJ4 (88)	TB9OUT	TMRB4	INTCAP60 INTCAP61	INTTB6
TMRB7	-	-	TB7OUT	PJ5 (8)	-	TMRB4	-	INTTB7
TMRB8	-	-	TB8OUT	PG7 (11)	-	-	-	INTTB8
TMRB9	-	-	TB9OUT	PK2 (7)	-	-	-	INTTB9

### 9.3 Configuration

Each channel consists of a 16-bit up-counter, two 16-bit timer registers (double-buffered), two 16-bit capture registers, two comparators, a capture input control, a timer flip-flop and its associated control circuit. Timer operation modes and the timer flip-flop are controlled by a register.

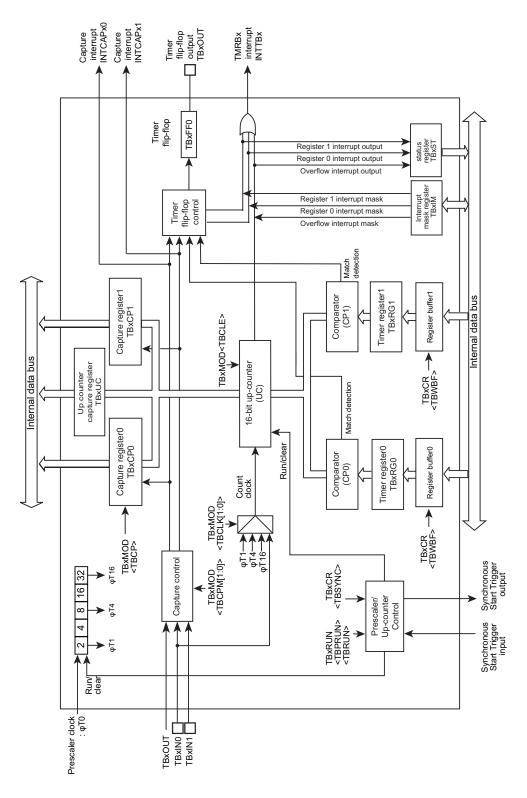



# 9.4 Registers

#### 9.4.1 Register list according to channel

The following table shows the register names and addresses of each channel.

Channel x	Base Address
Channel0	0x4001_0000
Channel1	0x4001_0040
Channel2	0x4001_0080
Channel3	0x4001_00C0
Channel4	0x4001_0100
Channel5	0x4001_0140
Channel6	0x4001_0180
Channel7	0x4001_01C0
Channel8	0x4001_0200
Channel9	0x4001_0240

Register name(x=0 to 9)		Address(Base+)
Enable register	TBxEN	0x0000
RUN register	TBxRUN	0x0004
Control register	TBxCR	0x0008
Mode register	TBxMOD	0x000C
Flip-flop control register	TBxFFCR	0x0010
Status register	TBxST	0x0014
Interrupt mask register	TBxIM	0x0018
Up counter capture register	TBxUC	0x001C
Timer register 0	TBxRG0	0x0020
Timer register 1	TBxRG1	0x0024
Capture register 0	TBxCP0	0x0028
Capture register 1	TBxCP1	0x002C

# 9.4.2 TBxEN (Enable register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	TBEN	-	-	-	-	-	-	-
Bit Cymbel								

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	TBEN	R/W	TMRBx operation
			0: Disabled
			1: Enabled
			Specifies the TMRB operation. When the operation is disabled, no clock is supplied to the other registers in the TMRB module. This can reduce power consumption. (This disables reading from and writing to the other registers except TBxEN register.)
			To use the TMRB, enable the TMRB operation (set to "1") before programming each register in the TMRB module. If the TMRB operation is executed and then disabled, the settings will be maintained in each register.
6-0	-	R	Read as 0.

# 9.4.3 TBxRUN(RUN register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	TBPRUN	-	TBRUN
Sit eymsei								

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2	TBPRUN	R/W	Prescaler operation
			0: Stop & clear
			1: Count
1	-	R	Read as 0.
0	TBRUN	R/W	Count operation
			0: Stop & clear
			1: Count

# 9.4.4 TBxCR(Control register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	TBWBF	-	TBSYNC	-	I2TB	-	-	-
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	TBWBF	R/W	Double Buffer 0: Disabled 1: Enabled
6	-	R/W	Write 0.
5	TBSYNC	R/W	Synchronous mode switching 0: individual (unit of channel) 1: synchronous
4	-	R	Read as 0.
3	I2TB	R/W	Operation at IDLE mode 0: Stop 1:Operation
2-0	-	R	Read as 0.

Mode register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	TBCP	TBC	CPM	TBCLE	TB	CLK
After reset	0	0	1	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6	-	R/W	Write 0.
5	ТВСР	W	Capture control by software
			0: Capture by software
			1: Don't care
			When "0" is written, the capture register 0 (TBxCP0) takes count value.
			Read as 1.
4-3	TBCPM[1:0]	R/W	Capture timing
			00: Disable Capture timing
			01: TBxIN0↑ TBxIN1↑
			Takes count values into capture register 0 (TBxCP0) upon rising of TBxIN0 pin input.
			Takes count values into capture register 1 (TBxCP1) upon rising of TBxIN1 pin input.
			10: TBxIN0↑ TBxIN0↓
			Takes count values into capture register 0 (TBxCP0) upon rising of TBxIN0 pin input.
			Takes count values into capture register 1 (TBxCP1) upon falling of TBxIN0 pin input.
			11: TBxOUT↑ TBxOUT↓
			Takes count values into capture register 0 (TBxCP0) upon rising of 16-bit timer match output (TBxOUT)
			and into capture register 1 (TBxCP1) upon falling of TBxOUT.
			(TMRB0 and TMRB1:TB7OUT, TMRB2 through TMRB4:TB8OUT, TMRB5 and TMRB6:TB9OUT).
2	TBCLE	R/W	Up-counter control
			0: Disables clearing of the up-counter.
			1: Enables clearing of the up-counter.
			Clears and controls the up-counter.
			When "0" is written, it disables clearing of the up-counter. When "1" is written, it clears up counter when
			there is a match with Timer Regsiter1 (TBxRG1).
1-0	TBCLK[1:0]	R/W	Selects the TMRBx source clock.
			00: TBxIN0 pin input
			01: φΤ1
			10: φΤ4
			11: φΤ16

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	TBC1T1	TBC0T1	TBE1T1	TBE0T1	TBF	F0C
After reset	1	1	0	0	0	0	1	1

# 9.4.6 TBxFFCR(Flip-flop control register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-6	-	R	Read as 1.
5	TBC1T1	R/W	TBxFF0 reverse trigger when the up-counter value is taken into the TBxCP1.
			0: Disable trigger
			1: Enable trigger
			By setting "1", the timer-flip-flop reverses when the up-counter value is taken into the Capture register 1 (TBxCP1).
4	TBC0T1	R/W	TBxFF0 reverse trigger when the up-counter value is taken into the TBxCP0.
			0: Disable trigger
			1: Enable trigger
			By setting "1", the timer-flip-flop reverses when the up-counter value is taken into the Capture register 0 (TBxCP0).
3	TBE1T1	R/W	TBxFF0 reverse trigger when the up-counter value is matched with TBxRG1.
			0: Disable trigger
			1: Enable trigger
			By setting "1", the timer-flip-flop reverses when the up-counter value is matched with the Timer register 1 (TBxRG1).
2	TBE0T1	R/W	TBxFF0 reverse trigger when the up-counter value is matched with TBxRG0.
			0: Disable trigger
			1: Enable trigger
			By setting "1", the timer-flip-flop reverses when an up-counter value is matched with the Timer register 0 (TBxRG0).
1-0	TBFF0C[1:0]	R/W	TBxFF0 control
			00: Invert
			Reverses the value of TBxFF0 (reverse by using software).
			01: Set
			Sets TBxFF0 to "1".
			10: Clear
			Clears TBxFF0 to "0".
			11: Don't care
			* This is always read as "11".

# 9.4.7 TBxST(Status register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	INTTBOF	INTTB1	INTTB0
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2	INTTBOF	R	Overflow flag
			0:No overflow occurs
			1:Overflow occurs
			When an up-counter is overflow, "1" is set.
1	INTTB1	R	Match flag (TBxRG1)
			0:No detection of a mach
			1:Detects a match with TBxRG1
			When a match with the timer register 1 (TBxRG1) is detected,"1" is set.
0	INTTB0	R	Match flag (TBxRG0)
			0:No match is detected
			1:Detects a match with TBxRG0
			When a match with the timer register 0 (TBxRG0) is detected, "1" is set.

Note 1: The factors only which is not masked by TBxIM output interrupt request to the CPU.Even if the mask setting is done, the flag is set.

Note 2: The flag is cleared by reading the TBxST register.To clear the flag, TBxST register should be read.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	TBIMOF	TBIM1	TBIM0
After reset	0	0	0	0	0	0	0	0

# 9.4.8 TBxIM(Interrupt mask register)

Bit	Bit Symbol	Туре	Function
31-3	-	R	Read as 0.
2	TBIMOF	R/W	Overflow interrupt mask
			0:Disable
			1:Enable
			Sets the up-counter overflow interrupt to disable or enable.
1	TBIM1	R/W	Match interrupt mask (TBxRG1)
			0:Disable
			1:Enable
			Sets the match interrupt mask with the Timer register 1 (TBxRG1) to enable or disable.
0	твімо	R/W	Match interrupt mask (TBxRG0)
			0:Disable
			1:Enable
			Sets the match interrupt mask with the Timer register 0 (TBxRG0) to enable or disable.

# 9.4.9 TBxUC(Up counter capture register)

	31	30	29	28	27	26	25	24	
bit symbol	-	-	-	-	-	-	-	-	
After reset	0	0	0	0	0	0	0	0	
	23	22	21	20	19	18	17	16	
bit symbol	-	-	-	-	-	-	-	-	
After reset	0	0	0	0	0	0	0	0	
	15	14	13	12	11	10	9	8	
bit symbol				TB	UC				
After reset	0	0	0	0	0	0	0	0	
	7	6	5	4	3	2	1	0	
bit symbol		TBUC							
After reset	0	0	0	0	0	0	0	0	

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-0	TBUC[15:0]	R	Captures a value by reading up-counter out.
			If TBxUC is read, current up-counter value can be captured.

	31	30	29	28	27	26	25	24	
bit symbol	-	-	-	-	-	-	-	-	
After reset	0	0	0	0	0	0	0	0	
	23	22	21	20	19	18	17	16	
bit symbol	-	-	-	-	-	-	-	-	
After reset	0	0	0	0	0	0	0	0	
	15	14	13	12	11	10	9	8	
bit symbol				TBF	RG0				
After reset	0	0	0	0	0	0	0	0	
	7	6	5	4	3	2	1	0	
bit symbol		TBRG0							
After reset	0	0	0	0	0	0	0	0	

# 9.4.10 TBxRG0(Timer register 0)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-0	TBRG0[15:0]	R/W	Sets a value comparing to the up-counter.

# 9.4.11 TBxRG1(Timer register 1)

	31	30	29	28	27	26	25	24	
bit symbol	mbol		-	-	-	-	-	-	
After reset	0	0	0	0	0	0	0	0	
	23	22	21	20	19	18	17	16	
bit symbol	-	-	-	-	-	-	-	-	
After reset	0	0	0	0	0	0	0	0	
	15	14	13	12	11	10	9	8	
bit symbol	TBRG1								
After reset	0	0	0	0	0	0	0	0	
	7	6	5	4	3	2	1	0	
bit symbol	TBRG1								
After reset	0	0	0	0	0	0	0	0	

Bit	Bit Symbol	Туре	Function	
31-16	-	R	Read as 0.	
15-0	TBRG1[15:0]	R/W	Sets a value comparing to the up-counter.	

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol				TBO	CP0			
After reset	Undefined							
	7	6	5	4	3	2	1	0
bit symbol				TBO	CP0			
After reset	Undefined							

# 9.4.12 TBxCP0(Capture register 0)

Bit	Bit Symbol	Туре	Function						
31-16	-	R	Read as 0.						
15-0	TBCP0[15:0]	R	A value captured from the up-counter is read.						

# 9.4.13 TBxCP1(Capture register 1)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol				TBO	CP1			
After reset	Undefined							
	7	6	5	4	3	2	1	0
bit symbol				TBO	CP1			
After reset	Undefined							

Bit	Bit Symbol	Туре	Function							
31-16	-	R	Read as 0.							
15-0	TBCP1[15:0]	R	A value captured from the up-counter is read.							

# 9.5 Description of Operations for Each Circuit

The channels operate in the same way, except for the differences in their specifications as shown in Table 9-1.

## 9.5.1 Prescaler

There is a 4-bit prescaler to generate the source clock for up-counter UC.

The prescaler input clock  $\phi$ T0 is fperiph/1, fperiph/2, fperiph/4, fperiph/8, fperiph/16 or fperiph/32 selected by CGSYSCR<PRCK[2:0]> in the CG.The peripheral clock, fperiph, is either fgear, a clock selected by CGSYSCR<FPSEL> in the CG, or fc, which is a clock before it is divided by the clock gear.

The operation or the stoppage of a prescaler is set with TBxRUN<TBPRUN> where writing "1" starts counting and writing "0" clears and stops counting. Table 9-2 and Table 9-3 show prescaler output clock resolutions.

Table 9-2 Prescaler Output Clock Resolutions(fc = 40MHz)
--

Select	Clock gear value	Select	Pres	scaler output clock fund	ction
peripheral clock CGSYSCR <fpsel></fpsel>	CGSYSCR <gear[2:0]></gear[2:0]>	prescaler clock CGSYSCR <prck[2:0]></prck[2:0]>	φΤ1	φΤ4	φT16
		000 (fperiph/1)	fc/2¹ (0.05 μs)	fc/2³ (0.2 µs)	fc/2⁵ (0.8 µs)
		001 (fperiph/2)	fc/2² (0.1 µs)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)
	000 (fr)	010 (fperiph/4)	fc/2 <sup>3</sup> (0.2 µs)	fc/2⁵ (0.8 μs)	fc/2 <sup>7</sup> (3.2 µs)
	000 (fc)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)
		100 (fperiph/16)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
		000 (fperiph/1)	fc/2² (0.1 µs)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)
		001 (fperiph/2)	fc/2 <sup>3</sup> (0.2 µs)	fc/2 <sup>5</sup> (0.8 μs)	fc/2 <sup>7</sup> (3.2 µs)
	100 (fc/2)	010 (fperiph/4)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)
		011 (fperiph/8)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)
		100 (fperiph/16)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
0 (frager)		101 (fperiph/32)	fc/2 <sup>7</sup> (3.2 µs)	fc/2º (12.8 µs)	fc/2 <sup>11</sup> (51.2 µs)
0 (fgear)		000 (fperiph/1)	fc/2 <sup>3</sup> (0.2 µs)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)
		001 (fperiph/2)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)
	101 (50/4)	010 (fperiph/4)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)
	101 (fc/4)	011 (fperiph/8)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
		100 (fperiph/16)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 µs)	fc/2 <sup>11</sup> (51.2 µs)
		101 (fperiph/32)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)
		000 (fperiph/1)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)
		001 (fperiph/2)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)
	110 (50/0)	010 (fperiph/4)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
	110 (fc/8)	011 (fperiph/8)	fc/2 <sup>7</sup> (3.2 μs)	fc/2 <sup>9</sup> (12.8 μs)	fc/2 <sup>11</sup> (51.2 µs)
		100 (fperiph/16)	fc/2 <sup>8</sup> (6.4 μs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)
		101 (fperiph/32)	fc/2 <sup>9</sup> (12.8 μs)	fc/2 <sup>11</sup> (51.2 μs)	fc/2 <sup>13</sup> (204.8 µs)

Select	Clock gear value	Select	Pres	scaler output clock fund	ction	
peripheral clock CGSYSCR <fpsel></fpsel>	CGSYSCR <gear[2:0]></gear[2:0]>	prescaler clock CGSYSCR <prck[2:0]></prck[2:0]>	φΤ1	φΤ4	φΤ16	
		000 (fperiph/1)	fc/2¹ (0.05 μs)	fc/2³ (0.2 µs)	fc/2⁵ (0.8 µs)	
		001 (fperiph/2)	fc/2² (0.1 µs)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	
	000 (fr)	010 (fperiph/4)	fc/2 <sup>3</sup> (0.2 µs)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	
	000 (fc)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	
		100 (fperiph/16)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)	
		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	
		000 (fperiph/1)	-	fc/2 <sup>3</sup> (0.2 µs)	fc/2 <sup>5</sup> (0.8 µs)	
		001 (fperiph/2)	fc/2² (0.1 µs)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	
	100 (fc/2)	010 (fperiph/4)	fc/2 <sup>3</sup> (0.2 µs)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	
		011 (fperiph/8)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	
		100 (fperiph/16)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)	
4 (5-)		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	
1 (fc)		000 (fperiph/1)	-	fc/2³ (0.2 µs)	fc/2 <sup>5</sup> (0.8 µs)	
		001 (fperiph/2)	-	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	
	4.04 (5-14)	010 (fperiph/4)	fc/2 <sup>3</sup> (0.2 µs)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	
	101 (fc/4)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	
		100 (fperiph/16)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)	
		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	
		000 (fperiph/1)	-	-	fc/2 <sup>5</sup> (0.8 µs)	
		001 (fperiph/2)	-	fc/2 <sup>4</sup> (0.4 μs)	fc/2 <sup>6</sup> (1.6 µs)	
	140 (5-10)	010 (fperiph/4)	-	fc/2 <sup>5</sup> (0.8 μs)	fc/2 <sup>7</sup> (3.2 µs)	
	110 (fc/8)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 μs)	fc/2 <sup>8</sup> (6.4 µs)	
		100 (fperiph/16)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 μs)	fc/2 <sup>9</sup> (12.8 μs)	
		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	

## Table 9-2 Prescaler Output Clock Resolutions(fc = 40MHz)

Note 1: The prescaler output clock  $\phi$ Tn must be selected so that  $\phi$ Tn < fsys is satisfied (so that  $\phi$ Tn is slower than fsys). Note 2: Do not change the clock gear while the timer is operating.

Note 3: "-" denotes a setting prohibited.

Select	Clock gear value	Select	Pres	scaler output clock fund	ction
peripheral clock CGSYSCR <fpsel></fpsel>	CGSYSCR <gear[2:0]></gear[2:0]>	prescaler clock CGSYSCR <prck[2:0]></prck[2:0]>	φΤ1	φΤ4	φT16
		000 (fperiph/1)	fc/2¹ (0.0625 μs)	fc/2³ (0.25 µs)	fc/2⁵ (1.0 µs)
		001 (fperiph/2)	fc/2² (0.125 µs)	fc/24 (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)
	000 (fr)	010 (fperiph/4)	fc/2 <sup>3</sup> (0.25 µs)	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)
	000 (fc)	011 (fperiph/8)	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)
		100 (fperiph/16)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 μs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		000 (fperiph/1)	fc/2 <sup>2</sup> (0.125 µs)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)
		001 (fperiph/2)	fc/2³ (0.25 µs)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)
	100 (fc/2)	010 (fperiph/4)	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)
		011 (fperiph/8)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 μs)
		100 (fperiph/16)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
0 (5		101 (fperiph/32)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)	fc/2 <sup>11</sup> (64.0 µs)
0 (fgear)		000 (fperiph/1)	fc/2³ (0.25 µs)	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)
		001 (fperiph/2)	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)
	4.04 (5-14)	010 (fperiph/4)	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)
	101 (fc/4)	011 (fperiph/8)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		100 (fperiph/16)	fc/2 <sup>7</sup> (4.0 µs)	fc/2º (16.0 µs)	fc/2 <sup>11</sup> (64.0 µs)
		101 (fperiph/32)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)
		000 (fperiph/1)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)
		001 (fperiph/2)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)
	110 (fa/8)	010 (fperiph/4)	fc/2 <sup>6</sup> (2.0 μs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
	110 (fc/8)	011 (fperiph/8)	fc/2 <sup>7</sup> (4.0 μs)	fc/2 <sup>9</sup> (16.0 µs)	fc/2 <sup>11</sup> (64.0 µs)
		100 (fperiph/16)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)
		101 (fperiph/32)	fc/2 <sup>9</sup> (16.0 µs)	fc/2 <sup>11</sup> (64.0 μs)	fc/2 <sup>13</sup> (256.0 µs)

## Table 9-3 Prescaler Output Clock Resolutions(fc = 32MHz)

Select	Clock gear value	Select	Pres	scaler output clock fund	ction	
peripheral clock CGSYSCR <fpsel></fpsel>	CGSYSCR <gear[2:0]></gear[2:0]>	prescaler clock CGSYSCR <prck[2:0]></prck[2:0]>	φΤ1	φT4	φT16	
		000 (fperiph/1)	fc/2¹ (0.0625 μs)	fc/2³ (0.25 µs)	fc/2⁵ (1.0 µs)	
		001 (fperiph/2)	fc/2² (0.125 µs)	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	
	000 (6-)	010 (fperiph/4)	fc/2 <sup>3</sup> (0.25 µs)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	
	000 (fc)	011 (fperiph/8)	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	
		100 (fperiph/16)	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2º (16.0 µs)	
		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	
		000 (fperiph/1)	-	fc/2³ (0.25 µs)	fc/2 <sup>5</sup> (1.0 µs)	
		001 (fperiph/2)	fc/2² (0.125 µs)	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	
	400 (5-70)	010 (fperiph/4)	fc/2³ (0.25 µs)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	
	100 (fc/2)	011 (fperiph/8)	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	
		100 (fperiph/16)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)	
4 (5-)		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	
1 (fc)		000 (fperiph/1)	-	fc/2³ (0.25 μs)	fc/2⁵ (1.0 µs)	
		001 (fperiph/2)	-	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	
	101 (5-14)	010 (fperiph/4)	fc/23 (0.25 µs)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	
	101 (fc/4)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	
		100 (fperiph/16)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 μs)	
		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	
		000 (fperiph/1)	-	-	fc/2 <sup>5</sup> (1.0 µs)	
		001 (fperiph/2)	-	fc/2⁴ (0.5 μs)	fc/2 <sup>6</sup> (2.0 µs)	
	140 (5-(0)	010 (fperiph/4)	-	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)	
	110 (fc/8)	011 (fperiph/8)	fc/2⁴ (0.5 μs)	fc/2 <sup>6</sup> (2.0 μs)	fc/2 <sup>8</sup> (8.0 µs)	
		100 (fperiph/16)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 μs)	fc/2 <sup>9</sup> (16.0 μs)	
		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	

## Table 9-3 Prescaler Output Clock Resolutions(fc = 32MHz)

Note 1: The prescaler output clock  $\phi$ Tn must be selected so that  $\phi$ Tn < fsys is satisfied (so that  $\phi$ Tn is slower than fsys). Note 2: Do not change the clock gear while the timer is operating.

Note 3: "-" denotes a setting prohibited.

## 9.5.2 Up-counter (UC)

UC is a 16-bit binary counter.

Source clock

UC source clock, specified by TBxMOD<TBCLK[1:0]>, can be selected from either three types -  $\phi$ T1,  $\phi$ T4 and  $\phi$ T16 - of prescaler output clock or the external clock of the TBxIN0 pin.

Count start/ stop

Counter operation is specified by TBxRUN<TBRUN>. UC starts counting if  $\langle TBRUN \rangle = "1"$ , and stops counting and clears counter value if  $\langle TBRUN \rangle = "0"$ .

- Timing to clear UC
  - 1. When a match is detected

By setting TBxMOD<TBCLE> = "1", UC is cleared if when the comparator detects a match between counter value and the value set in TBxRG1. UC operates as a free-running counter if TBxMOD<TBCLE> = "0".

2. When UC stops

UC stops counting and clears counter value if TBxRUN<TBRUN> = "0".

UC overflow

If UC overflow occurs, the INTTBx overflow interrupt is generated.

## 9.5.3 Timer registers (TBxRG0, TBxRG1)

TBxRG0 and TBxRG1 are registers for setting values to compare with up-counter values and two registers are built into each channel. If the comparator detects a match between a value set in this timer register and that in a UC up-counter, it outputs the match detection signal.

TBxRG0 and TBxRG1 are consisted of the double-buffered configuration which are paired with register buffers. The double buffering is disabled in the initial state.

Controlling double buffering disable or enable is specified by TBxCR<TBWBF> bit. If  $\langle$ TBWBF> = "0", the double buffering becomes disable. If  $\langle$ TBWBF> = "1", it becomes enable. When the double buffering is enabled, a data transfer from the register buffer to the timer register (TBxRG0/1) is done in the case that UC is matched with TBxRG1. When the counter is stopped even if double buffering is enabled, the double buffering operates as a single buffer, and an immediate data can be written to the TBxRG0 and TBxRG1.

## 9.5.4 Capture

This is a circuit that controls the timing of latching values from the UC up-counter into the TBxCP0 and TBxCP1 capture registers. The timing with which to latch data is specified by TBxMOD<TBCPM[1:0]>.

Software can also be used to import values from the UC up-counter into the capture register; specifically, UC values are taken into the TBxCP0 capture register each time "0" is written to TBxMOD<TBCP>.

## 9.5.5 Capture registers (TBxCP0, TBxCP1)

This register captures an up-counter (UC) value.

## 9.5.6 Up-counter capture register (TBxUC)

Other than the capturing functions shown above, the current count value of the UC can be captured by reading the TBxUC registers.

## 9.5.7 Comparators (CP0, CP1)

This register compares with the up-counter (UC) and the value setting of the Timer Register (TBxRG0 and TBxRG1) to detect whether there is a match or not. If a match is detected, INTTBx is generated.

## 9.5.8 Timer Flip-flop (TBxFF0)

The timer flip-flop (TBxFF0) is reversed by a match signal from the comparator and a latch signal to the capture registers. It can be enabled or disabled to reverse by setting the TBxFFCR<TBC1T1, TBC0T1, TBE1T1, TBE0T1>.

The value of TBxFF0 becomes undefined after a reset. The flip-flop can be reversed by writing "00" to TBxFFCR<TBFF0C[1:0]>. It can be set to "1" by writing "01," and can be cleared to "0" by writing "10."

The value of TBxFF0 can be output to the Timer output pin (TBxOUT). If the timer output is performed, the corresponding port settings must be programmed beforehand.

## 9.5.9 Capture interrupt (INTCAPx0, INTCAPx1)

Interrupts INTCAPx0 and INTCAPx1 can be generated at the timing of latching values from the UC up-counter into the TBxCP0 and TBxCP1 capture registers. The interrupt timing is specified by the CPU.

# 9.6 Description of Operations for Each Mode

## 9.6.1 16-bit Interval Timer Mode

In the case of generating constant period interrupt, set the interval time to the Timer register (TBxRG1) to generate the INTTBx interrupt.

		7	6	5	4	3	2	1	0		
TBxEN	←	1	х	х	Х	х	Х	Х	х	Enables TMRBx operation.	
TBxRUN	←	х	Х	Х	Х	Х	0	Х	0	Stops count operation.	
Interrupt Set-Enable Register	←	*	*	*	*	*	*	*	*	Permits INTTBx interrupt by setting corresponding bit to "1".	
TBxFFCR	←	Х	Х	0	0	0	0	1	1	Disable to TBxFF0 reverse trigger	
TBxMOD	←	Х	0	1	0	0	1	*	*	Changes to prescaler output clock as input clock. Specifies	
							(** =	01, 10	0, 11)	Capture function to disable.	
TBxRG1	←	*	*	*	*	*	*	*	*	Specifies a time interval. (16 bits)	
	←	*	*	*	*	*	*	*	*		
TBxRUN	←	*	*	*	*	*	1	х	1	Starts TMRBx.	
Note:X; Don't care											

-; No change

## 9.6.2 16-bit Event Counter Mode

It is possible to make it the event counter by using an input clock as an external clock (TBxIN0 pin input).

The up-counter counts up on the rising edge of TBxIN0 pin input. It is possible to read the count value by capturing value using software and reading the captured value.

	7	6	5	4	3	2	1	0	
TBxEN	← 1	х	Х	Х	х	Х	Х	Х	Enables TMRBx operation.
TBxRUN	← X	Х	Х	Х	Х	0	Х	0	Stops count operation.
PxIE[m]	←							1	Allocates corresponding port toTBxIN0.
PxFR1[m]	←							1	Allocates corresponding port to ribanito.
TBxFFCR	← X	Х	0	0	0	0	1	1	Disables to TBxFF0 reverse trigger
TBxMOD	← X	0	1	0	0	0	0	0	Changes toTBxIN0 as an input clock
TBxRUN	← *	*	*	*	*	1	Х	1	Starts TMRBx.
TBxMOD	← X	0	0	0	0	0	0	0	Software capture is done.
Note 1: m: corresponding bit of port Note 2: X; Don't care									

-; No change

## 9.6.3 16-bit PPG (Programmable Pulse Generation) Output Mode

Square waves with any frequency and any duty (programmable square waves) can be output. The output pulse can be either low-active or high-active.

Programmable square waves can be output from the TBxOUT pin by triggering the timer flip-flop (TBxFF) to reverse when the set value of the up-counter (UC) matches the set values of the timer registers (TBxRG0 and TBxRG1). Note that the set values of TBxRG0 and TBxRG1 must satisfy the following requirement:

(Set value of TBxRG0) < (Set value of TBxRG1)




Figure 9-2 Example of Output of Programmable Pulse Generation (PPG)

In this mode, by enabling the double buffering of TBxRG0, the value of register buffer 0 is shifted into TBxRG0 when the set value of the up-counter matches the set value of TBxRG1. This facilitates handling of small duties.

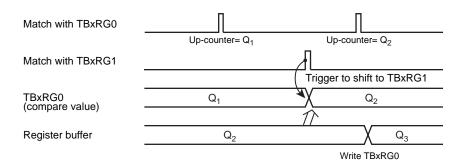


Figure 9-3 Register Buffer Operation

9.6 Description of Operations for Each Mode

The block diagram of this mode is shown below.

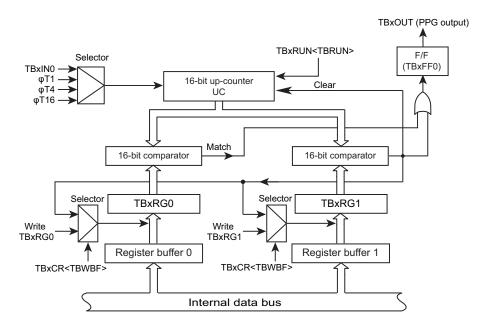


Figure 9-4 Block Diagram of 16-bit PPG Mode

Each register in the 16-bit PPG output mode must be programmed as listed below.

		7	6	5	4	3	2	1	0	
TBxEN	←	1	х	х	Х	Х	Х	Х	Х	Enables TMRBx operation.
TBxRUN	←	Х	Х	Х	Х	Х	0	Х	0	Stops count operation.
TBxCR	←	0	0	-	Х	-	Х	Х	х	Disables double buffering.
TBxRG0	←	*	*	*	*	*	*	*	*	Specifies a duty. (16 bits)
	←	*	*	*	*	*	*	*	*	
TBxRG1	←	*	*	*	*	*	*	*	*	Specifies a cycle. (16 bits)
	←	*	*	*	*	*	*	*	*	
TBxCR	←	1	0	Х	0	0	0	0	0	Enables the TBxRG0 double buffering.
										(Changes the duty/cycle when the INTTBx interrupt is gener- ated)
TBxFFCR	←	х	х	0	0	1	1	1	0	Specifies to trigger TBxFF0 to reverse when a match with TBxRG0 or TBxRG1 is detected,and sets the initial value of TBxFF0 to "0."
TBxMOD	←	Х	0	1	0	0	1	*	*	Designates the prescaler output clock as the input clock, and
							(** =	01, 10	D, 11)	disables the capture function.
PxCR[m]	←								1	Allocates corresponding part to TDVOLIT
PxFR1[m]	←								1	Allocates corresponding port to TBxOUT.
TBxRUN	←	*	*	*	*	*	1	Х	1	Starts TMRBx.

Note 1: m: corresponding bit of port

Note 2: X; Don't care

-; No change

## 9.6.4 Timer synchronous mode

This mode enables the timers to start synchronously.

If the mode is used with PPG output, the output can be applied to drive a motor.

TMRB is consisted of two pairs of 4-channel TMRB. If one channel starts, remaining 3 channels can be start synchronously. In the TMPM330FDFG/FYFG/FWFG, the following combinations allow to use.

Start trigger channel (Master channel)	Synchronous operation channel (Slave channel)
TMRB0	TMRB1, TMRB2, TMRB3
TMRB4	TMRB5, TMRB6, TMRB7

Use of the timer synchronous mode is specified in TBxCR<TBSYNC> bit.

- <TBSYNC> = "0" : Timer operates individually.
- <TBSYNC> = "1" : Timers operates synchronously.

Set "0" to the <TBSYNC> bit in the master channel.

If <TBSYNC>= "1" is set in the slave channel, the start timing is synchronized with master channel start timing. Setting of start timing for TBxRUN<TBPRUN, TBRUN> bit in the slave channel is not required.

## 9.7 Applications using the Capture Function

The capture function can be used to develop many applications, including those described below:

- 1. One-shot pulse output triggered by an external pulse
- 2. Frequency measurement
- 3. Pulse width measurement
- 4. Time difference measurement

## 9.7.1 One-shot pulse output triggered by an external pulse

One-shot pulse output triggered by an external pulse is carried out as follows:

The 16-bit up-counter is made to count up by putting it in a free-running state using the prescaler output clock. An external pulse is input through the TBxIN0 pin. A trigger is generated at the rising of the external pulse by using the capture function and the value of the up-counter is taken into the capture registers (TBxCP0).

The CPU must be programmed so that an interrupt INTCAPx0 is generated at the rising of an external trigger pulse. This interrupt is used to set the timer registers (TBxRG0) to the sum of the TBxCP0 value (c) and the delay time (d), (c + d), and set the timer registers (TBxRG1) to the sum of the TBxRG0 values and the pulse width (p) of one-shot pulse, (c + d + p).[TBxRG1 change must be completed before the next match.]

In addition, the timer flip-flop control registers(TBxFFCR<TBE1T1, TBE0T1>) must be set to "11". This enables triggering the timer flip-flop (TBxFF0) to reverse when TBxUC matches TBxRG0 and TBxRG1. This trigger is disabled by the INTTBx interrupt after a one-shot pulse is output.

Symbols (c), (d) and (p) used in the text correspond to symbols c, d and p in "Figure 9-5 One-shot Pulse Output (With Delay)".

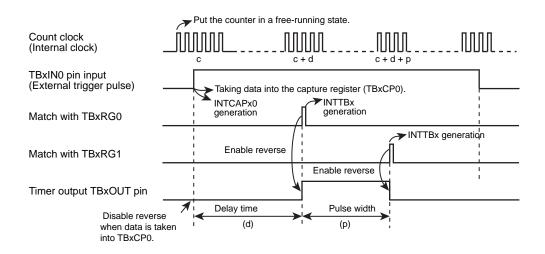


Figure 9-5 One-shot Pulse Output (With Delay)

The followings show the settings in the case that 2 ms width one-shot pulse is output after 3ms by triggering TBxIN0 input at the rising edge. ( $\Phi$ T1 is selected for counting.)

Changes source clock to  $\Phi$ T1. Fetches a count value into the TBxCP0 at the rising edge of TBxIN0.

		7	6	5	4	3	2	1	0	
[Main processing] Capture	settir	ig by	TBxIN	10						
PxIE[m]	←								1	Allocates corresponding part to TDuINO
PxFR1[m]	←								1	Allocates corresponding port to TBxIN0.
TBxEN	←	1	Х	Х	Х	Х	Х	Х	х	Enables TMRBx operation.
TBxRUN	←	Х	х	Х	Х	Х	0	Х	0	Stops count operation.
TBxMOD	←	х	0	1	0	1	0	0	1	Changes source clock to $\Phi$ T1. Fetches a count value into the TBxCP0 at the rising edge of TBxIN0.
TBxFFCR	←	х	Х	0	0	0	0	1	0	Clears TBxFF0 reverse trigger and disables.
PxCR[m]	←								1	
PxFR1[m]	←								1	Allocates corresponding port toTBxOUT.
Interrupt Set-Enable Register	←	*	*	*	*	*	*	*	*	Permits to generate interrupts specified by INTCAPx0 interrupt corresponding bit by setting to "1".
TBxRUN	←	*	*	*	*	*	1	Х	1	Starts the TMRBx module.
[Processing of INTCAPx0 i	nterru	ipt se	ervice	routin	e] Pu	lse oi	utput	setting	3	
TBxRG0	←	*	*	*	*	*	*	*	*	Sets count value. (TBxCAP0 + 3ms/ΦT1)
TBxRG1	←	*	*	*	*	*	*	*	*	Sets count value.(TBxCAP0 + (3+2)ms/ΦT1)
TBxFFCR	←	Х	Х	-	-	1	1	-	-	Reverses TBxFF0 if TBxRG0 consistent with TBxRG1.
TBxIM	←	Х	Х	Х	Х	Х	1	0	1	Masks except TBxRG1 correspondence interrupt.
Interrupt Set-Enable Register	←	*	*	*	*	*	*	*	*	Permits to generate interrupt specified by INTTBx interrupt cor- responding bit setting to "1".
[Processing of INTTBx inte	rrupt	servi	ce rou	itine]	Outpu	ut disa	able			
TBxFFCR	←	Х	Х	-	-	0	0	-	-	Clears TBxFF0 reverse trigger setting.
Interrupt enable clear register	←	*	*	*	*	*	*	*	*	Prohibits interrupts specified by INTTBx interrupt correspond- ing bit by setting to "1".

Note 1: m: corresponding bit of port Note 2: X; Don't care -; No change

If a delay is not required, TBxFF0 is reversed when data is taken into TBxCP0, and TBxRG1 is set to the sum of the TBxCP0 value (c) and the one-shot pulse width (p), (c + p), by generating the INTCAPx0 interrupt. (TBxRG1 change must be completed before the next match.)

TBxFF0 is enabled to reverse when UC matches with TBxRG1, and is disabled by generating the INTTBx interrupt.

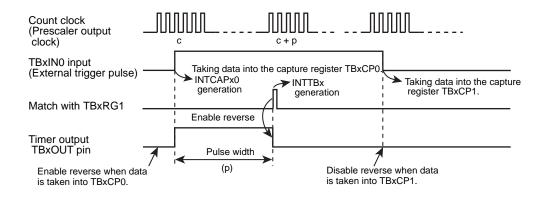


Figure 9-6 One-shot Pulse Output Triggered by an External Pulse (Without Delay)

## 9.7.2 Frequency measurement

The frequency of an external clock can be measured by using the capture function.

To measure frequency, another 16-bit timer is used in combination with the 16-bit event counter mode. As an example, we explain with TMRB3 and TMRB8. TB8OUT of the 16-bit timer TMRB8 is used to specify the measurement time.

TMRB3 count clock selects TB3IN0 input and performs count operation by using external clock input. If TB3MOD<TBCPM[1:0]> is set "11", TMRB3 count clock takes the counter value into the TB3CP0 at the rising edge of TB8OUT and takes the counter value into TB3CP1 at the falling edge of TB8OUT.

This setting allows a count value of the 16-bit up-counter UC to be taken into the capture register (TB3CP0) upon rising of a timer flip-flop output (TB8OUT) of the 16-bit timer (TMRB8), and an UC counter value to be taken into the capture register (TB3CP1) upon falling of TB8OUT of the 16-bit timer (TMRB8).

A frequency is then obtained from the difference between TB3CP0 and TB3CP1 based on the measurement, by generating the INTTB8 16-bit timer interrupt.

For example, if the difference between TB3CP0 and TB3CP1 is 100 and the level width setting value of TB8OUT is 0.5 s, the frequency is 200 Hz ( $100 \div 0.5 \text{ s} = 200 \text{ Hz}$ ).

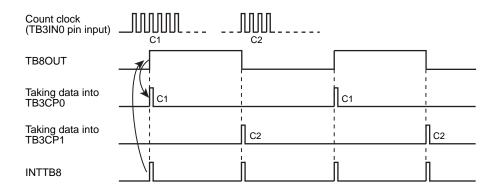


Figure 9-7 Frequency Measurement

## 9.7.3 Pulse width measurement

By using the capture function, the "High" level width of an external pulse can be measured. Specifically, by putting it in a free-running state using the prescaler output clock, an external pulse is input through the TBxIN0 pin and the up-counter (UC) is made to count up. A trigger is generated at each rising and falling edge of the external pulse by using the capture function and the value of the up-counter is taken into the capture registers (TBxCP0, TBxCP1). The CPU must be programmed so that INTCAPx1 is generated at the falling edge of an external pulse input through the TBxIN0 pin.

The "High" level pulse width can be calculated by multiplying the difference between TBxCP0 and TBxCP1 by the clock cycle of an internal clock.

For example, if the difference between TBxCP0 and TBxCP1 is 100 and the cycle of the prescaler output clock is 0.5  $\mu$ s, the pulse width is 100 × 0.5  $\mu$ s = 50  $\mu$ s.

Caution must be exercised when measuring pulse widths exceeding the UC maximum count time which is dependant upon the source clock used. The measurement of such pulse widths must be made using software.

The "Low" level width of an external pulse can also be measured. In such cases, the difference between C2 generated the first time and C1 generated the second time is initially obtained by performing the second stage of INTCAPx0 interrupt processing as shown in "Figure 9-8 Pulse Width Measurement" and this difference is multiplied by the cycle of the prescaler output clock to obtain the "Low" level width.

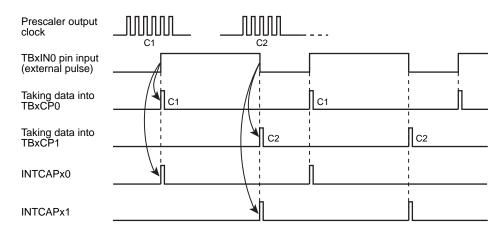


Figure 9-8 Pulse Width Measurement

## 9.7.4 Time Difference Measurement

The time difference of two events can be measured by the capture function. The up-counter (UC) is made to count up by putting it in a free-running state using the prescaler output clock.

The value of UC is taken into the capture register (TBxCP0) at the rising edge of the TBxIN0 pin input pulse. The CPU must be programmed to generate INTCAPx0 interrupt at this time.

The value of UC is taken into the capture register (TBxCP1) at the rising edge of the TBxIN1 pin input pulse. The CPU must be programmed to generate INTCAPx1 interrupt at this time.

The time difference can be calculated by multiplying the difference between TBxCP1 and TBxCP0 by the clock cycle of an internal clock.

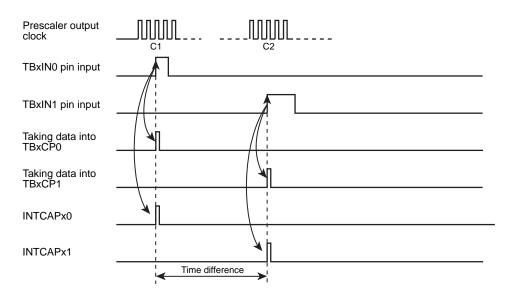


Figure 9-9 Time Difference Measurement

# TOSHIBA

# 10. Serial Channel (SIO/UART)

# 10.1 Overview

This device has two mode for the serial channel, one is the synchronous communication mode (I/O interface mode), and the other is the asynchronous communication mode (UART mode).

Their features are given in the following.

- Transfer Clock
  - Dividing by the prescaler, from the peripheral clock ( $\Phi$ T0) frequency into 1/2, 1/8, 1/32, 1/128.
  - Make it possible to divide from the prescaler output clock frequency into 1-16.
  - Make it possible to divide from the prescaler output clock frequency into 1, N+m/16 (N=2-15, m=1-15), 16. (only UART mode)
  - The usable system clock (only UART mode).
- Double Buffer /FIFO

The usable double buffer function, and the usable FIFO buffers of transmit and receive in all for maximum 4-byte.

- I/O Interface Mode
  - Transfer Mode: the half duplex (transmit/receive), the full duplex
  - Clock: Output (fixed rising edge) /Input (selectable rising/falling edge)
  - Make it possible to specify the interval time of continuous transmission.
- UART Mode
  - Data length: 7 bits, 8bits, 9bits
  - Add parity bit (to be against 9bits data length)
  - Serial links to use wake-up function
  - Handshaking function with CTS pin

In the following explanation, "x" represents channel number.

# 10.2 Difference in the Specifications of SIO Modules

TMPM330FDFG/FYFG/FWFG has three SIO channels.

Each channel functions independently. The used pins and interrupt in each channel are collected in the following.

		Channel 0	Channel 1	Channel 2
Pin name	TXD	PE0(20pin)	PE4(23pin)	PF0(33pin)
	RXD	PE1(21pin)	PE5(24pin)	PF1(34pin)
	CTS/SLCK	PE2(22pin)	PE6(25pin)	PF2(35pin)
late must	Receive Interrupt	INTRX0	INTRX1	INTRX2
Interrupt	Transmit Interrupt	INTTX0	INTTX1	INTTX2

Table 10-1 Difference in the Specifications of SIO Modules

# 10.3 Configuration

Figure 10-1 shows SIO block diagram.

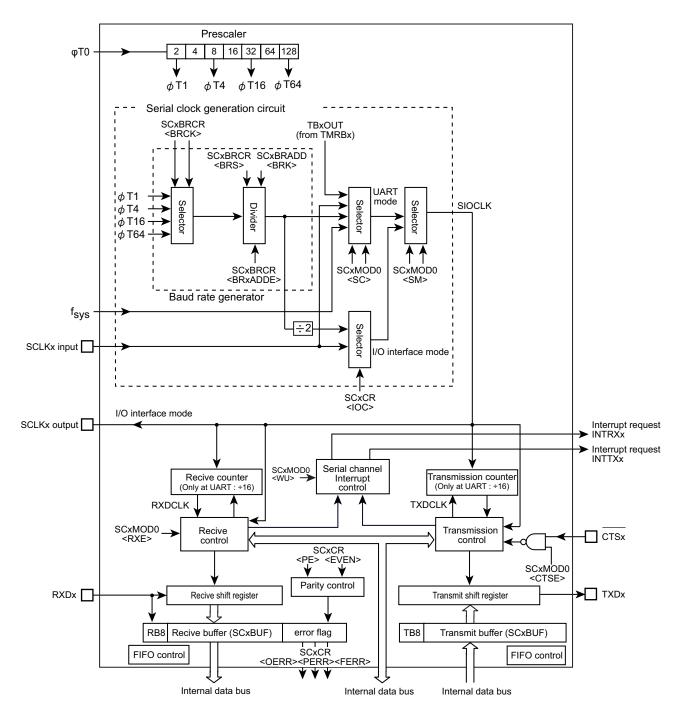


Figure 10-1 SIO Block Diagram

# TOSHIBA

# 10.4 Registers Description

## 10.4.1 Registers List in Each Channel

The each channel registers and addresses are shown here.

Channel x	Base Address
Channel0	0x4002_0080
Channel1	0x4002_00C0
Channel2	0x4002_0100

Register name (x=0 to 2)		Address (Base+)
Enable register	SCxEN	0x0000
Buffer register	SCxBUF	0x0004
Control register	SCxCR	0x0008
Mode control register 0	SCxMOD0	0x000C
Baud rate generator control register	SCxBRCR	0x0010
Baud rate generator control register 2	SCxBRADD	0x0014
Mode control register 1	SCxMOD1	0x0018
Mode control register 2	SCxMOD2	0x001C
RX FIFO configuration register	SCxRFC	0x0020
TX FIFO configuration register	SCxTFC	0x0024
RX FIFO status register	SCxRST	0x0028
TX FIFO status register	SCxTST	0x002C
FIFO configuration register	SCxFCNF	0x0030

Note: Do not modify any control register when data is being transmitted or received.

### 10.4 Registers Description

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
					-	-	_	SIOE
bit symbol	-	-	-	-	_		_	OIOE

# 10.4.2 SCxEN (Enable Register)

Bit	Bit Symbol	Туре	Function
31-1	-	R	Read as 0.
0	SIOE	R/W	SIO operation
			0: Disabled
			1: Enabled
			Specified the SIO operation.
			To use the SIO, set <sioe> = "1".</sioe>
			When the operation is disabled, no clock is supplied to the other registers in the SIO module. This can reduce the power consumption.
			If the SIO operation is executed and then disabled, the settings will be maintained in each register except for SCxTFC <til>.</til>

## 10.4.3 SCxBUF (Buffer Register)

SCxBUF works as a transmit buffer or FIFO for write operation and as a receive buffer or FIFO for read operation.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
							0	0
After reset	0	0	0	0	0	0	0	0
After reset	0	0 6	5	4	3	2	1	0
After reset bit symbol				4	-			

Bit	Bit Symbol	Туре	Function			
31-8	-	R	Read as 0.			
7-0 TB[7:0] / RB R/W			[write] TB : Transmit buffer / FIFO			
	[7.0]		[read] RB : Receive buffer / FIFO			

10.4 Registers Description

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	RB8	EVEN	PE	OERR	PERR	FERR	SCLKS	IOC
After reset	0	0	0	0	0	0	0	0

# 10.4.4 SCxCR (Control Register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	RB8	R	Receive data bit 8 (For UART)
			9th bit of the received data in the 9 bits UART mode.
6	EVEN	R/W	Parity (For UART)
			0: Odd
			1: Even
			Selects even or odd parity.
			"0" : odd parity, "1" : even parity.
			The parity bit may be used only in the 7- or 8-bit UART mode.
5	PE	R/W	Add parity (For UART)
			0: Disabled
			1: Enabled
			Controls enabling/ disabling parity.
			The parity bit may be used only in the 7- or 8-bit UART mode.
4	OERR	R	Overrun error flag (Note)
			0: Normal operation
			1: Error
3	PERR	R	Parity / Underrun error flag (Note)
			0: Normal operation
			1: Error
2	FERR	R	Framing error flag (Note)
			0: Normal operation
			1: Error
1	SCLKS	R/W	Selecting input clock edge (For I/O Interface)
			0: Rising edges
			1: Falling edges
			Selects input clock edge for data transmission and reception.
			Set to "0" in the clock output mode.
0	IOC	R/W	Selecting clock (For I/O Interface)
			0: Baud rate generator
			1: SCLK pin input

Note: Any error flag (OERR, PERR, FERR) is cleared to "0" when read.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	TB8	CTSE	RXE	WU	SM		SC	
After reset	0	0	0	0	0	0	0	0

## 10.4.5 SCxMOD0 (Mode Control Register 0)

Bit	Bit Symbol	Туре	Function				
31-8	-	R	Read as 0.				
7	TB8	R/W	Transmit data bit 8 (For UART)				
			Writes the 9th bit of transmit data in the 9 bits UART mode.				
6	CTSE	R/W	Handshake function control (For UART)				
			0: CTS disabled				
			1: CTS enabled				
			Controls handshake function.				
			Setting "1" enables handshake function using CTS pin.				
5	RXE	R/W	Receive control (Note)				
			0: Disabled				
			1: Enabled				
4	WU	R/W	Wake-up function (For UART)				
			0: Disabled				
			1: Enabled				
			This function is available only at 9-bit UART mode. In other mode, this function has no meaning.				
			In it is Enabled, Interrupt only when RB9 = "1" at 9-bit UART mode.				
3-2	SM[1:0]	R/W	Specifies transfer mode.				
			00: I/O interface mode				
			01: 7-bit length UART mode				
			10: 8-bit length UART mode				
			11: 9-bit length UART mode				
1-0	SC[1:0]	R/W	Serial transfer clock (For UART)				
			00: Timer TB9OUT				
			01: Baud rate generator				
			10: Internal clock fsys				
			11: External clock (SCLK input)				
			(As for the I/O interface mode, the serial transfer clock can be set in the control register (SCxCR).				

Note 1: With <RXE> set to "0", set each mode register (SCxMOD0, SCxMOD1 and SCxMOD2). Then set <RXE> to "1". Note 2: Do not stop the receive operation (by setting SCxMOD0<RXE> = "0") when data is being received. 10.4 Registers Description

10.4.6	SCxMOD1	(Mode Control Register 1)	
--------	---------	---------------------------	--

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	I2SC	FD	PX	TXE		SINT		-
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function				
31-8	-	R	Read as 0.				
7	I2SC	R/W	IDLE 0: Stop 1: Operate Specifies the IDLE mode operation.				
6-5	FDPX[1:0]	R/W	Transfer mode setting 00: Transfer prohibited 01: Half duplex (Recieve) 10: Half duplex (Trasmitt) 11: Full duplex Configures the transfer mode in the I/O interface mode. Also configures the FIFO if it is enabled. In the UART mode, it is used only to specify the FIFO configuration.				
4	TXE	R/W	Transmit control (Note) 0 :Disabled 1: Enabled This bit enables transmission and is valid for all the transfer modes.				
3-1	SINT[2:0]	R/W	Interval time of continuous transmission (For I/O interface) 000: None 001: 1SCLK 010: 2SCLK 011: 4SCLK 100: 8SCLK 100: 8SCLK 101: 16SCLK 110: 32SCLK 111: 64SCLK 111: 64SCLK This parameter is valid only for the I/O interface mode when SCLK pin output is selected. In other modes, this function has no meaning. Specifies the interval time of continuous transmission when double buffering or FIFO is enabled in the I/O interface mode.				
0	-	R/W	Write a "0".				

Note 1: Specify the all mode first and then enable the <TXE> bit.

Note 2: Do not stop the transmit operation (by setting <TXE> = "0")when data is being transmitted.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	TBEMP	RBFLL	TXRUN	SBLEN	DRCHG	WBUF	SW	RST
After reset	1	0	0	0	0	0	0	0

# 10.4.7 SCxMOD2 (Mode Control Register 2)

Bit	Bit Symbol	Туре			Function				
31-8	-	R	Read as 0.						
7	ТВЕМР	R	Transmit buffer empty flag.						
			0: Full						
			1: Empty						
			If double buffering is						
					buffers are empty. When data in the transmit doub ble buffers are empty, this bit is set to "1".	ble buffers is moved			
			Writing data again to	the double buffers	sets this bit to "0".				
6	RBFLL	R	Receive buffer full fla	g.					
			0: Empty						
			1: Full						
			This is a flag to show						
					and received data is moved from the receive shift re hile reading this bit changes it to "0".	gister to the receive			
			If double buffering is	disabled, this flag	is insignificant.				
5	TXRUN	R	In transmission flag						
			0: Stop						
			1: Operate						
			, °		ansmission is in progress.				
			<txrun> and <tbe< td=""><td>MP&gt; bits indicate</td><td>the following status.</td><td>1</td></tbe<></txrun>	MP> bits indicate	the following status.	1			
			<txrun></txrun>	<tbemp></tbemp>	Status				
			1	-	Transmission in progress				
			0	1	Transmission completed				
			0	0	Wait state with data in Transmitt buffer				
4	SBLEN	R/W	STOP bit (for UART)						
			0 : 1-bit						
			1 : 2-bit						
			· ·	•	n stop bit in the UART mode.				
			On the receive side,	the decision is mad	te using only a single bit regardless of the <sblen< td=""><td>I&gt; setting.</td></sblen<>	I> setting.			
3	DRCHG	R/W	Setting transfer direc	Setting transfer direction					
			0: LSB first						
			1: MSB first						
					n the I/O interface mode.				
			In the UART mode, s	et this bit to LSB fi	rst.				

Bit	Bit Symbol	Туре		Function			
2	WBUF	R/W	Double-buffer				
			0: Disabled				
			1 : Enabled				
				es or disables the transmit/receive double buf in SCLK output mode) data in the I/O interface			
				in the I/O interface mode (SCLK input) and UA is set to <wbuf> bit.</wbuf>	ART mode, double buffering is enabled in		
1-0	SWRST[1:0]	R/W	Software reset				
				ace of "10" generates a software reset. When the transmit/receive circuit, the transmit circu			
			Register	Bit			
			SCxMOD0	RXE			
			SCxMOD1 TXE				
			SCxMOD2	TBEMP, RBFLL, TXRUN			
			SCxCR	OERR, PERR, FERR			

Note 1: While data transmission is in progress, any software reset operation must be executed twice in succession.

Note 2: A software reset requires 2 clocks-duration at the time between the end of recognition and the start of execution of software reset instruction.

# 10.4.8 SCxBRCR (Baud Rate Generator Control Register), SCxBRADD (Baud Rate Generator Control Register 2)

The division ratio of the baud rate generator can be specified in the registers shown below.

SCxBRCR		-			-			
	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	BRADDE	BF	CK	BRS			
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	-	R/W	Write "0".
6	BRADDE	R/W	N + (16 - K)/16 divider function (For UART)
			0: disabled
			1: enabled
			This division function can only be used in the UART mode.
5-4	BRCK[1:0]	R/W	Select input clock to the baud rate generator.
			00: φΤ1
			01: φΤ4
			10: φΤ16
			11: φΤ64
3-0	BRS[3:0]	R/W	Division ratio "N"
			0000: 16
			0001: 1
			0010: 2
			1111: 15

#### 10.4 Registers Description

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-		BI	RK	
After reset	0	0	0	0	0	0	0	0

SCxBRADD

Bit	Bit Symbol	Туре	Function
31-4	-	R	Read as 0.
3-0	BRK[3:0]	R/W	Specify K for the "N + (16 - K)/16" division (For UART) 0000: Prohibited 0001: K = 1 0010: K = 2  1111: K = 15

Table 10-2 lists the settings of baud rate generator division ratio.

## Table 10-2 Setting division ratio

	<bradde> = "0"</bradde>	<bradde> = "1" (Note1) (Only UART mode)</bradde>	
<brs></brs>	Specify "I	N" (Note2) (Note3)	
<brk></brk>	No setting required	Specify "K" (Note4)	
Division ratio	Divide by N	$N + \frac{(16 - K)}{16}$ division.	

- Note 1: To use the "N + (16 K)/16" division function, be sure to set <BRADDE> to "1" after setting the K value to <BRK>. The "N + (16 K)/16" division function can only be used in the UART mode.
- Note 2: As a division ratio, 1 ("0001") or 16 ("0000") can not be applied to N when using the "N + (16 K)/16" division function in the UART mode.
- Note 3: The division ratio "1" of the baud rate generator can be specified only when the double buffering is used in the I/O interface mode.
- Note 4: Specifying "K = 0" is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	RFST	TFIE	RFIE	RXTXCNT	CNFG
After reset	0	0	0	0	0	0	0	0

# 10.4.9 SCxFCNF (FIFO Configuration Register)

Bit	Bit Symbol	Туре		Function					
31-8	-	R	Read as 0	Read as 0					
7-5	-	R/W	Be sure to write "000'	Be sure to write "000"					
4	RFST	R/W	Bytes used in RX FIF	lytes used in RX FIFO					
			0:Maximum	:Maximum					
			1:Same as FILL level	:Same as FILL level of RX FIFO					
			When RX FIFO is ena	Vhen RX FIFO is enabled, the number of RX FIFO bytes to be used is selected (Note1)					
			0: The maximun num	): The maximun number of bytes of the FIFO configured (see also <cnfg>).</cnfg>					
			1: Same as the fill lev	el for receive interrupt generation specifie	ed by SCxRFC <ril[1:0]></ril[1:0]>				
3	TFIE	R/W	TX interrupt for TX FI	FO					
			0: Disabled						
			1:Enabled						
			When TX FIFO is ena	abled, transmit interrupts are enabled or d	isabled by this parameter.				
2	RFIE	R/W	RX interrupt for RX F	IFO					
			0: Disabled						
			1:Enabled						
			When RX FIFO is ena	abled, receive interrupts are enabled or di	sabled by this parameter.				
1	RXTXCNT	R/W	Automatic disable of I	RXE/TXE					
			0: None						
			1: Auto diabled						
				sabling of transmission and reception.					
			Setting "1" enables to						
			Half duplex RX	When receive shift register, the receive SCxMOD0 <rxe> is automatically set to</rxe>					
			Half duplex TX	When the TX FIFO, the transmit buffer a SCxMOD1 <txe> is automatically set to</txe>					
			Full duplex	When either of the above two conditions set to "0" to inhibit further transmission	s is satisfied, TXE/RXE are automatically and reception.				
0	CNFG	R/W	Enables FIFO.						
			0: Disabled						
			1: Enabled						
			If enabled, the SCxMOD1 <fdpx[1:0]> setting automatically configures FIFO as follows:</fdpx[1:0]>						
			(The type of TX/RX can be specified in the mode control register 1 SCxMOD1 <fdpx[1:0]>).</fdpx[1:0]>						
			Half duplex RX	RX FIFO 4byte					
			Half duplex TX	TX FIFO 4byte					
			Full duplex	RX FIFO 2byte + TX FIFO 2byte					

# Note 1: Regarding TX FIFO, the maximum number of bytes being configured is always available. The available number of bytes is the bytes already written to the TX FIFO.

Note 2: The FIFO can not use in 9bit UART mode.

10.4 Registers Description

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	RFCS	RFIS	-	-	-	-	RIL	
After reset	0	0	0	0	0	0	0	0

# 10.4.10 SCxRFC (RX FIFO Configuration Register)

Bit	Bit Symbol	Туре		Function							
31-8	-	R	Read as 0.	Read as 0.							
7	RFCS	W	RX FIFO cle	RX FIFO clear							
			1: Clear	l: Clear							
			Setting "1" c	Setting "1" clears RX FIFO and "0" is always read.							
6	RFIS	R/W	Select interr	upt generation cor	dition						
			0: when the	): when the data reaches to the specified fill level.							
			1: when the data reaches to the specified fill level or the data exceeds the specified fill level at the time data is read.								
5-2	-	R	Read as 0.								
1-0	RIL[1:0]	R/W	FIFO fill leve	el to generate RX i	nterrupts						
				Half duplex	Full duplex						
			00	4byte	2byte						
			01	1byte	1byte						
			10	2byte	2byte						
			11	3byte	1byte						

Note: To use TX/RX FIFO buffer, TX/RX FIFO must be cleared after setting the SIO transfer mode (half duplex/ full duplex) and enabling FIFO (SCxFCNF<CNFG> = "1").

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	TFCS	TFIS	-	-	-	-	TIL	
After reset	0	0	0	0	0	0	0	0

## 10.4.11 SCxTFC (TX FIFO Configuration Register) (Note2)

Bit	Bit Symbol	Туре				Function				
31-8	-	R	Read as 0.	Read as 0.						
7	TFCS	w	1: Clears T	X FIFO clear (Note 1) : Clears TX FIFO. Setting "1" clears TX FIFO and "0" is always read.						
6	TFIS	R/W	0: An intern 1: An intern	Selects interrupt generation condition. D: An interrupt is generated when the data reaches to the specified fill level. I: An interrupt is generated when the data reaches to the specified fill level or the data can not reach the specified ill level at the time new data is read.						
5-2	-	R	Read as 0.							
1-0	TIL[1:0]	R/W	Selects FIF	O fill level.	-					
				Other than full duplex	Full duplex					
			00	Empty	Empty					
			01	1 byte	1 byte					
			10	2 byte	Empty					
			11	3 byte	1 byte					

Note 1: To use TX/RX FIFO buffer, TX/RX FIFO must be cleared after setting the SIO transfer mode (half duplex/full duplex) and enabling FIFO (SCxFCNF<CNFG> = "1").

Note 2: After you perform the following operations, configure the SCxTFC register again.

SCxEN<SIOE> = "0" (SIO operation stop)

Conditions are as follows:SCxMOD1<I2SC> = "0" (operation is prohibited in IDLE mode) and releasing the low power consumption mode which started by the WFI (Wait For Interrupt) instruction.

### 10.4 Registers Description

# 10.4.12 SCxRST (RX FIFO Status Register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	ROR	-	-	-	-	RLVL		
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	ROR	R	RX FIFO Overrun (Note) 0: Not generated 1: Generated
6-3	-	R	Read as 0.
2-0	RLVL[2:0]	R	Status of RX FIFO fill level. 000: Empty 001: 1 byte 010: 2 byte 011: 3 byte 100: 4 byte

 $\label{eq:Note:The} $$ Note: The $$ ROR$ bit is cleared to "0" when receive data is read from the $$ SCxBUF register. $$ Note: The $$ register $$ and $$ read from the $$ SCxBUF register. $$ Note: The $$ register $$ and $$ read from the $$ SCxBUF register. $$ note: $$ not$ 

10.4.13	SCxTST (	TX FIFO	Status Register)
10.4.13	SUXISI		Status Register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	TUR	-	-	-	-	TLVL		
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	TUR	R	TX FIFO under run (Note) 0: Not generated 1: Generated.
6-3	-	R	Read as 0.
2-0	TLVL[2:0]	R	Status of TX FIFO fill level. 000: Empty 001: 1 byte 010: 2 byte 011: 3 byte 100: 4 byte

Note: The <TUR> bit is cleared to "0" when transmit data is written to the SCxBUF register.

#### 10.5 Operation in Each Mode

# 10.5 Operation in Each Mode

Table 10-3 shows the modes and data formats.

## Table 10-3 Mode and Data format

Mode	Mode type	Data length	Transfer direction	Specifies whether to use parity bits.	STOP bit length (transmit)
Mode 0	Synchronous communication mode (IO interface mode)	8 bit	LSB first/MSB first	-	-
Mode 1	Asynchronous communication	7 bit		0	
Mode 2	mode	8 bit	LSB first	0	1 bit or 2 bit
Mode 3	(UART mode)	9 bit		×	

Mode 0 is a synchronous communication and can be used to extend I/O. This mode transmits and receives data in synchronization with SCLK. SCLK can be used for both input and output.

The direction of data transfer can be selected from LSB first and MSB first. This mode is not allowed either to use parity bits or STOP bits.

The mode 1, mode 2 and mode 3 are asynchronous modes and the transfer direction is fixed to the LSB first.


Parity bits can be added in the mode 1 and mode 2. The mode 3 has a wakeup function in which the master controller can start up slave controllers via the serial link (multi-controller system).

STOP bit in transmission can be selected from 1 bit and 2 bits. The STOP bit length in reception is fixed to a one bit.

# 10.6 Data Format

## 10.6.1 Data Format List

Figure 10-2 shows data format.

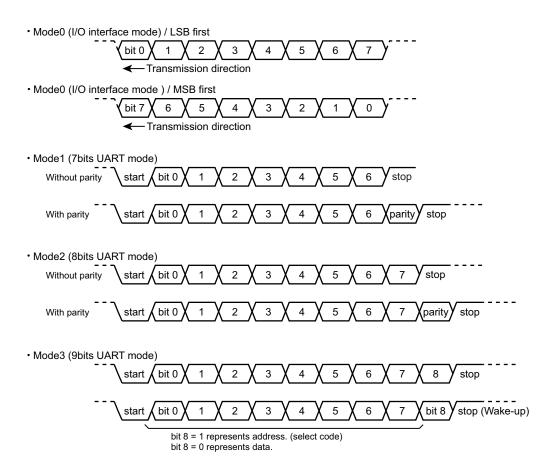



## 10.6.2 Parity Control

The parity bit can be added only in the 7- or 8-bit UART mode.

Setting "1" to SCxCR<PE> enables the parity.

The <EVEN> bit of SCxCR selects either even or odd parity.

### 10.6.2.1 Transmission

Upon data transmission, the parity control circuit automatically generates the parity with the data in the transmit buffer.

After data transmission is complete, the parity bit will be stored in SCxBUF<TB7> in the 7-bit UART mode and SCxMOD<TB8> in the 8-bit UART mode.

The <PE> and <EVEN> settings must be completed before data is written to the transmit buffer.

### 10.6.2.2 Receiving Data

If the received data is moved from the receive shift register to the receive buffer, a parity is generated.

In the 7-bit UART mode, the generated parity is compared with the parity stored in SCxBUF<RB7>, while in the 8-bit UART mode, it is compared with the one in SCxCR<RB8>.

If there is any difference, a parity error occurs and the <PERR> of the SCxCR register is set to "1".

In use of the FIFO, <RERR> indicates that a parity error was generated in one of the recieved data.

## 10.6.3 STOP Bit Length

The length of the STOP bit in the UART transmission mode can be selected from one bit or two bits by setting the SCxMOD2<SBLEN>. The length of the STOP bit data is determined as one-bit when it is received regardless of the setting of this bit.

# 10.7 Clock Control

### 10.7.1 Prescaler

There is a 7-bit prescaler to divide a prescaler input clock  $\Phi$ T0 by 2, 8, 32 and 128.

Use the CGSYSCR register in the clock/mode control block to select the input clock  $\Phi$ T0 of the prescaler.

The prescaler becomes active only when the baud rate generator is selected as a transfer clock by SCxMOD0 < SC[1:0] > = "11".

Table 10-4 (operation frequency 40MHz), Table 10-5 (operation frequency 32MHz) show the resolution of the input clock to the baud rate generator.

peripheral clock	Clock gear	Prescaler clock se-		Prescaler output	clock resolution	
selection CGSYSCR <fpsel></fpsel>	value CGSYSCR <gear[2:0]></gear[2:0]>	lection CGSYSCR <prck[2:0]></prck[2:0]>	φΤ1	φT4	φΤ16	φΤ64
		000 (fperiph/1)	fc/2¹ (0.05 μs)	fc/2³ (0.2 µs)	fc/2⁵ (0.8 μs)	fc/2 <sup>7</sup> (3.2 µs)
		001 (fperiph/2)	fc/2² (0.1 µs)	fc/24 (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)
	000 (5.)	010 (fperiph/4)	fc/2³ (0.2 µs)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 μs)	fc/2º (12.8 µs)
	000 (fc)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
		100 (fperiph/16)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2º (12.8 µs)	fc/2 <sup>11</sup> (51.2 μs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)
		000 (fperiph/1)	fc/2² (0.1 µs)	fc/24 (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)
		001 (fperiph/2)	fc/2³ (0.2 µs)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 µs)
	100 (fc/2)	010 (fperiph/4)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
		011 (fperiph/8)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2º (12.8 µs)	fc/2 <sup>11</sup> (51.2 μs)
		100 (fperiph/16)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)
0 ((		101 (fperiph/32)	fc/2 <sup>7</sup> (3.2 µs)	fc/2º (12.8 µs)	fc/2 <sup>11</sup> (51.2 μs)	fc/2 <sup>13</sup> (204.8 µs)
0 (fgear)		000 (fperiph/1)	fc/2 <sup>3</sup> (0.2 µs)	fc/2 <sup>5</sup> (0.8 μs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 µs)
		001 (fperiph/2)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
		010 (fperiph/4)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 µs)	fc/2 <sup>11</sup> (51.2 μs)
	101 (fc/4)	011 (fperiph/8)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)
		100 (fperiph/16)	fc/2 <sup>7</sup> (3.2 µs)	fc/2º (12.8 µs)	fc/2 <sup>11</sup> (51.2 μs)	fc/2 <sup>13</sup> (204.8 µs)
		101 (fperiph/32)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)	fc/2 <sup>14</sup> (409.6 µs)
		000 (fperiph/1)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
		001 (fperiph/2)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 µs)	fc/2 <sup>11</sup> (51.2 μs)
	440 (5-10)	010 (fperiph/4)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/212 (102.4 µs)
	110 (fc/8)	011 (fperiph/8)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)	fc/2 <sup>11</sup> (51.2 µs)	fc/2 <sup>13</sup> (204.8 µs)
		100 (fperiph/16)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)	fc/2 <sup>14</sup> (409.6 µs)
		101 (fperiph/32)	fc/2 <sup>9</sup> (12.8 µs)	fc/2 <sup>11</sup> (51.2 μs)	fc/2 <sup>13</sup> (204.8 µs)	fc/2 <sup>15</sup> (819.2 µs)

Table 10-4 Clock Resolution to the Baud Rate Generator fc = 40 MHz

#### 10.7 Clock Control

peripheral clock	Clock gear	Prescaler clock se-		Prescaler outpu	t clock resolution	
selection CGSYSCR <fpsel></fpsel>	value CGSYSCR <gear[2:0]></gear[2:0]>	lection CGSYSCR <prck[2:0]></prck[2:0]>	φΤ1	φT4	φΤ16	φΤ64
		000 (fperiph/1)	fc/2¹ (0.05 μs)	fc/2³ (0.2 µs)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)
		001 (fperiph/2)	fc/2² (0.1 µs)	fc/24 (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)
	000 (5.)	010 (fperiph/4)	fc/2³ (0.2 µs)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 µs)
	000 (fc)	011 (fperiph/8)	fc/24 (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/28 (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
		100 (fperiph/16)	fc/2 <sup>5</sup> (0.8 μs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)	fc/2 <sup>11</sup> (51.2 μs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)
		000 (fperiph/1)	-	fc/2³ (0.2 µs)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)
		001 (fperiph/2)	fc/2² (0.1 µs)	fc/24 (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)
	100 (fc/2)	010 (fperiph/4)	fc/2 <sup>3</sup> (0.2 µs)	fc/2 <sup>5</sup> (0.8 μs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)
		011 (fperiph/8)	fc/24 (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/28 (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
		100 (fperiph/16)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)	fc/2 <sup>11</sup> (51.2 μs)
4 (5-)		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)
1 (fc)		000 (fperiph/1)	-	fc/2³ (0.2 µs)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)
		001 (fperiph/2)	-	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)
		010 (fperiph/4)	fc/2³ (0.2 µs)	fc/2⁵ (0.8 µs)	fc/27 (3.2 µs)	fc/2 <sup>9</sup> (12.8 µs)
	101 (fc/4)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)
		100 (fperiph/16)	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)	fc/2 <sup>11</sup> (51.2 µs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)
		000 (fperiph/1)	-	-	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)
		001 (fperiph/2)	-	fc/24 (0.4 µs)	fc/2 <sup>6</sup> (1.6 μs)	fc/2 <sup>8</sup> (6.4 µs)
	440 (5.10)	010 (fperiph/4)	-	fc/2⁵ (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 μs)
	110 (fc/8)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.4 µs)	fc/2 <sup>6</sup> (1.6 µs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 μs)
		100 (fperiph/16)	fc/2 <sup>5</sup> (0.8 µs)	fc/2 <sup>7</sup> (3.2 µs)	fc/2 <sup>9</sup> (12.8 µs)	fc/2 <sup>11</sup> (51.2 μs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (1.6 μs)	fc/2 <sup>8</sup> (6.4 µs)	fc/2 <sup>10</sup> (25.6 µs)	fc/2 <sup>12</sup> (102.4 µs)

#### Table 10-4 Clock Resolution to the Baud Rate Generator fc = 40 MHz

Note 1: The prescaler output clock  $\varphi$ Tn must be selected so that the relationship " $\varphi$ Tn  $\leq$  fsys / 2" is satisfied (so that  $\varphi$ Tn is slower than fsys).

Note 2: Do not change the clock gear while SIO is operating.

Note 3: The dashes in the above table indicate that the setting is prohibited.

# TOSHIBA

peripheral clock	Clock gear	Prescaler clock se- lection		Prescaler output	t clock resolution	
selection CGSYSCR <fpsel></fpsel>	value CGSYSCR <gear[2:0]></gear[2:0]>	CGSYSCR CGSYSCR	φT1	φΤ4	φΤ16	φΤ64
		000 (fperiph/1)	fc/21 (0.0625 µs)	fc/2³ (0.25 µs)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)
		001 (fperiph/2)	fc/2² (0.125 µs)	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)
	000 (6-)	010 (fperiph/4)	fc/2³ (0.25 μs)	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2º (16.0 µs)
	000 (fc)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		100 (fperiph/16)	fc/2 <sup>5</sup> (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)	fc/2 <sup>11</sup> (64.0 µs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)
		000 (fperiph/1)	fc/2¹ (0.0625 μs)	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)
		001 (fperiph/2)	fc/2³ (0.25 μs)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2º (16.0 µs)
	100 (fc/2)	010 (fperiph/4)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		011 (fperiph/8)	fc/2 <sup>5</sup> (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)	fc/2 <sup>11</sup> (64.0 µs)
		100 (fperiph/16)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 μs)	fc/2 <sup>12</sup> (128.0 µs)
0 (frees)		101 (fperiph/32)	fc/2 <sup>7</sup> (4.0 µs)	fc/2º (16.0 µs)	fc/2 <sup>11</sup> (64.0 μs)	fc/2 <sup>13</sup> (256.0 µs)
0 (fgear)	101 (fc/4)	000 (fperiph/1)	fc/21 (0.0625 μs)	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)
		001 (fperiph/2)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		010 (fperiph/4)	fc/2 <sup>5</sup> (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)	fc/2 <sup>11</sup> (64.0 µs)
		011 (fperiph/8)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)
		100 (fperiph/16)	fc/2 <sup>7</sup> (4.0 µs)	fc/2º (16.0 µs)	fc/2 <sup>11</sup> (64.0 μs)	fc/2 <sup>13</sup> (256.0 µs)
		101 (fperiph/32)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)	fc/2 <sup>14</sup> (512.0 µs)
		000 (fperiph/1)	fc/2¹ (0.0625 μs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		001 (fperiph/2)	fc/2 <sup>5</sup> (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)	fc/2 <sup>11</sup> (64.0 µs)
	440 (5-10)	010 (fperiph/4)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 μs)	fc/2 <sup>12</sup> (128.0 µs)
	110 (fc/8)	011 (fperiph/8)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)	fc/2 <sup>11</sup> (64.0 µs)	fc/2 <sup>13</sup> (256.0 µs)
		100 (fperiph/16)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)	fc/2 <sup>14</sup> (512.0 µs)
		101 (fperiph/32)	fc/2 <sup>9</sup> (16.0 μs)	fc/2 <sup>11</sup> (64.0 µs)	fc/2 <sup>13</sup> (256.0 µs)	fc/2 <sup>15</sup> (1024 µs)

#### Table 10-5 Clock Resolution to the Baud Rate Generator fc = 32 MHz

10.7 Clock Control

peripheral clock	Clock gear	Prescaler clock se-		Prescaler outpu	t clock resolution	
selection CGSYSCR <fpsel></fpsel>	CGSYSCR CGSYSCR	lection CGSYSCR <prck[2:0]></prck[2:0]>	φΤ1	φT4	φΤ16	φT64
		000 (fperiph/1)	fc/21 (0.0625 μs)	fc/2 <sup>3</sup> (0.25 µs)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)
		001 (fperiph/2)	fc/2² (0.125 μs)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)
	000 (6.)	010 (fperiph/4)	fc/2³ (0.25 µs)	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)
	000 (fc)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		100 (fperiph/16)	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 μs)	fc/2 <sup>11</sup> (64.0 µs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)
		000 (fperiph/1)	-	fc/2³ (0.25 µs)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)
	100 (fc/2)	001 (fperiph/2)	fc/2² (0.125 μs)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)
		010 (fperiph/4)	fc/2 <sup>3</sup> (0.25 µs)	fc/2 <sup>5</sup> (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 μs)
		011 (fperiph/8)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		100 (fperiph/16)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 μs)	fc/2 <sup>11</sup> (64.0 µs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)
1 (fc)	101 (fc/4)	000 (fperiph/1)	-	fc/2 <sup>3</sup> (0.25 µs)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)
		001 (fperiph/2)	-	fc/2 <sup>4</sup> (0.5 μs)	fc/2 <sup>6</sup> (2.0 μs)	fc/2 <sup>8</sup> (8.0 µs)
		010 (fperiph/4)	fc/2³ (0.25 µs)	fc/2⁵ (1.0 μs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)
		011 (fperiph/8)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		100 (fperiph/16)	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 μs)	fc/2 <sup>11</sup> (64.0 µs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)
		000 (fperiph/1)	-	-	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)
		001 (fperiph/2)	-	fc/2⁴ (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)
	110 (5-10)	010 (fperiph/4)	-	fc/2⁵ (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)
	110 (fc/8)	011 (fperiph/8)	fc/2 <sup>4</sup> (0.5 µs)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)
		100 (fperiph/16)	fc/2 <sup>5</sup> (1.0 µs)	fc/2 <sup>7</sup> (4.0 µs)	fc/2 <sup>9</sup> (16.0 µs)	fc/2 <sup>11</sup> (64.0 µs)
		101 (fperiph/32)	fc/2 <sup>6</sup> (2.0 µs)	fc/2 <sup>8</sup> (8.0 µs)	fc/2 <sup>10</sup> (32.0 µs)	fc/2 <sup>12</sup> (128.0 µs)

#### Table 10-5 Clock Resolution to the Baud Rate Generator fc = 32 MHz

Note 1: The prescaler output clock  $\varphi$ Tn must be selected so that the relationship " $\varphi$ Tn  $\leq$  fsys / 2" is satisfied (so that  $\varphi$ Tn is slower than fsys / 2).

Note 2: Do not change the clock gear while SIO is operating.

Note 3: The dashes in the above table indicate that the setting is prohibited.

# 10.7.2 Serial Clock Generation Circuit

The serial clock circuit is a block to generate transmit and receive clocks (SIOCLK) and consists of the circuits in which clocks can be selected by the settings of the baud rates generator and modes.

#### 10.7.2.1 Baud Rate Generator

The baud rate generator generates transmit and receive clocks to determine the serial channel transfer rate.

#### (1) Baud Rate Generator input clock

The input clock of the baud rate generator is selected from the prescaler outputs divided by 2, 8, 32 and 128.

This input clock is selected by setting the SCxBRCR<BRCK>.

#### (2) Baud Rate Generator output clock

The frequency division ratio of the output clock in the baud rate generator is set by SCxBRCR and SCxBRADD.

The following frequency divide ratios can be used; 1/N frequency division in the I/O interface mode ,either 1/N or N + (16-K)/16 in the UART mode.

The table below shows the frequency division ratio which can be selected.

Mode	Divide Function Setting SCxBRCR <bradde></bradde>	Divide by N SCxBRCR <brs></brs>	Divide by K SCxBRADD <brk></brk>
I/O interface	Divide by N	1 to 16 (Note)	-
LIADT	Divide by N	1 to 16	-
UART	N + (16-K)/16 division	2 to 15	1 to 15

Note: 1/N (N=1)frequency division ratio can be used only when a double buffer is enabled.

#### 10.7.2.2 Clock Selection Circuit

A clock can be selected by setting the modes and the register.

Modes can be specified by setting the SCxMOD0<SM>.

The input clock in I/O interface mode is selected by setting SCxCR. The clock in UART mode is selected by setting SCxMOD0<SC>.

#### (1) Transfer Clock in I/O interface mode

Table 10-6 shows clock selection in I/O interface mode.

#### Table 10-6 Clock Selection in I/O Interface Mode

Mode SCxMOD0 <sm></sm>	Input/Output selection SCxCR <ioc></ioc>	Clock edge selection SCxCR <sclks></sclks>	Clock of use
	SCLK output	Set to "0". (Fixed to the rising edge)	Divided by 2 of the baud rate gen- erator output.
I/O interface mode	001// 1001	Rising edge	SCLK input rising edge
	SCLK input	Falling edge	SCLK input falling edge

To get the highest baud rate, the baud rate generator must be set as below.

Note: When deciding clock settings, make sure that AC electrical character is satisfied.

- Clock/mode control block settings
  - fc = 40MHz
  - fgear = 40MHz (CGSYSCR<GEAR[2:0]> = "000" : fc selected)
  - $\Phi T0 = 40 MHz (CGSYSCR < PRCK[2:0] > = "000" : 1 division ratio)$
- <u>SIO settings (if double buffer is used)</u>
  - Clock (SCxBRCR<BRCK[1:0]> = "00" : ΦT1 selected) = 20MHz
  - Divided clock frequency (SCxBRCR<BRS[3:0]> = "0001" : 1 division ratio) = 20MHz

1 division ratio can be selected if double buffer is used. In this case, baud rate is 10Mbps because 20MHz is divided by 2.

- <u>SIO settings (if double buffer is not used)</u>
  - Clock (SCxBRCR<BRCK[1:0]> = "00" :  $\Phi$ T1 selected) = 20MHz
  - Divided clock frequency (SCxBRCR<BRS[3:0]> = "0010" : 2 division ratio) = 10MHz

2 division ratio is the highest if double buffer is not used. In this case, baud rate is 5Mbps because 10MHz is divided by 2.

To use SCLK input, the following conditions must be satisfied.

- If double buffer is used
  - SCLK cycle > 6/fsys

The highest baud rate is less than  $40 \div 6 = 6.66$  Mbps.

• If double buffer is not used

- SCLK cycle > 8/fsys

The highest baud rate is less than  $40 \div 8 = 5.0$  Mbps.

#### (2) Transfer clock in the UART mode

Table 10-7 shows the clock selection in the UART mode. In the UART mode, selected clock is divided by 16 in the receive counter or the transmit counter before use.

Mode SCxMOD0 <sm></sm>	Clock selection SCxMOD0 <sc></sc>
UART Mode	Timer output
	Baud rate generator
	fsys
	SCLK input

Table 10-7 Clock Selection in UART Mode

The examples of baud rate in each clock settings.

- If the baud rate generator is used
  - fc = 40 MHz
  - fgear = 40MHz (CGSYSCR<GEAR[2:0]> = "000" : fc selected)
  - $\Phi T0 = 40 MHz (CGSYSCR < PRCK[2:0] > = "000" : 1 division ratio)$
  - Clock =  $\Phi$ T1 = 20MHz (SCxBRCR<BRCK[1:0]> = "00" :  $\Phi$ T1 selected)

The highest baud rate is 1.25Mbps because 20MHz is divided by 16.

Table 10-8 shows examples of baud rate when the baud rate generator is used with the following clock settings.

- fc = 9.8304 MHz
- fgear = 9.8304MHz (CGSYSCR<GEAR[2:0]> = "000" : fc selected)
- $\Phi$ T0 = 4.9152MHz (CGSYSCR<PRCK[2:0]> = "001" : 2 division ratio)

Table 10-8 Example of UART Mode Baud Rate (Using the Baud Rate Generator)

fc [MHz]	Division ratio N (SCxBRCR <brs>)</brs>	φT1 (fc/4)	φT4 (fc/16)	φT16 (fc/64)	φT64 (fc/256)
9.830400	2	76.800	19.200	4.800	1.200
	4	38.400	9.600	2.400	0.600
	8	19.200	4.800	1.200	0.300
	16	9.600	2.400	0.600	0.150

Unit : kbps

• If the SCLK input is used

To use SCLK input, the following conditions must be satisfied.

- SCLK cycle > 2/fsys

The highest baud rate must be less than  $40 \div 2 \div 16 = 1.25$  Mbps.

If fsys is used

Since the highest value of fsys is 40MHz, the highest baud rate is  $40 \div 16 = 2.5$ Mbps.

#### If timer output is used

To enable the timer output, the following condition must be set: a timer flip-flop output inverts when the value of the counter and that of TBxRG0 match. The SIOCLK clock frequency is "Setting value of TBxRG0  $\times$  2".

Baud rates can be obtained by using the following formula.

#### Baud rate calculation

•

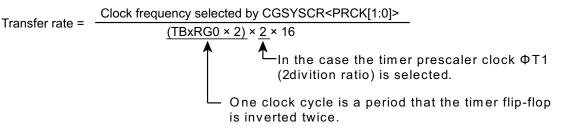


Table 10-9 shows the examples of baud rates when the timer output is used with the following clock settings.

- fc = 32MHz / 9.8304MHz / 8MHz
- fgear = 32MHz / 9.8304MHz / 8MHz (CGSYSCR<GEAR[2:0]> = "000" : fc selected)
- ΦT0 = 16MHz / 4.9152MHz / 4MHz (CGSYSCR<PRCK[2:0]> = "001" : 2 division ratio)
- Timer count clock = 4MHz / 1.2287MHz / 1MHz (TBxMOD<TBCLK[1:0]> = "01" :  $\Phi$ T1 selected)

Table 10.0 Example of LIADT Made David Date /	(I laing the Timer Output)
Table 10-9 Example of UART Mode Baud Rate (	

		fc				
TBxRG0 setting	32MHz	9.8304MHz	8MHz			
0x0001	250	76.8	62.5			
0x0002	125	38.4	31.25			
0x0003	-	25.6	-			
0x0004	62.5	19.2	15.625			
0x0005	50	15.36	12.5			
0x0006	-	12.8	-			
0x0008	31.25	9.6	-			
0x000A	25	7.68	6.25			
0x0010	15.625	4.8	-			
0x0014	12.5	3.84	3.125			

Unit : kbps


# TOSHIBA

# 10.8 Transmit/Receive Buffer and FIFO

# 10.8.1 Configuration

Figure 10-3 shows the configuration of transmit buffer, receive buffer and FIFO.

Appropriate settings are required for using buffer and FIFO. The configuration may be predefined depending on the mode.

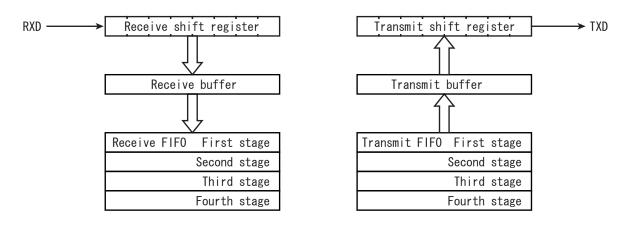

# Figure 10-3 The Configuration of Buffer and FIFO

### 10.8.2 Transmit/Receive Buffer

Transmit buffer and receive buffer are double-buffered. The buffer configuration is specified by SCxMOD2<WBUF>.

In the case of using a receive buffer, if SCLK input is set to generate clock output in the I/O interface mode or the UART mode is selected, it's double buffered despite the <WBUF> settings. In other modes, it's according to the <WBUF> settings.

Table 10-10 shows correlation between modes and buffers.

Mada	SCxMOD2 <wbuf></wbuf>		
Mode	"0"	"1"	
UART	Transmit	Single	Double
UARI	Receive	Double	Double
I/O interface	Transmit	Single	Double
(SCLK input)	Receive	Double	Double
I/O interface	Transmit	Single	Double
(SCLK output)	Receive	Single	Double

### 10.8.3 FIFO

In addition to the double buffer function above described, 4-byte FIFO can be used.

To enable FIFO, enable the double buffer by setting SCxMOD2<WBUF> to "1" and SCxFCNF<CNFG> to "1". The FIFO buffer configuration is specified by SCxMOD1<FDPX[1:0]>.

Note: To use TX/RX FIFO buffer, TX/RX FIFO must be cleared after setting the SIO transfer mode (half duplex/ full duplex) and enabling FIFO (SCxFCNF<CNFG> = "1").

Table 10-11 shows correlation between modes and FIFO.

Table 10-11 Mode and FIFO Composition

	SCxMOD1 <fdpx[1:0]></fdpx[1:0]>	RX FIFO	TX FIFO
Half duplex RX	"01"	4byte	-
Half duplex TX	"10"	-	4byte
Full duplex	"11"	2byte	2byte

# 10.9 Status Flag

The SCxMOD2 register has two types of flag. This bit is significant only when the double buffer is enabled.

<RBFLL> is a flag to show that the receive buffer is full. When one frame of data is received and the data is moved from the receive shift register to the receive buffers, this bit changes to "1" while reading this bit changes it to "0".

<TBEMP> shows that the transmit buffers are empty. When data in the transmit buffers is moved to the transmit shift register, this bit is set to "1" When data is set to the transmit buffers, the bit is cleared to "0".

# 10.10 Error Flag

Three error flags are provided in the SCxCR register. The meaning of the flags is changed depending on the modes. The table below shows the meanings in each mode.

These flags are cleared to "0" after reading the SCxCR register.

Mode	Flag							
Mode	<oerr></oerr>	<perr></perr>	<ferr></ferr>					
UART	Overrun error	Parity error	Framing error					
I/O Interface	0	Underrun error (When using double buffer or FIFO)	Fixed to 0					
(SCLK input)	Overrun error	Fixed to 0 (When a double buffer and FIFO unused)						
I/O Interface (SCLK output)	Undefined	Undefined	Fixed to 0					

#### 10.10.1 OERR Flag

In both UART and I/O interface modes, this bit is set to "1" when an error is generated by completing the reception of the next frame of receive data before the receive buffer has been read. If the receive FIFO is enabled, the received data is automatically moved to the receive FIFO and no overrun error will be generated until the receive FIFO is full (or until the usable bytes are fully occupied).

In the I/O interface with SCLK output mode, the SCLK output stops upon setting the flag.

Note: To switch the I/O interface SCLK output mode to other modes, read the SCxCR register and clear the overrun flag.

# 10.10.2 PERR Flag

This flag indicates a parity error in the UART mode and an under-run error in the I/O interface mode.

In the UART mode, <PERR> is set to "1" when the parity generated from the received data is different from the parity received.

In the I/O interface mode, <PERR> is set to "1" under the following conditions when a double buffer is enabled.

In the SCLK input mode, <PERR> is set to "1" when the SCLK is input after completing data output of the transmit shift register with no data in the tarnsmit buffer.

In the SCLK output mode, <PERR> is set to "1" after completing output of all data and the SCLK output stops.

Note: To switch the I/O interface SCLK output mode to other modes, read the SCxCR register and clear the under-run flag.

# 10.10.3 FERR Flag

A framing error is generated if the corresponding stop bit is determined to be "0" by sampling the bit at around the center. Regardless of the stop bit length settings in the SCxMOD2<SBLEN>register, the stop bit status is determined by only 1.

This bit is fixed to "0" in the I/O interface mode.

# 10.11 Receive

#### 10.11.1 Receive Counter

The receive counter is a 4-bit binary counter and is up-counted by SIOCLK. In the UART mode, sixteen SIOCLK clock pulses are used in receiving a single data bit and the data symbol is sampled at the seventh, eighth, and ninth pulses. From these three samples, majority logic is applied to decide the received data.

### 10.11.2 Receive Control Unit

#### 10.11.2.1 I/O interface mode

In the SCLK output mode with SCxCR <IOC> set to "0", the RXD pin is sampled on the rising edge of the shift clock outputted to the SCLK pin.

In the SCLK input mode with SCxCR <IOC> set to "1", the serial receive data RXD pin is sampled on the rising or falling edge of SCLK input signal depending on the SCxCR <SCLKS> setting.

#### 10.11.2.2 UART Mode


The receive control unit has a start bit detection circuit, which is used to initiate receive operation when a normal start bit is detected.

#### 10.11.3 Receive Operation

#### 10.11.3.1 Receive Buffer

The received data is stored by 1 bit in the receive shift register. When a complete set of bits has been stored, the interrupt INTRXx is generated.

When the double buffer is enabled, the data is moved to the receive buffer (SCxBUF) and the receive buffer full flag (SCxMOD2<RBFLL>) is set to "1". The receive buffer full flag is "0" cleared by reading the receive buffer.

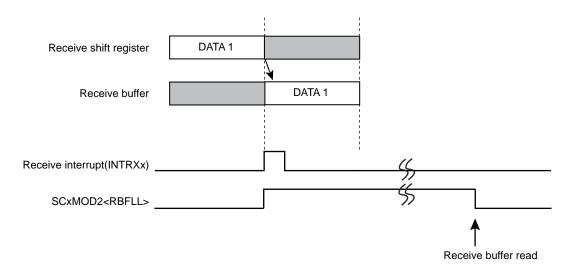



#### 10.11.3.2 Receive FIFO Operation

When FIFO is enabled, the received data is moved from receive buffer to receive FIFO and the receive buffer full flag is cleared immediately. An interrupt will be generated according to the SCxRFC<RIL> setting.

Note: When the data with parity bit are received in UART mode by using the FIFO, the parity error flag is shown the occurring the parity error in the received data.

The following describes configurations and operations in the half duplex RX mode.

SCxMOD1[6:5] =01	: Transfer mode is set to half duplex mode
SCxFCNF[4:0] = 10111	: Automatically inhibits continuous reception after reaching the fill level.
	: The number of bytes to be used in the receive FIFO is the same as the interrupt generation fill level.
SCxRFC[1:0] = 00	: The fill level of FIFO in which generated receive interrupt is set to 4-byte.
SCxRFC[7:6] = 11	: Clears receive FIFO and sets the condition of interrupt generation.

After setting of the above FIFO configuration, the data reception is started by writing "1" to the SCxMOD0 <RXE>. When the data is stored all in the receive shift register, receive buffer and receive FIFO, SCxMOD0<RXE> is automatically cleared and the receive operation is finished.

In this above condition, if the cotinuous reception after reaching the fill level is enabed, and it is possible to receive a data continuously with and reading the data in the FIFO.

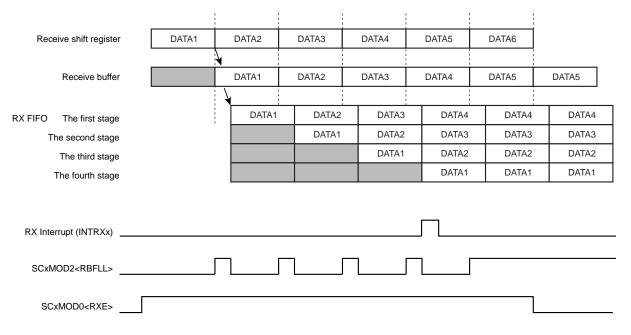


Figure 10-5 Receive FIFO Operation

#### 10.11.3.3 I/O interface mode with SCLK output

In the I/O interface mode and SCLK output setting, SCLK output stops when all received data is stored in the receive buffer and FIFO. So, in this mode, the overrun error flag has no meaning.

The timing of SCLK output stop and re-output depends on receive buffer and FIFO.

#### (1) Case of single buffer

Stop SCLK output after receiving a data. In this mode, I/O interface can transfer each data with the transfer device by hand-shake.

When the data in a buffer is read, SCLK output is restarted.

#### (2) Case of double buffer

Stop SCLK output after receiving the data into a receive shift register and a receive buffer.

When the data is read, SCLK output is restarted.

#### (3) Case of FIFO

Stop SCLK output after receiving the data into a shift register, received buffer and FIFO.

When one byte data is read, the data in the received buffer is transferred into FIFO and the data in the receive shift register is transferred into received buffer and SCLK output is restarted.

And if SCxFCNF<RXTXCNT>is set to "1", SCLK stops and receive operation stops with clearing SCxMOD0<RXE> bit too.

#### 10.11.3.4 Read Received Data

In spite of enabling or disabling FIFO, read the received data from the receive buffer (SCxBUF).

When receive FIFO is disabled, the buffer full flag SCxMOD2<RBFLL> is cleared to "0" by this reading. In the case of the next data can be received in the receive shift register before reading a data from the receive buffer. The parity bit to be added in the 8-bit UART mode as well as the most significant bit in the 9-bit UART mode will be stored in SCxCR<RB8>.

When the receive FIFO is available, the 9-bit UART mode is prohibited because up to 8-bit data can be stored in FIFO. In the 8-bit UART mode, the parity bit is lost but parity error is determined and the result is stored in SCxCR<PERR>.

#### 10.11.3.5 Wake-up Function

In the 9-bit UART mode, the slave controller can be operated in the wake-up mode by setting the wake-up function SCxMOD0 <WU> to "1." In this case, the interrupt INTRXx will be generated only when SCxCR <RB8> is set to "1."

#### 10.11.3.6 Overrun Error

When FIFO is disabled, the overrun error is occurred and set overrun flag without completing data read before receiveing the next data. When overrun error is ocurred, a content of receive buffer and SCxCR<RB8> is not lost, but a content of receive shift register is lost.

When FIFO is enabled, overrun error is ocurred and set overrun flag by no reading the data before moving the next data into received buffer when FIFO is full . In this case, the contens of FIFO are not lost.


In the I/O interface mode with SCLK output setting, the clock output automatically stops, so this flag has no meaning.


Note: When the mode is changed from I/O interface SCLK outout mode to the other mode, read SCxCR and clear overrun flag.

# 10.12 Transmission

### 10.12.1 Transmission Counter

The transmit counter is a 4-bit binary counter and is counted by SIOCLK as in the case of the receive counter. In UART mode, it generates a transmit clock (TXDCLK) on every 16th clock pulse.





### 10.12.2 Transmission Control

#### 10.12.2.1 I/O Interface Mode

In the SCLK output mode with SCxCR<IOC> set to "0", each bit of data in the transmit buffer is outputted to the TXD pin on the falling edge of the shift clock outputted from the SCLK pin.

In the SCLK input mode with SCxCR<IOC> set to "1", each bit of data in the transmit buffer is outputted to the TXD pin on the rising or falling edge of the SCLK input signal according to the SCxCR<SCLKS> setting.

#### 10.12.2.2 UART Mode

When the transmit data is written in the transmit buffer, data transmission is initiated on the rising edge of the next TXDCLK and the transmit shift clock signal is also generated.

### 10.12.3 Transmit Operation

#### 10.12.3.1 Operation of Transmission Buffer

If double buffering is disabled, the CPU writes data only to Transmit shift Buffer and the transmit interrupt INTTXx is generated upon completion of data transmission.

If double buffering is enabled (including the case the transmit FIFO is enabled), data written to the transmit buffer is moved to the transmit shift register. The INTTXx interrupt is generated at the same time and the transmit buffer empty flag (SCxMOD2<TBEMP>) is set to "1". This flag indicates that the next transmit data can be written. When the next data is written to the transmit buffer, the <TBEMP> flag is cleared to "0".

# TOSHIBA

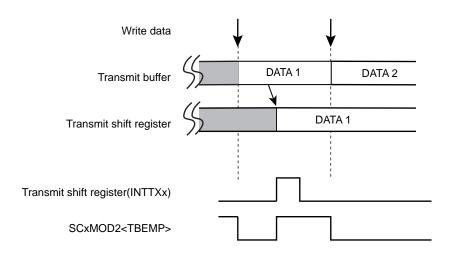


Figure 10-7 Operation of Transmission Buffer (Double-buffer is enabled)

#### 10.12.3.2 Transmit FIFO Operation

When FIFO is enabled, the maximum 5-byte data can be stored using the transmit buffer and FIFO. Once transmission is enabled, data is transferred to the transmit shift register from the transmit buffer and start transmission. If data exists in the FIFO, the data is moved to the transmit buffer immediately, and the <TBEMP> flag is cleared to "0".

#### Note: To use TX FIFO buffer, TX FIFO must be cleared after setting the SIO transfer mode (half duplex/ full duplex) and enabling FIFO (SCxFCNF<CNFG> = "1").

Settings and operations to transmit 4-byte data stream by setting the transfer mode to half duplex are shown as below.

SCxMOD1[6:5] =10	: Transfer mode is set to half duplex.
SCxFCNF[4:0] = 11011	: Transmission is automatically disabled if FIFO becomes empty.
	The number of bytes to be used in the receive FIFO is the same as the interrupt
	generation fill level.
SCxTFC[1:0] = 00	: Sets the interrupt generation fill level to "0".
SCxTFC[7:6] = 11	: Clears receive FIFO and sets the condition of interrupt generation.

After above settings are configured, data transmission can be initiated by writing 5 bytes of data to the transmit buffer or FIFO, and setting the SCxMOD1<TXE> bit to "1". When the last transmit data is moved to the transmit buffer, the transmit FIFO interrupt is generated. When transmission of the last data is completed, the clock is stopped and the transmission sequence is terminated.

Once above settings are configured, if the transmission is not set as auto disabled, the transmission should lasts by writing transmit data.

Transmit FIFO fourth stage	DATA 5						
Third stage	DATA 4	DATA 5					
Second stage	DATA 3	DATA 4	DATA 5	5			
First stage	DATA 2	DATA 3	DATA 4	L DA	TA 5		
Transmit buffer	DATA 1	DATA 2	DATA 3	B DA	TA 4	DATA 5	
Transmit shift register		DATA 1	DATA 2	DATA 3		DATA 4	DATA 5
SCxMOD1 <txe></txe>							
SCxMOD2 <tbemp></tbemp>	ſ	ſ		1	Л		
Transmit interrupt(INTTXx)							

#### 10.12.3.3 I/O interface Mode/Transmission by SCLK Output

If SCLK is set to generate clock the I/O interface mode, the SCLK output automatically stops when all data transmission is completed and underrun error will not occur.

The timing of suspension and resume of SCLK output is different depending on the buffer and FIFO usage.

#### (1) Single Buffer

The SCLK output stops each time one frame of data is transferred. Handshaking for each data with the other side of communication can be enabled. The SCLK output resumes when the next data is written in the buffer.

#### (2) Double Buffer

The SCLK output stops upon completion of data transmission of the transmit shift register and the transmit buffer. The SCLK output resumes when the next data is written in the buffer.

#### (3) FIFO

The transmission of all data stored in the transmit shift register, transmit buffer and FIFO is completed, the SCLK output stops. The next data is written, SCLK output resumes.

If SCxFCNF<RXTXCNT> is configured, SCxMOD0<TXE> bit is cleared at the same time as SCLK stop and the transmission stops.

#### 10.12.3.4 Under-run error

If the transmit FIFO is disabled in the I/O interface SCLK input mode and if no data is set in transmit buffer before the next frame clock input, which occurs upon completion of data transmission from transmit shift register, an under-run error occurs and SCxCR<PERR> is set to "1".

In the I/O interface mode with SCLK output setting, the clock output automatically stops, so this flag has no meaning.

Note: Before switching the I/O interface SCLK output mode to other modes, read the SCxCR register and clear the underrun flag.

# 10.13 Handshake function

The function of the handshake is to enable frame-by-frame data transmission by using the CTS (Clear to send) pin and to prevent overrun errors. This function can be enabled or disabled by SCxMOD0<CTSE>.

When the  $\overline{\text{CTS}}$  pin is set to "High" level, the current data transmission can be completed but the next data transmission is suspended until the  $\overline{\text{CTS}}$  pin returns to the "Low" level. However in this case, the INTTXx interrupt is generated in the normal timing, the next transmit data is written in the transmit buffer, and it waits until it is ready to transmit data.

# Note: (1) If the CTS signal is set to "H" during transmission, the next data transmission is suspended after the current transmission is completed. (2) Data transmission starts on the first falling edge of the TXDCLK clock after CTS is set to "L".

Although no  $\overline{\text{RTS}}$  pin is provided, a handshake control function can easily implemented by assigning one bit of the port for the  $\overline{\text{RTS}}$  function. By setting the port to "High" level upon completion of data reception (in the receive interrupt routine), the transmit side can be requested to suspend data transmission.

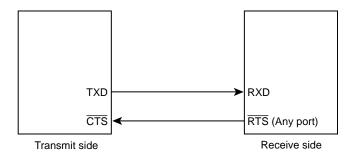


Figure 10-8 Handshake Function

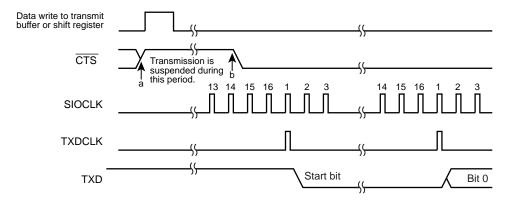



Figure 10-9 CTS Signal timing

# TOSHIBA

# 10.14 Interrupt/Error Generation Timing

# 10.14.1 RX Interrupts

Figure 10-10 shows the data flow of receive operation and the route of read.

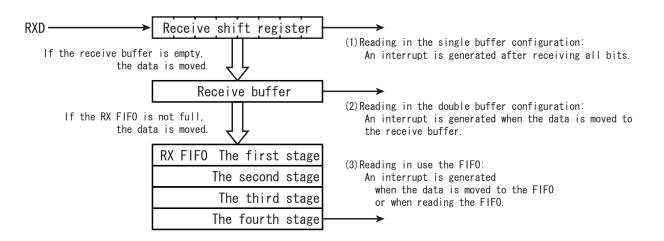

### Figure 10-10 Receive Buffer/FIFO Configuration Diagram

#### 10.14.1.1 Single Buffer / Double Buffer

RX interrupts are generated at the time depends on the transfer mode and the buffer configurations, which are given as follows.

Buffer Configurations	UART modes IO interface modes					
Single Buffer	-	<ul> <li>Immediately after the raising / falling edge of the last SCLK (Rising or falling is determined according to SCxCR<sclks> setting.)</sclks></li> </ul>				
Double Buffer	Around the center of the first stop bit	<ul> <li>Immediately after the raising / falling edge of the last SCLK (Rising or falling is determined according to SCxCR<sclks> setting.)</sclks></li> <li>On data transfer from the shift register to the buffer by reading buffer.</li> </ul>				

Note: Interrupts are not generated when an overrun error is occurred.

#### 10.14.1.2 FIFO

In use of FIFO, receive interrupt is generated on the condition that the following either operation and SCxRFC<RFIS > setting are established.

- Reception completion of all bits of one frame.
- Reading FIFO

Interrupt conditions are decided by the SCxRFC<RFIS> settings as described in Table 10-12.

#### Table 10-12 Receive Interrupt conditions in use of FIFO

SCxRFC <rfis></rfis>	Interrupt conditions
"0"	"The fill level of FIFO" is equal to "the fill level of FIFO interruption generation."
"1"	"The fill level of FIFO" is greater than or equal to "the fill level of FIFO intrruption generation."

# 10.14.2 TX interrupts

Figure 10-11 shows the data flow of transmit operation and the route of read.

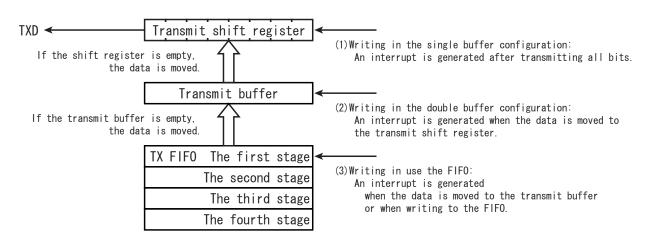


Figure 10-11 Transmit Buffer/FIFO Configuration Diagram

#### 10.14.2.1 Single Buffer / Double Buffer

TX interrupts are generated at the time depends on the transfer mode and the buffer configurations, which are given as follows.

Buffer Configurations	UART modes	IO interface modes				
Single Buffer	Just before the stop bit is sent	is sent Immediately after the raising / falling edge of the last SCLK (Rising or falling is determined according to SCxCR <sclks> settin</sclks>				
Double Buffer	When a data is moved from the transmit buffet to the transmit shift register.					

Note: If double buffer is enabled, a interrupt is also generated when the data is moved from the buffer to the shift register by writing to the buffer.

#### 10.14.2.2 FIFO

In use of FIFO, transmit interrupt is generated on the condition that the fllowing either operation and SCxTFC<TFIS> setting are established.

- Transmittion completion of all bits of one frame.
- Writing FIFO

Interrupt conditions are decided by the SCxTFC<TFIS> settings as described in Table 10-13.

Table 10-13 Transmit Interrupt conditions in use of FIFO

SCxTFC <tfis></tfis>	Interrupt conditions						
"0"	"The fill level of FIFO" is equal to "the fill level of FIFO interruption generation."						
"1"	"The fill level of FIFO" is smaller than or equal to "the fill level of FIFO intrruption generation."						

# 10.14.3 Error Generation

### 10.14.3.1 UART Mode

modes	9 bits	7 bits 8 bits 7 bits+ Parity 8 bits + Parity		
Framing Error Overrun Error	Around the ce	nter of stop bit		
Parity Error	-	Around the center of parity bit		

#### 10.14.3.2 IO Interface Mode

Overrun Error	Immediately after the raising / falling edge of the last SCLK (Rising or falling is determined according to SCxCR <sclks> setting.)</sclks>
Underrun Error	Immediately after the rising or falling edge of the next SCLK. (Rising or falling is determined according to SCxCR <sclks> setting.)</sclks>

Note: Over-run error and Under-run error have no meaning in SCLK output mode.

# 10.15 Software Reset

Software reset is generated by writing SCxMOD2<SWRST[1:0]> as "10" followed by "01".

As a result, SCxMOD0<RXE>, SCxMOD1<TXE>, SCxMOD2<TBEMP><RBFLL><TXRUN>, SCxCR

<OERR><PERR> are initialized. And the receive circuit, the transmit circuit and the FIFO become initial
stete. Other states are maintained.

# 10.16 Operation in Each Mode

### 10.16.1 Mode 0 (I/O interface mode)

Mode 0 consists of two modes, the SCLK output mode to output synchronous clock and the SCLK input mode to accept synchronous clock from an external source.

The following operational descriptions are for the case use of FIFO is disabled. For details of FIFO operation, refer to the previous sections describing receive/transmit FIFO functions.

#### 10.16.1.1 Transmitting Data

- (1) SCLK Output Mode
  - If the transmit double buffer is disabled (SCxMOD2<WBUF> = "0")


Data is output from the TXD pin and the clock is output from the SCLK pin each time the CPU writes data to the transmit buffer. When all data is output, an interrupt (INTTXx) is generated.

• If the transmit double buffer is enabled (SCxMOD2<WBUF> = "1")

Data is moved from the transmit buffer to the transmit shift register when the CPU writes data to the transmit buffer while data transmission is halted or when data transmission from the transmit buffer (shift register) is completed. Simultaneously, the transmit buffer empty flag SCxMOD2<TBEMP> is set to "1", and the INTTXx interrupt is generated.

When data is moved from the transmit buffer to the transmit shift register, if the transmit buffer has no data to be moved to the transmit shift register, INTTXx interrupt is not generated and the SCLK output stops.

# <u>TOSHIBA</u>

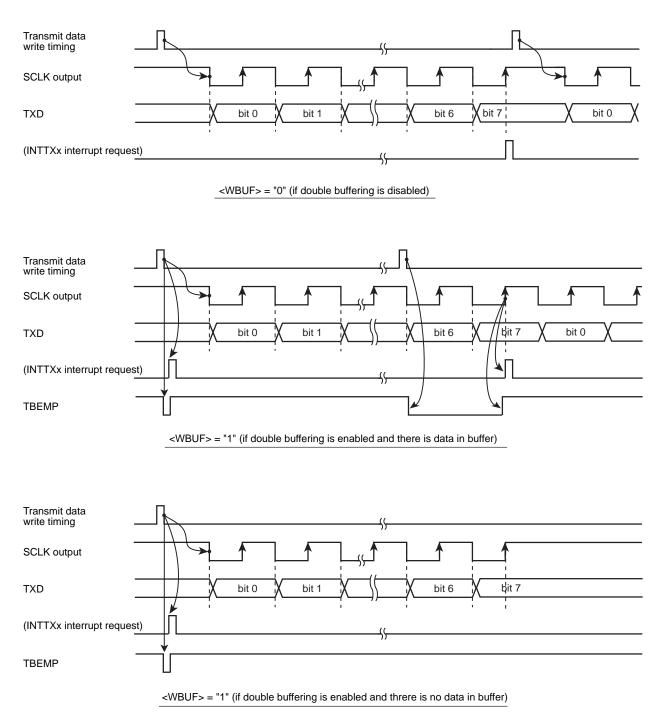

# Figure 10-12 Transmit Operation in the I/O Interface Mode (SCLK Output Mode)

#### (2) SCLK Input Mode

• If double buffering is disabled (SCxMOD2<WBUF> = "0")


If the SCLK is input in the condition where data is written in the transmit buffer, 8-bit data is outputted from the TXD pin. When all data is output, an interrupt INTTXx is generated. The next transmit data must be written before the timing point "A" as shown in Figure 10-13.


If double buffer is enabled (SCxMOD2<WBUF> = "1")

Data is moved from the transmit buffer to the transmit shift register when the CPU writes data to the transmit buffer before the SCLK input becomes active or when data transmission from the transmit shift register is completed. Simultaneously, the transmit buffer empty flag SCxMOD2<TBEMP> is set to "1", and the INTTXx interrupt is generated.

If the SCLK input becomes active while no data is in the transmit buffer, although the internal bit counter is started, an under-run error occurs and 8-bit dummy data (0xFF) is sent.

# <u>TOSHIBA</u>

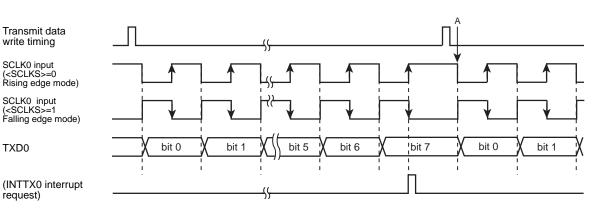



Transmit data write timing


SCLK0 input (<SCLKS>=0 Rising edge mode)


SCLK0 input (<SCLKS>=1 Falling edge mode)


TXD0

(INTTX0 interrupt request)

TBEMP

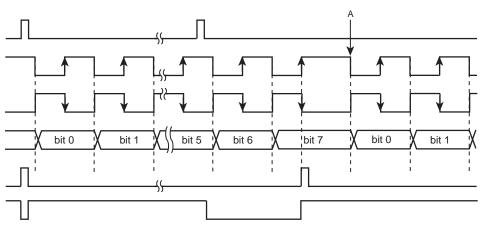



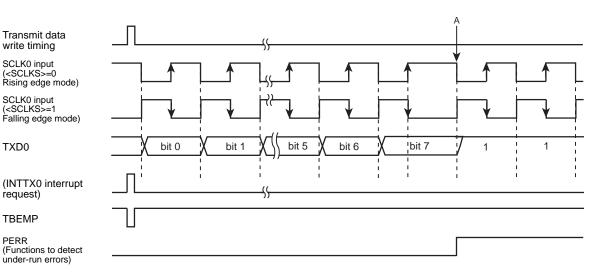

<WBUF> = "1" (if double buffering is enabled and there is no data in buffer2)

Figure 10-13 Transmit Operation in the I/O Interface Mode (SCLK Input Mode)

#### 10.16.1.2 Receive

#### (1) SCLK Output Mode

The SCLK output can be started by setting the receive enable bit SCxMOD0<RXE> to "1".

• If double buffer is disabled (SCxMOD2<WBUF> = "0")


A clock pulse is outputted from the SCLK pin and the next data is stored into the shift register each time the CPU reads received data. When all the 8 bits are received, the INTRXx interrupt is generated.

• If double buffer is enabled (SCxMOD2<WBUF> = "1")

Data stored in the shift register is moved to the receive buffer and the receive buffer can receive the next frame. A data is moved from the shift register to the receive buffer, the receive buffer full flag SCxMOD2<RBFLL> is set to "1" and the INTRXx is generated.

While data is in the receive buffer, if the data cannot be read from the receive buffer before completing reception of the next 8 bits, the INTRXx interrupt is not generated and the SCLK output stops. In this state, reading data from the receive buffer allows data in the shift register to move to the receive buffer and thus the INTRXx interrupt is generated and data reception resumes.

# TOSHIBA

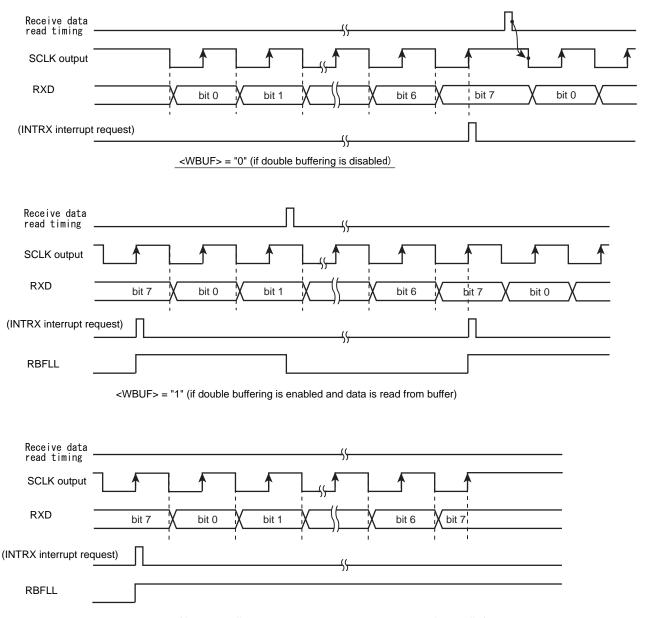


<WBUF> = "1" (if double buffering is enabled and data cannot be read from buffer)


Figure 10-14 Receive Operation in the I/O Interface Mode (SCLK Output Mode)


#### (2) SCLK Input Mode

In the SCLK input mode, receiving double buffering is always enabled, the received frame can be moved to the receive buffer from the shift register, and the receive buffer can receive the next frame successively.

The INTRx receive interrupt is generated each time received data is moved to the receive buffer.

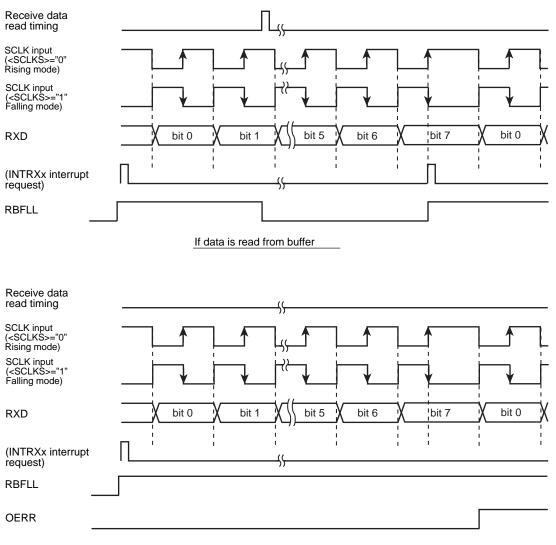





#### 10.16.1.3 Transmit and Receive (Full-duplex)

- (1) SCLK Output Mode
  - If SCxMOD2<WBUF> is set to "0" and the double buffers are disabled

SCLK is outputted when the CPU writes data to the transmit buffer.

Subsequently, 8 bits of data are shifted into receive buffer and the INTRXx receive interrupt is generated. Concurrently, 8 bits of data written to the transmit buffer are outputted from the TXD pin, the INTTXx transmit interrupt is generated when transmission of all data bits has been completed. Then, the SCLK output stops.

The next round of data transmission and reception starts when the data is read from the receive buffer and the next transmit data is written to the transmit buffer by the CPU. The order of reading the receive buffer and writing to the transmit buffer can be freely determined. Data transmission is resumed only when both conditions are satisfied.

• If SCxMOD2<WBUF> is set to "1" and the double buffers are enabled

SCLK is outputted when the CPU writes data to the transmit buffer.

8 bits of data are shifted into the receive shift register, moved to the receive buffer, and the INTRXx interrupt is generated. While 8 bits of data is received, 8 bits of transmit data is outputted from the TXD pin. When all data bits are sent out, the INTTXx interrupt is generated and the next data is moved from the transmit buffer to the transmit shift register.

If the transmit buffer has no data to be moved to the transmit buffer (SCxMOD2<TBEMP> = 1) or when the receive buffer is full (SCxMOD2<RBFULL> = 1), the SCLK output is stopped. When both conditions, receive data is read and transmit data is written, are satisfied, the SCLK output is resumed and the next round of data transmission and reception is started.

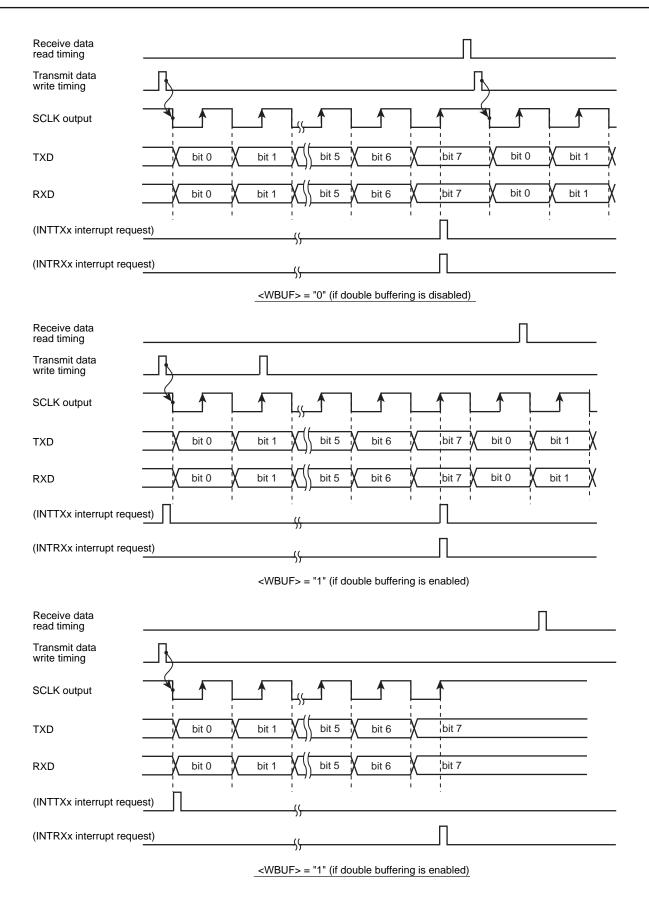


Figure 10-16 Transmit/Receive Operation in the I/O Interface Mode (SCLK Output Mode)

#### (2) SCLK Input Mode

• If SCxMOD2<WBUF> is set to "0" and the transmit double buffer is disabled

When receiving data, double buffer is always enabled regardless of the SCxMOD2 <WBUF> settings.

8-bit data written in the transmit buffer is outputted from the TXD pin and 8 bit of data is shifted into the receive buffer when the SCLK input becomes active. The INTTXx interrupt is generated upon completion of data transmission. The INTTRXx interrupt is generated when the data is moved from shift register to receive buffer after completion of data reception.

Note that transmit data must be written into the transmit buffer before the SCLK input for the next frame (data must be written before the point A in Figure 10-17). Data must be read before completing reception of the next frame data.

If SCxMOD2<WBUF> is set to "1" and the double buffer is enabled.

The interrupt INTRXx is generated at the timing the transmit buffer data is moved to the transmit shift register after completing data transmission from the transmit shift register. At the same time, data received is shifted to the shift register, it is moved to the receive buffer, and the INTRXx interrupt is generated.

Note that transmit data must be written into the transmit buffer before the SCLK input for the next frame (data must be written before the point A in Figure 10-17). Data must be read before completing reception of the next frame data.

Upon the SCLK input for the next frame, transmission from transmit shift register (in which data has been moved from transmit buffer) is started while receive data is shifted into receive shift register simultaneously.

If data in receive buffer has not been read when the last bit of the frame is received, an overrun error occurs. Similarly, if there is no data written to transmit buffer when SCLK for the next frame is input, an under-run error occurs.

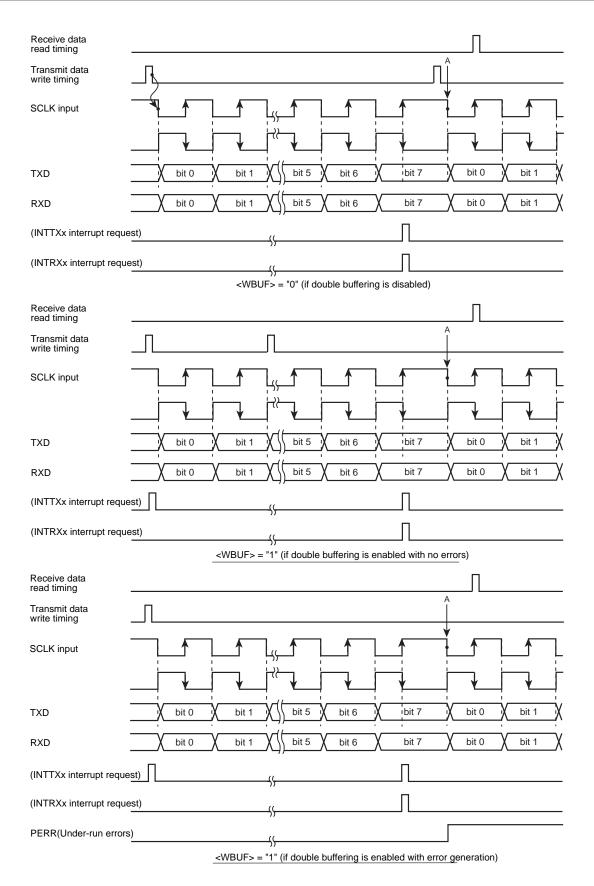


Figure 10-17 Transmit/Receive Operation in the I/O Interface Mode (SCLK Input Mode)

# 10.16.2 Mode 1 (7-bit UART mode)

The 7-bit UART mode can be selected by setting the serial mode control register (SCxMOD<SM[1:0]>) to "01".

In this mode, parity bits can be added to the transmit data stream; the serial mode control register (SCxCR<PE>) controls the parity enable/disable setting.

When <PE> is set to "1" (enable), either even or odd parity may be selected using the SCxCR<EVEN> bit. The length of the stop bit can be specified using SCxMOD2<SBLEN>.


The following table shows the control register settings for transmitting in the following data format.

start √ bit 0 √ 1 √ 2 √ 3 √ 4 √ 5 √ 6 √ even / parity / stop Transmission direction (Transmission rate of bps @fc = 9.8304 MHz)										
Clocking condi- tions system clock : High-speed (fc) High-speed clock gear: X1 (fc) Prescaler clock: fperiph/2 (fperiph = fsys)							's)			
		7	6	5	4	3	2	1	0	
SCxMOD0	$\leftarrow$	х	0	-	0	0	1	0	1	Set 7-bit UART mode
SCxCR	←	х	1	1	х	х	х	0	0	Even parity enabled
SCxBRCR	$\leftarrow$	0	0	1	0	0	1	0	0	Set 2400bps
SCxBUF	$\leftarrow$	*	*	*	*	*	*	*	*	Set transmit data
x : don't care - : no change										

#### 10.16.3 Mode 2 (8-bit UART mode)

The 8-bit UART mode can be selected by setting SCxMOD0<SM[1:0]> to "10." In this mode, parity bits can be added and parity enable/disable is controlled using SCxCR<PE>. If <PE> = "1" (enabled), either even or odd parity can be selected using SCxCR<EVEN>.

The control register settings for receiving data in the following format are as follows:

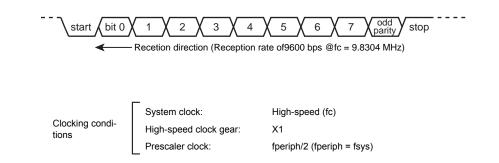

		7	6	5	4	3	2	1	0	
SCxMOD0	←	х	0	0	0	1	0	0	1	SEt 8-bit UART mode
SCxCR	←	х	0	1	х	х	х	0	0	Odd parity enabled
SCxBRCR	←	0	0	0	1	0	1	0	0	Set 9600bps
SCxMOD0	←	-	-	1	-	-	-	-	-	Reception enabled
x : don't care - : no change										

# 10.16.4 Mode 3 (9-bit UART mode)

The 9-bit UART mode can be selected by setting SCxMOD0 $\leq$ SM[1:0]> to "11." In this mode, parity bits must be disabled (SCxCR $\leq$ PE> = "0").

The most significant bit (9th bit) is written to bit 7 < TB8 > of the serial mode control register 0 (SCxMOD0) for transmitting data. The data is stored in bit 7 < RB8 > of the serial control register SCxCR.

When writing or reading data to/from the buffers, the most significant bit must be written or read first before writing or reading to/from SCxBUF.

The stop bit length can be specified using SCxMOD2<SBLEN>.

#### 10.16.4.1 Wakeup function

In the 9-bit UART mode, slave controllers can be operated in the wake-up mode by setting the wake-up function control bit SCxMOD0<WU> to "1."

In this case, the interrupt INTRXx will be generated only when SCxCR<RB8> is set to "1".

Note: The TXD pin of the slave controller must be set to the open drain output mode using the ODE register.


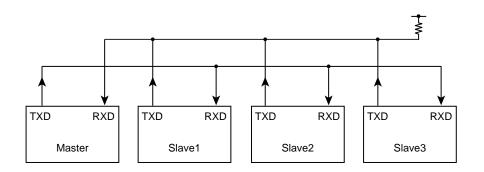



Figure 10-18 Serial Links to Use Wake-up Function

#### 10.16.4.2 Protocol

- 1. Select the 9-bit UART mode for the master and slave controllers.
- 2. Set SCxMOD<WU> to "1" for the slave controllers to make them ready to receive data.
- 3. The master controller is to transmit a single frame of data that includes the slave controller select code (8 bits). In this, the most significant bit (bit 8) <TB8> must be set to "1".



- 4. Each slave controller receives the above data frame; if the code received matches with the controller's own select code, it clears the WU bit to "0".
- 5. The master controller transmits data to the designated slave controller (the controller of which SCxMOD<WU> bit is cleared to "0"). In this, the most significant bit (bit 8) <TB8> must be set to "0".



6. The slave controllers with the <WU> bit set to "1" ignore the receive data because the most significant bit (bit 8) <RB8> is set to "0" and thus no interrupt (INTRXx) is generated. Also, the slave controller with the <WU> bit set to "0" can transmit data to the master controller to inform that the data has been successfully received.

Serial Channel (SIO/UART)
 10.16 Operation in Each Mode

# 11. Serial Bus Interface (I2C/SIO)

The TMPM330FDFG/FYFG/FWFG contains three Serial Bus Interface (I2C/SIO) channels, in which the following two operating modes are included:

- I2C bus mode (with multi-master capability)
- Clock-synchronous 8-bit SIO mode

In the I2C bus mode, the I2C/SIO is connected to external devices via SCL and SDA.

In the clock-synchronous 8-bit SIO mode, the I2C/SIO is connected to external devices via SCK, SI and SO.

The following table shows the programming required to put the I2C/SIO in each operating mode.

Table 11-1 Port settings for using serial bus interface

channel	Operating mode	pin	Port Function Regis- ter	Port Output Control Register	Port Input Control Register	Port Open Drain Output Control Register
	I2C bus mode	SCL0 :PG1 SDA0 :PG0	PGFR1[1:0] = "11"	PGCR[1:0] = "11"	PGIE[1:0] = "11"	PGOD[1:0] = "11"
SBI0	SIO mode	SCK0 :PG2 SI0 :PG1 SO0 :PG0	PGFR1[2:0] = "111"	PGCR[2:0] = "101" (SCK0 output) PGCR[2:0] = "001"(SCK0 input)	PGIE[2:0] = "010" (SCK0 output) PGIE[2:0] = "110" (SCK0 input)	PGOD[2:0] = "xxx"
	SBI1 SCK1 :PF6		PFFR1[5:4] = "11"	PFCR[5:4] = "11"	PFIE[5:4] = "11"	PFOD[5:4] = "11"
SBI1			PFFR1[6:4] = "111"	PFCR[6:4] = "101" (SCK1output) PFCR[6:4] = "001" (SCK1 input)	PFIE[6:4] = "010" (SCK1 output) PFIE[6:4] = "110" (SCK1 input)	PFOD[6:4] = "xxx"
	I2C bus mode	SCL2 :PG5 SDA2 :PG4	PGFR1[5:4] = "11"	PGCR[5:4] = "11"	PGIE[5:4] = "11"	PGOD[5:4] = "11"
SBI2	SIO mode	SCK2 :PG6 SI2 :PG5 SO2 :PG4	PGFR1[6:4] = "111"	PGCR[6:4] = "101" (SCK2 output) PGCR[6:4] = "001" (SCK2 input)	PGIE[6:4] = "010" (SCK2 output) PGIE[6:4] = "110" (SCK2 input)	PGOD[6:4] = "xxx"

Note: x: Don't care

Configuration

11.1

# 11.1 Configuration

The configuration is shown in Figure 11-1.

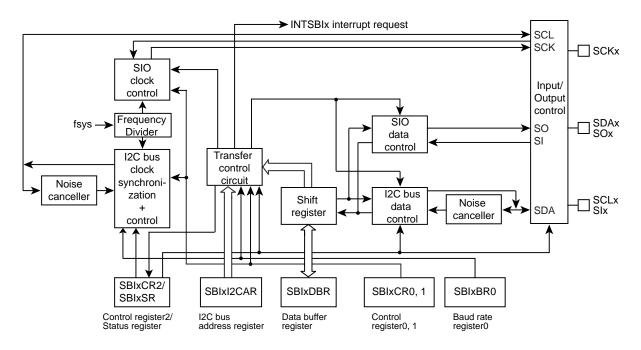


Figure 11-1 (I2C/SIO) Block Interface

# 11.2 Register

The following registers control the serial bus interface and provide its status information for monitoring.

The register below performs different functions depending on the mode. For details, refer to "11.4 Control Registers in the I2C Bus Mode" and "11.7 Control register of SIO mode".

# 11.2.1 Registers for each channel

The tables below show the registers and register addresses for each channel.

Channel x	Base Address
Channel0	0x4002_0000
Channel1	0x4002_0020
Channel2	0x4002_0040

Register name (x=0 to 2)		Address(Base+)	
Control register 0	SBIxCR0	0x0000	
Control register 1	SBIxCR1	0x0004	
Data buffer register	SBIxDBR	0x0008	
I2C bus address register	SBIxI2CAR	0x000C	
Control register 2	SBIxCR2 (writing)	0.0010	
Status register	SBIxSR (reading)	0x0010	
Baud rate register 0	SBIxBR0	0x0014	

# 11.3 I2C Bus Mode Data Format

Figure 11-2 shows the data formats used in the I2C bus mode.

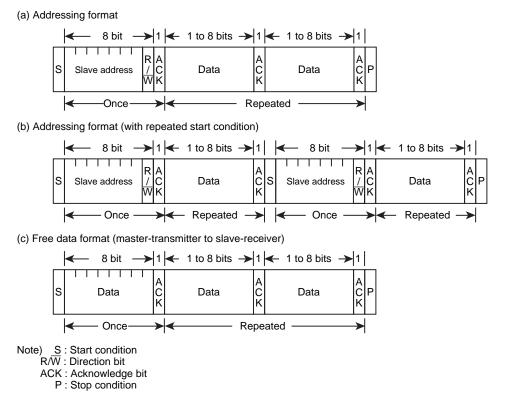


Figure 11-2 I2C Bus Mode Data Formats

The following registers control the serial bus interface in the I2C bus mode and provide its status information for monitoring.

# 11.4.1 SBIxCR0(Control register 0)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	SBIEN	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	SBIEN	R/W	Serial bus interface operation
			0:Disable
			1:Enable
			To use the serial bus interface, enable this bit first.
			Since all clocks except SBIxCR0 stop if this bit is disabled, power consumption can be reduced by disabling
			this bit.
			If this bit is disabled after it's been enabled once, the settings of each register are retained.
6-0	-	R	Read as 0.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol		BC		ACK	-	SCK2	SCK1	SCK0 / SWRMON
After reset	0	0	0	0	1	0	0	1(Note3)

# 11.4.2 SBIxCR1(Control register 1)

Bit	Bit Symbol	Туре					Function		
31-8	-	R	Read as	s 0.					
7-5	BC[2:0]	R/W	Select t	he number of	bits per transfe	r (Note 1)			
					When <a< td=""><td>CK&gt; = 0</td><td>When <a< td=""><td>CK&gt; = 1</td><td>]</td></a<></td></a<>	CK> = 0	When <a< td=""><td>CK&gt; = 1</td><td>]</td></a<>	CK> = 1	]
				<bc></bc>	Number of clock cycles	Data length	Number of clock cycles	Data length	
				000	8	8	9	8	]
				001	1	1	2	1	1
				010	2	2	3	2	1
				011	3	3	4	3	]
				100	4	4	5	4	]
				101	5	5	6	5	
				110	6	6	7	6	
				111	7	7	8	7	
			1: Ackn Slave m 0: Ackn	owledgement node owledgement	clock pulse is r clock pulse is c clock pulse is r clock pulse is r	penerated.			
3	-	R	Read as	s 1.					
2-1	SCK[2:1]	R/W	Select in	nternal SCL o	utput clock freq	uency (Note	2).		
0	SCK[0]	w		000 001 010 011 100 101 110 111	n = 5 n = 6 n = 7 n = 8 n = 9 n = 10 n = 11	385 kHz 294 kHz 200 kHz 122 kHz 68 kHz 36 kHz 19 kHz reserved		n Clock: fsys ( jear : fc/1 ncy = $\frac{fsys}{2^n + 7}$	= 40 MHz) 
	SWRMON	R	0:Softwa	are reset oper	DN>: Software r ration is in prog ration is not in p	ress.	nonitor		

- Note 1: Clear <BC[2:0]> to "000" before switching the operation mode to the SIO mode.
- Note 2: For details on the SCL line clock frequency, refer to "11.5.1 Serial Clock".
- Note 3: After a reset, the <SCK[0]/SWRMON> bit is read as "1". However, if the SIO mode is selected at the SBIxCR2 register, the initial value of the <SCK[0]> bit is "0".
- Note 4: The initial value for selecting a frequency is <SCK[2:0]>=000 and is independent of the read initial value.

# 11.4.3 SBIxCR2(Control register 2)

This register serves as SBIxSR register by reading it.

	31	30	29	28	27	26	25	24
	01	00	20	20	E1	20	20	27
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	MST	TRX	BB	PIN	SBIM		SW	RST
After reset	0	0	0	1	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	MST	W	Select master/slave
			0: Slave mode
			1: Master mode
6	TRX	w	Select transmit/ receive
			0: Receive
			1: Transmit
5	BB	w	Start/stop condition generation
			0: Stop condition generated
			1: Start condition generated
4	PIN	w	Clear INTSBIx interrupt request
			0: -
			1: Clear interrupt request
3-2	SBIM[1:0]	w	Select serial bus interface operating mode (Note)
			00: Port mode (Disables a serial bus interface output)
			01: SIO mode
			10: I2C bus mode
			11: Reserved
1-0	SWRST[1:0]	w	Software reset generation
			Write "10" followed by "01" to generate a reset.

Note: Make sure that modes are not changed during a communication session.Ensure that the bus is free before switching the operating mode to the port mode. Ensure that the port is at the "High" level before switching the operating mode from the port mode to the I2C bus or clock-synchronous 8-bit SIO mode.

# TOSHIBA

# 11.4.4 SBIxSR (Status Register)

This register serves as SBIxCR2 by writing to it.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	MST	TRX	BB	PIN	AL	AAS	ADO	LRB
After reset	0	0	0	1	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	MST	R	Master/slave selection monitor
			0: Slave mode
			1: Master mode
6	TRX	R	Transmit/receive selection monitor
			0: Receive
			1: Transmit
5	вв	R	I2C bus state monitor
			0: Free
			1: Busy
4	PIN	R	INTSBIx interrupt request monitor
			0:Interrupt request generated
			1: Interrupt request cleared
3	AL	R	Arbitration lost detection
			0: -
			1:Detected
2	AAS	R	Slave address match detection
			0: -
			1: Detected
			(This bit is set when the general call is detected as well.)
1	ADO	R	General call detection
			0: -
			1:Detected
0	LRB	R	Last received bit monitor
			0:Last received bit "0"
			1:Last received bit "1"

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	I2SBI	-	-	-	-	-	-
After reset	1	0	1	1	1	1	1	0

# 11.4.5 SBIxBR0(Serial bus interface baud rate register 0)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	-	R	Read as 1.
6	I2SBI	R/W	Operation at the IDLE mode 0: Stop 1: Operate
5-1	-	R	Read as 1.
0	-	R/W	Be sure to write "0".

# 11.4.6 SBIxDBR (Serial bus interface data buffer register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol				D	В			
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	DB[7:0]	R (Receive)/ W (Transmit)	Receive data / Transmit data

- Note 1: The transmission data must be written in to the register from the MSB (bit 7). The received data is stored in the LSB.
- Note 2: Since SBIxI2CAR has independent buffers for writing and reading, a written data cannot be read. Thus, readmodify-write instructions, such as bit manipulation, cannot be used.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol				SA				ALS
After reset	0	0	0	0	0	0	0	0

# 11.4.7 SBIxI2CAR (I2Cbus address register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-1	SA[6:0]	R/W	Set the slave address when the SBI acts as a slave device.
0	ALS	R/W	Specify address recognition mode. 0: Recognize its slave address. 1: Do not recognize its slave address (free-data format).

Note 1: Please set the bit 0 <ALS> of I2C bus address register SBIxI2CAR to "0", except when you use a free data format. It operates as a free data format when setting it to "1". Selecting the master fixes to transmission. Selecting the slave fixes to reception.


Note 2: Do not set SBIxI2CAR to "0x00" in slave mode. (If SBIxI2CAR is set to "0x00", it's recognized that the slave address matches the START byte ("0x01") of the I2C standard received in slave mode.)

# 11.5 Control in the I2C Bus Mode

## 11.5.1 Serial Clock

#### 11.5.1.1 Clock source

SBIxCR1<SCK[2:0]> specifies the maximum frequency of the serial clock to be output from the SCL pin in the master mode.

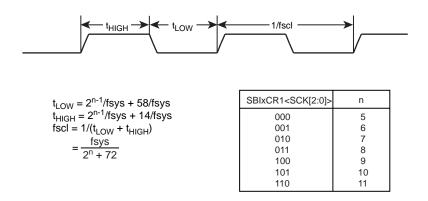

# Figure 11-3 Clock source


Note: The maximum speeds in the standard and high-speed modes are specified to 100kHz and 400kHz respectively following the communications standards. Notice that the internal SCL clock frequency is determined by the fsys used and the calculation formula shown above.


#### 11.5.1.2 Clock Synchronization

The I2C bus is driven by using the wired-AND connection due to its pin structure. The first master that pulls its clock line to the "Low" level overrides other masters producing the "High" level on their clock lines. This must be detected and responded by the masters producing the "High" level.

Clock synchronization assures correct data transfer on a bus that has two or more master.

For example, the clock synchronization procedure for a bus with two masters is shown below.

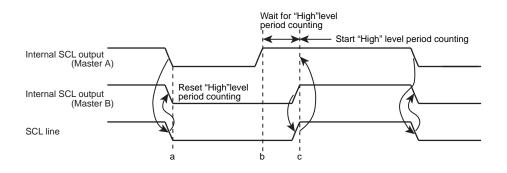



At the point a, Master A pulls its internal SCL output to the "Low" level, bringing the SCL bus line to the "Low" level. Master B detects this transition, resets its "High" level period counter, and pulls its internal SCL output level to the "Low" level.

Master A completes counting of its "Low" level period at the point b, and brings its internal SCL output to the "High" level. However, Master B still keeps the SCL bus line at the "Low" level, and Master A stops counting of its "High" level period counting. After Master A detects that Master B brings its internal SCL output to the "High" level and brings the SCL bus line to the "High" level at the point c, it starts counting of its "High" level period.

After that Master finishes counting the "High" level period, the Master pulls the SCL pin to "Low" and the SCL bus line becomes "Low".

This way, the clock on the bus is determined by the master with the shortest "High" level period and the master with the longest "Low" level period among those connected to the bus.

## 11.5.2 Setting the Acknowledgement Mode

Setting SBIxCR1<ACK> to "1" selects the acknowledge mode. When operating as a master, the SBI adds one clock for acknowledgment signal. In slave mode, the clock for acknowledgement signals is counted. In transmitter mode, the SBI releases the SDAx pin during clock cycle to receive acknowledgement signals from the receiver. In receiver mode, the SBI pulls the SDAx pin to the "Low" level during the clock cycle and generates acknowledgement signals. Also in slave mode, if a general-call address is received, the SBI pulls the SDAx pin to the "Low" level during the clock cycle and generates acknowledgement signals.

By setting <ACK> to "0", the non-acknowledgment mode is activated. When operating as a master, the SBI does not generate clock for acknowledgement signals. In slave mode, the clock for acknowledgement signals is counted.

## 11.5.3 Setting the Number of Bits per Transfer

SBIxCR1<BC[2:0]> specifies the number of bits of the next data to be transmitted or received.

Under the start condition,  $\langle BC[2:0] \rangle$  is set to "000", causing a slave address and the direction bit to be transferred in a packet of eight bits. At other times,  $\langle BC[2:0] \rangle$  keeps a previously programmed value.

# 11.5.4 Slave Addressing and Address Recognition Mode

Setting "0" to SBIxI2CAR<ALS> and a slave address in SBIxI2CAR<SA[6:0]> sets addressing format, and then the SBI recognizes a slave address transmitted by the master device and receives data in the addressing format.

If <ALS> is set to "1", the SBI does not recognize a slave address and receives data in the free data format. In the case of free data format, a slave address and a direction bit are not recognized; they are recognized as data immediately after generation of the start condition.

## 11.5.5 Operating mode

The setting of SBIxCR2<SBIM[1:0]> controls the operating mode. To operate in I2C mode, ensure that the serial bus interface pins are at "High" level before setting  $\langle SBIM[1:0] \rangle$  to "10". Also, ensure that the bus is free before switching the operating mode to the port mode.

## 11.5.6 Configuring the SBI as a Transmitter or a Receiver

Setting SBIxCR2<TRX> to "1" configures the SBI as a transmitter. Setting <TRX> to "0" configures the SBI as a receiver.

At the slave mode:

- when data is transmitted in the addressing format.
- when the received slave address matches the value specified at SBIxI2CAR.
- when a general-call address is received; i.e., the eight bits following the start condition are all zeros.

If the value of the direction bit  $(R/\overline{W})$  is "1",  $\langle TRX \rangle$  is set to "1" by the hardware. If the bit is "0",  $\langle TRX \rangle$  is set to "0".

As a master device, the SBI receives acknowledgement from a slave device. If the direction bit of "1" is transmitted, <TRX> is set to "0" by the hardware. If the direction bit is "0", <TRX> changes to "1". If the SBI does not receive acknowledgement, <TRX> retains the previous value.

<TRX> is cleared to "0" by the hardware when it detects the stop condition on the bus or the arbitration lost.

If SBI is used in free data format, <TRX> is not changed by the hardware.


# 11.5.7 Configuring the SBI as a Master or a Slave

Setting SBIxCR2<MST> to "1" configures the SBI to operate as a master device.

Setting  $\langle MST \rangle$  to "0" configures the SBI as a slave device.  $\langle MST \rangle$  is cleared to "0" by the hardware when it detects the stop condition on the bus or the arbitration lost.

# 11.5.8 Generating Start and Stop Conditions


When SBIxSR<BB> is "0", writing "1" to SBIxCR2<MST, TRX, BB, PIN> causes the SBI to start a sequence for generating the start condition and to output the slave address and the direction bit prospectively written in the data buffer register. <ACK> must be set to "1" in advance.





When <BB> is "1", writing "1" to <MST, TRX, PIN> and "0" to <BB> causes the SBI to start a sequence for generating the stop condition on the bus. The contents of <MST, TRX, BB, PIN> should not be altered until the stop condition appears on the bus.

If SCL bus line is pulled "Low" by other devices when the stop condition is generated, the stop condition is generated after the SCL line is released.



# Figure 11-6 Generating the Stop Condition

SBIxSR<BB> can be read to check the bus state. <BB> is set to "1" when the start condition is detected on the bus (the bus is busy), and cleared to "0" when the stop condition is detected (the bus is free).

## 11.5.9 Interrupt Service Request and Release

In master mode, a serial bus interface request (INTSBIx) is generated when the transfer of the number of clock cycles set by  $\langle BC \rangle$  and  $\langle ACK \rangle$  is completed.

In slave mode, INTSBIx is generated under the following conditions.

- After output of the acknowledge signal which is generated when the received slave address matches the slave address set to SBIxI2CAR<SA[6:0]>.
- After the acknowledge signal is generated when a general-call address is received.
- When the slave address matches or a data transfer is completed after receiving a general-call address.

In the address recognition mode (<ALS>= "0"), INTSBIx is generated when the received slave address matches the values specified at SBIxI2CAR or when a general-call (eight bits data following the start condition is all "0") is received.

When an interrupt request (INTSBIx) is generated, SBIxCR2<PIN> is cleared to "0". While <PIN> is cleared to "0", the SBI pulls the SCL line to the "Low" level.

<PIN> is set to "1" when data is written to or read from SBIxDBR. It takes a period of t<sub>LOW</sub> for the SCL line to be released after <PIN> is set to "1". When the program writes "1" to <PIN>, it is set to "1". However, writing "0" does not clear this bit to "0".

Note: When arbitration is lost in master mode, <PIN> is not cleared to "0" if the slave address does not match (INTSBIx is generated).

## 11.5.10 Arbitration Lost Detection Monitor

The I2C bus has the multi-master capability (there are two or more masters on a bus), and requires the bus arbitration procedure to ensure correct data transfer.

A master that attempts to generate the start condition while the bus is busy loses bus arbitration, with no start condition occurring on the SDA and SCL lines. The I2C-bus arbitration takes place on the SDA line.

The arbitration procedure for two masters on a bus is shown below.

Up until the point a, Master A and Master B output the same data. At the point a, Master A outputs the "Low" level and Master B outputs the "High" level.

Then Master A pulls the SDA bus line to the "Low" level because the line has the wired-AND connection. When the SCL line goes high at the point b, the slave device reads the SDA line data, i.e., data transmitted by Master A. At this time, data transmitted by Master B becomes invalid.

This condition of Master B is called "Arbitration Lost". Master B releases its SDA pin, so that it does not affect the data transfer initiated by another master. If two or more masters have transmitted exactly the same first data word, the arbitration procedure continues with the second data word.

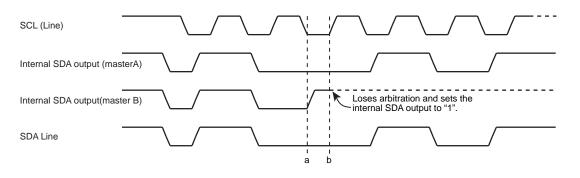


Figure 11-7 Lost Arbitration

A master compares the SDA bus line level and the internal SDA output level at the rising of the SCL line. If there is a difference between these two values, Arbitration Lost occurs and SBIxSR<AL> is set to "1".

When <AL> is set to "1", SBIxSR<MST, TRX> are cleared to "0", causing the SBI to operate as a slave receiver. Therefore, the serial bus interface circuit stops the clock output during data transfer after <AL> is set to "1".

<AL> is cleared to "0" when data is written to or read from SBIxDBR or data is written to SBIxCR2.

Anternal SCL output -		<u>_</u> 4
Internal SDA output	✓ D7A XD6A D5A /D4A XD3A XD2A XD1A XD0A / D7A' XD6A' XD5A' XD	04A'
MasterB		
InternalSDA output	D7B D6B Internal SDA output is fixed to "High"level . due to Arbitration Lost of Master B.	
<al></al>		
<mst></mst>		
<trx> Access to SBIxDBR or</trx>		
SBIxCR2		

Figure 11-8 Example of Master B Lost Arbitration (D7A = D7B, D6A = D6B)

## 11.5.11 Slave Address Match Detection Monitor

When the SBI operates as a slave device in the address recognition mode (SBIxI2CAR<ALS>="0"), SBIxSR<AAS> is set to "1" on receiving the general-call address or the slave address that matches the value specified at SBIxI2CAR.

When <ALS> is "1", <AAS> is set to "1" when the first data word has been received. <AAS> is cleared to "0" when data is written to or read from SBIxDBR.

## 11.5.12 General-call Detection Monitor

When the SBI operates as a slave device, SBIxSR<AD0> is set to "1" when it receives the general-call address; i.e., the eight bits following the start condition are all zeros.

<AD0> is cleared to "0" when the start or stop condition is detected on the bus.

## 11.5.13 Last Received Bit Monitor

SBIxSR<LRB> is set to the SDA line value that was read at the rising of the SCL line.

In the acknowledgment mode, reading SBIxSR<LRB> immediately after generation of the INTSBIx interrupt request causes ACK signal to be read.

## 11.5.14 Data Buffer Register (SBIxDBR)

Reading or writing SBIxDBR initiates reading received data or writing transmitted data.

When the SBI is acting as a master, setting a slave address and a direction bit to this register generates the start condition.

## 11.5.15 Baud Rate Register (SBIxBR0)

The SBIxBR0<I2SBI> register determines if the SBI operates or not when it enters the IDLE mode.

This register must be programmed before executing an instruction to switch to the standby mode.

## 11.5.16 Software Reset

If the serial bus interface circuit locks up due to external noise, it can be initialized by using a software reset.

Writing "10" followed by "01" to SBIxCR2<SWRST[1:0]> generates a reset signal that initializes the serial bus interface circuit. After a reset, all control registers and status flags are initialized to their reset values. When the serial bus interface is initialized, <SWRST> is automatically cleared to "0".

Note: A software reset causes the SBI operating mode to switch from the I2C mode to the port mode.

# 11.6 Data Transfer Procedure in the I2C Bus Model2C

## 11.6.1 Device Initialization

First, program SBIxCR1<ACK, SCK[2:0]>. Writing "000" to SBIxCR1<BC[2:0]> at the time.

Next, program SBIxI2CAR by specifying a slave address at  $\langle SA[6:0] \rangle$  and an address recognition mode at  $\langle ALS \rangle$ . ( $\langle ALS \rangle$  must be cleared to "0" when using the addressing format).

To configure the Serial Bus Interface as a slave receiver, ensure that the serial bus interface pin is at "High" first. Then write "0" to SBIxCR2<MST, TRX, BB>, "1" to <PIN>, "10" to <SBIM[1:0]> and "0" to the bit 1 and 0.

Note: Initialization of the serial bus interface circuit must be completed within a period that any device does not generate start condition after all devices connected to the bus were initialized. If this rule is not followed, data may not be received correctly because other devices may start transfer before the initialization of the serial bus interface circuit is completed.

		7	6	5	4	3	2	1	0	
SBIxCR1	←	0	0	0	Х	0	Х	Х	х	Specifies ACK and SCL clock.
SBIxI2CAR	←	Х	Х	Х	Х	Х	Х	Х	х	Specifies a slave address and an address recognition mode.
SBIxCR2	←	0	0	0	1	1	0	0	0	Configures the SBI as a slave receiver.

Note:X; Don't care

# 11.6.2 Generating the Start Condition and a Slave Address

#### 11.6.2.1 Master mode

In the master mode, the following steps are required to generate the start condition and a slave address.

First, ensure that the bus is free ( $\langle BB \rangle = "0"$ ). Then, write "1" to SBIxCR1 $\langle ACK \rangle$  to select the acknowledgment mode. Write to SBIxDBR a slave address and a direction bit to be transmitted.

When  $\langle BB \rangle = "0"$ , writing "1111" to SBIxCR2 $\langle MST, TRX, BB, PIN \rangle$  generates the start condition on the bus. Following the start condition, the SBI generates nine clocks from the SCL pin. The SBI outputs the slave address and the direction bit specified at SBIxDBR with the first eight clocks, and releases the SDA line in the ninth clock to receive an acknowledgment signal from the slave device.

The INTSBIx interrupt request is generated on the falling of the ninth clock, and <PIN> is cleared to "0". In the master mode, the SBI holds the SCL line at the "Low" level while <PIN> is = "0".<TRX> changes its value according to the transmitted direction bit at generation of the INTSBIx interrupt request, provided that an acknowledgment signal has been returned from the slave device.

Note: To output salve address, check with software that the bus is free before writing to SBIxDBR. If this rule is not followed, data being output on the bus may get ruined.

# TOSHIBA

#### Settings in main routine

			7	6	5	4	3	2	1	0	
_	Reg.	←	SB	IxSR							
ſ	Reg.	←	Re	g. e 0	x20						
	if Reg.	¥	0x0	00							Ensures that the bus is free.
	Then -										
	SBIxCR1	←	х	х	х	1	0	х	х	х	Selects the acknowledgement mode.
	SBIxDR1	←	х	х	х	х	Х	х	х	х	Specifies the desired slave address and direction.
	SBIxCR2	←	1	1	1	1	1	0	0	0	Generates the start condition.
		Exa	mple	of IN	TSBI	0 inter	rrupt r	outine	e		
			Cle	ears th	ne inte	errupt	reque	est.			
			Pro	cessi	ng						
			End	d of in	iterrup	ot					


#### 11.6.2.2 Slave mode

In the slave mode, the SBI receives the start condition and a slave address.

After receiving the start condition from the master device, the SBI receives a slave address and a direction bit from the master device during the first eight clocks on the SCL line.

If the received address matches its slave address specified at SBIxI2CAR or is equal to the general-call address, the SBI pulls the SDA line to the "Low" level during the ninth clock and outputs an acknowledgment signal.

The INTSBIx interrupt request is generated on the falling of the ninth clock, and <PIN> is cleared to "0". In the slave mode, the SBI holds the SCL line at the "Low" level while <PIN> is "0".

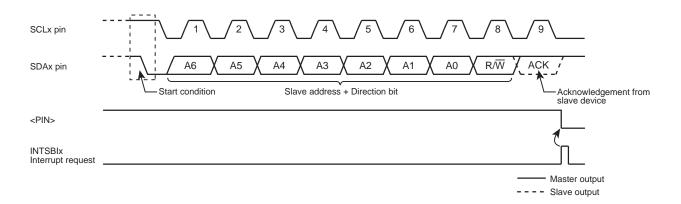



## 11.6.3 Transferring a Data Word

At the end of a data word transfer, the INTSBIx interrupt is generated to test <MST> to determine whether the SBI is in the master or slave mode.

#### 11.6.3.1 Master mode (<MST> = "1")

Test <TRX> to determine whether the SBI is configured as a transmitter or a receiver.

#### (1) Transmitter mode (<TRX> = "1")

Test <LRB>. If <LRB> is "1", that means the receiver requires no further data.

The master then generates the stop condition as described later to stop transmission.

If <LRB> is "0", that means the receiver requires further data. If the next data to be transmitted has eight bits, the data is written into SBIxDBR. If the data has different length, <BC[2:0]> and <ACK> are programmed and the transmit data is written into SBIxDBR. Writing the data makes <PIN> to "1", causing the SCL pin to generate a serial clock for transferring a next data word, and the SDA pin to transfer the data word.


After the transfer is completed, the INTSBIx interrupt request is generated, <PIN> is cleared to "0", and the SCL pin is pulled to the "Low" level.


To transmit more data words, test <LRB> again and repeat the above procedure.

#### INTSBIx interrupt

```
if MST = 0
Then go to the slave-mode processing.
if TRX = 0
Then go to the receiver-mode processing.
if LRB = 0
Then go to processing for generating the stop condition.
                                                                  Specifies the number of bits to be transmitted and
SBIxCR1
                   х
                       Х
                             ХХ
                                        0
                                             Х
                                                  Х
                                                       Х
                                                                  specify whether ACK is required.
SBIxDBR
                                                                  Writes the transmit data.
                   Х
                        Х
                             Х
                                   Х
                                        Х
                                             Х
                                                  Х
                                                       Х
End of interrupt processing.
```

Note: X; Don't care

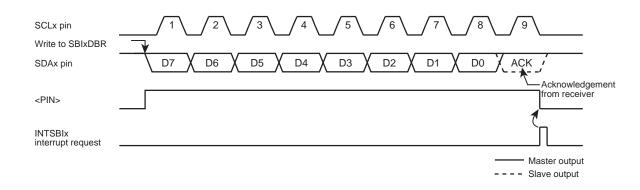




#### (2) Receiver mode (<TRX> = "0")

OSHIBA

If the next data to be transmitted has eight bits, the transmit data is written into SBIxDBR.

If the data has different length, <BC[2:0]> and <ACK> are programmed and the received data is read from SBIxDBR to release the SCL line. (The data read immediately after transmission of a slave address is undefined.)On reading the data, <PIN> is set to "1", and the serial clock is output to the SCL pin to transfer the next data word.In the last bit, when the acknowledgment signal becomes the "Low" level, "0" is output to the SDA pin.

After that, the INTSBIx interrupt request is generated, and <PIN> is cleared to "0", pulling the SCL pin to the "Low" level.Each time the received data is read from SBIxDBR, one-word transfer clock and an acknowledgement signal are output.

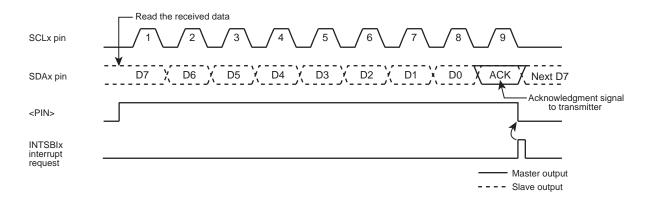

# Figure 11-11 <BC[2:0]>= "000", <ACK>= "1" (Receiver Mode)


To terminate the data transmission from the transmitter, <ACK> must be cleared to "0" immediately before reading the data word second to last.


This disables generation of an acknowledgment clock for the last data word.

When the transfer is completed, an interrupt request is generated. After the interrupt processing, <BC [2:0]> must be set to "001" and the data must be read so that a clock is generated for 1-bit transfer.

At this time, the master receiver holds the SDA bus line at the "High" level, which signals the end of transfer to the transmitter as an acknowledgment signal.

In the interrupt processing for terminating the reception of 1-bit data, the stop condition is generated to terminate the data transfer.

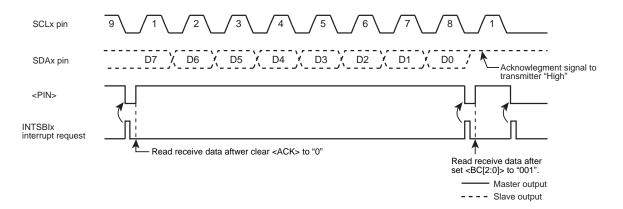



Example: When receiving N data word

INTSBIx interrupt (after data transmission) 3 0 6 5 4 2 1 Sets the number of bits of data to be received and SBIxCR1 Х Х Х Х Х Х 0 Х specify whether ACK is required. SBIxDBR Reads dummy data. Reg. End of interrupt INTSBIx interrupt (first to (N-2)th data reception) 7 6 5 4 3 2 1 0 SBIxDBR Reads the first to (N-2)th data words. Reg. End of interrupt INTSBIx interrupt ((N-1)th data reception) 0 6 5 4 3 2 1 SBIxCR1 х 0 Х х х Disables generation of acknowledgement clock. Х х 0 SBIxDBR Reads the (N-1)th data word. Reg. ← End of interrupt INTSBIx interrupt (Nth data reception) 7 6 5 4 3 2 1 0 SBIxCR1 0 0 0 0 х х х Disables generation of acknowledgement clock. 1 SBIxDBR Reads the Nth data word. Rea. ← End of interrupt INTSBlx interrupt (after completing data reception) Processing to generate the stop condition. Terminates the data transmission. End of interrupt

Note: X; Don't care

#### 11.6.3.2 Slave mode (<MST> = "0")

In the slave mode, the SBI generates the INTSBIx interrupt request on four occasions:

1) when the SBI has received any slave address from the master.

2) when the SBI has received a general-call address.

3) when the received slave address matches its address.

4) when a data transfer has been completed in response to a general-call.

Also, if the SBI detects Arbitration Lost in the master mode, it switches to the slave mode.

Upon the completion of data word transfer in which Arbitration Lost is detected, the INTSBIx interrupt request is generated, <PIN> is cleared to "0", and the SCL pin is pulled to the "Low" level.

When data is written to or read from SBIxDBR or when  $\langle PIN \rangle$  is set to "1", the SCLx pin is released after a period of  $t_{LOW}$ .

In the slave mode, the normal slave mode processing or the processing as a result of Arbitration Lost is carried out.

SBIxSR<AL>, <TRX>, <AAS> and <AD0> are tested to determine the processing required.

"Table 11-2 Processing in Slave Mode" shows the slave mode states and required processing.

Example: When the received slave address matches the SBI's own address and the direction bit is "1" in the slave receiver mode.

#### INTSBIx interrupt

if TRX = 0 Then go to other processing. if AL = 0Then go to other processing. if AAS = 0 Then go to other processing. SBIxCR1 ← Х Х Х 1 0 Х х Х Sets the number of bits to be transmitted. SBIxDBR х 0 х х х Sets the transmit data х х Х \_

Note: X; Don't care

<trx></trx>	<al></al>	<aas></aas>	<ad0></ad0>	State	Processing
	1	1	0	Arbitration Lost is detected while the slave address was being transmitted and the SBI received a slave address with the direction bit "1" transmitted by another master.	Set the number of bits in a data word to <bc[2:0]> and write the transmit data into SBIXDBR.</bc[2:0]>
1		1	0	In the slave receiver mode, the SBI received a slave address with the direction bit "1" transmitted by the master.	Write the transmit data into SBIXDBR.
	0	0	0	In the slave transmitter mode, the SBI has completed a transmission of one data word.	Test LRB. If it has been set to "1", that means the receiver does not require further data. Set $<$ PIN> to 1 and reset $<$ TRX> to 0 to release the bus. If $<$ LRB> has been reset to "0", that means the receiver requires further data. Set the number of bits in the data word to $<$ BC[2:0]> and write the transmit data to the SBIxDBR.
	1	1	1/0	Arbitration Lost is detected while a slave address is being transmitted, and the SBI receives either a slave address with the direction bit "0" or a general-call address transmitted by another master.	
0		0	0	Arbitration Lost is detected while a slave address or a data word is being transmitted, and the transfer is terminated.	Read the SBIxDBR (a dummy read) to set <pin> to 1, or write "1" to <pin>.</pin></pin>
	0	1	1/0	In the slave receiver mode, the SBI received either a slave address with the direction bit "0" or a general- call address transmitted by the master.	
		0	1/0	In the slave receiver mode, the SBI has completed a reception of a data word.	Set the number of bits in the data word to <bc[2:0].> and read the received data from SBIxDBR.</bc[2:0].>

## 11.6.4 Generating the Stop Condition

When SBIxSR<BB> is "1", writing "1" to SBIxCR2<MST, TRX, PIN> and "0" to <BB> causes the SBI to start a sequence for generating the stop condition on the bus.

Do not alter the contents of <MST, TRX, BB, PIN> until the stop condition appears on the bus.

If another device is holding down the SCL bus line, the SBI waits until the SCL line is released.

After that, the SDA pin goes "High", causing the stop condition to be generated.

 7
 6
 5
 4
 3
 2
 1
 0

 SBIxCR2
 ←
 1
 1
 0
 0
 0
 Generates the stop condition.

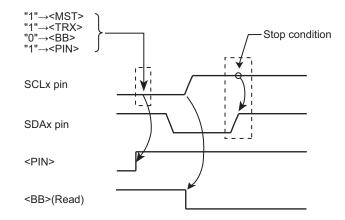


Figure 11-13 Generating the Stop Condition

#### 11.6.5 Restart Procedure

Restart is used when a master device changes the data transfer direction without terminating the transfer to a slave device. The procedure of generating a restart in the master mode is described below.

First, write SBIxCR2<MST, TRX, BB> to "0" and write "1" to <PIN> to release the bus. At this time, the SDAx pin is held at the "High" level and the SCLx pin is released. Because no stop condition is generated on the bus, other devices recognize that the bus is busy.

Then, test SBIxSR<BB> and wait until it becomes "0" to ensure that the SCLx pin is released.


Next, test <LRB> and wait until it becomes "1" to ensure that no other device is pulling the SCLx bus line to the "Low" level.

Once the bus is determined to be free by following the above procedures, follow the procedures described in "11.6.2 Generating the Start Condition and a Slave Address" to generate the start condition.

To satisfy the setup time of restart, at least  $4.7\mu$ s wait period (in the standard mode) must be created by the software after the bus is determined to be free.

```
Note 1: Do not write <MST> to "0" when it is "0". (Restart cannot be initiated.)
```

Note 2: When the master device is acting as a receiver, data transmission from the slave device which serves as a transmitter must be completed before generating a restart. To complete data transfer, slave device must receive a "High" level acknowledge signal. For this reason, <LBR> before generating a restart becomes "1", the rising edge of the SCL line is not detected even <LBR>= "1" is confirmed by following the restart procedure. To check the status of the SCL line, read the port.

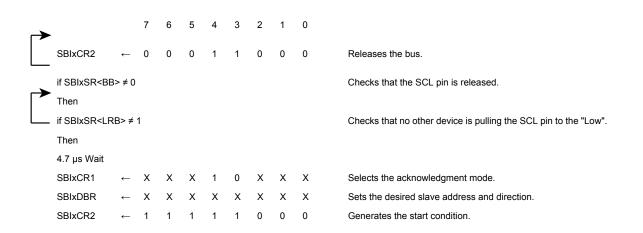

Note:X; Don't care

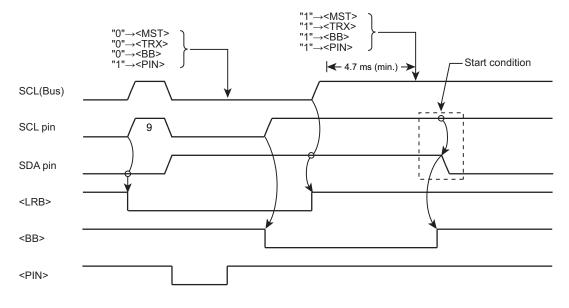


Figure 11-14 Timing Chart of Generating a Restart

# 11.7 Control register of SIO mode

The following registers control the serial bus interface in the clock-synchronous 8-bit SIO mode and provide its status information for monitoring.

# 11.7.1 SBIxCR0(control register 0)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	SBIEN	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	SBIEN	R/W	Serial bus interface operation. 0:Disable 1: Enable Enable this bit before using the serial bus interface. If this bit is disabled, power consumption can be reduced because all clocks except SBIxCR0 stop.
6-0	-	R	If the serial bus interface operation is enabled and then disabled, the settings will be maintained in each register. Read as 0.

#### 11.7 Control register of SIO mode

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	SIOS	SIOINH	SIOM		-	SCK		
After reset	0	0	0	0	1	0	0	0(Note 1)

# 11.7.2 SBIxCR1(Control register 1)

Bit	Bit Symbol	Туре	Function					
31-8	-	R	Read as 0.					
7	SIOS	R/W	Transfer Start/Stop 0: Stop 1: Start					
6	SIOINH	R/W	ransfer : Continue : Forced termination					
5-4	SIOM[1:0]	R/W	Select transfer mode 00: Transmit mode 01: Reserved 10:Transmit/receive mode 11:Receive mode					
3	-	R	Read as 1.					
2-0	SCK[2:0]	R/W	On writing <sck[2:0]>: Select serial clock frequency. (Note 1)</sck[2:0]>					
			$ \begin{array}{ c c c c c c } \hline 000 & n = 3 & 2.5 \text{ MHz} \\ \hline 001 & n = 4 & 1.25 \text{ MHz} \\ \hline 010 & n = 5 & 625 \text{ kHz} \\ \hline 011 & n = 6 & 313 \text{ kHz} \\ \hline 100 & n = 7 & 156 \text{ kHz} \\ \hline 101 & n = 8 & 78 \text{ kHz} \\ \hline 110 & n = 9 & 39 \text{ kHz} \end{array} \right\} \begin{array}{ c c c } \hline \text{System clock: fsys} \\ \hline \text{Clock gear: fc/1} \\ \hline \text{Frequency} = \frac{\text{fsys/2}}{2^n} & [\text{Hz}] \end{array} \right) $					
			111 – External clock					

- Note 1: After a reset, the <SCK[0]> bit is read as "1". However, if the SIO mode is selected at the SBIxCR2 register, the initial value is read as "0". In this document, the value written in the column "after reset" is the value after setting the SIO mode in the initial state. The descriptions of the SBIxCR2 register and the SBIxSR register are the same.
- Note 2: Set <SIOS> to "0" and <SIOINH> to "1" before programming the transfer mode and the serial clock.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol				D	В			
After reset	0	0	0	0	0	0	0	0

# 11.7.3 SBIxDBR (Data buffer register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	DB[7:0]	R	Receive data
		W	Transmit data

Note 1: The transmission data must be written in to the register from the MSB (bit 7). The received data is stored in the LSB.

Note 2: Since SBIxI2CAR has independent buffers for writing and reading, a written data cannot be read. Thus, readmodify-write instructions, such as bit manipulation, cannot be used.

#### 11.7 Control register of SIO mode

# 11.7.4 SBIxCR2(Control register 2)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	SE	SBIM -		-
After reset	1(Note 1)	1(Note 1)	1(Note 1)	1(Note 1)	0	0	1(Note 1)	1(Note 1)

This register serves as SBIxSR register by writing to it.

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as "0".
7-4	-	R	Read as 1. (Note 1)
3-2	SBIM[1:0]	w	Select serial bus interface operating mode (Note 2) 00: Port mode 01: SIO mode 10: I2Cbus mode 11: Reserved
1-0	-	R	Read as 1. (Note 1)

Note 1: In this document, the value written in the column "after reset" is the value after setting the SIO mode in the initial state.

Note 2: Make sure that modes are not changed during a communication session.

# TOSHIBA

# 11.7.5 SBIxSR (Status Register)

This register serves as SBIxCR2 by writing to it.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	SIOF	SEF	-	-
After reset	1(Note 1)	1(Note 1)	1(Note 1)	1(Note 1)	0	0	1(Note 1)	1(Note 1)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-4	-	R	Read as 1.(Note 1)
3	SIOF	R	Serial transfer status monitor. 0: Completed 1: In progress
2	SEF	R	Shift operation status monitor 0: Completed. 1: In progress
1-0	-	R	Read as 1. (Note 1)

Note: In this document, the value written in the column "after reset" is the value after setting the SIO mode in the initial state.

#### 11.7 Control register of SIO mode

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	I2SBI	-	-	-	-	-	-
After reset	1	0	1	1	1	1	1	0

# 11.7.6 SBIxBR0 (Baud rate register 0)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	-	R	Read as 1.
6	I2SBI	R/W	Operation in IDLE mode. 0: Stop 1: Operate
5-1	-	R	Read as 1.
0	-	R/W	Make sure to write "0".

# 11.8 Control in SIO mode

## 11.8.1 Serial Clock

#### 11.8.1.1 Clock source

Internal or external clocks can be selected by programming SBIxCR1<SCK[2:0]>.

#### (1) Internal clocks

In the internal clock mode, one of the seven frequencies can be selected as a serial clock, which is output to the outside through the SCKx pin.

At the beginning of a transfer, the SCKx pin output becomes the "High" level.

If the program cannot keep up with this serial clock rate in writing the transmit data or reading the received data, the SBI automatically enters a wait period. During this period, the serial clock is stopped automatically and the next shift operation is suspended until the processing is completed.


Autor	natic wait ──►
SCKx pin output 1 2 3 7 8	
SOx pin output $a_0 \chi_{a_1} \chi_{a_2} a_5 \chi_{a_6} \chi_{a_7}$	<u></u>
Write the a	

Figure 11-15 Automatic Wait

#### (2) External clock (<SCK[2:0]> = "111")

The SBI uses an external clock supplied from the outside to the SCKx pin as a serial clock.

For proper shift operations, the serial clock at the "High" and "Low" levels must have the pulse widths as shown below.



 $f_{SCKL}, f_{SCKH} > 4/fsys$ 

# Figure 11-16 Maximum Transfer Frequency of External Clock Input

#### 11.8.1.2 Shift Edge


Leading-edge shift is used in transmission. Trailing-edge shift is used in reception.


- Leading-edge shift

Data is shifted at the leading edge of the serial clock (or the falling edge of the SCKx pin input/ output).

- Trailing-edge shift

Data is shifted at the trailing edge of the serial clock (or the rising edge of the SCKx pin input/ output).

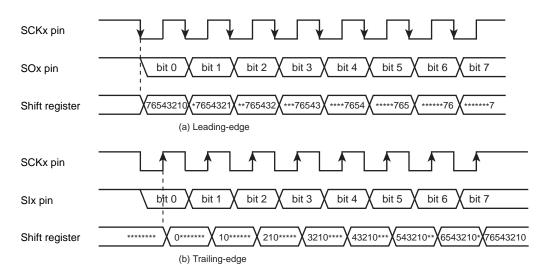



### 11.8.2 Transfer Modes

The transmit mode, the receive mode or the transmit/receive mode can be selected by programming SBIxCR1<SIOM[1:0]>.

### 11.8.2.1 8-bit transmit mode

Set the control register to the transmit mode and write the transmit data to SBIxDBR.

After writing the transmit data, writing "1" to SBIxCR1<SIOS> starts the transmission. The transmit data is moved from SBIxDBR to a shift register and output to the SO pin, with the least-significant bit (LSB) first, in synchronization with the serial clock. Once the transmit data is transferred to the shift register, SBIxDBR becomes empty, and the INTSBIx (buffer-empty) interrupt is generated, requesting the next transmit data.

In the internal clock mode, the serial clock will be stopped and automatically enter the wait state, if next data is not loaded after the 8-bit data has been fully transmitted. The wait state will be cleared when SBIxDBR is loaded with the next transmit data.


In the external clock mode, SBIxDBR must be loaded with data before the next data shift operation is started. Therefore, the data transfer rate varies depending on the maximum latency between when the interrupt request is generated and when SBIxDBR is loaded with data in the interrupt service program.

At the beginning of transmission, the same value as in the last bit of the previously transmitted data is output in a period from setting SBIxSR<SIOF> to "1" to the falling edge of SCK.

Transmission can be terminated by clearing <SIOS> to "0" or setting <SIOINH> to "1" in the INTSBIx interrupt service program. If <SIOS> is cleared, remaining data is output before transmission ends. The program checks SBIxSR<SIOF> to determine whether transmission has come to an end. <SIOF> is cleared to "0" at the end of transmission. If <SIOINH> is set to "1", the transmission is aborted immediately and <SIOF> is cleared to "0".


When in the external clock mode, <SIOS> must be cleared to "0" before next data shifting. If <SIOS> does not be cleared to "0" before next data shifting, SBI output dummy data and stopped.

		7	6	5	4	3	2	1	0	
SBIxCR1	←	0	1	0	0	0	х	х	х	Selects the transmit mode.
SBIxDBR	←	х	Х	х	Х	Х	х	Х	х	Writes the transmit data.
SBIxCR1	←	1	0	0	0	0	Х	Х	Х	Starts transmission.
INTSBIx in	terru	pt								
SBIxDBR	<i>←</i>	х	х	х	х	х	х	х	х	Writes the transmit data.

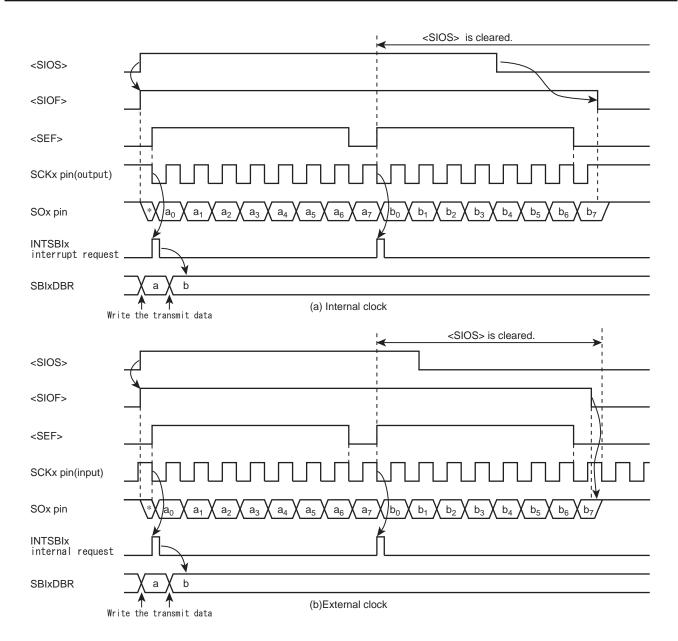



Example: Example of programming (external clock) to terminate transmission by <SIO>

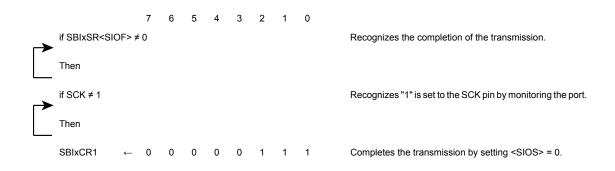


### 11.8.2.2 8-bit receive mode


Set the control register to the receive mode. Then writing "1" to SBIxCR1<SIOS> enables reception.Data is taken into the shift register from the SI pin, with the least-significant bit (LSB) first, in synchronization with the serial clock. Once the shift register is loaded with the 8-bit data, it transfers the received data to SBIxDBR and the INTSBIx (buffer-full) interrupt request is generated to request reading the received data. The interrupt service program then reads the received data from SBIxDBR.

In the internal clock mode, the serial clock will be stopped and automatically be in the wait state until the received data is read from SBIxDBR.

In the external clock mode, shift operations are executed in synchronization with the external clock. The maximum data transfer rate varies, depending on the maximum latency between generating the interrupt request and reading the received data

Reception can be terminated by clearing  $\langle SIOS \rangle$  to "0" or setting  $\langle SIOINH \rangle$  to "1" in the INTSBIx interrupt service program. If  $\langle SIOS \rangle$  is cleared, reception continues until all the bits of received data are written to SBIxDBR. The program checks SBIxSR $\langle SIOF \rangle$  to determine whether reception has come to an end. $\langle SIOF \rangle$  is cleared to "0" at the end of reception. After confirming the completion of the reception, last received data is read. If  $\langle SIOINH \rangle$  is set to "1", the reception is aborted immediately and  $\langle SIOF \rangle$  is cleared to "0". (The received data becomes invalid, and there is no need to read it out.)



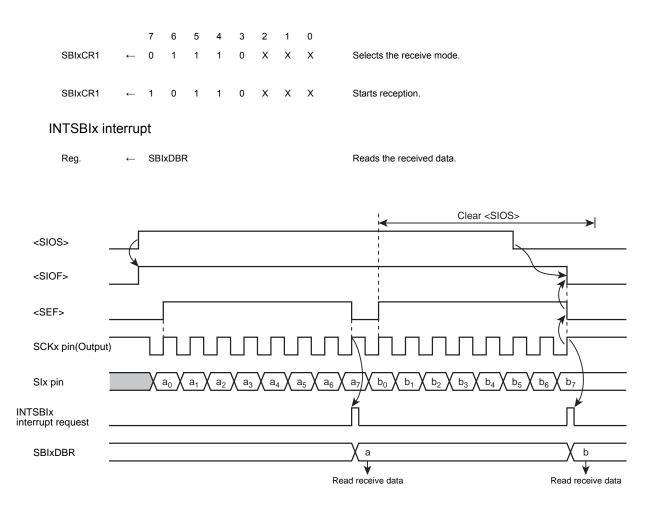

### Figure 11-19 Receive Mode (Example: Internal Clock)

### 11.8.2.3 8-bit transmit/receive mode


Set the control register to the transfer/receive mode. Then writing the transmit data to SBIxDBR and setting SBIxCR1<SIOS> to "1" enables transmission and reception. The transmit data is output through the SOx pin at the falling of the serial clock, and the received data is taken in through the SI pin at the rising of the serial clock, with the least-significant bit (LSB) first. Once the shift register is loaded with the 8-bit data, it transfers the received data to SBIxDBR and the INTSBIx interrupt request is generated. The interrupt service program reads the received data from the data buffer register and writes the next transmit data. Because SBIxDBR is shared between transmit and receive operations, the received data must be read before the next transmit data is written.


In the internal clock operation, the serial clock will be automatically in the wait state until the received data is read and the next transmit data is written.

In the external clock mode, shift operations are executed in synchronization with the external serial clock. Therefore, the received data must be read and the next transmit data must be written before the next shift operation is started. The maximum data transfer rate for the external clock operation varies depending on the maximum latency between when the interrupt request is generated and when the transmit data is written.

At the beginning of transmission, the same value as in the last bit of the previously transmitted data is output in a period from setting <SIOF> to "1" to the falling edge of SCK.

Transmission and reception can be terminated by clearing <SIOS> to "0" or setting SBIxCR1<SIOINH> to "1" in the INTSBIx interrupt service program. If <SIOS> is cleared, transmission and reception continue until the received data is fully transferred to SBIxDBR. The program checks SBIxSR<SIOF> to determine whether transmission and reception have come to an end. <SIOF> is cleared to "0" at the end of transmission and reception.If <SIOINH> is set to "1", the transmission and reception is aborted immediately and <SIOF> is cleared to "0".



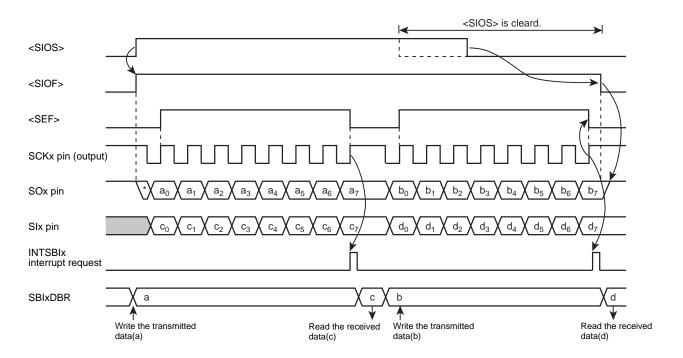



		7	6	5	4	3	2	1	0	
SBIxCR1	←	0	1	1	0	0	Х	Х	Х	Selects the transmit mode.
SBIxDBR	$\leftarrow$	х	Х	х	х	Х	Х	Х	Х	Writes the transmit data.
SBIxCR1	$\leftarrow$	1	0	1	0	0	Х	Х	Х	Starts reception/transmission.
INTSBIx int	terru	ot								
Reg.	←	SB	IxDBF	ł						Reads the received data.
SBIxDBR	←	Х	х	Х	Х	х	Х	х	х	Writes the transmit data.

### 11.8.2.4 Data retention time of the last bit at the end of transmission

Under the condition SBIxCR1<SIOS>= "0", the last bit of the transmitted data retains the data of SCK rising edge as shown below. Transmit mode and transmit/receive mode are the same.

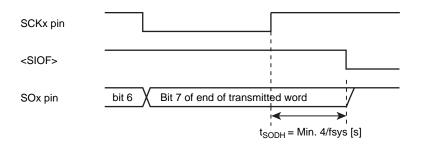


Figure 11-21 Data retention time of the last bit at the end of transmission

11. Serial Bus Interface (I2C/SIO)

### 11.8 Control in SIO mode

# TOSHIBA

# 12. Consumer Electronics Control (CEC)

### 12.1 Outline

This IP enables to transmit or receive data that conforms to Consumer Electronics Control (hereafter referred to as CEC) protocol.

This IP can operate conformably to HDMI 1.3a specifications.

### 12.1.1 Reception

Clock sampling at 32.768kHz

-Adjustable noise canceling time

• Data reception per 1byte

-Flexible data sampling point

-Data reception is available even when an address discrepancy is detected.

Error detection

-Cycle error (min./max.)

-ACK collision

-Waveform error

### 12.1.2 Transmission

• Data transmission per 1byte

-Triggered by auto-detection of bus free state

Flexible waveform

-Adjustable rising edge and cycle

• Error detection

-Arbitration lost

-ACK response error

### 12.1.3 Precautions

Be careful about the following in the receive operation.

Address condition	Setting of CECRCR1 <cecoth></cecoth>	Precautions
Logical address match	-	
Logical address disacre-	When data reception at logical address discrepancy is enabled. (CECRCR1 <cecoth> = "1")</cecoth>	If the initiator sends a new message beginning with the start bit without having sent the last block with EOM="1", a maximum cycle error is determined for the ACK bit and an interrupt is generated. Then, the receive operation is performed in the usual way.
pancy	When data reception at logical address discrepancy is disabled. (CECRCR1 <cecoth> = "0")</cecoth>	The initiator must send the last block of data with the EOM bit set to "1". If the last block is sent with EOM="0", the subsequent operation cannot be guaranteed.

### 12.2 Block Diagram

Figure 12-1 shows the Block Diagram of CEC

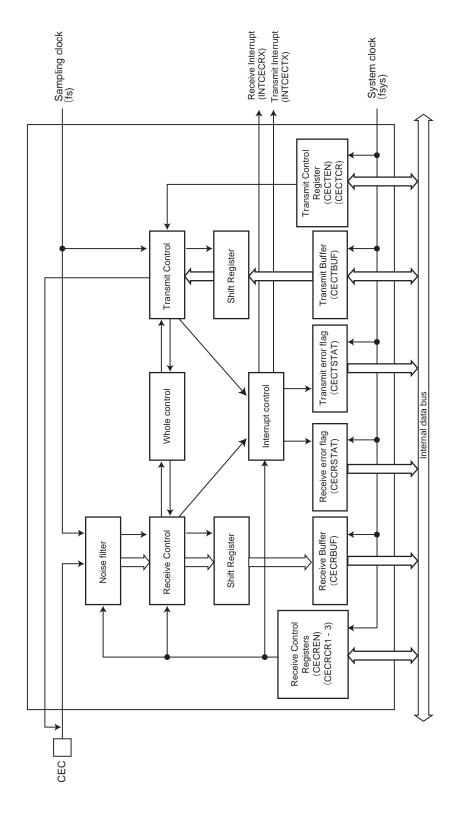


Figure 12-1 Block Diagram of CEC

# TOSHIBA

# 12.3 Registers

# 12.3.1 Register List

The control registers and address for CEC are as follows.

		Base Address = 0x4004_0300
Registers		Address (Base+)
CEC Enable Register	CECEN	0x0000
Logical Address Register	CECADD	0x0004
Software Reset Register	CECRESET	0x0008
Receive Enable Register	CECREN	0x000C
Receive Buffer Register	CECRBUF	0x0010
Receive Control Register 1	CECRCR1	0x0014
Receive Control Register 2	CECRCR2	0x0018
Receive Control Register 3	CECRCR3	0x001C
Transmit Enable Register	CECTEN	0x0020
Transmit Buffer Register	CECTBUF	0x0024
Transmit Control Register	CECTCR	0x0028
Receive Interrupt Status Register	CECRSTAT	0x002C
Transmit Interrupt Status Register	CECTSTAT	0x0030

### 12.3 Registers

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	I2CEC	CECEN
After reset	0	0	0	0	0	0	0	0

# 12.3.2 CECEN (CEC Enable Register)

Bit	Bit Symbol	Туре	Function
31-2	-	R	Read as 0.
1	I2CEC	R/W	CEC operation at IDLE.
			0 : Disabled
			1 : Enabled
			Controls the CEC operation at the IDLE mode.
			Set this bit to "1" when using CEC at the IDLE mode.
			The <i2cec> and <cecen> bits can be set simultaneously.</cecen></i2cec>
0	CECEN	R/W	CEC operation
			0 : Disabled
			1 : Enabled
			Specifies the CEC operation.
			Enable CEC before using.
			When the CEC operation is disabled, no clocks are supplied to the CEC module except for the CECEN
			register.
			Thus power consumption can be reduced.
			When CEC is disabled after it was enabled, each register setting is maintained.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol				CECAD	DD[15:8]			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol				CECA	DD[7:0]			
After reset	0	0	0	0	0	0	0	0

# 12.3.3 CECADD (Logical Address Register )

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-0	CECADD[15:0]	R/W	Logical address 15 to 0
			Specifies the logical address assigned to CEC.
			Multiple addresses can be set simultaneously since each bit corresponds with each address.

Note: A broadcast message is received regardless of the register setting. By allocating a logical address of a device to 15, logical "0" is sent as an ACK response to the broadcast message.

# 12.3.4 CECRESET (Software Reset Register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	CECRESET
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	FUnction
31-1	-	R	Read as 0
0	CECRESET	W	Software reset
			0: Disabled
			1: Enabled
			Stops all the CEC operation and initializes the register.
			Setting this bit to "1" affects as follows:
			Reception: Stops immediately. The received data is discarded.
			Transmission (including the CEC line): Stops immediately.
			Register: All the registers other than CECEN are initialized.
			Read as 0.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	CECREN
After reset	0	0	0	0	0	0	0	Undefined

### 12.3.5 CECREN (Receive Enable Register)

Bit	Bit Symbol	Туре	Function
31-1	-	R	Read as 0
0	CECREN	R/W	Reception control [Write] 0 : Disabled 1 : Enabled [Read] 0 : Stopped 1 : In operation Controls the reception operation of CEC. Writing "0" or "1" to this bit enables or disables data reception. This bit becomes ready for data reception by writing "1". The state of the reception circuit is monitored by reading this bit. It enables you to check if what you set has properly been reflected.

Note 1: Enable the <CECREN> bit after setting the CECRCR1, CECRCR2 and CECRCR3.

Note 2: It takes a little time to reflect the setting of the <CECREN> bit to the circuit. Stop transmission and reception before changing the settings or enabling the transmission and reception.

### 12.3.6 CECRBUF (Receive Buffer Register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	CECACK	CECEOM
After reset	0	0	0	0	0	0	0	0
After reset	0 7	0 6	0 5	0	0	0	0	
After reset bit symbol	-		-	4	-			0

Bit	Bit Symbol	Туре	Function
31-10	-	R	Read as 0.
9	CECACK	R	ACK bit
			Reads the received ACK bit.
8	CECEOM	R	EOM bit
			Reads the received EOM bit.
7-0	CECRBUF[7:0]	R	Received data
			Reads one byte of data received. The bit 7 is the MSB.

Note 1: Writing to this register is ignored.

Note 2: Read this register as soon as a receive interrupt is generated. The subsequent reading data may not be ensured.

# 12.3.7 CECRCR1 (Receive Control Register 1)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	CECACKDIS
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	CEC	HNC	-		CECLNC	
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-		CECMIN		-		CECMAX	
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-		CECDAT		CEC	ΤΟυΤ	CECRIHLD	CECOTH
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function			
31-25	-	R	Read as 0.			
24	CECACKDIS	R/W	Logical "0" as ACK response 0: send 1: not send			
			Specifies if logical "0" is sent or not as an ACK response to the data block when destination address corresponds with the address set in the logical address register.			
			(The header block sends logical "0" as an ACK response regardless of the bit setting when detecting the			
			addresses corresponding)			
23-22	-	R	Read as 0.			
21-20	CECHNC[1:0]	R/W	The number of "High" samplings for noise cancellation.         00:       None       (one time of fs clock observed.)         01:       1/fs       (two consecutive fs clocks observed.)         10:       2/fs       (three consecutive fs clocks observed.)         11:       3/fs       (four consecutive fs clocks observed.)         Specifies the time of the noise cancellation for each 1/fs when detecting "High".         It is considered as noise if "High"s of the same number as the specified cycles are not sampled.			
19	-	R	Read as 0.			
18-16	CECLNC[2:0]	R/W	The number of "Low" samplings for noise cancellation.         000:       None (one time of fs clock observed.)       100: - (Reserved)         001:       1/fs (two consecutive fs clocks observed)       101: - (Reserved)         010:       2/fs (three consecutive fs clocks observed)       110: - (Reserved)         011:       3/fs (four consecutive fs clocks observed.)       111: - (Reserved)         011:       3/fs (four consecutive fs clocks observed.)       111: - (Reserved)         Specifies the time of the noise cancellation for each 1/fs when detecting "Low".       It is considered as noise if "Low"s of the same number as the specified cycles are not sampled.			
15	-	R	Read as 0.			
14-12	CECMIN[2:0]	R/W	Time to identify as minimum cycle error $000:$ $67/fs$ (approx.2.045ms) $100:$ $67/fs - 1/fs$ $001:$ $67/fs + 1/fs$ $101:$ $67/fs - 2/fs$ $010:$ $67/fs + 2/fs$ $110:$ $67/fs - 3/fs$ $011:$ $67/fs + 3/fs$ $111:$ $67/fs - 4/fs$ Specifies the minimum time to identify a valid bit.Base time is $67/fs$ (approx.2.045) ms. Enables to specify it between the ranges $-4/fs$ to $+3/fs$ by the unit of $1/fs$ .An interrupt is generated and "Low" is output to CEC for approx. $3.63$ ms when one bit cycle is shorter than the specified time.			
11	-	R	Read as 0.			
10-8	CECMAX[2:0]	R/W	Time to identify as maximum cycle error         000:       90/fs (approx. 2.747ms)         100:       90/fs - 1/fs         001:       90/fs + 1/fs         010:       90/fs + 2/fs         010:       90/fs + 2/fs         011:       90/fs + 3/fs         011:       90/fs - 4/fs			

Bit	Bit Symbol	Туре	Function					
			Specifies the maximum time to identify as a valid bit. Base time is 90/fs (approx.2.747 ms). Enables to specify it between the ranges -4/fs to +3/fs by the unit of 1/ fs. An interrupt is generated when one bit cycle is longer than the specified time.					
7	-	R	Read as 0.					
6-4	CECDAT[2:0]	R/W	Point of determining the data as 0 or 1.					
			000: 34/fs (approx. 1.038ms) 100: 34/fs - 2/fs					
			001: 34/fs + 2/fs 101: 34/fs - 4/fs					
			010: 34/fs + 4/fs 110: 34/fs - 6/fs					
			011: 34/fs + 6/fs 111: Reserved					
			Specifies the point of determining the data as logical "0" or logical "1".					
			Base time is 34/fs (approx.1.038 ms). Enables to specify it within ±6/fs by the unit of 2/fs.					
3-2	CECTOUT[1:0]	R/W R/W	Cycle to identify timeout 00: 1 bit cycle 01: 2 bit cycle 10: 3 bit cycle 11: Reserved Specifies the time to determine a timeout. Enables to specify it between 1 bit and 3 bits for each bit cycle. This setting is used to detect a timeout occurs when the <cecrihld> bit is valid. Error interrupt suspend</cecrihld>					
			0: Not suspended 1: Suspended Specifies if a receive error interrupt (maximum cycle error, buffer overrun and waveform error) is suspended or not. Setting "1" generates no interrupt at the error detection. If data continues to an ACK bit, an ACK response is executed by a reversed logic. If the subsequent bits are interrupted, it is determined as a timeout, based on the setting in <cectout>. After the ACK response or the timeout determination, an interrupt is generated.</cectout>					
0	CECOTH	R/W	Data reception at logical address discrepancy 0: Not received 1: Received Specifies if data is received or not when destination address does not correspond with the address set in the CECADD register.					

- Note 1: The settings in <CECHNC>, <CECLNC> and <CECDAT> are also used in receiving an ACK response at transmission.
- Note 2: Changing the configurations during transmission or reception may harm its proper operation. Before the change, set the CECREN <CECREN> bit to disable the reception and read the <CECREN> bit and the CECTEN <CECTRANS> bit to ensure that the operation is stopped.
- Note 3: A broadcast message is received regardless of the <CECOTH> register setting.
- Note 4: <CECLNC> must be used under the same setting as CECTCR<CECDTRS>.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-		CECSWAV3		-		CECSWAV2	
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-		CECSWAV1		-		CECSWAV0	
After reset	0	0	0	0	0	0	0	0

### 12.3.8 CECRCR2 (Receive Control Register 2)

Bit	Bit Symbol	Туре		Function
31-15	-	R	Read as 0.	
14-12	CECSWAV3[2:0]	R/W	Max. cycle to detect start bit.	
			000: 154/fs (approx. 4.700 ms)	100: 154/fs + 4/fs
			001: 154/fs + 1/fs	101: 154/fs + 5/fs
			001: 154/fs + 2/fs	110: 154/fs + 6/fs
			011: 154/fs + 3/fs	111: 154/fs + 7/fs
11	-	R	Read as 0.	
10-8	CECSWAV2[2:0]	R/W	Min. cycle to detect start bit.	
			000: 141/fs (approx. 4.303 ms)	100: 141/fs – 4/fs
			001: 141/fs - 1/fs	101: 141/fs - 5/fs
			001: 141/fs - 2/fs	110: 141/fs - 6/fs
			011: 141/fs - 3/fs	111: 141/fs - 7/fs
7	-	R	Read as 0.	
6-4	CECSWAV1[2:0]	R/W	Max. time of start bit rising timing.	
			000: 128/fs (approx. 3.906 ms)	100: 128/fs + 4/fs
			001: 128/fs + 1/fs	101: 128/fs + 5/fs
			001: 128/fs + 2/fs	110: 128/fs + 6/fs
			011: 128/fs + 3/fs	111: 128/fs + 7/fs
3	-	R	Read as 0.	
2-0	CECSWAV0[2:0]	R/W	Min. time of start bit rising timing.	
			000: 115/fs (approx. 3.510 ms)	100: 115/fs – 4/fs
			001: 115/fs - 1/fs	101: 115/fs - 5/fs
			001: 115/fs – 2/fs	110: 115/fs – 6/fs
			011: 115/fs - 3/fs	111: 115/fs – 7/fs

 <CECSWAV3>:/
 Specifies the cycles to detect a start bit.

 <CECSWAV2>:
 <CECSWAV3> is for the maximum cycles. Base time is 154/fs (approx.4.700 ms). Enables to specify it between the ranges 0 to +7/fs by the unit of 1/fs.

 <CECSWAV2>:
 <CECSWAV2> is for the minimum cycles. Base time is 141/fs (approx.4.303 ms). Enables to specify it between the ranges 0 to -7/fs by the unit of 1/fs.

 <CECSWAV1>:/
 Specifies the rising timing of a start bit in its detection.

 <CECSWAV0>:
 <CECSWAV1> is for the maximum time of the rising timing.Base time is 128/fs (approx.3.906 ms). Enables to specify it between the ranges 0 to +7/fs by the unit of 1/fs.

 <CECSWAV0>:
 <CECSWAV0> is for the minimum time of the rising timing. Base time is 115/fs (approx.3.510 ms). Enables to specify it between the ranges 0 to -7/fs by the unit of 1/fs.

#### 12.3 Registers

Note: Changing the configurations during reception may harm its proper operation. Before the change, set CECREN <CECREN> to disable the reception and read the <CECREN> bit to ensure that the operation is stopped.

# 12.3.9 CECRCR3 (Receive Control Register 3)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-		CECWAV3		-		CECWAV2	
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-		CECWAV1		-		CECWAV0	
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	CECWAVEN
After reset	0	0	0	0	0	0	0	0

31-23         -         R         Read as 0.           22-20         CECWAV3[2:0]         RW         The latest rising timing of logical "0" determined as proper waveform. 000: 56/fs (approx. 1.709 ms)         100: 56/fs + 4/fs 001: 56/fs + 5/fs           001: 56/fs + 1/fs         101: 56/fs + 1/fs         101: 56/fs + 5/fs           001: 56/fs + 2/fs         101: 56/fs + 5/fs           19         -         R           18-16         CECWAV2[2:0]         RW           18-16         CECWAV2[2:0]         RW           19         -         R           101: 36/fs + 3/fs         101: 56/fs + 4/fs           001: 43/fs - 1/fs         100: 43/fs - 4/fs           001: 43/fs - 1/fs         101: 43/fs - 4/fs           001: 43/fs - 1/fs         101: 43/fs - 4/fs           001: 43/fs - 1/fs         101: 43/fs - 5/fs           011: 43/fs - 3/fs         111: 43/fs - 5/fs           15         -         R           14-12         CECWAV1[2:0]         RW           The latest rising timing of logical "1" determined as proper waveform.           001: 26/fs + 1/fs         101: 26/fs + 4/fs           011: 26/fs + 2/fs         102: 26/fs + 4/fs           011: 26/fs + 3/fs         111: 26/fs + 5/fs           101         - </th <th>Bit</th> <th>Bit Symbol</th> <th>Туре</th> <th></th> <th>Function</th>	Bit	Bit Symbol	Туре		Function
$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	31-23	-	R	Read as 0.	
$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$	22-20	CECWAV3[2:0]	R/W	The latest rising timing of logical "0" det	ermined as proper waveform.
Image: solution of the solutical to the one defined and generates waveform error interv				000: 56/fs (approx. 1.709 ms)	100: 56/fs + 4/fs
Image: space of the state is space of the state is space of the space of				001: 56/fs + 1/fs	101: 56/fs + 5/fs
19         -         R         Read as 0.           18-16         CECWAV2[2:0]         R/W         The fastest rising timing of logical "0" determined as proper. 000: 43/fs = 4/fs 001: 43/fs = 5/fs 011: 43/fs = 5/fs           00: 43/fs         101: 43/fs = 5/fs 010: 43/fs = 2/fs         101: 43/fs = 5/fs 011: 43/fs = 6/fs           15         -         R         Read as 0.           14-12         CECWAV1[2:0]         R/W         The latest rising timing of logical "1" determined as proper waveform. 000: 26/fs (approx. 0.793 ms)           101: 26/fs + 1/fs         101: 26/fs + 1/fs         101: 26/fs + 4/fs           001: 26/fs + 4/fs         011: 26/fs + 1/fs         101: 26/fs + 4/fs           001: 26/fs + 1/fs         101: 26/fs + 1/fs         101: 26/fs + 4/fs           001: 26/fs + 1/fs         111: 26/fs + 5/fs         101: 26/fs + 1/fs           11         -         R         Read as 0           11         -         R         Read as 0           10-8         CECWAV0[2:0]         R/W         The fastest rising timing of logical "1" determined as proper.           000: 13/fs (approx. 0.396 ms)         100: 13/fs - 4/fs         101: 13/fs - 5/fs           011: 13/fs - 1/fs         110: 13/fs - 5/fs         111: 13/fs - 5/fs           011: 13/fs - 3/fs         111: 13/fs - 7/fs         111: 13/fs - 7/f				001: 56/fs + 2/fs	110: 56/fs + 6/fs
18-16CECWAV2[2:0]R/WThe fastest rising timing of logical "0" deterrmined as proper. 000: 43/fs - 4/fs 001: 43/fs - 5/fs 011: 43/fs - 5/fs 011: 43/fs - 5/fs 011: 43/fs - 7/fs15-RRead as 0.14-12CECWAV1[2:0]R/WThe latest rising timing of logical "1" determined as proper waveform. 000: 26/fs (approx. 0.793 ms) 001: 26/fs + 4/fs 001: 26/fs + 4/fs 001: 26/fs + 5/fs 011: 26/fs + 7/fs11-RRead as 010.8CECWAV0[2:0]R/WThe fastest rising timing of logical "1" determined as proper. 001: 31/fs - 4/fs 011: 26/fs + 7/fs10.8CECWAV0[2:0]R/WThe fastest rising timing of logical "1" determined as proper. 000: 13/fs (approx. 0.396 ms) 001: 13/fs - 1/fs 011: 13/fs - 5/fs 011: 13/fs - 6/fs 011: 13/fs - 7/fs7.1-RRead as 0.0CECWAVENR/WWaveform error detection 1: Enable 0: Disable 				011: 56/fs + 3/fs	111: 56/fs + 7/fs
000: 43/fs (approx.1.312 ms)         100: 43/fs - 4/fs           001: 43/fs - 1/fs         101: 43/fs - 5/fs           010: 43/fs - 2/fs         110: 43/fs - 6/fs           011: 43/fs - 3/fs         111: 43/fs - 7/fs           15         -         R           14-12         CECWAV1[2:0]         R/W           The latest rising timing of logical "1" determined as proper waveform.           000: 26/fs (approx. 0.793 ms)         100: 26/fs + 4/fs           011: 26/fs + 1/fs         101: 26/fs + 5/fs           011: 26/fs + 1/fs         101: 26/fs + 5/fs           011: 26/fs + 3/fs         111: 26/fs + 5/fs           011: 26/fs + 3/fs         111: 26/fs + 7/fs           11         -         R           Read as 0         00: 13/fs (approx. 0.396 ms)         100: 13/fs - 4/fs           10-8         CECWAV0[2:0]         R/W         The fastest rising timing of logical "1" determined as proper.           000: 13/fs - 1/fs         101: 13/fs - 5/fs         101: 13/fs - 5/fs           011: 13/fs - 1/fs         101: 13/fs - 5/fs           011: 13/fs - 3/fs         111: 13/fs - 7/fs           7.1         -         R         Read as 0.           0         CECWAVEN         R/W         Waveform error detection           1: Enable </td <td>19</td> <td>-</td> <td>R</td> <td>Read as 0.</td> <td></td>	19	-	R	Read as 0.	
001: 43/fs - 1/fs         101: 43/fs - 5/fs           010: 43/fs - 2/fs         110: 43/fs - 6/fs           011: 43/fs - 3/fs         111: 43/fs - 6/fs           15         -         R           Read as 0.         R/W           14-12         CECWAV1[2:0]         R/W           00: 26/fs (approx. 0.793 ms)         100: 26/fs + 4/fs           001: 26/fs + 1/fs         101: 26/fs + 5/fs           011: 26/fs + 2/fs         110: 26/fs + 6/fs           011: 26/fs + 2/fs         110: 26/fs + 6/fs           011: 26/fs + 3/fs         111: 26/fs + 7/fs           11         -         R           Read as 0         111: 26/fs + 7/fs           10-8         CECWAV0[2:0]         R/W           The fastest rising timing of logical "1" determined as proper.           000: 13/fs (approx. 0.396 ms)         100: 13/fs - 4/fs           011: 13/fs - 1/fs         101: 13/fs - 5/fs           010: 13/fs - 1/fs         101: 13/fs - 5/fs           011: 13/fs - 3/fs         111: 13/fs - 7/fs           7-1         -         R           Read as 0.         0           0         CECWAVEN           R/W         Waveform error detection           1: Enable         0: Disable	18-16	CECWAV2[2:0]	R/W	The fastest rising timing of logical "0" de	eterrmined as proper.
$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$				000: 43/fs (approx.1.312 ms)	100: 43/fs – 4/fs
15-RRead as 0.14-12CECWAV1[2:0]R/WThe latest rising timing of logical "1" determined as proper waveform. 000: 26/fs (approx. 0.793 ms)100: 26/fs + 4/fs 101: 26/fs + 5/fs 011: 26/fs + 5/fs 011: 26/fs + 5/fs 011: 26/fs + 5/fs11-RRead as 010-8CECWAV0[2:0]R/WThe fastest rising timing of logical "1" determined as proper. 001: 26/fs + 2/fs 011: 26/fs + 3/fs10-8CECWAV0[2:0]R/WThe fastest rising timing of logical "1" determined as proper. 000: 13/fs (approx. 0.396 ms) 011: 13/fs - 5/fs 011: 13/fs - 5/fs7-1-RRead as 0.0CECWAVENR/WWaveform error detection 1: Enable 0: Disable Detects a received waveform does not identical to the one defined and generates waveform error interrut				001: 43/fs - 1/fs	101: 43/fs - 5/fs
15         -         R         Read as 0.           14-12         CECWAV1[2:0]         R/W         The latest rising timing of logical "1" determined as proper waveform. 000: 26/fs (approx. 0.793 ms)         100: 26/fs + 4/fs 001: 26/fs + 5/fs 001: 26/fs + 5/fs           01         26/fs + 1/fs         101: 26/fs + 5/fs 001: 26/fs + 2/fs         110: 26/fs + 6/fs           11         -         R         Read as 0         111: 26/fs + 7/fs           10-8         CECWAV0[2:0]         R/W         The fastest rising timing of logical "1" determined as proper. 000: 13/fs (approx. 0.396 ms)         100: 13/fs - 4/fs           10-8         CECWAV0[2:0]         R/W         The fastest rising timing of logical "1" determined as proper. 000: 13/fs - 1/fs         100: 13/fs - 4/fs           011: 13/fs - 1/fs         101: 13/fs - 1/fs         101: 13/fs - 5/fs         101: 13/fs - 5/fs           011: 13/fs - 2/fs         110: 13/fs - 7/fs         111: 13/fs - 7/fs           7-1         -         R         Read as 0.           0         CECWAVEN         R/W         Waveform error detection 1: Enable 0: Disable         1: Enable 0: Disable           0         Detects a received waveform does not identical to the one defined and generates waveform error interrunt         1: Enable				010: 43/fs – 2/fs	110: 43/fs - 6/fs
14-12         CECWAV1[2:0]         R/W         The latest rising timing of logical "1" determined as proper waveform. 000: 26/fs (approx. 0.793 ms)         100: 26/fs + 4/fs           101: 26/fs + 1/fs         101: 26/fs + 5/fs         001: 26/fs + 1/fs         101: 26/fs + 5/fs           101: 26/fs + 1/fs         101: 26/fs + 5/fs         001: 26/fs + 6/fs         011: 26/fs + 7/fs           11         -         R         Read as 0         111: 26/fs + 7/fs           10-8         CECWAV0[2:0]         R/W         The fastest rising timing of logical "1" determined as proper.           000: 13/fs (approx. 0.396 ms)         100: 13/fs - 4/fs         001: 13/fs - 5/fs           011: 13/fs - 1/fs         101: 13/fs - 5/fs         110: 13/fs - 5/fs           7-1         -         R         Read as 0.           0         CECWAVEN         R/W         Waveform error detection           11: 13/fs - 3/fs         111: 13/fs - 7/fs         111: 13/fs - 7/fs				011: 43/fs - 3/fs	111: 43/fs - 7/fs
$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	15	-	R	Read as 0.	
$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	14-12	CECWAV1[2:0]	R/W	The latest rising timing of logical "1" det	ermined as proper waveform.
$\begin{array}{ c c c c c c c c c c c c c c c c c c c$				000: 26/fs (approx. 0.793 ms)	100: 26/fs + 4/fs
011: 26/fs + 3/fs       111: 26/fs + 7/fs         11       -       R         10-8       CECWAV0[2:0]       R/W         The fastest rising timing of logical "1" determined as proper.       000: 13/fs - 4/fs         001: 13/fs - 1/fs       101: 13/fs - 5/fs         011: 13/fs - 2/fs       101: 13/fs - 6/fs         011: 13/fs - 3/fs       111: 13/fs - 7/fs         7-1       -       R         Read as 0.       R/W         0       CECWAVEN         R/W       Waveform error detection         1: Enable       0: Disable         Detects a received waveform does not identical to the one defined and generates waveform error interrunt.				001: 26/fs + 1/fs	101: 26/fs + 5/fs
11       -       R       Read as 0         10-8       CECWAV0[2:0]       R/W       The fastest rising timing of logical "1" determined as proper. 000: 13/fs - 4/fs         001: 13/fs - 1/fs       101: 13/fs - 4/fs         011: 13/fs - 1/fs       101: 13/fs - 5/fs         010: 13/fs - 2/fs       110: 13/fs - 6/fs         011: 13/fs - 3/fs       111: 13/fs - 7/fs         7-1       -       R         Read as 0.       R/W         0       CECWAVEN         R/W       Waveform error detection         1: Enable       0: Disable         Detects a received waveform does not identical to the one defined and generates waveform error interrunt.				001: 26/fs + 2/fs	110: 26/fs + 6/fs
10-8       CECWAV0[2:0]       R/W       The fastest rising timing of logical "1" determined as proper. 000: 13/fs (approx. 0.396 ms)       100: 13/fs - 4/fs         001: 13/fs - 1/fs       101: 13/fs - 5/fs       101: 13/fs - 5/fs         010: 13/fs - 2/fs       110: 13/fs - 6/fs         011: 13/fs - 3/fs       111: 13/fs - 7/fs         7-1       -       R         Read as 0.       R/W         0       CECWAVEN         R/W       Waveform error detection         1: Enable       0: Disable         Detects a received waveform does not identical to the one defined and generates waveform error interrunt.				011: 26/fs + 3/fs	111: 26/fs + 7/fs
000: 13/fs (approx. 0.396 ms)     100: 13/fs - 4/fs       001: 13/fs - 1/fs     101: 13/fs - 5/fs       010: 13/fs - 2/fs     110: 13/fs - 6/fs       011: 13/fs - 3/fs     111: 13/fs - 6/fs       7-1     -     R       Read as 0.     R/W       Waveform error detection       1: Enable       0: Disable       Detects a received waveform does not identical to the one defined and generates waveform error interrution.	11	-	R	Read as 0	
001: 13/fs - 1/fs       101: 13/fs - 5/fs         010: 13/fs - 2/fs       110: 13/fs - 6/fs         011: 13/fs - 3/fs       111: 13/fs - 7/fs         7-1       -       R         Read as 0.       R/W         Waveform error detection       1: Enable         0: Disable       Detects a received waveform does not identical to the one defined and generates waveform error interrute	10-8	CECWAV0[2:0]	R/W	The fastest rising timing of logical "1" de	etermined as proper.
010: 13/fs - 2/fs       110: 13/fs - 6/fs         011: 13/fs - 3/fs       111: 13/fs - 7/fs         7-1       -       R         Read as 0.       R/W         Vaveform error detection       1: Enable         0: Disable       Detects a received waveform does not identical to the one defined and generates waveform error interrunt				000: 13/fs (approx. 0.396 ms)	100: 13/fs – 4/fs
7-1       -       R       Read as 0.         0       CECWAVEN       R/W       Waveform error detection         1: Enable       0: Disable       Detects a received waveform does not identical to the one defined and generates waveform error interrunt.				001: 13/fs - 1/fs	101: 13/fs – 5/fs
7-1       -       R       Read as 0.         0       CECWAVEN       R/W       Waveform error detection         1: Enable       0: Disable       Detects a received waveform does not identical to the one defined and generates waveform error interrunt.				010: 13/fs – 2/fs	110: 13/fs - 6/fs
0       CECWAVEN       R/W       Waveform error detection         1: Enable       0: Disable         Detects a received waveform does not identical to the one defined and generates waveform error interrunt				011: 13/fs – 3/fs	111: 13/fs - 7/fs
1: Enable 0: Disable Detects a received waveform does not identical to the one defined and generates waveform error interru	7-1	-	R	Read as 0.	
0: Disable Detects a received waveform does not identical to the one defined and generates waveform error interru	0	CECWAVEN	R/W	Waveform error detection	
Detects a received waveform does not identical to the one defined and generates waveform error interru				1: Enable	
				0: Disable	
				Detects a received waveform does not i	dentical to the one defined and generates waveform error interrupt.
					<b>.</b> .
<cec wav3="">.</cec>					

<cecwav3>:</cecwav3>	· · · · · · · · · · · · · · · · · · ·
	By setting these bits, an error is detected if rising edge of the received waveform comes later than that of proper logical "0".
	Base time is 56/fs (approx. 1.709ms). Enables to specify it between the ranges 0 to +7/fs by the unit of 1/fs.
	The received waveform is considered to be an error if a rising edge is not detected from the start point of the bit to the value specified in <cecwav3>.</cecwav3>
<cecwav2>/</cecwav2>	This setting is enabled when the <cecwaven> bit is set to "1".</cecwaven>
<cecwav1>:</cecwav1>	By setting these bits, an error is detected if rising edge of the received waveform comes faster than logical "0" and later than that of proper logical "1".
	Base time for <cecwav1> bit is 26/fs (approx. 0.793ms). Enables to specify it between the ranges 0 to +7/fs by the unit of 1/ fs.</cecwav1>
	Base time for <cecwav2> bit is 43/fs (approx.1.312ms). Enables to specify it between the ranges 0 to -7/fs by the unit of 1/ fs.</cecwav2>
	If a rising edge is detected during <cecwav2> bit and <cecwav1> bit setting, an error occurs.</cecwav1></cecwav2>
<cecwav0>:</cecwav0>	This setting is enabled when the <cecwaven> bit is set to "1".</cecwaven>
	By setting these bits, an error is detected if rising edge of the received waveform comes faster than that of proper logical "1".
	Base time is 13/fs (approx. 0.396ms). Enables to specify it between the ranges 0 to -7/fs by the unit of 1/fs.
	The received waveform is considered to be an error if a rising edge is not detected from a start point of the bit to the value specified in <cecwav0>.</cecwav0>

Note: Changing the configurations during reception may harm its proper operation. Before the change, set CECREN <CECREN> to disable the reception and read the <CECREN> bit to ensure that the operation is stopped.

### 12.3.10 CECTEN (Transmit Enable Register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	CECTRANS	CECTEN
After reset	0	0	0	0	0	0	0	Undefined

Bit	Bit Symbol	Туре	Function
31-2	-	R	Read as 0.
1	CECTRANS	R	Transmission state 0: not in progress 1:in progress Indicates whether the transmission is in progress or not. It indicates "1" upon starting the transmission of the start bit. It indicates "0" if transmission is completed or an interrupt is generated. Writing to this bit is ignored.
0	CECTEN	W	Transmission control 0: Disable 1: Enable Controls the CEC transmission. Writing this bit enables or disables the transmission. Writing "1" to this bit initiates the transmission. This bit is automatically cleared by a transmit completion interrupt or an error interrupt.

Note 1: Set <CECTEN> after setting the CECTBUF and CECTCR register.

Note 2: Stop transmission and reception before changing the settings or enabling the transmission and reception.

# 12.3.11 CECTBUF (Transmit Buffer Register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	CECTEOM
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	CECTBUF							
	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-9	-	R	Read as 0.
8	CECTEOM	R/W	EOM bit
			Specifies the EOM bit to transmit.
7-0	CECTBUF[7:0]	R/W	Transmitted data
			Specifies a byte of data to transmit. The bit 7 is the MSB.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	CECSTRS			-	CECSPRD		
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-		CECDTRS			CECDPRD		
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	CECBRD CECFREE			FREE			
After reset	0	0	0	0	0	0	0	0

# 12.3.12 CECTCR (Transmit Control Register)

Bit	Bit Symbol	Туре		Function
31-23	-	R	Read as 0.	
22-20	CECSTRS[2:0]	R/W	Rising timing of start bit.	
			000: Base time	100: Base time- 4/fs
			001: Base time- 1/fs	101: Base time- 5/fs
			010: Base time- 2/fs	110: Base time- 6/fs
			011: Base time- 3/fs	111: Base time- 7/fs
			Specifies the rising timing of a start bit.	
			Base time is 121/fs (approx. 3.693 ms).	Enables to specify it between the ranges 0 to $-7/fs$ by the unit of 1/fs.
19	-	R	Read as 0.	
18-16	CECSPRD[2:0]	R/W	Start bit cycle	
			000: Base time	100: Base time- 4/fs
			001: Base time- 1/fs	101: Base time- 5/fs
			010: Base time- 2/fs	110: Base time- 6/fs
			011: Base time- 3/fs	111: Base time- 7/fs
			Specifies a cycle of a start bit.	
			Base time is 147/fs (approx. 4.486 ms).	Enables to specify it between the ranges 0 to $-7/fs$ by the unit of 1/fs.
15	-	R	Read as 0.	
14-12	CECDTRS[2:0]	R/W	Rising timing of data bit.	
			000: Base time	100: Reserved
			001: Base time- 1/fs	101: Reserved
			010: Base time- 2/fs	110: Reserved
			011: Base time- 3/fs	111: Reserved
			Specifies the rising timing of a data bit	
			Base time is 20/fs (approx. 0.610 ms, wh	nen logical "1") or 49/fs (approx. 1.495 ms, when logical "0"). Enables
			to specify it between the ranges 0 to $-3/$	fs by the unit of 1/fs.
11-8	CECDPRD[2:0]	R/W	Data bit cycle	
			0000: Base time	1000: Base time- 8/fs
			0001: Base time- 1/fs	1001: Base time- 9/fs
			0010: Base time- 2/fs	1010: Base time- 10/fs
			0011: Base time- 3/fs	1011: Base time- 11/fs
			0100: Base time- 4/fs	1100: Base time- 12/fs
			0101: Base time- 5/fs	1101: Base time- 13/fs
			0110: Base time- 6/fs	1110: Base time- 14/fs
			0111: Base time- 7/fs	1111: Base time- 15/fs
			Specifies a cycle of a data bit.	
			Base time is 79/fs (approx. 2.411 ms). E	nables to specify it between the ranges 0 to -15/fs by the unit of 1/fs.
7-5	-	R	Read as 0.	

Bit	Bit Symbol	Туре		Function			
4	CECBRD	R/W	Broadcast transmission				
			0: Not broadcast transmission				
			1: Broadcast transmission				
			Set this bit to "1" when transmitting a broadcast message.				
3-0	CECFREE[3:0]	R/W	Time of bus to be free				
			0000: 1bit cycle	1000: 9bit cycle			
			0001: 2bit cycle	1001: 10bit cycle			
			0010: 3bit cycle	1010: 11bit cycle			
			0011: 4bit cycle	1011: 12bit cycle			
			0100: 5bit cycle	1100: 13bit cycle			
			0101: 6bit cycle	1101: 14bit cycle			
			0110: 7bit cycle	1110: 15bit cycle			
			0111: 8bit cycle	1111: 16bit cycle			
			Specifies time of a bus to be free	that checked before transmission.			
			Start transmission after checking	the CEC line kept inactive during the specified cycles.			

Note: <CECDTRS> must be used under the same setting as CECRCR1<CECLNC>.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	CECRIWAV	CECRIOR	CECRIACK	CECRIMIN	CECRIMAX	CECRISTA	CECRIEND
After reset	0	0	0	0	0	0	0	0

# 12.3.13 CECRSTAT (Receive Interrupt Status Register)

Bit	Bit Symbol	Туре	Function
31-7	-	R	Read as 0.
6	CECRIWAV	R	Interrupt flag 0: No wave form error 1: Wave form error Indicates that waveform error is detected. The error occurs when waveform error detection is enabled in CECRCR3 <cecwaven>.</cecwaven>
5	CECRIOR	R	Interrupt flag 0: No receive buffer overrun 1:Receive buffer overrun Indicates the receive buffer receives next data before reading the data that had already been set.
4	CECRIACK	R	Interrupt flag 0: No ACK collision 1: ACK collision Indicates "0" is detected after the specified time to output ACK bit "0".
3	CECRIMIN	R	Interrupt flag 0: No minimum cycle error 1:Minimum cycle error Indicates one bit cycle is shorter than the minimum cycle error detection time specified in CECRCR1 <cecmin>.</cecmin>
2	CECRIMAX	R	Interrupt flag 0: No maximum cycle error 1: Maximum cycle error Indicates one bit cycle is longer than the maximum cycle error detection time specified in CECRCR1 <cecmax>.</cecmax>
1	CECRISTA	R	Interrupt flag 0: No start bit detection 1: Start bit detection Indicates a start bit is detected.
0	CECRIEND	R	Interrupt flag 0: Not one byte data reception completed 1: Completion of 1 byte data reception Indicates 1 byte of data reception is completed.

Note: Writing to this bit is ignored.

#### 12.3 Registers

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	CECTIUR	CECTIACK	CECTIAL	CECTIEND	CECTISTA
2110911201								

# 12.3.14 CECTSTAT (Transmit Interrupt Status Register)

Bit	Bit Symbol	Туре	Function		
31-5	-	R	Read as 0.		
4	CECTIUR	R	Interrupt flag 0: No transmit buffer underrun 1: Transmit buffer underrun Indicates next data has not set to the transmission buffer within a byte of data transmission.		
3	CECTIACK	R	Interrupt flag 0: No ACK error detection 1: ACK error detection Indicates one of the following conditions occurs. • When logical "0" is not detected in transmission to the specific address. • When logical "1" is not detected in transmission of a broadcast message.		
2	CECTIAL	R	Interrupt flag 0: No arbitration lost 1: Arbitration lost occurs Indicates "Low" is detected while outputting "High".		
1	CECTIEND	R	Interrupt flag 0: No data transmission completion 1: data transmission is completed Indicates data transmission including the EOM bit is completed.		
0	CECTISTA	R	Interrupt flag 0: No start transmission 1: Start transmission Indicates 1 byte of data transmission is started.		

Note: Writing to this bit is ignored.

### 12.4 Operations

### 12.4.1 Sampling clock

CEC lines are sampled by a 32.768kHz of low speed clock (fs).

### 12.4.2 Reception

### 12.4.2.1 Basic Operation

If a start bit is detected, a start bit interruption generates. By generating start bit interruption, CECR-STAT<CECRISTA> is set.


If one byte data, EOM bit and ACK bit are received, the received data is stored in CECRBUF register, and a received interruption generates. By generating the received interruption, CECRSTAT<CECRIEND> is set.

In the CECRBUF register, 8 bit data, EOM bit and ACK bit are stored. The ACK bit is not generated in the CEC circuit internally. This bit is generated from a observation of CEC signal same as other data.

After one data block is received, receiving operation continues until detecting the last block of data with EOM bit set to"1". Detecting the end of last block, CEC becomes the start bit waiting mode.

Detecting an error during data reception causes an error interrupt, and CEC waits for the next start bit. The received data is discarded.

Note: Be careful about the precautions of chapter 12.1.3 in the receive operation.



### 12.4.2.2 Preconfiguration

Before receiving data, reception settings to the Logical Address Register <CECADD>, the Receive Control Register 1 <CECRCR1>, the Receive Control Register 2 <CECRCR2> and the Receive Control Register 3 <CECRCR3> are required.

### (1) Logical Address Configuration

Configure logical address assigned to this product to the CECADD register. Multiple addresses can be set simultaneously since every bit in this register corresponds with each address.

Note: A broadcast message is received regardless of the CECADD register setting. By allocating a logical address of a device to 15, logical "0" is sent as an ACK response to the broadcast message.


### (2) Noise Cancellation Time

The noise cancellation time is configurable with the <CECHNC> and <CECLNC> bits of the CECRCR1 register. It is considered as noise if "High"or "Low"of the same number as the specified value are not sampled. You can configure the time to detect "High" and "Low" respectively.

A CEC line is monitored at each rising edge of a sampling clock. In the case that the CEC line is changed from "High" to "Low", the change is fully recognized if "Low"s of the same number as specified in the <CECLNC> bit are monitored. In the case that the CEC line is changed from "Low" to "High", the change is fully recognized if "High" of the same number as specified in the <CECHNC> bit are sampled.

Note: <CECLNC> must be used under the same setting as CECTCR<CECDTRS>.

The following illustrates the operation of a case that a noise cancelling is configured as <CECHNC [1:0]> = "10" (3 samplings) and <CECLNC[2:0]> = "011" (4 samplings). By cancelling the noise, a signal "1" shifts to "0" after "0" is sampled four times. The signal "0" shifts to "1" after "1" is sampled three times.

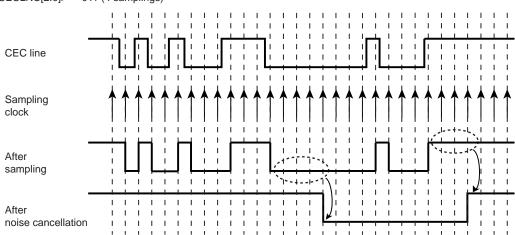

<CECHNC[1:0]> = 10 (3 samplings) <CECLNC[2:0]> = 011 (4 samplings)

### (3) Cycle error

Configure CECRCR1<CECMIN><CECMAX> bits to detect a cycle error.

A cycle error can be detected from each sampling clock cycle between the ranges -4/fs to +3/fs by the unit of 1/fs from the minimum value (67/fs, approx. 2.045ms) or the maximum value (90/fs approx. 2.747ms).


Detecting an error during data reception causes an error interrupt, and CEC waits for the next start bit. The received data is discarded.

### (4) Point of Determining Data

Configure the CECRCR1 <CECDAT> bit for the point of determining the data as "0" or "1".

Base time is 34/fs (approx.1.038ms) from the start point and also configurable  $\pm 6/fs$  by the unit of 2/ fs.

Data sampring timing that specification recommends

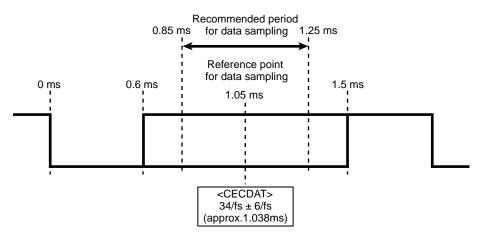

### (5) ACK Response

Configuring the CECRCR1 <CECACKDIS> bit enables you to specify if logical "0" is sent or not as an ACK response to the data block when destination address corresponds with the address set in the logical address register.

The header block sends logical "0" as an ACK response regardless of the bit setting when detecting the addresses corresponding.

The following lists the ACK responses.


"Yes" indicates that CEC outputs "0" as a response to the ACK signal from a transmission device (ACK bit: logical "0"). "No" indicates that CEC does not output "0" as a response to the ACK signal from a transmission device (ACK bit: logical "1").

D	aristar acting	Header blo	ock address	Data block address		
Ke	egister setting	Conformity	Discrepancy	Conformity	Discrepancy	
CECRCR1	"0" (responding logical "0")	Mar	N	Yes	No	
<cecackdis></cecackdis>	"1" (not responding logical "0")	Yes	No	No	No	

The following describes the ACK response timing.

When the falling edge of the ACK bit from the initiator is detected, this IP outputs "Low" for approximately 1.526 ms. The start time of outputting "Low" is specified with CECRCR1<CECLNC> bit that sets the noise cancelling time.

Note: <CECLNC> must be used under the same setting as CECTCR<CECDTRS>.

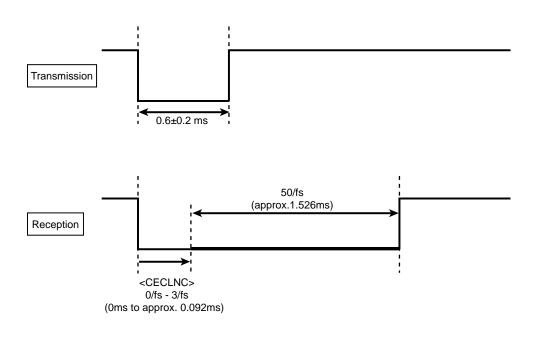

#### (6) Receive Error Interrupt Suspend

Configure the CECRCR1 <CECRIHLD> bit to specify if a receive error interrupt (maximum cycle error, buffer overrun and waveform error) is suspended or not. Setting "1" generates no interrupt at the error detection.

If data continues to the ACK bit, an ACK response is executed by a reversed logic. If the subsequent bits are interrupted, it is determined as a timeout, based on the setting in <CECTOUT> of the CECRCR1 register.

After the ACK response or the timeout determination, an interrupt is generated.

### (7) Cycles to Identify Timeout

Configure the CECRCR1<CECTOUT> bit to specify the time to determine a timeout.

This is used when the setting of a receive error interrupt suspension, which is specified in CECRCR1 <CECRIHLD>, is valid.

### (8) Data Reception at Logical Address Discrepancy

By setting CECRCR1 <CECOTH>, you can specify if data is received or not when destination address does not correspond with the address set in the CECADD register.

In this case, data is received as usual, and an interrupt is generated by detecting an error. However, an ACK response of neither the header block nor the data block is sent.

- Note 1: A broadcast message is received regardless of the <CECOTH> register setting.
- Note 2: If the initiator sends a new message beginning with the start bit without having sent the last block with EOM="1", a maximum cycle error is determined for the ACK bit and an interrupt is generated. Then, the receive operation is performed in the usual way.

#### (9) Start Bit Detection


Configuring the CECRCR2 register allows you to specify the rising timing and a cycle of the start bit detection respectively.

<CECSWAV0> is to specify the fastest start bit rising timing. <CECSWAV1> is to specify the latest start bit rising timing (1. in the figure shown below).

<CECSWAV2> is to specify the minimum cycle of a start bit. <CECSWAV3> is to specify the maximum cycle of a start bit (2. in the figure shown below).

If a rising edge during the period 1. and a falling edge during the period 2. are detected, the start bit is considered to be valid.

### Permissible value of signal transition timing on specification (Start bit)

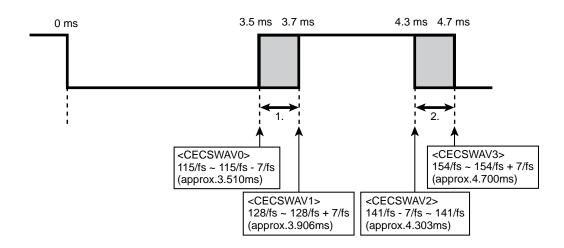


### (10) Waveform Error Detection

To detect an error when a received waveform is out of the defined tolerance range, configure the CECRCR3 register.

An error is detected when the <CECWAVEN> bit of the CECRCR3 register is enabled. You can specify the detection time in the <CECWAV0> <CECWAV1> <CECWAV2> <CECWAV3> bits.

If the rising edge is detected during the period 1. or 2. shown below, or not detected in the timing described in 3., a waveform error interrupt is generated.

- 1. A period between the beginning of a bit and the fastest logical "1" rising timing
- 2. A period between the latest logical "1" rising timing and the fastest logical "0" rising timing.
- 3. The latest logical "0" rising timing.

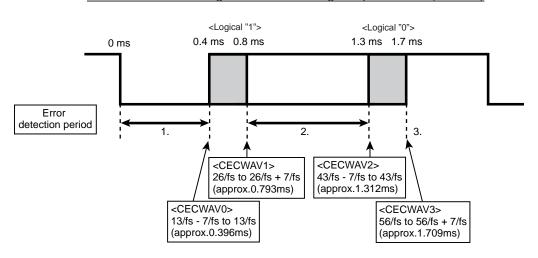

Permissible value of signal transition timing on specification (Data bit)

### 12.4.2.3 Enabling Reception

After configuring the CECADD, CECRCR1, CECRCR2 and CECRCR3 registers, CEC is ready for reception by enabling the CECREN <CECREN> bit. Detecting a start bit initiates the reception.

Note: Changing the configurations of the CECADD, CECRCR1, CECRCR2 and CECRCR3 registers during reception may harm its proper operation. Before the change of the registers shown below, set the CECREN <CECREN> bit to disable the reception and read the <CECREN> bit and the CECTEN <CECTRANS> bit to ensure that the operation is stopped.

Register name	Bit Symbol	Setting item		
CECADD	<cecadd[15:0]></cecadd[15:0]>	Logical address		
	<cechnc><ceclnc></ceclnc></cechnc>	Noise cancellation time		
CECRCR1	<cecmin><cecmax></cecmax></cecmin>	Time to identify cycle error		
0_01.01.11	<cecoth></cecoth>	Data reception at logical address discrep- ancy		
CECRCR2	<cecswav0><cecswav1> <cecswav2><cecswav3></cecswav3></cecswav2></cecswav1></cecswav0>	Start bit detection		
CECRCR3	<cecwav0><cecwav1> <cecwav2><cecwav3></cecwav3></cecwav2></cecwav1></cecwav0>	Waveform error detection (when enabled)		

#### 12.4.2.4 Detecting Error Interrupt

Detecting an error during data reception causes an error interrupt, and CEC waits for the next start bit. The received data is discarded.

It is possible to suspend a receive error interrupt (maximum cycle error, receive buffer overrun and waveform error), continue reception and send the reversed ACK response.

You can check the interrupt factor by monitoring the bit of the CECRSTAT register corresponding to the interrupt.

#### 12.4.2.5 Details of reception error

#### (1) Cycle error

Period between the falling edges of the two sequential bits is measured during reception. If the period does not comply with the specified minimum or maximum value, a cycle error interrupt is generated.

A setting of maximum cycle and minimum cycle time is specified by CECRCR1<CECMIN> and <CECMAX> bits. Maximum value is 90/fs (approx.2.747ms) and minimum value is 67/fs (approx. 2.045ms). It can be specified between the ranges -4/fs to +3/fs by the unit of 1/fs to detect cycle errors.

The CECRSTAT <CECRIMIN> bit or the <CECRIMAX> bit is set if a cycle error interrupt is generated.

The minimum cycle error causes CEC to output "Low" for approx. 3.63 ms.

Note 1: When minimum cycle error is detected, "Low" is output after "Low" detecting noise cancellation time.

Note 2: If the initiator sends a new message beginning with the start bit without having sent the last block with EOM="1", a maximum cycle error may be determined for the ACK bit. For detail, refer to the Chapter 12.1.3.

### (2) ACK Collision


At an ACK response, detecting "Low" after the specified period to output generates an ACK collision interrupt or a minimum cycle error interrupt.

The ACK collision interrupt sets the CECRSTAT <CECRIACK> bit. The minimum cycle error interrupt sets the CECRSTAT <CECRIMIN> bit.

The following describes the period and method of detection.

Detection starts approx. 0.3 ms after the end of the period of outputting "Low" and ends approx 2.0 ms from the starting point (the falling edge) of the ACK bit.

At 0.3 ms from the end of the period of outputting "Low", CEC checks if the CEC line is "0" or not. If it is "Low", an ACK collision interrupt is generated. If it is "High", and "Low" is detected during the detection period, the minimum cycle error interrupt is generated. The minimum cycle error causes CEC to output "Low" for approx. 3.63ms.

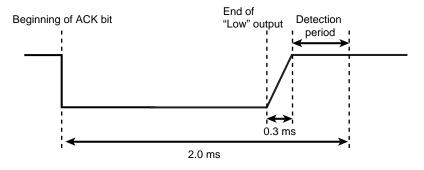

### (3) Receive Buffer Overrun

A receive buffer overrun interrupt is generated when the next data reception is completed before reading the data stored in the receive buffer.

The interrupt sets the CECRSTAT <CECRIOR> bit.

### (4) Waveform Error

A waveform error occurs when waveform error detection is enabled in CECRCR3.

Detecting a waveform, which does not identical to the defined, results in the waveform error. The interrupt is generated.

The interrupt sets the CECRSTAT <CECRIWAV> bit.

### (5) Suspending Receive Error Interrupt

You can specify if a maximum cycle error, a buffer overrun and a waveform error are suspended or not without generating an interrupt at error detection. This can be set in the CECRCR1 <CECRIHLD> bit. To enable the setting, a timeout setting with the CECRCR1 <CECTOUT> bit is required.

Under suspend-enable condition, if CEC keeps receiving the next bit and the entire reception including the ACK bit is completed, CEC generates an interrupt after a reversed ACK response is executed. "1" is set to the bits of the CECRSTAT register: the <CECRIEND> bit that indicates the reception completion, and the bits corresponding to the detected errors.

If the reception of the next bit is interrupted, CEC starts to measure the timeout period, and an interrupt is generated after the timeout. "1" is set to the bits of the CECRSTAT register corresponding to the detected error.

The timeout is measured from the end of the last bit received as is the case with wait time of a bus to be free in transmission.

The information that the interrupts are suspended is held until the EOM bit is received or the timeout occurs. Thus, an interrupt is generated in each reception of a byte of data if multiple bytes are received while interrupts are suspended. "1" is set to the bits of the CECRSTAT register: the <CECRIEND> bit that indicates the reception completion, and the bits corresponding to the detected errors. The flags of the suspended interrupts and the reception completion are set to the bits of the CECRSTAT register.

- Note 1: A minimum cycle error interrupt is generated upon detecting a minimum cycle error in the next received bit while interrupts are suspended. "Low" is output to CEC for approx. 3.63 ms. The flags of the suspended interrupts and the minimum cycle error are set to the bits of the CECRSTAT register.
- Note 2: If an interrupt other than a minimum cycle error interrupt is generated while interrupts are suspended, CEC continues reception until the ACK response or the timeout. All the flags of the detected interrupts are set to the bits of the CECRSTAT register.

### 12.4.2.6 Stopping Reception

Writing "0" to the CECREN <CECREN> bit disables data reception. The reception is stopped upon disabling the bit during reception. The received data is discarded.

Note: If the reception is disabled while "Low" is sent as a signal of minimum cycle error, the "Low" output is stopped as well.

### 12.4.3 Transmission

### 12.4.3.1 Basic Operation

In the transmission setting, CEC firstly confirms bus free wait state to check whether CEC falling edge signals is not existed for specified bit cycles and then sends a start bit. The confirmation of bus free wait is performed all the time. Thus once bus free wait condition is satisfied, a transmission will start soon when transmission setting is done.

After transmitting a start bit, CEC transmits one byte data and EOM data that are stored in the transmit buffer to the shift register. When the transmission of the first bit of the one byte data begins, transmission interrupt is generates, and CECTSTAT<CECTISTA> is set. After transmission interrupt generation, next one byte data is prepared to the transmit data buffer.

One byte data transmission completes in order of transmission of 8 bits data, EOM bit, ACK bit transmission and ACK bit response confirmation.


Data transmission continues until EOM is set to "1".

If EOM is set to "1", the end of transmission interrupt generates after confirmation of data, EOM, ACK bit transmission and ACK bit response. By the end of transmission interrupt generates, CECTSTAT<CEC-TIEND> is set.

Interrupt generation ends a series of transmission process, and CECTEN<CECTEN> is cleared.

If an error is generated during transmission, an error interrupt is generates to stop transmission.

Even if reception is enabled, no reception is executed during transmission.

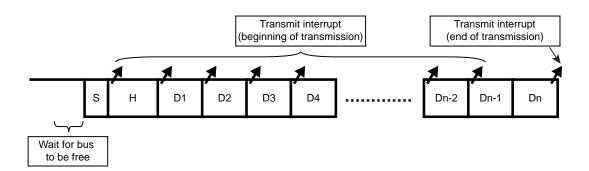


#### 12.4.3.2 Preconfiguration

Before transmitting data, transmission settings to the Transmit Control Register (CECTCR) and the Transmit Buffer Register (CECTBUF) are required.

#### (1) Bus Free Wait Time

Specify the bus free wait time in the CECTCR<CECFREE> bits. It can be specified in a range of 1 to 16 bit cycles.

Counting of the bus free wait time begins one bit cycle after the falling edge of the final bit. If the signal stays high for the specified number of bit cycles, transmission starts.

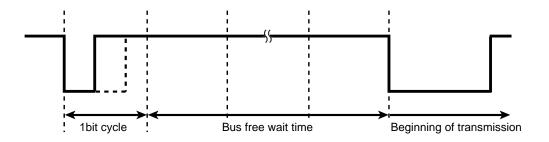

#### (2) Transmitting Broadcast Message


Set the CECTCR <CECBRD> bit when transmitting a broadcast message. If this bit is set, logical "0" response during an ACK cycle results in an error. If not, logical "1" response during an ACK cycle results in an error.


#### (3) Adjusting Transmission Waveform

Both start bit and data bit are capable of adjusting the rising timing and cycle. With the CECTCR <CECSTRS> <CECSPRD> <CECDTRS> <CECDPRD> bits, the timing can be specified between the defined fastest rising/cycle timing and the reference value.

The following figures show how the waveforms differ according to the configurations of the start bit, logical "0" and logical "1".

Note: <CECDTRS> must be used under the same setting as CECRCR1<CECLNC>.

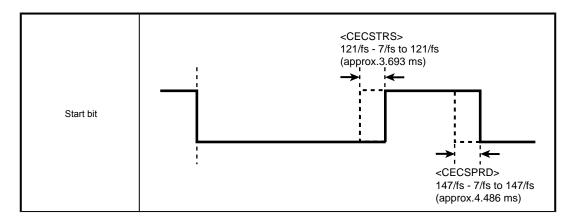

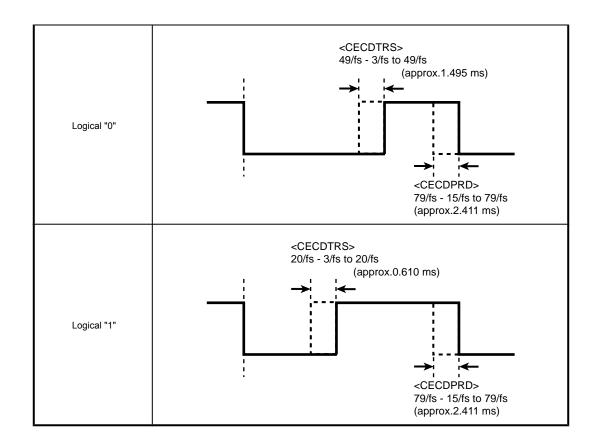

#### (4) Preparing Transmission Data

Configure a byte of transmission data and EOM data with the CECTBUF register.

#### 12.4.3.3 Detecting Transmission Error

Error detection during transmission generates an interrupt and stops transmission. It clears the CECTEN <CECTEN> bit.

To identify an error factor, the CECTSTAT register has bits that correspond with each interrupt. You can identify the interrupt factor by checking these bits.

Note:An attempt to stop transmission by an error may cause an improper waveform output to CEC. This is because output is stopped immediately after the error occurs.


#### 12.4.3.4 Details of Transmission Error

(1) Arbitration Lost

An arbitration lost error occurs when CEC detects "Low" on completion of appropriate low duration.

Detecting an arbitration lost error sets the CECTSTAT <CECTIAL> bit.

Two types of the arbitration lost detection periods are shown below.

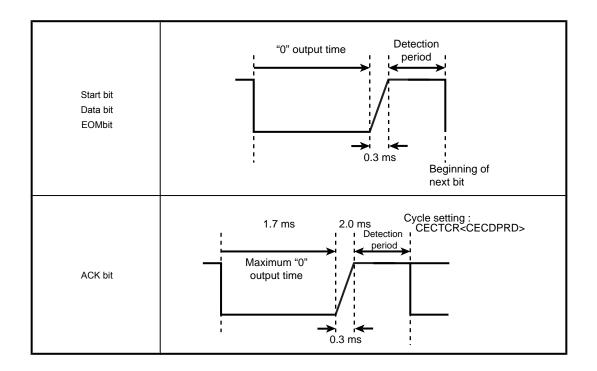

#### (2) ACK error

An ACK error interrupt occurs when an ACK response does not conform to the configuration specified in the CECTCR <CECBRD> bit.

When the ACK error interrupt occurs, the CECTSTAT <CECTIACK> bit is set.

The ACK error is detected in the following cases.

Configuration	Determined as an ACK error when		
<cecbrd> = 0</cecbrd>	ACK responses in logical "4"		
Broadcast transmission?: No	ACK response is logical "1"		
<cecbrd> = 1</cecbrd>	ACK responses in logical "O"		
Broadcast transmission?: Yes	ACK response is logical "0"		

#### (3) Transmit Buffer Underrun

A transmit buffer underrun error is caused by the following sequence.

1. Data in the transmit buffer is transmit to the shift register.

2. An interrupt occurs.

3. A byte of data is transmitted.

4. No data is set to the transmit buffer before starting transmission of a byte of subsequent data.

When an underrun error occurs, the CECTSTAT <CECTIUR> bit is set.

#### (4) Order of ACK Error and Transmit Buffer Overrun

If interrupt factors of the ACK error and transmit buffer underrun are detected at the end of transmission of a byte of data, the transmit buffer underrun has priority.

The transmit buffer underrun interrupt occurs first and then the ACK error interrupt occurs.

#### 12.4.3.5 Stopping Transmission

To stop transmission, send data including the EOM bit that indicates "1". This generates a transmit completion interrupt.

Please note that proper operation is not ensured if the start bit of transmission is set to "0" during transmission.

#### 12.4.3.6 Retransmission

Transmission is stopped by error detection. To retry the transmission, configure the condition and data of starting the transmission.

### 12.4.4 Software Reset

The entire CEC function can be initialized by software.

Setting "1" to the CECRESET <CECRESET> bit causes the following operations.

- Reception : Immediately stops. The received data is discarded.
- Transmission : Immediately stops including output to the CEC line.
- Register : All the registers other than CECEN are initialized.

Please note that software reset during transmission may cause the CEC line waveform that does not identical to the defined.

- 12. Consumer Electronics Control (CEC)
- 12.4 Operations

# TOSHIBA

# 13. Remote control signal preprocessor (RMC)

## 13.1 Basic operation

Remote control signal preprocessor (hereafter referred to as RMC) receives a remote control signal of which carrier is removed.

### 13.1.1 Reception of Remote Control Signal

- Sampled 32.768 kHz clock
- Noise canceller
- Leader detection
- Batch reception up to 72bit of data

## 13.2 Block Diagram

Figure 13-1 shows block diagram of RMC

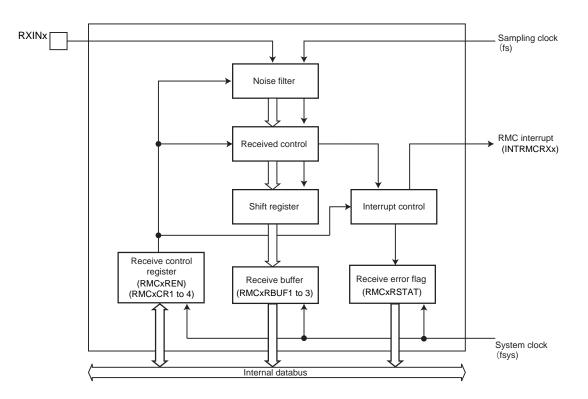


Figure 13-1 Block diagram of RMC

## 13.3 Registers

### 13.3.1 Register List

Addresses and names of RMC control registers are shown below.

Channel x	Base Address
Channel0	0x4004_0400
Channel1	0x4004_0440

Register (x=0 to 1)		Address(Base+)
Remote Enable Register	RMCxEN	0x0000
Receive Enable Register	RMCxREN	0x0004
Receive Data Buffer Register 1	RMCxRBUF1	0x0008
Receive Data Buffer Register 2	RMCxRBUF2	0x000C
Receive Data Buffer Register 3	RMCxRBUF3	0x0010
Receive Control Register 1	RMCxRCR1	0x0014
Receive Control Register2	RMCxRCR2	0x0018
Receive Control Register3	RMCxRCR3	0x001C
Receive Control Register 4	RMCxRCR4	0x0020
Receive Status Register	RMCxRSTAT	0x0024
Reserved	-	0x0028
Reserved	-	0x002C
Reserved	-	0x0030

Note: Access to the <reserved> address is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	I2RMC	RMCEN
After reset	0	0	0	0	0	0	0	0

## 13.3.2 RMCxEN (Enable Register)

Bit	Bit Symbol	Туре	Function
31-2	-	R	Read as 0.
1	I2RMC	R/W	RMC in IDLE mode 0: Disabled 1: Enabled Controls RMC operation in IDLE mode. Set "1" to enable RMC in IDLE Mode. This bit and the <rmcen> bit can be set simultaneously.</rmcen>
0	RMCEN	R/W	Controls RMC operation. 0: Disabled 1:Enabled To allow RMC to function, enable the RMCEN bit first. If the operation is disabled, all the clocks for RMC except for the enable register are stopped, and it can reduce power consumption. If RMC is enabled and then disabled, the settings in each register remain intact.

13.3 Registers

13.3.3	RMCxREN (Receive Enable Register)
--------	-----------------------------------

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	RMCREN
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-1	-	R	Read as 0.
0	RMCREN	R/W	Reception
			0: Disabled
			1: Enabled
			Controls reception of RMC.
			Setting this bit to "1" enables reception.

Note: Enable the <RMCREN> bit after setting the RMCxRCR1, RMCxRCR2 and RMCxRCR3

	31	30	29	28	27	26	25	24	
bit symbol		RMCRBUF (Received data 31 to 24 bit)							
After reset	0	0	0	0	0	0	0	0	
	23	22	21	20	19	18	17	16	
bit symbol			RM	ICRBUF (Receiv	ed data 23 to 16	bit)			
After reset	0	0	0	0	0	0	0	0	
	15	14	13	12	11	10	9	8	
bit symbol			R	MCRBUF (Recei	ved data 15 to 8b	it)			
After reset	0	0	0	0	0	0	0	0	
	7	6	5	4	3	2	1	0	
bit symbol		RMCRBUF (Received data 7 to 0 bit)							
After reset	0	0	0	0	0	0	0	0	

## 13.3.4 RMCxRBUF1(Receive Data Buffer Register 1)

Bit	Bit Symbol	Туре	Function
31-0	RMCRBUF[31:0]	R	Received data (31 to 0 bit)
			Reads 4 bytes of received data. (31 to 0 bit)

### 13.3.5 RMCxRBUF2(Receive Data Buffer Register 2)

	31	30	29	28	27	26	25	24
bit symbol			RM	ICRBUF (Receiv	ed data 63 to 54	bit)		
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol			RM	ICRBUF (Receiv	ed data 55 to 48	bit)		
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol			RM	/CRBUF (Receiv	ed data 47 to 40	bit)		
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol		RMCRBUF (Received data 39 to 32 bit)						
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-0	RMCRBUF[63:32]	R	Received data (63 to 32 bit)
			Reads 4 bytes of received data. (63 to 32 bit)

13.3 Registers

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol			RN	ICRBUF (Receiv	ed data 71 to 64	bit)		
After reset	0	0	0	0	0	0	0	0

### 13.3.6 RMCxRBUF3(Receive Data Buffer Register 3)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	RMCRBUF[71:64]	R	Received data (71 to 64 bit).
			Reads 4 bytes of received data. (71 to 64 bit).

Note: The received bit is stored in the data buffer register in MSB-first order, and the last received bit is stored in the LSB (bit 0). If the remote control signal is received in the LSB first algorithm, the received data is stored in reverse sequence.

## 13.3.7 RMCxRCR1(Receive Control Register 1)

	31	30	29	28	27	26	25	24				
bit symbol		RMCLCMAX										
After reset	0	0	0	0	0	0	0	0				
	23	22	21	20	19	18	17	16				
bit symbol				RMCL	CMIN							
After reset	0	0	0	0	0	0	0	0				
	15	14	13	12	11	10	9	8				
bit symbol		-		RMCL	LMAX							
After reset	0	0	0	0	0	0	0	0				
	7	6	5	4	3	2	1	0				
bit symbol				RMCI	LMIN							
After reset	0	0	0	0	0	0	0	0				

Bit	Bit Symbol	Туре	Function
31-24	RMCLCMAX[7:0]	R/W	Specifies a maximum cycle of leader detection.
			Calculating formula of the maximum cycle: <rmclcmax> × 4/fs [s].</rmclcmax>
23-16	RMCLCMIN[7:0]	R/W	Specifies a minimum cycle of leader detection.
			Calculating formula of the minimum cycle: <rmclcmin> × 4/fs [s].</rmclcmin>
15-8	RMCLLMAX[7:0]	R/W	Specifies a maximum low width of leader detection.
			Calculating formula of the maximum low width: <rmcllmax> × 4/fs [s]</rmcllmax>
7-0	RMCLLMIN[7:0]	R/W	Specifies a minimum low width of leader detection.
			Calculating formula for the minimum low width: <rmcllmin> × 4/fs [s]</rmcllmin>
			When RMCxRCR2 <rmcld> = 1, a value of the low-pulse width is less than the specified value,</rmcld>
			it is defined as data bit.

Note: When you configure the register, you must follow the rule shown below.

Leader	Rules
Low width + High width	<rmclcmax[7:0]> &gt; <rmclcmin[7:0]> <rmcllmax[7:0]> &gt; <rmcllmin[7:0]> <rmclcmin[7:0]> &gt; <rmcllmax[7:0]></rmcllmax[7:0]></rmclcmin[7:0]></rmcllmin[7:0]></rmcllmax[7:0]></rmclcmin[7:0]></rmclcmax[7:0]>
Only high width	<rmclcmax[7:0]> &gt; <rmclcmin[7:0]> <rmcllmax[7:0]> = 0x00 <rmcllmin[7:0]> = don't care</rmcllmin[7:0]></rmcllmax[7:0]></rmclcmin[7:0]></rmclcmax[7:0]>
No Leader	<rmclcmax[7:0]> = 0x00 <rmclcmin[7:0]> = don't care <rmcllmax[7:0]> = don't care <rmcllmin[[7:0]> = don't care</rmcllmin[[7:0]></rmcllmax[7:0]></rmclcmin[7:0]></rmclcmax[7:0]>

## 13.3.8 RMCxRCR2(Receive Control Register 2)

	31	30	29	28	27	26	25	24
bit symbol	RMCLIEN	RMCEDIEN	-	-	-	-	RMCLD	RMCPHM
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol				RM	CLL			
After reset	1	1	1	1	1	1	1	1
	7	6	5	4	3	2	1	0
bit symbol				RMCI	DMAX			
After reset	1	1	1	1	1	1	1	1

Bit	Bit Symbol	Туре	Function
31	RMCLIEN	R/W	Leader detection interrupt 0: Not generated 1: Generated
30	RMCEDIEN	R/W	Remote control input falling edge interrupt 0: Not generated 1: Generated
29-26	-	R	Read as 0.
25	RMCLD	R/W	Receiving remote control signal with or without leader 0: Disabled 1: Enabled
24	RMCPHM	R/W	Receiving a remote control signal by a phase modulation 0: Not receiving a remote control signal by a phase modulation. (receive by a cycle modulation) 1: Receive remote control signal by a fixed-frequency pulse modulation. To receive a fixed-frequency remote control signal by a pulse modulation, set this bit to "1".
23-16	-	R	Read as 0.
15-8	RMCLL[7:0]	R/W	Excess low width that triggers reception completion and interrupt generation. 0000_0000 to 1111_1110: Reception completion and interrupt generation at <rmcll> × 1/fs [s]. 1111_1111: not to use as the trigger</rmcll>
7-0	RMCDMAX[7:0]	R/W	Maximum data bit cycle that triggers reception completion and interrupt generation. 0000_0000 to 1111_1110: Reception completion and interrupt generation at <rmcdmax> × 1/fs [s]. 1111_1111: not to use as the trigger</rmcdmax>

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-				RMCDATH			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-				RMCDATL			
After reset	0	0	0	0	0	0	0	0

## 13.3.9 RMCxRCR3(Receive Control Register 3)

Bit	Bit Symbol	Туре	Function
31-15	-	R	Read as 0.
14-8	RMCDATH[6:0]	R/W	Larger threshold to determine a signal pattern in a phase method Calculating formula of the threshold: <rmcdath> × 1/fs [s] Specifies a larger threshold (within a range of 1.5T and 2T) to determine a pattern of remote control signal in a phase method. If the measured cycle exceeds the threshold, the bit is determined as "10". If not, the bit is determined as "01".</rmcdath>
7	-	R	Read as 0.
6-0	RMCDATL[6:0]	R/W	Threshold to determine 0 or 1 smaller threshold to determine a signal pattern in a phase method. Calculating formula of the threshold: <rmcdatl> × 1/fs [s] Specifies two kinds of thresholds: a threshold to determine whether a data bit is 0 or 1; a smaller threshold (within a range of 1T and 1.5T) to determine a pattern of remote control signal in a phase method. As for the determination of data bit, if the measured cycle exceeds the threshold, the bit is determined as "1". If not, the bit is determined as "0". Calculating formula of the threshold: <rmcdatl> × 1/fs [s]. As for the determination of a remote control signal pattern in a phase method, if the measured cycle exceeds the threshold, the bit is determined as "01". If not, the bit is determined as "00".</rmcdatl></rmcdatl>

Note: If the <RMCPHM> bit of the Receive Control Register 2 is "0", <RMCDATH[6:0]> are not enabled. The bits are enabled when <RMCPHM> is "1".

## 13.3.10 RMCxRCR4(Receive Control Register 4)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	RMCPO	-	-	-		RMCNC		
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	RMCPO	R/W	Remote control input signal
			0: Not reversed
			1: Reversed
6-4	-	R	Read as 0.
3-0	RMCNC[3:0]	R/W	Specifies noise cancellation time.
			0000: No cancellation
			0001 to 1111: cancellation
			Calculating formula of noise cancellation time: <rmcnc> × 1/fs [s]</rmcnc>

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	RMCRLIF	RMCLOIF	RMCDMAXIF	RMCEDIF	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	RMCRLDR				RMCRNUM			
After reset	0	0	0	0	0	0	0	0

### 13.3.11 RMCxRSTAT (Receive Status Register)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15	RMCRLIF	R	Interrupt source flag 0: No leader detection interrupt generated. 1: Leader detection interrupt generated.
14	RMCLOIF	R	Interrupt source flag 0: No low width detection interrupt generated. 1: Low width detection interrupt generated.
13	RMCDMAXIF	R	Interrupt source flag 0: No maximum data bit cycle interrupt generated. 1: Maximum data bit cycle interrupt generated.
12	RMCEDIF	R	Interrupt source flag 0: No falling edge interrupt generated. 1: Falling edge interrupt generated.
11-8	-	R	Read as 0.
7	RMCRLDR	R	Leader detection. 0: Disable leader detection. 1: Enable leader detection.
6-0	RMCRNUM[6:0]	R	The number of received data bit 000_0000:no data bit (only with leader) 000_0001 to 100_1000: 1 to 72bit 100_1001 to 111_1111: 73bit and more Indicates the number of bits received as remote control signal data. The number cannot be monitored during reception. On completion of reception, the number is stored.

Note 1: This register is updated every time an interrupt is generated. Writing to this register is ignored.

Note 2: RMC keeps receiving 73 bit or more data unless reception is completed by detecting the maximum data bit cycle or the excess low width. If so, the received data in the data buffer may not be correct.

### 13.4 Operation Description

#### 13.4.1 Reception of Remote Control Signal

13.4.1.1 Sampling clock

A remote control signal is sampled by low-speed 32.768kHz clock (fs).

#### 13.4.1.2 Basic operation

RMC set RMCxRSTAT<RMCRLDR> bit when a leader is detected.

At this time, if RMCxRCR2<RMCLIEN> bit is set, a leader detection interrupt will generate when a leader detecting. When a leader detection interrupt generates, RMCxRSTAT<RMCRLIF> bit is set.

After the leader detecting, each data bit is determined as "0" or "1" in sequence. The results are stored in RMCxRBUF1, RMCxRBUF2 and RMCxRBUF3 registers up to 72 bits. By setting RMCxRCR2< RMCE-DIEN> bit, a remote control signal input falling edge interrupt can be generated in each falling edge of data bit. When a remote control signal input falling edge interrupt is generated, RMCxRSTAT< RMCEDIF > bit is set.


Detecting the maximum data bit cycle or the excess low width completes reception and generates an interrupt.

To check the status of RMC if reception is completed, read the remote control receive status register.

On completion of reception, RMC is waiting for the next leader.

By setting RMC to receive a signal without a leader, RMC recognizes the received as data and starts reception without detecting a leader.

If the next data reception is completed before reading the preceding received data, the preceding data is overwritten by the next one.

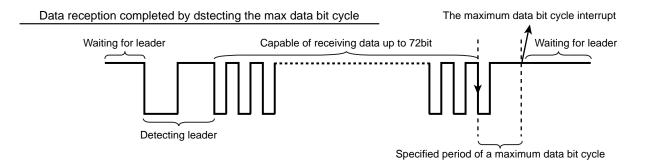

#### 13.4.1.3 Preparation

Configure reception operation of a remote control signal with the Remote Control Signal Receive Control Registers (RMCxRCR1, RMCxRCR2 and RMCxRCR3,RMCxRCR4) before reception.


#### (1) Settings of Noise Cancelling Time

Configure noise cancelling time with the RMCxRCR4 <RMCNC[3:0]> bit.

The signal which is sampled by a sampling clock is cancelled noise.

RMC monitors a sampled remote control signal in each rising edge of a sampling clock. If "High" is monitored, RMC recognizes that the signal was changed to "Low" after monitoring cycles of "Low"s specified in <RMCNC>. If "Low" is monitored, RMC recognizes that the signal was changed to "High" after monitoring cycles of "High" specified in <RMCNC>.

The following figure shows how RMC operates according to the noise cancel setting of <RMCNC [3:0]> = "0011" (3 cycles). Subsequent to noise cancellation, the signal is changed from "High" to "Low" upon monitoring 3 cycles of "Low", and the signal is changed from "Low" to "High" upon monitoring 3 cycles of "High".

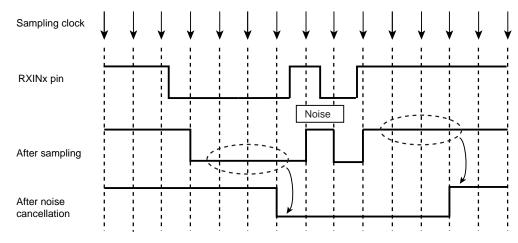


<RMCNC [3:0]> = 0011 (3 cycle)

#### (2) Settings of Detecting Leader

To detect a leader, configure cycle and low width of the leader with the RMCxRCR1 <RMCLLMIN [7:0]> <RMCLLMAX[7:0]> <RMCLCMIN[7:0]> <RMCLCMAX[7:0]> bits. When you configure the register, you must follow the rule shown below.

Leader	Rules
Low width + High Width	<rmclcmax[7:0]> &gt; <rmclcmin[7:0]> <rmcllmax[7:0]> &gt; <rmcllmin[7:0]> <rmclcmin[7:0]> &gt; <rmcllmax[7:0]></rmcllmax[7:0]></rmclcmin[7:0]></rmcllmin[7:0]></rmcllmax[7:0]></rmclcmin[7:0]></rmclcmax[7:0]>
Only high width	<rmclcmax[7:0]> &gt; <rmclcmin[7:0]> <rmcllmax[7:0]> = 0y00000000 <rmcllmin[7:0]> = don't care</rmcllmin[7:0]></rmcllmax[7:0]></rmclcmin[7:0]></rmclcmax[7:0]>
No leader	<rmclcmax[7:0]> = 0y0000000 <rmclcmin[7:0]> = don't care <rmcllmax[7:0]> = don't care <rmcllmin[7:0]> = don't care</rmcllmin[7:0]></rmcllmax[7:0]></rmclcmin[7:0]></rmclcmax[7:0]>

The following shows a leader waveform and the RMCxRCR1 register settings.

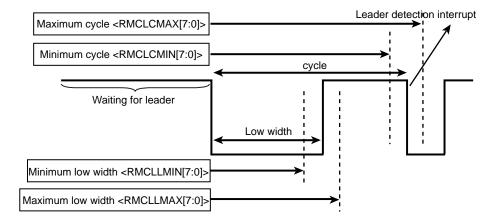

If you want to generate an interrupt when detecting a leader, configure the RMCxRCR2 <RMCLIEN> bit.

A remote control signal without a leader cannot generate a leader detection interrupt.

(3) Setting of 0/1 determination data bit

Based on a falling edge cycle, the data bit is determined as 0 or 1.

There are two kinds of determinations:


1. Determination by threshold.

Configure a threshold value to RMCxRCR3<RMCDATL[6:0]> bit which determines data bit as "0" or "1." If the determination value is equal to threshold value or more, it is determined as "1." If the determination value is less than threshold value, it is determined as "0."

2. Determination by falling edge interrupt inputs.

By setting "1" to the RMCxRCR2<RMCEDIEN> bit, a remote control signal input falling edge interrupt can be generated in each falling edge of the data bit. Using this interrupt together with a timer enables the determination to be done by software.

The followings shows the determination model of data bit.

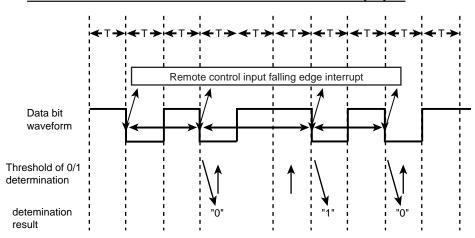

Threshold of 0/1 detemination is set to 2.5T with the <RMCDATL[6:0]>bit.

As for data bit determination of a remote control signal in a phase method, see"13.4.1.8 Receiving a Remote Control Signal in a Phase Method".

#### (4) Settings of Reception Completion

To complete data reception, settings of detecting the maximum data bit cycle and excess low width are required. If multiple factors are specified, reception is completed by the factor detected first. Make sure to configure the reception completion settings.


1. Completed by a maximum data bit cycle

To complete reception by detecting a maximum data bit cycle, you need to configure the RMCxRCR2 <RMCDMAX[7:0]> bits.

If the falling edge of the data bit cycle isn't monitored after time specified as threshold in the <RMCDMAX[7:0]> bits, a maximum data bit cycle is detected.

The detection completes reception and generates an interrupt.

After interrupt inputs generated, RMCxRSTAT< RMCDMAXIF > bit is set to "1".

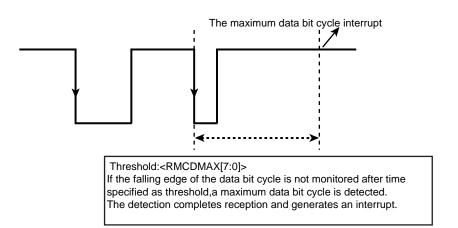


2. Completed by excess low width

To complete reception by detecting the low width, you need to configure the RMCxRCR2 <RMCLL[7:0]> bits.

After the falling edge of the data bit is detected, if the signal stays low longer than specified, excess low width is detected. The detection completes reception and generates an interrupt.

After interrupt inputs generated, RMCxRSTAT<RMCLOIF> bit is set to "1."

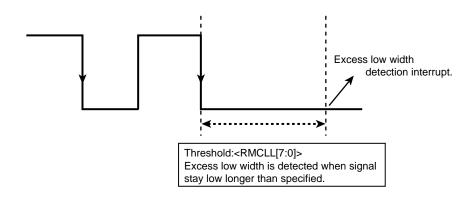

#### 13.4.1.4 Enabling Reception

By enabling the RMCxREN <RMCREN> bit after configuring the RMCxRCR1, RMCxRCR2, RMCxRCR3 and RMCxRCR4 registers, RMC is ready for reception. Detecting a leader initiates reception.

Note: Changing the configurations of the RMCxRCR1, RMCxRCR2, RMCxRCR3 and RMCxRCR4 registers during reception may harm their proper operation. Be careful if you change them during reception.

#### 13.4.1.5 Stopping Reception

RMC stops reception by clearing the RMCxREN <RMCREN> bit to "0" (reception disabled).

Clearing this bit during reception stops reception immediately and the received data is discarded.


#### 13.4.1.6 Receiving Remote Control Signal without Leader in Waiting Leader

Setting RMCxRCR2 <RMCLD> enables RMC to receive signals with or without a leader.

By setting RMCxRCR2 <RMCLD>, RMC starts receiving data if it recognizes a signal of which low width is shorter than a maximum low width of leader detection specified in the RMCxRCR1 <RMCLLMAX[7:0] > bits. RMC keeps receiving data until the final data bit is received.

If RMCxRCR2 <RMCLD> is enabled, the same settings of error detection, reception completion and data bit determination of 0 or 1 are applied regardless of whether a signal has a leader or not.

Thus receivable remote control signals are limited.

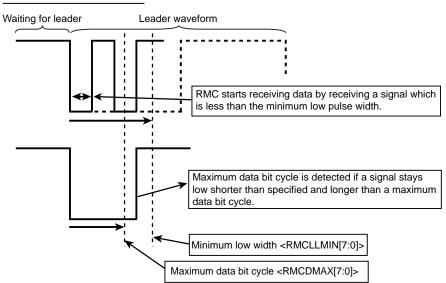

#### RMCxRCR2<RMCLD> = 1

#### 13.4.1.7 A Leader only with Low Width

The figure shown below illustrates a remote control signal that starts with a leader of which waveform only has low width.

This signal starts with a leader that only has low width and a data bit cycle starts from the rising edge. To enable the signal, it must be sent after being reversed by setting the RMCxRCR4 <RMCPO> bit to "1".

This is because RMC is configured to detect a data bit cycle from the falling edge

To detect a leader, configure only low-pulse width of the leader with the <RMCLLMAX[7 : 0]>=0y0000 0000,<RMCLCMAX[7:0]>><RMCLCMIN[7:0]>.

In this case, the value of <RMCLLMIN[7:0]> is set as "don't care".


To detect whether data "0" or data "1", configure the threshold of 0/1 detection with the RMCxRCR3 <RMCDATL[6:0]>.

The maximum data bit cycle is configured with the <RMCDMAX[7:0]> of the RMCxRCR2.

To complete data reception, configure the maximum data bit cycle with <RMCDMAX[7:0]> of the RMCxRCR2, and configure the low-pulse width detection with <RMCLL[7:0]>.

After detecting the maximum data bit cycle and confirming the low-pulse with which is specified after receiving the last bit, receiving data is completed.

The RMC generates an interrupt and waits for the next leader.

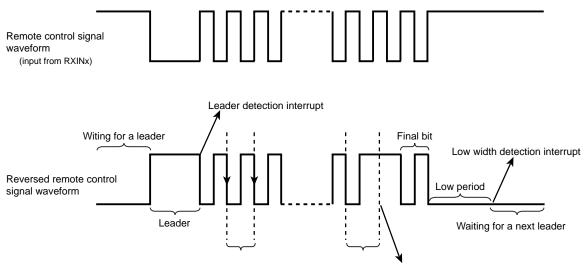

Detecting maximum data bit cycle completes reception.

#### 13.4.1.8 Receiving a Remote Control Signal in a Phase Method

RMC is capable of receiving a remote control signal in a phase method of which signal cycle is fixed. A signal in the phase method has three waveform patterns (see the figure shown below).


By setting two thresholds a remote control signal pattern is determined. RMC converts the signal into data "0" or "1". On completion of reception, received data "0" and "1" are stored in the RMCxRBUF1, RMCxRBUF 2 and RMCxRBUF3.

By setting RMCxRCR2<RMCPHM> = "1", RMC enables to receive a remote control signal in the phase method. Each threshold can be configured with the RMCxRCR3 <RMCDATL[6:0]> bits and <RMCDATH [6:0]> bits.


Two thresholds are used to distinguish three waveform patterns. On condition that a cycle between two falling edges is "T", three patterns show cycles of 1T, 1.5T and 2T. Details of the two thresholds are shown below.

	Determined by Threshold		Register bits to set
Threshold 1	Pattern 1 & pattern 2	1T to 1.5T	RMCxRCR3 <rmcdatl[6:0]></rmcdatl[6:0]>
Threshold 2	Pattern 2 & pattern 3	1.5T to 2T	RMCxRCR3 <rmcdath[6:0]></rmcdath[6:0]>

To determine a remote control signal in the phase method, three patterns of data waveform and preceding data are required. In addition, the signal needs to start from data "11".

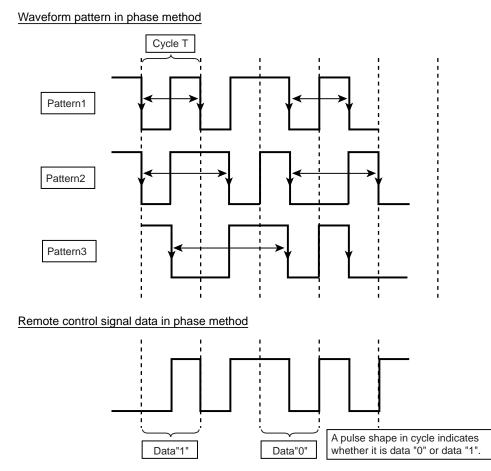



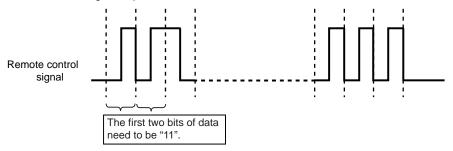

# TOSHIBA

# 14. Analog/Digital Converter (ADC)

## 14.1 Outline

A 10-bit, sequential-conversion analog/digital converter (AD converter) is built into the TMPM330FDFG/FYFG/FWFG.

This AD converter is equipped with 12 analog input channels.

These 12 analog input channels (pins AIN0 through AIN11) are also used as input/output ports.

Note 1: To assure conversion accuracy, the specified value must be set to the ADCBAS register.

Note 2: If it is necessary to reduce a power current by operating the TMPM330FDFG/FYFG/FWFG in IDLE or STOP mode and if either case shown below is applicable, you must first stop the AD converter and then execute the instruction to put the TMPM330FDFG/FYFG/FWFG into standby mode.

1. The TMPM330FDFG/FYFG/FWFG must be put into IDLE mode when ADMOD1<I2AD> is "0".

2.The TMPM330FDFG/FYFG/FWFG must be put into STOP mode.

## 14.2 Configuration

Figure 14-1 shows the block diagram of this AD converter.

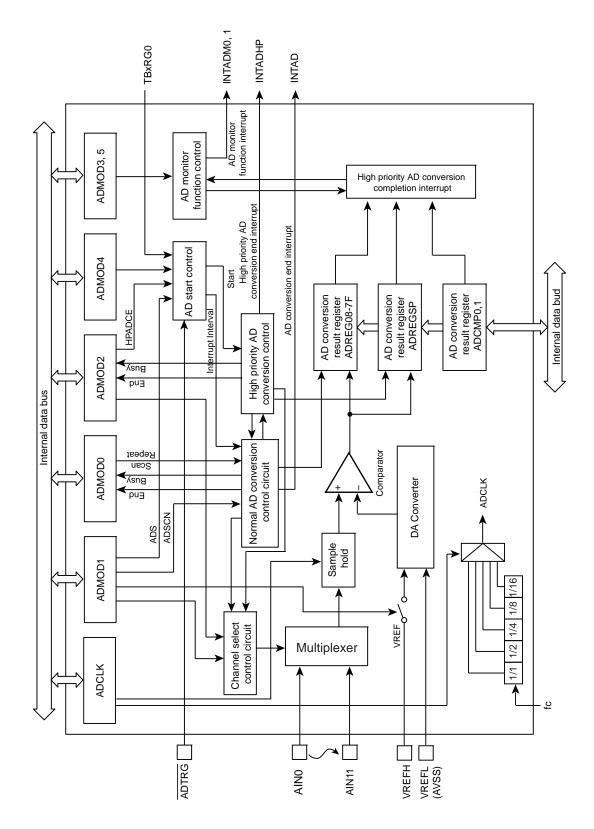


Figure 14-1 AD Converter Block Diagram

### 14.3 Registers

### 14.3.1 Register list

The control registers and addresses of the AD converter are as follows.

The AD converter is controlled by the AD mode control registers (ADMOD0 through ADMOD5). The result of AD conversion is stored in the eight AD conversion result registers, ADREG08 through ADREG7F. The highest-priority conversion result is stored in the register ADREGSP.

To assure conversion accuracy, the specified value must be set to the ADCBAS register.

		Base Address = 0x4003_0000
Register name		Address (Base+)
Conversion Clock Setting Register	ADCLK	0x0000
Mode Control Register 0	ADMOD0	0x0004
Mode Control Register 1	ADMOD1	0x0008
Mode Control Register 2	ADMOD2	0x000C
Mode Control Register 3	ADMOD3	0x0010
Mode Control Register 4	ADMOD4	0x0014
Mode Control Register 5	ADMOD5	0x0018
Conversion Accuracy Setting Register	ADCBAS	0x0020
Reserved	-	0x0024
Reserved	-	0x0028
Conversion Result Register 08	ADREG08	0x0030
Conversion Result Register 19	ADREG19	0x0034
Conversion Result Register 2A	ADREG2A	0x0038
Conversion Result Register 3B	ADREG3B	0x003C
Conversion Result Register 4C	ADREG4C	0x0040
Conversion Result Register 5D	ADREG5D	0x0044
Conversion Result Register 6E	ADREG6E	0x0048
Conversion Result Register 7F	ADREG7F	0x004C
Conversion Result Register SP	ADREGSP	0x0050
Conversion Result Comparison Register 0	ADCMP0	0x0054
Conversion Result Comparison Register 1	ADCMP1	0x0058

Note: Access to the "Reserved" address is prohibited.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol				ADC	BAS			
After reset	0	0	1	1	1	0	0	0

## 14.3.2 ADCBAS (Conversion Accuracy Setting Register)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	ADCBAS[7:0]	R/W	Write "0x58".

Note: To assure conversion accuracy, the specified value (0x0000\_0058) must be set to the ADCBAS register.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol		TS	SH		-		ADCLK	
After reset	1	0	0	0	0	0	0	0

### 14.3.3 ADCLK (Conversion Clock Setting Register)

Bit	Bit Symbol	Туре	Function			
31-8	-	R	Read as 0.			
7-4	TSH[3:0]	R/W	Select the AD sample hold time.			
			1000: 8 conversion clock			
			1001: 16 conversion clock			
			1010: 24 conversion clock			
			1011: 32 conversion clock			
			0011: 64 conversion clock			
			1100: 128 conversion clock			
			1101: 512 conversion clock			
			The setup other than those above: Reserved			
3	-	R	Read as 0.			
2-0	ADCLK[2:0]	R/W	Select the AD conversion clock.			
			000: fc			
			001: fc/2			
			010: fc/4			
			011: fc/8			
			100: fc/16			
			111: Reserved			

A clock count required for conversion is 46 clocks at the minimum.

Examples of sample hold time and conversion time as shown as below.

(Example:	If fc =	40MHz)
-----------	---------	--------

	Sample hold	Conversion time( <adclk[2:0]> setting)</adclk[2:0]>							
<tsh[3:0]></tsh[3:0]>	time	000 (fc)	001 (fc/2)	010 (fc/4)	011 (fc/8)	100 (fc/16)			
1000 (8 conversion clock)	0.2 µs	1.15 µs	2.3 µs	4.6 µs	9.2µs	18.4µs			
1001 (16 conversion clock)	0.4 µs	1.35 µs	2.7µs	5.4µs	10.8µs	21.6µs			
1010 (24 conversion clock)	0.6 µs	1.55 µs	3.1µs	6.2µs	12.4µs	24.8µs			
1011 (32 conversion clock)	0.8 µs	1.75 µs	3.5µs	7.0µs	14.0µs	28.0µs			
0011 (64 conversion clock)	1.6 µs	2.55 µs	5.1µs	10.2µs	20.4µs	40.8µs			
1100 (128 conversion clock)	3.2 µs	4.15 µs	8.3µs	16.6µs	33.2µs	66.4µs			
1101 (512 conversion clock)	12.8 µs	13.75 µs	27.5µs	55.0µs	110.0µs	220.0µs			

Note: Do not change the setting of the AD conversion clock during AD conversion.

#### 14.3 Registers

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	EOCFN	ADBFN	-	TI II	٢M	REPEAT	SCAN	ADS
After reset	0	0	0	0	0	0	0	0

### 14.3.4 ADMOD0 (Mode Control Register 0)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	EOCFN	R	Normal AD conversion completion flag (note1)
			0: Before or during conversion
			1: Completion
6	ADBFN	R	Normal AD conversion BUSY flag
			0: Conversion stop
			1: During conversion
5	-	R	Read as 0.
4-3	ITM[1:0]	R/W	Specify interrupt in fixed channel repeat conversion mode (refer to the table below and note 2)
2	REPEAT	R/W	Specify repeat mode
			0: Single conversion mode
			1: Repeat conversion mode
1	SCAN	R/W	Specify scan mode
			0: Fixed channel mode
			1: Channel scan mode
0	ADS	R/W	Start AD conversion start (note 3)
			0: Don't care
			1: Start conversion
			"0" is always read.

#### Specify AD conversion interrupt in fixed channel repeat conversion mode

		Fixed channel repeat conversion mode			
<	<itm[1:0]></itm[1:0]>	<scan> = "0", <repeat> = "1"</repeat></scan>			
	00	Generate in interrupt once every single conversion.			
	01	Generate interrupt once every 4 conversions.			
	10	Generate interrupt once every 8 conversions.			
	11	Setting prohibited.			

- Note 1: This flag is "0" cleared by reading the ADMOD0 register.
- Note 2: It is valid only when it's specified in the fixed channel repeat mode (<REPEAT> ="1", <SCAN> = "0")
- Note 3: Conversion must be started after setting the mode.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	VREFON	I2AD	ADSCN	-		AD	СН	
After reset	0	0	0	0	0	0	0	0

## 14.3.5 ADMOD1 (Mode Control Register 1)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	VREFON	R/W	VREF application control(Note1 and Note2) 0: OFF 1: ON
6	I2AD	R/W	Specify operation mode in IDLE mode 0: Stop 1: Operation
5	ADSCN	R/W	Specify operation mode in channel scan mode 0: 4-channel scan 1: 8-channel scan
4	-	R/W	Write "0".
3-0	ADCH[3:0]	R/W	Select analog input channel (Refer to the below table.)

#### Select Analog Input Channel

	<u>^</u>	1 .	1 .	
ADMOD0 <scan></scan>	0		1	
	Fixed channel	Channel scan	Channel scan	
ADMOD1 <adch[3:0]></adch[3:0]>		( <adscn> = 0)</adscn>	( <adscn> = 1)</adscn>	
0000	AIN0	AIN0	AIN0	
0001	AIN1	AIN0 to AIN1	AIN0 to AIN1	
0010	AIN2	AIN0 to AIN2	AIN0 to AIN2	
0011	AIN3	AIN0 to AIN3	AIN0 to AIN3	
0100	AIN4	AIN4	AIN0 to AIN4	
0101	AIN5	AIN4 to AIN5	AIN0 to AIN5	
0110	AIN6	AIN4 to AIN6	AIN0 to AIN6	
0111	AIN7	AIN4 to AIN7	AIN0 to AIN7	
1000	AIN8	AIN8	AIN8	
1001	AIN9	AIN8 to AIN9	AIN8 to AIN9	
1010	AIN10	AIN8 to AIN10	AIN8 to AIN10	
1011	AIN11	AIN8 to AIN11	AIN8 to AIN11	
1100				
1101	Setting prohibited			
1110				
1111				

- Note 1: Before starting AD conversion, write "1" to the <VREFON> bit, wait for 3µs during which time the internal reference voltage should stabilize, and then write "1" to the ADMOD0<ADS>.
- Note 2: Set <VREFON> to "0" to go into standby mode upon completion of AD conversion.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	EOCFHP	ADBFHP	HPADCE	-		HPA	DCH	
After reset	0	0	0	0	0	0	0	0

## 14.3.6 ADMOD2 (Mode Control Register 2)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	EOCFHP	R	Top-priority AD conversion completion flag (Note1) 0: Before or during conversion 1: Completion
6	ADBFHP	R	Top-priority AD conversion BUSY flag 0: During conversion halts 1: During conversion
5	HPADCE	R/W	Activate top-priority conversion 0: Don't care 1: Start conversion "0" is always read.
4	-	R/W	Write "0".
3-0	HPADCH[3:0]	R/W	Select analog input channel when activating top-priority conversion. (See the table below)

Analog input channel whene xecuting top-priority conversion	
AIN0	
AIN1	
AIN2	
AIN3	
AIN4	
AIN5	
AIN6	
AIN7	
AIN8	
AIN9	
AIN10	
AIN11	
Option prohibited	
Setting prohibited	

Note 1: This flag is "0" cleared by reading the ADMOD2 register.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	HADHS	HADHTG	ADHS	ADHTG	-	-	ADI	RST
After reset	0	0	0	0	0	0	0	0

## 14.3.7 ADMOD4 (Mode Control Register 4)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	HADHS	R/W	H/W source for activating top-priority AD conversion 0: External trigger 1: Match with timer register 0 (TB5RG0)
6	HADHTG	R/W	H/W for activating top-priority AD conversion 0: Disable 1: Enable
5	ADHS	R/W	H/W source for activating normal AD conversion (note1) 0: External trigger 1: Match with timer register 0 (TB6RG0)
4	ADHTG	R/W	HW for activating normal AD conversion 0: Disable 1: Enable
3-2	-	R	Read as 0.
1-0	ADRST[1:0]	W	Overwriting 10 with 01 allows ADC to be software reset.(note 2)

Note 1: The external trigger cannot be used for H/W activation of AD conversion when it is used for H/W activation of top priority AD conversion.

Note 2: A software reset initializes all the registers except for ADCLK<ADCLK>.

Note: The TX03 disables the external trigger used for H/W activation. Therefore "0" cannot be set to <HADHS> and <ADHS>.

#### 14.3 Registers

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	-	-	ADOBIC0	ADREGS0 A				ADOBSV0
After reset	0	0	0	0	0	0	0	0

# 14.3.8 ADMOD3 (Mode Control Register 3)

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	-	R/W	Write "0".
6	-	R	Read as 0.
5	ADOBIC0	R/W	Set the AD monitor function interrupt 0 0: If the value of the conversion result is smaller than the comparison register 0, an interrupt is generated. 1: If the value of the conversion result is bigger than the comparison register 0, an interrupt is generated.
4-1	ADREGS0[3:0]	R/W	Select a target conversion result register when using the AD monitor function 0 (See the below table).
0	ADOBSV0	R/W	AD monitor function 0 0: Disable 1: Enable

<adregs0[3:0]></adregs0[3:0]>	Conversion result register to be com- pared	<adregs0[3:0]></adregs0[3:0]>	Conversion result register to be com- pared
0000	ADREG08	0100	ADREG4C
0001	ADREG19	0101	ADREG5D
0010	ADREG2A	0110	ADREG6E
0011	ADREG3B	0111	ADREG7F
-	-	1xxx	ADREGSP

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	-	-	ADOBIC1	ADREGS1				ADOBSV1
After reset	0	0	0	0	0	0	0	0

# 14.3.9 ADMOD5 (Mode Control Register 5)

Bit	Bit Symbol	Туре	Function
31-6	-	R	Read as 0.
5	ADOBIC1	R/W	Set the AD monitor function interrupt 1. 0: If the value of the conversion result is smaller than the comparison register 1, an interrupt is generated. 1: If the value of the conversion result is bigger than the comparison register 1, an interrupt is generated.
4-1	ADREGS1[3:0]	R/W	Select a target conversion result register when using the AD monitor function 1 (See the below table).
0	ADOBSV1	R/W	AD monitor function 1 0: Disable 1: Enable

<adregs1[3:0]></adregs1[3:0]>	Conversion result register to be com- pared	<adregs1[3:0]></adregs1[3:0]>	Conversion result register to be com- pared
0000	ADREG08	0100	ADREG4C
0001	ADREG19	0101	ADREG5D
0010	ADREG2A	0110	ADREG6E
0011	ADREG3B	0111	ADREG7F
_	_	1xxx	ADREGSP

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				AD	R0			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADR0		-	-	-	-	OVR0	ADR0RF
After reset	0	0	0	0	0	0	0	0

# 14.3.10 ADREG08 (Conversion Result Register 08)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADR0[9:0]	R	AD conversion result Conversion result is stored. For information about the correlation between the conversion channel and the conversion result register, refer to the Table 14-2, chapter 14.4.5.7.
5-2	-	R	Read as 0.
1	OVR0	R	Overrun flag 0: Not generated 1: Generated If the conversion result is overwritten before reading <adr0>, "1" is set. This bit is "0" cleared when it is read.</adr0>
0	ADR0RF	R	AD conversion result storage flag 0: Conversion result is not stored 1: Conversion result is stored. If a conversion result is stored, "1" is set. This bit is "0" cleared when the conversion result is read.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				AD	R1			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADR1		-	-	-	-	OVR1	ADR1RF
After reset	0	0	0	0	0	0	0	0

# 14.3.11 ADREG19 (AD Conversion Result Register 19)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADR1[9:0]	R	AD conversion result Conversion result is stored. For information about the correlation between the conversion channel and the conversion result register, refer to the Table 14-2, chapter 14.4.5.7.
5-2	-	R	Read as 0.
1	OVR1	R	Overrun flag 0: Not generated 1: Generated If the conversion result is overwritten before <adr1>, "1" is set. This bit is "0" cleared when it is read.</adr1>
0	ADR1RF	R	AD conversion result storage flag 0: Conversion result is not stored. 1: Conversion result is stored. If a conversion result is stored, "1" is set. This bit is "0" cleared when the conversion result is read.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				AD	R2			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADR2		-	-	-	-	OVR2	ADR2RF
After reset	0	0	0	0	0	0	0	0

# 14.3.12 ADREG2A (AD Conversion Result Register 2A)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADR2[9:0]	R	AD conversion result
			Conversion result is stored. For information about the correlation between the conversion channel and the conversion result register, refer to the Table 14-2, chapter 14.4.5.7.
5-2	-	R	Read as 0.
1	OVR2	R	Overrun flag 0: Not generated. 1: Generated. If a conversion result is overwritten before reading <adr2>, "1" is set. This bit is "0" cleared when it is read.</adr2>
0	ADR2RF	R	AD conversion result storage flag 0: Conversion result is not stored. 1: Conversion result is stored. If a conversion result is stored, "1" is set. This bit is "0" cleared when the conversion result is read.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				AD	R3			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADR3		-	-	-	-	OVR3	ADR3RF
After reset	0	0	0	0	0	0	0	0

# 14.3.13 ADREG3B (AD Conversion Result Register 3B)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADR3[9:0]	R	AD conversion result. Conversion result is stored. For information about the correlation between the conversion channel and the conversion result register, refer to the Table 14-2, chapter 14.4.5.7.
5-2	-	R	Read as 0.
1	OVR3	R	Overrun flag 0: Not generated. 1: Generated. If a conversion result is overwritten before reading <adr3>, "1" is set. This bit is "0" cleared when it is read.</adr3>
0	ADR3RF	R	AD conversion result storage flag 0: Conversion result is not stored. 1: Conversion result is stored. If a conversion result is stored, "1" is set. This bit is "0" cleared when the conversion result is read.

#### 14.3 Registers

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol		-		AD	R4			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADR4		-	-	-	-	OVR4	ADR4RF
After reset	0	0	0	0	0	0	0	0

# 14.3.14 ADREG4C (AD Conversion Result Register 4C)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADR4[9:0]	R	AD conversion result. Conversion result is stored. For information about the correlation between the conversion channel and the conversion result register, refer to the Table 14-2, chapter 14.4.5.7.
5-2	-	R	Read as 0.
1	OVR4	R	Overrun flag 0: Not generated. 1: Generated If a conversion result is overwritten before reading <adr4>, "1" is set. This bit is "0" cleared when it is read.</adr4>
0	ADR4RF	R	AD conversion result storage flag 0: Conversion result is not stored. 1: Conversion result is stored. If a conversion result is stored, "1" is set. This bit is "0" cleared when the conversion result is read.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				AD	R5			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADR5		-	-	-	-	OVR5	ADR5RF
After reset	0	0	0	0	0	0	0	0

# 14.3.15 ADREG5D (AD Conversion Result Register 5D)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADR5[9:0]	R	AD conversion result. Conversion result is stored. For information about the correlation between the conversion channel and the conversion result register, refer to the Table 14-2, chapter 14.4.5.7.
5-2	-	R	Read as 0.
1	OVR5	R	Overrun flag 0: Not generated. 1: Generated If a conversion result is overwritten before reading <adr5>, "1" is set. This bit is "0" cleared when it is read.</adr5>
0	ADR5RF	R	AD conversion result storage flag 0: Conversion result is not stored. 1: Conversion result is stored. If a conversion result is stored, "1" is set. This bit is "0" cleared when the conversion result is read.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				AD	R6			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADR6		-	-	-	-	OVR6	ADR6RF
After reset	0	0	0	0	0	0	0	0

# 14.3.16 ADREG6E (AD Conversion Result Register 6E)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADR6[9:0]	R	AD conversion result.
			Conversion result is stored. For information about the correlation between the conversion channel and the conversion result register, refer to the Table 14-2, chapter14.4.5.7.
5-2	-	R	Read as 0.
1	OVR6	R	Overrun flag 0: Not generated. 1: Generated. If a conversion result is overwritten before reading <adr6>, "1" is set. This bit is "0" cleared when it is read.</adr6>
0	ADR6RF	R	AD conversion result storage flag 0: Conversion result is not stored. 1: Conversion result is stored. If a conversion result is stored, "1" is set. This bit is "0" cleared when the conversion result is read.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				AD	R7			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADR7		-	-	-	-	OVR7	ADR7RF
After reset	0	0	0	0	0	0	0	0

# 14.3.17 ADREG7F (AD Conversion Result Register 7F)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADR7[9:0]	R	AD conversion result. Conversion result is stored. For information about the correlation between the conversion channel and the conversion result register, refer to the Table 14-2, chapter 14.4.5.7.
5-2	-	R	Read as 0.
1	OVR7	R	Overrun flag 0: Not generated 1: Generated If a conversion result is overwritten before reading <adr7>, "1" is set. This bit is "0" cleared when it is read.</adr7>
0	ADR7RF	R	AD conversion result storage flag 0: Conversion result is not stored. 1: Conversion result is stored. If a conversion result is stored, "1" is set. This bit is "0" cleared when the conversion result is read.

 $\ensuremath{\mathsf{Note}}\xspace$  Access to this register must be a half word or a word access.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				ADI	RSP			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADI	RSP	-	-	-	-	OVRSP	ADRSPRF
After reset	0	0	0	0	0	0	0	0

# 14.3.18 ADREGSP (AD Conversion Result Register SP)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADRSP[9:0]	R	AD conversion result.
5-2		R	Top-priority AD conversion result is stored Read as 0
1	OVRSP	R	Overrun flag 0: Not generated 1: Generated If a conversion result is overwritten before reading <adrsp>, "1" is set. This bit is "0" cleared when it is read.</adrsp>
0	ADRSPRF	R	AD conversion result storage flag 0: Conversion result is not stored. 1: Conversion result is stored. If a conversion result is stored, "1" is set. This bit is "0" cleared when the conversion result is read.

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				ADC	OM0			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADC	OM0	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0

## 14.3.19 ADCMP0 (AD Conversion Result Comparison Register 0)

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADCOM0[9:0]	R/W	When AD monitor function 0 is enabled, it sets a value to be compared with the value of the conversion result register specified by ADMOD3 <adregs0>.</adregs0>
5-0	-	R	Read as 0.

Note:To write values into this register, the AD monitor function 0 must be disabled (AD-MOD3<ADBSV0> ="0").

#### 14.3.20 ADCMP1 (AD Conversion Result Comparison Register 1)

	31	30	29	28	27	26	25	24
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
Bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
Bit symbol				ADC	OM1			
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
Bit symbol	ADCOM1		-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0

Bit	Bit Symbol	Туре	Function
31-16	-	R	Read as 0.
15-6	ADCOM1[9:0]	R/W	When AD monitor function 1 is enabled, it sets a value to be compared with the value of the conversion result register specified by ADMODt <adregs1>.</adregs1>
5-0	-	R	Read as 0.

Note: To write values into this register, the AD monitor function 1 must be disabled (AD-MOD5<ADBSV1>="0").

# 14.4 Description of Operations

#### 14.4.1 Analog Reference Voltage

The "High" level of the analog reference voltage shall be applied to the VRFEH pin, and the "Low" shall be applied to the VREFL pin.

To start AD conversion, make sure that you first write "1" to the <VREFON> bit, wait for 3 µs during which time the internal reference voltage should stabilize, and then write "1" to the ADMOD0<ADS> bit.

By writing "0" to the ADMOD1<VREFON> bit, a switched-on state of VREFH – VREFL can be turned into a switched -off state. To switch to the power-consumption mode, set "0" to the <VREFON> bit after conversion.

#### Note: VREFL and AVSS are shared by TMPM330FDFG/FYFG/FWFG.

#### 14.4.2 AD Conversion Mode

Two types of AD conversion are supported: normal AD conversion and top-priority AD conversion.

For normal AD conversion, the following four operation modes are supported.

#### 14.4.2.1 Normal AD conversion

For normal AD conversion, the following four operation modes are supported and the operation mode is selected with the ADMOD0<REPEAT, SCAN>.

- Fixed channel single conversion mode
- Channel scan single conversion mode
- Fixed channel repeat conversion mode
- Channel scan repeat conversion mode

#### (1) Fixed channel single conversion mode

If ADMOD0<REPEAT, SCAN> is set to "00", "AD conversion is performed in the fixed channel single conversion mode.

In this mode, AD conversion is performed once for one channel selected. After AD conversion is completed, ADMOD0<EOCFN> is set to "1", ADMOD0<ADBFN> is cleared to "0", and the AD conversion completion interrupt request (INTAD) is generated. <EOCFN> is cleared to "0" upon read.

#### (2) Channel scan single conversion mode

If ADMOD0 <REPEAT, SCAN> is set to "01," AD conversion is performed in the channel scan single conversion mode.

In this mode, AD conversion is performed once for each scan channel selected. After AD scan conversion is completed, ADMOD0<EOCFN> is set to "1", ADMOD0<ADBFN> is cleared to "0", and the conversion completion interrupt request (INTAD) is generated. <EOCFN> is cleared to "0".

(3) Fixed channel repeat conversion mode

If ADMOD0<REPEAT, SCAN> is set to "10", AD conversion is performed in fixed channel repeat conversation mode.

In this mode, AD conversion is performed repeatedly for one channel selected. After AD conversion is completed, ADMOD0<EOCFN> is set to "1". ADMOD0<ADBFN> is not cleared to "0". It remains at "1". The timing with which the conversion completion interrupt request (INTAD) is generated can be selected by setting ADMOD0<ITM> to an appropriate setting. <EOCFN> is set with the same timing as this interrupt INTAD is generated.

By reading <EOCFN>, it is cleared to "0".

#### (4) Channel scan repeat conversion mode

If ADMOD0<REPEAT, SCAN> is set to "11", AD conversion is performed in the channel scan repeat conversion mode.

In this mode, AD conversion is performed repeatedly for a scan channel selected. Each time one AD scan conversion is completed, ADMOD0<EOCFN> is set to "1", and the conversion completion interrupt request (INTAD) is generated. ADMOD0<ADBFN> is not cleared to "0". It remains at "1". <EOCFN> is cleared to "0" upon read.

#### 14.4.2.2 Top-priority AD conversion

By interrupting ongoing normal AD conversion, top-priority AD conversion can be performed.

The fixed-channel single conversion is automatically selected, irrespective of the ADMOD0<REPEAT, SCAN> setting. When conditions to start operation are met, a conversion is performed just once for a channel designated by ADMOD2<HPADCH>. When conversion is completed, the top-priority AD conversion completion interrupt (INTADHP) is generated, and ADMOD2<EOCFHP> showing the completion of AD conversion is set to "1". <ADBFHP> returns to "0". EOCFHP flag is cleared to "0" upon read.

Top-priority AD conversion activated while top-priority AD conversion is under way is ignored.

#### 14.4.3 AD Monitor Function

There are two channels of AD monitor function.

If ADMOD3<ADOBSV0> and ADMOD5<ADOBSV1> are set to "1", the AD monitor function is enabled. If the value of the conversion result register specified by ADMOD3<ADREGS0> and ADMOD5<ADREGS1> becomes larger or smaller ("Larger" or "Smaller" to be designated by ADMOD3<ADOBIC0> and AD-MOD5<ADBIC1>) than the value of a comparison register, the AD monitor function interrupt (INTADM0,IN-TADM1) is generated. This comparison operation is performed each time a result is stored in a corresponding conversion result register.

If the conversion result register assigned to perform the AD monitor function is continuously used without reading the conversion result, the conversion result is overwritten. The conversion result storage flag <ADRxRF> and the overrun flag <OVRx> remain being set.

14 4

#### 14.4.4 Selecting the Input Channel

After reset, ADMOD0<REPEAT,SCAN> is initialized to "00" and ADMOD1<ADCH[3:0]> is initialized to "0000".

The channels to be converted are selected according to the operation mode of the AD converter as shown below

- 1. Normal AD conversion mode
  - If the analog input channel is used in a fixed state (ADMOD0<SCAN> = "0")

One channel is selected from analog input pins AIN0 through AIN11 by setting AD-MOD1<ADCH> to an appropriate setting.

If the analog input channel is used in a scan state (ADMOD0 $\leq$ SCAN $\geq$  = "1")

One scan mode is selected from the scan modes by setting ADMOD1 <ADCH> and ADSCN to an appropriate setting.

2. Top-priority AD conversion mode

One channel is selected from analog input pins from AIN0 through AIN11 by setting AD-MOD2<HPADCH> to an appropriate setting.

#### 14.4.5 AD Conversion Details

#### 14.4.5.1 Starting AD Conversion

Normal AD conversion is activated by setting ADMOD0<ADS> to "1". Top-priority AD conversion is activated by setting ADMOD2<HPADCE> to "1".

Four operation modes are made available to normal AD conversion. In performing normal AD conversion, one of these operation modes must be selected by setting ADMOD0<REPEAT,SCAN> to an appropriate setting. For top-priority AD conversion, only one operation mode can be used: fixed channel single conversion mode.

Normal AD conversion can be activated using the H/W activation source selected by ADMOD4<ADHS>, and top-priority AD conversion can be activated using the HW activation source selected by AD-MOD4<HADHS>. If bits of <ADHS> and <HADHS> are "0", normal and top-priority AD conversions are activated in response to the input of a falling edge through the ADTRG pin. If these bits are "1", normal AD conversion is activated in response to TB6RG0 generated by the 16-bit timer 6, and top-priority AD conversion is activated in response to TB5RG0 generated by the 16-bit timer 5.

To permit H/W activation, set ADMOD4<ADHTG> to "1" for normal AD conversion and set AD-MOD4<HADHTG> to "1" for top-priority AD conversion.

Software activation is still valid even after H/W activation has been permitted.

Note: When an external trigger is used for the HW activation source of a top-priority AD conversion, an external trigger cannot be set for activating normal AD conversion H/W.

Note: The TMPM330FDFG/FYFG/FWFG disables the external trigger used for H/W activation. Therefore "0" cannot be set to <HADHS> and <ADHS>.

#### 14.4.5.2 AD Conversion

When normal AD conversion starts, the AD conversion Busy flag (ADMOD0<ADBFN>) showing that AD conversion is under way is set to "1".

When top-priority AD conversion starts, the top-priority AD conversion Busy flag (AD-MOD2<ADBFHP>) showing that AD conversion is underway is set to "1". At that time, the value of the Busy flag ADMOD0<ADBFN> for normal AD conversion before the start of top-priority AD conversions are retained. The value of the conversion completion flag ADMOD0<EOCFN> for normal AD conversion before the start of top-priority AD conversion before the start of top-priority AD conversion before the start of top-priority AD conversion is retained.

Note: Normal AD conversion must not be activated when top-priority AD conversion is under way.


#### 14.4.5.3 Top-priority AD conversion during normal AD conversion

If top-priority AD conversion has been activated during normal AD conversion, ongoing normal AD conversion is suspended, and restarts normal AD conversion after top-priority AD conversion is completed.

If ADMOD2<HPADCE> is set to "1" during normal AD conversion, ongoing normal AD conversion is suspended, and the top-priority AD conversion starts; specifically, AD conversion (fixed-channel single conversion) is executed for a channel designated by ADMOD2<HPADCH>. After the result of this top-priority AD conversion is stored in the storage register ADREGSP, normal AD conversion is resumed.

If H/W activation of top-priority AD conversion is authorized during normal AD conversion, ongoing AD conversion is discontinued when requirements for activation using a H/W activation resource are met, and top-priority AD conversion (fixed-channel single conversion) starts for a channel designated by AD-MOD2<HPADCH>. After the result of this top-priority AD conversion is stored in the storage register ADREGSP, normal AD conversion is resumed.

For example, if channel repeat conversion is activated for channels AIN0 through AIN3 and if <HPADCE> is set to "1" during AIN2 conversion, AIN2 conversion is suspended, and conversion is performed for a channel designated by <HPADCH> (AIN11 in the case shown below). After the result of conversion is stored in ADREGSP, channel repeat conversion is resumed, starting from AIN2.



#### 14.4.5.4 Stopping Repeat Conversion Mode

To stop the AD conversion operation in the repeat conversion mode (fixed-channel repeat conversion mode or channel scan conversion mode), write "0" to ADMOD0<REPEAT>. When ongoing AD conversion is completed, the repeat conversion mode terminates, and ADMOD0<ADBFN> is set to "0".

#### 14.4.5.5 Reactivating normal AD conversion

To reactivate normal AD conversion while the conversion is underway, a software reset (AD-MOD3<ADRST>) must be performed before starting AD conversion. The H/W activation method must not be used to reactivate normal AD conversion.

#### 14.4.5.6 Conversion completion

#### (1) Normal AD conversion completion

When normal AD conversion is completed, the AD conversion completion interrupt (INTAD) is generated. The result of AD conversion is stored in the storage register, and two registers change: the register ADMOD0<EOCFN> which indicates the completion of AD conversion and the register AD-MOD0<ADBFN>.

Interrupt request, conversion register storage register and <EOCFN><ADBFN> change with a different timing according to a mode selected.

In mode other than fixed-channel repeat conversion mode, conversion results are stored in AD conversion result registers (ADREG08 through ADRG7F) corresponding to a channel.

In fixed-channel repeat conversion mode, the conversion results are sequentially stored in storage registers ADREG08 through ADREG7F. However, if interrupt setting on <ITM> is set to be generated each time one AD conversion is completed, the conversion result is stored only in ADREG08. If interrupt setting on <ITM> is set to be generated each time four AD conversions are completed, the conversion results are sequentially stored in ADREG08H through ADREG3B.

Interrupt requests, flag changes and conversion result registers in each mode are as shown below.

Fixed-channel single conversion mode

After AD conversion completed, ADMOD0<EOCFN> is set to "1", ADMOD0<ADBFN> is cleared to "0", and the interrupt request is generated.

Conversion results are stored a conversion result register correspond to a channel.

• Channel scan single conversion mode

After the channel scan conversion is completed, ADMOD0<EOCFN> is set to "1", AD-MOD0<ADBFN> is set to "0", and the interrupt request INTAD is generated.

Conversion results are stored a conversion result register correspond to a channel.

• Fixed-channel repeat conversion mode

ADMOD0<ADBFN> is not cleared to "0". It remains at "1". The timing with which the interrupt request INTAD is generated can be selected by setting ADMOD0<ITM> to an appropriate setting. ADMOD0<EOCFN> is set with the same timing as this interrupt INTAD is generated.

a. One conversion

With <ITM[1:0]> set to "00", an interrupt request is generated each time one AD conversion is completed. In this case, the conversion results are always stored in the storage register ADREG08. After the conversion result is stored, <EOCFN> changes to "1".

b. Four conversions

With <ITM[1:0]> set to "01", an interrupt request is generated each time four AD conversions are completed. In this case, the conversion results are sequentially stored in the storage register ADREG08 through ADREG3B. After the conversion result is stored in ADREG3B, <EOCFN> is set to "1", and the storage of subsequent conversion results starts from ADREG08.

#### c. 8 conversions

With <ITM[1:0]> set to "10", an interrupt request is generated each time eight AD conversions are completed. In this case, the conversion results are sequentially stored in the storage register ADREG08 through ADREG7F. After the conversion result is stored in ADREG7F, <EOCFN> is set to "1", and the storage of subsequent conversion results starts from ADREG08.

Channel scan repeat conversion mode

Each time one AD conversion is completed, ADMOD0<EOCF> is set to "1" and interrupt request INTAD is generated. ADMOD0<ADBFN> is not cleared to "0". It remains at "1".

AD conversion results are stored in a AD conversion result register corresponding to a channel.

#### (2) Top-priority AD conversion completion

After the AD conversion is completed, the top-priority AD conversion completion interrupt (IN-TADHP) is generated, and ADMOD2<EOCFHP> which indicates the completion of top-priority AD conversion is set to "1".

AD conversion results are stored in the AD conversion result register SP.

#### (3) Data polling

To confirm the completion of AD conversion without using interrupts, data polling can be used. When AD conversion is completed, ADMOD0<EOCFN> is set to "1". To confirm the completion of AD conversion and to obtain the results, poll this bit.

AD conversion result storage register must be read by half word or word access. If  $\langle OVRx \rangle = "0"$  and  $\langle ADRxRF \rangle = "1"$ , a correct conversion result has been obtained.

#### 14.4.5.7 Interrupt generation timings and AD conversion result storage register

Table 14-1 shows a relation in the following three items: AD conversion modes, interrupt generation timings and flag operations. Table 14-2 shows a relation between analog channel inputs and AD conversion result registers.

#### Table 14-1 Relations in conversion modes, interrupt generation timings and flag operations

			epeat mode s (ADMOD0)	setting	Interrupt	<eocfn>/</eocfn>	ADMOD0	ADMOD2
Conversion mode		<repeat> <scain> <itm[1:0]></itm[1:0]></scain></repeat>		Interrupt generation timing	<eocfhp> set timing (See note)</eocfhp>	<adbfn> (After the interrupt is generated)</adbfn>	<adbfhp></adbfhp>	
	Fixed-channel single conversion	0	0	-	After generation is completed.	After conversion is completed.	0	-
	Fixed-channel repeat conversion	on 1	0	00	Each time one conversion is completed.	After one conver- sion is completed.	1	-
Namaal				01	Each time four conversion is completed.	After four conver- sions are comple- ted.	1	-
Normal conversion				10	Each time eight conversion is completed.	After eight conver- sions are comple- ted.	1	-
	Channel scan single conversion	0	1	-	After scan con- version is completed.	After scan conver- sion is completed.	0	-
	Channel scan repeat conversion	1	1	-	After one scan conversion is completed.	After one scan con- version is comple- ted.	1	-
Top-pri	Top-priority conversion		-	-	After completion is completed.	Conversion com- pletion	-	0

Note: ADMOD0<EOCFN> and ADMOD2<EOCFHP> are cleared upon read.

#### Table 14-2 Relation between analog channels input and AD conversion result registers

		Normal AD	conversion			
Analog input channels	Other conversion mode than those shown on the right side	Fixed channel repeat conversion mode (every one conversion)	Fixed channel repeat conversion mode (every four conver- sions)	Fixed channel repeat conversion mode (every eight conver- sions)	Top-priority AD conver- sion	
AIN0	ADREG08	ADREG08 fixed			ADREGSP	
AIN1	ADREG19			ADREG08		
AIN2	ADREG2A		ADREG3B	Ļ		
AIN3	ADREG3B			↓ ADREG7F —		
AIN4	ADREG4C			ADICEOT		
AIN5	ADREG5D					
AIN6	ADREG6E					
AIN7	ADREG7F					
AIN8	ADREG08					
AIN9	ADREG19					
AIN10	ADREG2A					
AIN11	ADREG3B					

Note: To access the conversion result register, use a half-word or a word access.

Cautions

The result value of AD conversion may vary depending on the fluctuation of the supply voltage, or may be affected by noise. When using analog input pins and ports alternately, do not read and write ports during conversion because the conversion accuracy may be reduced. Also the conversion accuracy may be reduced if the output ports current fluctuate during AD conversion. Please take counteractive measures with the program such as averaging the AD conversion results.

#### 14.4 Description of Operations

# 15. Watchdog Timer(WDT)

The watchdog timer (WDT) is for detecting malfunctions (runaways) of the CPU caused by noises or other disturbances and remedying them to return the CPU to normal operation.

If the watchdog timer detects a runaway, it generates a INTWDT interrupt or reset.

Note: INTWDT interrupt is a factor of the non-maskable interrupts (NMI).

Also, the watchdog timer notifies of the detecting malfunction to the external peripheral devices from the watchdog timer pin ( $\overline{\text{WDTOUT}}$ ) by outputting "Low".

Note: This product does not have the watchdog timer out pin (WDTOUT).

# 15.1 Configuration

Figure 15-1shows the block diagram of the watchdog timer.

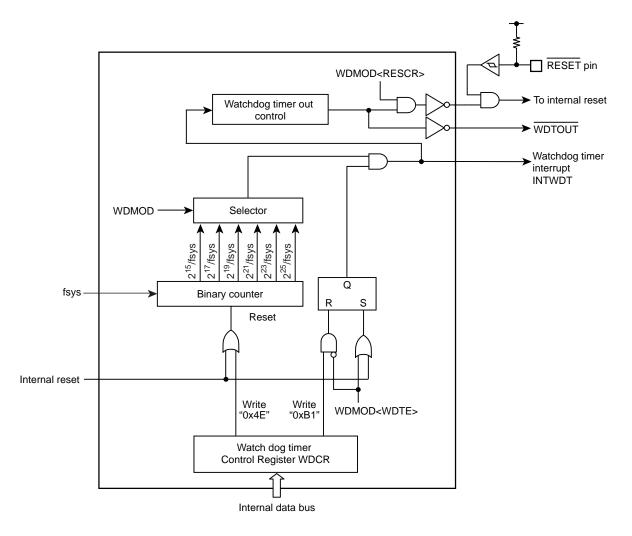


Figure 15-1 Block Diagram of the Watchdog Timer

# 15.2 Register

The followings are the watchdog timer control registers and addresses.

		Base Address = 0x4004_0000
Register name		Address(Base+)
Watchdog Timer Mode Register	WDMOD	0x0000
Watchdog Timer Control Register	WDCR	0x0004

# 15.2.1 WDMOD(Watchdog Timer Mode Register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	WDTE		WDTP		-	I2WDT	RESCR	-
After reset	1	0	0	0	0	0	1	0

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7	WDTE	R/W	Enable/Disable control 0:Disable 1:Enable
6-4	WDTP[2:0]	R/W	Selects WDT detection time(Refer toTable 15-1)           000: 2 <sup>15</sup> /fsys         100: 2 <sup>23</sup> /fsys           001: 2 <sup>17</sup> /fsys         101: 2 <sup>25</sup> /fsys           010: 2 <sup>19</sup> /fsys         110: Setting prohibited.           011: 2 <sup>21</sup> /fsys         111: Setting prohibited.
3	-	R	Read as 0.
2	I2WDT	R/W	Operation when IDLE mode 0: Stop 1:In operation
1	RESCR	R/W	Operation after detecting malfunction 0: INTWDT interrupt request generates. (Note) 1: Reset
0	-	R/W	Write 0.

Note: INTWDT interrupt is a factor of the non-maskable interrupts (NMI).

Clock gear value	WDMOD <wdtp[2:0]></wdtp[2:0]>								
CGSYSCR <gear[2:0]></gear[2:0]>	000	001	010	011	100	101			
000 (fc)	0.82 ms	3.28 ms	13.11 ms	52.43 ms	209.72 ms	838.86 ms			
100 (fc/2)	1.63 ms	6.55 ms	26.21 ms	104.86 ms	419.43 ms	1.68 s			
101 (fc/4)	3.28 ms	13.11 ms	52.43 ms	209.72 ms	838.86 ms	3.36 s			
110 (fc/8)	6.55 ms	26.21 ms	104.86 ms	419.43 ms	1.68 s	6.71 s			

Table 15-1 Detection time of	watchdog timer (fc = 40 MHz)
------------------------------	------------------------------

# 15.2.2 WDCR (Watchdog Timer Control Register)

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	WDCR							
After reset	-	-	-	-	-	-	-	-

Bit	Bit Symbol	Туре	Function
31-8	-	R	Read as 0.
7-0	WDCR	W	Disable/Clear code
			0xB1:Disable code
			0x4E: Clear code
			Others:Reserved

# 15.3 Operations

#### 15.3.1 Basic Operation

The Watchdog timer is consists of the binary counters that work using the system clock (fsys) as an input. Detecting time can be selected between  $2^{15}$ ,  $2^{17}$ ,  $2^{19}$ ,  $2^{21}$ ,  $2^{23}$  and  $2^{25}$  by the WDMOD<WDTP[2:0]>. The detecting time as specified is elapsed, the watchdog timer interrupt (INTWDT) generates, and the watchdog timer out pin (WDTOUT) output "Low".

To detect malfunctions (runaways) of the CPU caused by noise or other disturbances, the binary counter of the watchdog timer should be cleared by software instruction before INTWDT interrupt generates. If the binary counter is not cleared, the non-maskable interrupt generates by INTWDT. Thus CPU detects malfunction (runway), malfunction countermeasure program is performed to return to the normal operation.

Additionally, it is possible to resolve the problem of a malfunction (runaway) of the CPU by connecting the watchdog timer out pin to reset pins of peripheral devices.

Note: This product does not include a watchdog timer out pin ( $\overline{WDTOUT}$ ).

### 15.3.2 Operation Mode and Status

The watchdog timer begins operation immediately after a reset is cleared.

If not using the watchdog timer, it should be disabled.

The watchdog timer cannot be used in the STOP mode, SLEEP mode and SLOW mode where high-speed frequency clock is stopped. Before transition to these modes, the watchdog timer should be disabled.

In IDLE mode, its operation depends on the WDMOD <I2WDT> setting.

Also, the binary counter is automatically stopped during debug mode.

# TOSHIBA

# 15.4 Operation when malfunction (runaway) is detected

### 15.4.1 INTWDT interrupt generation

In the Figure 15-2 shows the case that INTWDT interrupt generates (WDMOD<RESCR>="0").

When an overflow of the binary counter occurs, INTWDT interrupt generates. It is a factor of non-maskable interrupt (NMI). Thus CPU detects non-maskable interrupt and performs the countermeasure program.

The factor of non-maskable interrupt is the plural. CGNMIFLG identifies the factor of non-maskable interrupts. In the case of INTWDT interrupt, CGNMIFLG<NMIFLG0> is set.

When INTWDT interrupt generates, simultaneously the watchdog timer out ( $\overline{WDTOUT}$ ) output "Low".  $\overline{WDTOUT}$  becomes "High" by the watchdog timer clearing that is writing clear code 0x4E to the WDCR register.

Note: This product does not have the watchdog timer output pin(WDTOUT).

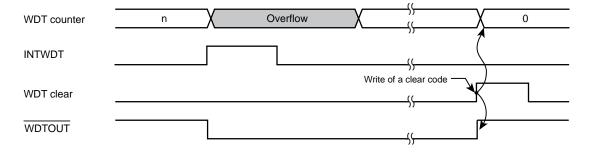


Figure 15-2 INTWDT interrupt generation

#### 15.4.2 Internal reset generation

Figure 15-3 shows the internal reset generation (WDMOD<RESCR>="1").

MCU is reset by the overflow of the binary counter. In this case, reset status continues for 32 states. A clock is initialized so that input clock (fsys) is the same as a high-speed frequency clock (fosc). This means fsys = fosc.

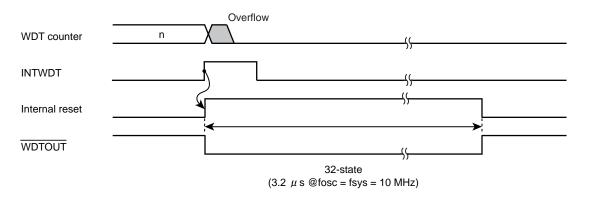


Figure 15-3 Internal reset generation

## 15.5 Control register

The watchdog timer (WDT) is controlled by two control registers WDMOD and WDCR.

#### 15.5.1 Watchdog Timer Mode Register (WDMOD)

1. Specifying the detection time of the watchdog timer <WDTP[2:0]>.

Set the watchdog timer detecting time to WDMOD<WDTP[2:0]>. After reset, it is initialized to WDMOD<WDTP[2:0]> = "000".

2. Enabling/disabling the watchdog timer <WDTE>.

When resetting, WDMOD <WDTE> is initialized to "1" and the watchdog timer is enabled.

To disable the watchdog timer to protect from the error writing by the malfunction, first  $\langle WDTE \rangle$  bit is set to "0", and then the disable code (0xB1) must be written to WDCR register.

To change the status of the watchdog timer from "disable" to "enable," set the <WDTE> bit to "1".

3. Watchdog timer out reset connection <RESCR>

This register specifies whether WDTOUT is used for internal reset or interrupt. After reset, WDMOD<RESCR> is initialized to "1", the internal reset is generated by the overflow of binary counter.

### 15.5.2 Watchdog Timer Control Register(WDCR)

This is a register for disabling the watchdog timer function and controlling the clearing function of the binary counter.

#### 15.5.3 Setting example

#### 15.5.3.1 Disabling control

By writing the disable code (0xB1) to this WDCR register after setting WDMOD <WDTE> to "0," the watchdog timer can be disabled and the binary counter can be cleared.

WDMOD Set <WDTE> to "0". \_ WDCR Writes the disable code (0xB1). 

#### 15.5.3.2 Enabling control

Set WDMOD <WDTE> to "1".

 7
 6
 5
 4
 3
 2
 1
 0

 WDMOD
 ←
 1
 Set <WDTE> to "1".

#### 15.5.3.3 Watchdog timer clearing control

Writing the clear code (0x4E) to the WDCR register clears the binary counter and it restarts counting.

WDCR 0 Writes the clear code (0x4E). 

#### 15.5.3.4 Detection time of watchdog timer

In the case that 2<sup>21</sup>/fsys is used, set "011" to WDMOD<WDTP[2:0]>.


# TOSHIBA

# 16. Real Time Clock (RTC)

# 16.1 Function

- 1. Clock (hour, minute and second)
- 2. Calendar (month, week, date and leap year)
- 3. Selectable 12 (am/ pm) and 24 hour display
- 4. Time adjustment + or -30 seconds (by software)
- 5. Alarm (alarm output)
- 6. Alarm interrupt

# 16.2 Block Diagram

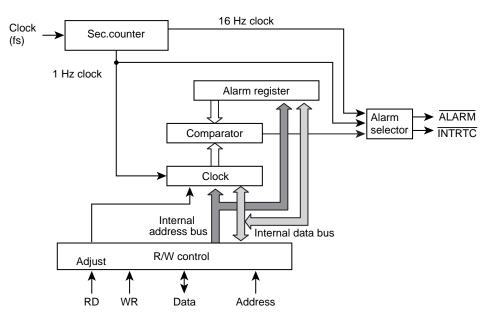



- Note 1: Western calendar year column: This product uses only the final two digits of the year. The year following 99 is 00 years. Please take into account the first two digits when handling years in the western calendar.
- Note 2: Leap year: A leap year is divisible by 4 excluding a year divisible by 100; the year divisible by 100 is not considered to be a leap year. Any year divisible by 400 is a leap year. This product is considered the year divisible by 4 to be a leap year and does not take into account the above exceptions. It needs adjustments for the exceptions.

# 16.3 Detailed Description Register

#### 16.3.1 Register List

The registers and the addresses related to RTC are shown as below.

RTC has two functions, PAGE0 (clock) and PAGE1 (alarm), which share some parts of registers.

The PAGE can be selected by setting RTCPAGER<PAGE >.

		Base Address = 0x4004_0100
Register name		Address(Base+)
Second column register (only PAGE0)	RTCSECR	0x0000
Minute column register	RTCMINR	0x0001
Hour column register	RTCHOURR	0x0002
- (note 1)	-	0x0003
Day of the week column register	RTCDAYR	0x0004
Day column register	RTCDATER	0x0005
Month column register (PAGE0) Selection register of 24-hour,12-hour (PAGE1)	RTCMONTHR	0x0006
Year column register (PAGE0) Leap year register (PAGE1)	RTCYEARR	0x0007
PAGE register	RTCPAGER	0x0008
- (note 1)	-	0x0009
- (note 1)	-	0x000A
- (note 1)	-	0x000B
Reset register	RTCRESTR	0x000C
Reserved	-	0x000D
- (note 1)	-	0x000E
- (note 1)	-	0x000F

Note 1: "0" is read by reading the address. Writing is disregarded. Note 2: Access to the "Reserved" areas is prohibited.

### 16.3.2 Control Register

Reset operation initializes the following registers.

- RTCPAGER<PAGE>, <ADJUST>, <INTENA>
- RTCRESTR<RSTALM>, <RSTTMR>, <DIS16HZ>, <DIS1HZ>

Other clock-related registers are not initialized by reset operation.

Before starting the RTC, set the time, month, day, day of the week, year and leap year in the relevant registers.

Caution is required in setting clock data, adjusting seconds or resetting the clock.

Refer to "16.4.3 Entering the Low Power Consumption Mode" for more information.

Symbol	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	Function	
RTCSECR	-	40sec.	20sec.	10sec.	8sec.	4sec.	2sec.	1sec.	Second column	
RTCMINR	-	40min.	20min.	10min.	8min.	4min.	2min.	1min.	Minute column	
RTCHOURR	-	-	20hours PM/AM	10hour	8hour	4hour	2hour	1hours	Hour column	
RTCDAYR	-	-	-	-	-	D	Day of the week		Day of the week column	
RTCDATER	-	-	Day20	Day10	Day8	Day4	Day2	Day1	Day column	
RTCMONTHR	-	-	-	Oct.	Aug.	Apr.	Feb.	Jan.	Month column	
RTCYEARR	year 80	year 40	year20	year 10	year 8	year 4	year 2	ear 2 year 1 Year colu (lower two co		
RTCPAGER	Interrupt enable	-	-	Adjustment function	Clock ena- ble	Alarm en- able	-	PAGE setting	PAGE register	
RTCRESTR	1 Hz enable	16 Hz enable	Clock reset	Alarm reset	-	(FD/FY) – (FW) Alway	s write "1"		Reset register	

#### Table 16-1 PAGE0 (clock function) register

Note: Reading RTCSECR, RTCMINR, RTCHOURR, RTCDAYR, RTCMONTHR, RTCYEARR of PAGE0 captures the current state.

#### Table 16-2 PAGE1 (alarm function) registers

Symbol	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	Function
RTCSECR	-	-	-	-	-	-	-	-	-
RTCMINR	-	40min.	20min.	10min.	8min.	4min.	2min.	1min.	Minute column
RTCHOURR	-	-	20hours PM/AM	10hour	8hour	4hour	2hour	1hour	Hour column
RTCDAYR	-	-	-	-	-	Day of the week		Day of the week column	
RTCDATER	-	-	Day20	Day10	Day8	Day4	Day2	Day1	Day column
RTCMONTHR	-	-	-	-	-	-	-	24/12	24-hour clock mode
RTCYEARR	-	-	-	-	-	-	Leap-yea	ar setting	Leap-year mode
RTCPAGER	Interrupt enable	_	-	Adjustment function	Clock ena- ble	Alarm en- able	_	PAGE setting	PAGE register
RTCRESTR	1 Hz Enable	16 Hz Enable	Clock reset	Alarm reset	-	(FD/FY) – (FW) Alway	s write "1"	\$	Reset register

Note 1: Reading RTCMINR, RTCHOURR, RTCDAYR, RTCMONTHR, RTCYEARR of PAGE1 captures the current state. Note 2: RTCSECR, RTCMINR, RTCHOURR, RTCDAYR, RTCDATER, RTCMONTHR, RTCYEARR of PAGE0 and RTCYEARR of PAGE1 (for leap year) must be read twice and compare the data captured.

Note: Regarding the Table 16-1 and the Table 16-2,"FD" indicates TMPM330FDFG, "FY" indicates TMPM330FYFG and "FW" indicates TMPM330FWFG.

## 16.3.3 Detailed Description of Control Register

### 16.3.3.1 RTCSECR (Second column register (for PAGE0 only))

	7	6	5	4	3	2	1	0
bit symbol	-				SE			
After reset	0	Undefined						

Bit	Bit Symbol	Туре		Functon			
7	-	R	Read as 0.	Read as 0.			
6-0	SE	R/W	Setting digit register of second				
			000_0000 : 00sec.	001_0000 : 10sec.	010_0000 : 20sec.		
			000_0001 : 01sec.	001_0001 : 11sec.			
			000_0010 : 02sec.	001_0010 : 12sec.	011_0000 : 30sec.		
			000_0011 : 03sec.	001_0011 : 13sec.	•		
			000_0100 : 04sec.	001_0100 : 14sec.	100_0000 : 40sec.		
			000_0101 : 05sec.	001_0101 : 15sec.			
			000_0110 : 06sec.	001_0110 : 16sec.	101_0000 : 50sec.		
			000_0111 : 07sec.	001_0111 : 17sec.			
			000_1000 : 08sec.	001_1000 : 18sec.	•		
			000_1001 : 09sec.	001_1001 : 19sec.	101_1001 : 59sec.		

Note: The setting other than listed above is prohibited.

#### 16.3.3.2 RTCMINR (Minute column register (PAGE0/1))

	7	6	5	4	3	2	1	0
Bit symbol	-				MI			
After reset	0	Undefined						

Bit	Bit Symbol	Туре	Functon			
7	-	R	Read as 0.			
6-0	МІ	R/W	Setting digit register of Minutes.			
			000_0000 : 00min.	001_0000 : 10min.	010_0000 : 20min.	
			000_0001 : 01min.	001_0001 : 11min.		
			000_0010 : 02min.	001_0010 : 12min.	011_0000 : 30min.	
			000_0011 : 03min.	001_0011 : 13min.		
			000_0100 : 04min.	001_0100 : 14min.	100_0000 : 40min.	
			000_0101 : 05min.	001_0101 : 15min.	•	
			000_0110 : 06min.	001_0110 : 16min.	101_0000 : 50min.	
			000_0111 : 07min.	001_0111 : 17min.		
			000_1000 : 08min.	001_1000 : 18min.		
			000_1001 : 09min.	001_1001 : 19min.	101_1001 : 59min.	

Note: The setting other than listed above is prohibited.

16.3.3.3 RTCHOURR (Hour column register(PAGE0/1))

							-	
	7	6	5	4	3	2	1	0
Bit symbol	-	-			Н	0		
After reset	0	0	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined

(1)	24-hour clock mode (	(RTCMONTHR <mo0>= "1")</mo0>
(1)		$(1 \times 10 \times 10^{10} \times 10^{10} \times 10^{10})$

Bit	Bit Symbol	Туре		Functon					
7-6	-	R	Read as 0.						
5-0	но	R/W	Setting digit register of Ho	our.					
			00_0000 : 0 o'clock	01_0000 : 10 o'clock	10_0000 : 20 o'clock				
			00_0001 : 1 o'clock	01_0001 : 11 o'clock	10_0001 : 21 o'clock				
			00_0010 : 2 o'clock	01_0010 : 12 o'clock	10_0010 : 22 o'clock				
			00_0011 : 3 o'clock	01_0011 : 13 o'clock	10_0011 : 23 o'clock				
			00_0100 : 4 o'clock	01_0100 : 14 o'clock					
			00_0101 : 5 o'clock	01_0101 : 15 o'clock					
			00_0110 : 6 o'clock	01_0110 : 16 o'clock					
			00_0111 : 7 o'clock	01_0111 : 17 o'clock					
			00_1000 : 8 o'clock	01_1000 : 18 o'clock					
			00_1001 : 9 o'clock	01_1001 : 19 o'clock					

Note: The setting other than listed above is prohibited.

(2) 12-hour clock mode (RTCMONTHR<MO0> = "0")

	7	6	5	4	3	2	1	0
Bit symbol	-	-	НО					
After reset	0	0	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined

Bit	Bit Symbol	Туре		Functon
7-6	-	R	Read as 0.	
5-0	НО	R/W	Setting digit register of Ho	Dur.
			(AM)	(PM)
			00_0000 : 0 o'clock	10_0000 : 0 o'clock
			00_0001 : 1 o'clock	10_0001 : 1 o'clock
			00_0010 : 2 o'clock	10_0010 : 2 o'clock
			00_0011 : 3 o'clock	10_0011 : 3 o'clock
			00_0100 : 4 o'clock	10_0100 : 4 o'clock
			00_0101 : 5 o'clock	10_0101 : 5 o'clock
			00_0110 : 6 o'clock	10_0110 : 6 o'clock
			00_0111 : 7 o'clock	10_0111 : 7 o'clock
			00_1000 : 8 o'clock	10_1000 : 8 o'clock
			00_1001 : 9 o'clock	10_1001 : 9 o'clock
			01_0000 : 10 o'clock	11_0000 : 10 o'clock
			01_0001 : 11 o'clock	11_0001 : 11 o'clock

Note: The setting other than listed above is prohibited.

#### 16.3.3.4 RTCDAYR (Day of the week column register(PAGE0/1))

	7	6	5	4	3	2	1	0
Bit symbol	-	-	-	-	-	WE		
After reset	0	0	0	0	0	Undefined	Undefined	Undefined

Bit	Bit Symbol	Туре	Function			
7-3	-	R	Read as 0.			
2-0	WE	R/W	Setting digit register of day of the week.			
			000: Sunday			
			1: Monday			
			0: Tuesday			
			1: Wednesday			
			100: Thursday			
			101: Friday			
			110: Saturday			

Note: The setting other than listed above is prohibited.

#### 16.3.3.5 RTCDATER (Day column register (for PAGE0/1 only))

	7	6	5	4	3	2	1	0
Bit symbol	-	-	DA					
After reset	0	0	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined

Bit	Bit Symbol	Туре		Functon					
7-6	-	R	Read as 0.						
5-0	DA	R/W	Setting digit register of day.						
				01_0000 : 10th day	10_0000 : 20th day	11_0000 : 30th day			
			00_0001 : 1st day	01_0001 : 11th day	10_0001 : 21th day	11_0001 : 31th day			
			00_0010 : 2nd day	01_0010 : 12th day	10_0010 : 22th day				
			00_0011 : 3rd day	01_0011 : 13th day	10_0011 : 23th day				
			00_0100 : 4th day	01_0100 : 14th day	10_0100 : 24th day				
			00_0101 : 5th day	01_0101 : 15th day	10_0101 : 25th day				
			00_0110 : 6th day	01_0110 : 16th day	10_0110 : 26th day				
			00_0111 : 7th day	01_0111 : 17th day	10_0111 : 27th day				
			00_1000 : 8th day	01_1000 : 18th day	10_1000 : 28th day				
			00_1001 : 9th day	01_1001 : 19th day	10_1001 : 29th day				

Note 1: The setting other than listed above is prohibited.

Note 2: Do not set for non-existent days (e.g.: 30th Feb.).

### 16.3.3.6 RTCMONTHR (Month column register (for PAGE0 only))

	7	6	5	4	3 2 1 0					
Bit symbol	-	-	-	MO						
After reset	0	0	0	Undefined	Undefined	Undefined	Undefined	Undefined		

Bit	Bit Symbol	Туре		Functon								
7-5	-	R	Read as 0.	Read as 0.								
4-0	МО	R/W	Setting digi	etting digit register of Month.								
			0_0001 :	January	0_0111:	July						
			0_0010 :	February	0_1000 :	August						
			0_0011 :	March	0_1001 :	September						
			0_0100 :	April	1_0000 :	October						
			0_0101 :	May	1_0001 :	November						
			0_0110 :	June	1_0010 :	December						

Note: The setting other than listed above is prohibited.

#### 16.3.3.7 RTCMONTHR (Selection of 24-hour clock or 12-hour clock24(for PAGE1 only))

	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	MO0
After reset	0	0	0	0	0	0	0	Undefined

Bit	Bit Symbol	Туре	Function
7-1	-	R	Read as 0.
0	MO0	R/W	0: 12-hour
			1: 24-hour

Note: Do not change the RTCMONTHR<MO0> while the RTC is in operation.

## 16.3.3.8 RTCYEARR (Year column register (for PAGE0 only))

	7	6	5	4	3	2	1	0			
bit symbol		YE									
After reset	Undefined	Undefined	Undefined	Undefined Undefined		Undefined	Undefined	Undefined			

Bit	Bit Symbol	Туре		Functio	n
7-0	YE	R/W	Setting digit register of Year.		
			0000_0000 : 00 years	0001_0000 : 10 years	0110_0000 : 60 years
			0000_0001 : 01 years		•
			0000_0010 : 02 years	0010_0000 : 20 years	0111_0000 : 70 years
			0000_0011 : 03 years		
			0000_0100 : 04 years	0011_0000 : 30 years	1000_0000 : 80 years
			0000_0101 : 05 years	•	
			0000_0110 : 06 years	0100_0000 : 40 years	1001_0000 : 90 years
			0000_0111 : 07 years		
			0000_1000 : 08 years	01001_0000 : 50 years	
			0000_1001 : 09 years	•	1001_1001 : 99 years

Note: The setting other than listed above is prohibited.

#### 16.3.3.9 RTCYEARR (Leap year register (for PAGE1 only))

	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	LEAP	
After reset	0	0	0	0	0	0	Undefined Undefined	

Bit	Bit Symbol	Туре	Functon
7-2	-	R	Read as 0.
1-0	LEAP	R/W	00 : leap year 01 : one year after leap year 10 : two years after leap year 11 : three years after leap year

# <u>TOSHIBA</u>

### 16.3.3.10 RTCPAGER(PAGE register(PAGE0/1))

	7	6	5	4	3	2	1	0
Bit symbol	INTENA	-	-	ADJUST	ENATMR	ENAALM	-	PAGE
After reset	0	0	0	0	Undefined	Undefined	0	0

Bit	Bit Symbol	Туре	Function
7	INTENA	R/W	INTRTC
			0:Disable
			1:Enable
6-5	-	R	Read as 0.
4	ADJUST	R/W	[Write]
			0: Don't care
			1: Sets ADJUST request
			Adjusts seconds. The request is sampled when the sec. counter counts up.
			If the time elapsed is between 0 and 29 seconds, the sec. counter is cleared to "0".
			If the time elapsed is between 30 and 59 seconds, the min. counter is carried and sec. counter is cleared
			to "0".
			[Read]
			0: ADJUST no request
			1: ADJUST requested
			If "1" is read, it indicates that ADJUST is being executed. If "0" is read, it indicates that the execution
			is finished.
3	ENATMR	R/W	Clock
			0: Disable
			1: Enable
2	ENAALM	R/W	ALARM
			0: Disable
			1: Enable
1	-	R	Read as 0.
0	PAGE	R/W	PAGE selection
			0:Selects Page0
			1:Selects Page1

Note 1: A read-modify-write operation cannot be porfomed.

Note 2: To set interrupt enable bits to <ENATMR>, <ENAALM> and <INTENA>, you must follow the order specified here. Make sure not to set them at the same time (make sure that there is time lag between interrupt enable and clock/ alarm enable).To change the setting of <ENATMR> and <ENAALM>, <INTENA> must be disabled first.

Example: Clock setting/Alarm setting

		7	6	5	4	3	2	1	0	
RTCPAGER	←	0	0	0	0	1	1	0	0	Enables Clock and alarm
RTCPAGER	←	1	0	0	0	1	1	0	0	Enables interrupt

## 16.3.3.11 RTCRESTR (Reset register (for PAGE0/1))

	7	6	5	4 3		2	1	0
Bit symbol	DIS1HZ	DIS16HZ	RSTTMR	RSTALM	-	-	-	-
After reset	1	1	0	0	0	0(FD/FY) 1(FW)	0(FD/FY) 1(FW)	0(FD/FY) 1(FW)

Bit	Bit Symbol	Туре	Function				
7	DIS1HZ	R/W	1 Hz				
			0:Enable				
			1: Disable				
6	DIS16HZ	R/W	16 Hz				
			0: Enable				
			1: Disable				
5	RSTTMR	R/W	[Write]				
			0: Don't care				
			1: Sec.counter reset				
			Resets the sec counter. The equest is sampled using low-speed clock.				
			[Read]				
			0: No reset request				
			1: RESET requested				
			If "1" is read, it indicates that RESET is being executed. If "0" is read, it indicates that the execution is				
			finished.				
4	RSTALM	R/W	0:Don't care				
			1: Alarm reset				
			Initializes alarm registers (Minute column, hour column, day column and day of the week column) as				
			follows.				
			MInute:00, Hour:00, Day:01, Day of the week:Sunday				
3	-	R	Read as 0.				
2-0	-	R	FD/FY(Note2) : Read as 0.				
		R/W	FW(Note2) : Write "1".				

Note 1: A read-modify-write operation cannot be performed.

Note 2: "FD" indicates TMPM330FDFG, "FY" indicates TMPM330FYFG and "FW" indicates TMPM330FWFG.

The setting of <DIS1HZ> and <DIS16MHZ>,RTCPAGER<ENAALM> used for alarm, 1Hz interrupt and 16Hz interrupt is shown as below.

<dis1hz></dis1hz>	<dis16hz></dis16hz>	RTCPAGER <enaalm></enaalm>	Interrupt source signal
1	1	1	Alarm
0	1	0	1 Hz
1	0	0	16 Hz
	Interrupt not generated.		

# 16.4 Operational Description

The RTC incorporates a second counter that generates a 1Hz signal from a 32.768 kHz signal.

The second counter operation must be taken into account when using the RTC.

### 16.4.1 Reading clock data

1. Using 1Hz interrupt

The 1Hz interrupt is generated being synchronized with counting up of the second counter.

Data can be read correctly if reading data after 1Hz interrupt occurred.

2. Using pair reading

There is a possibility that the clock data may be read incorrectly if the internal counter operates carry during reading. To ensure correct data reading, read the clock data twice as shown below. A pair of data read successively needs to match.

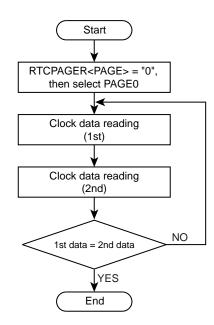


Figure 16-2 Flowchart of the clock data reading

### 16.4.2 Writing clock data

A carry during writing ruins correct data writing. The following procedure ensures the correct data writing.

1. Using 1 Hz interrupt

The 1Hz interrupt is generated by being synchronized with counting up of the second counter. If data is written in the time between 1Hz interrupt and subsequent one second count, it completes correctly.

2. Resetting counter

Write data after resetting the second counter.

The 1Hz-interrupt is generated one second after enabling the interrupt subsequent to counter reset.

The time must be set within one second after the interrupt.

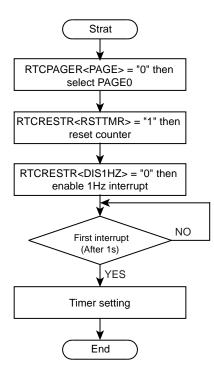


Figure 16-3 Flowchart of the clock data writing

3. Disabling the clock

Writing "0" to RTCPAGER<ENATMR> disables clock operation including a carry. Stop the clock after the 1Hz-interrupt. The second counter keeps counting. Set the clock again and enable the clock within one second before next 1Hz-interrupt

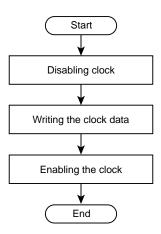


Figure 16-4 Flowchart of the disabling clock

# 16.4.3 Entering the Low Power Consumption Mode

To enter SLEEP mode, in which the system clock stops, after changing clock data, adjusting seconds or resetting the clock, be sure to observe one of the following procedures

- 1. After changing the clock setting registers, setting the RTCPAGER<ADJUST> bit or setting the RTCRESTR<RSTTMR> bit, wait for one second for an interrupt to be generated.
- 2. After changing the clock setting registers, setting the RTCPAGER<ADJUST> bit or setting the RTCRESTR<RSTTMR> bit, read the corresponding clock register values, <ADJUST> or <RSTTMR> to make sure that the setting you have made is reflected.

# 16.5 Alarm function

By writing "1" to RTCPAGER<PAGE>, the alarm function of the PAGE1 registers is enabled. One of the following three signals is output to the ALARM pin.

- 1. "Low" pulse (when the alarm register corresponds with the clock)
- 2. 1Hz cycle "Low" pulse
- 3. 16Hz cycle "Low" pulse

In any cases shown above, the INTRTC outputs one cycle pulse of low-speed clock. It outputs the INTRTC interrupt request simultaneously.

The INTRTC interrupt signal is falling edge triggered. Specify the falling edge as the active state in the CG Interrupt Mode Control Register

### 16.5.1 "Low" pulse (when the alarm register corresponds with the clock)

"Low" pulse is output to the ALARM pin when the values of the PAGE0 clock register and the PAGE1 alarm register correspond. The INTRTC interrupt is generated and the alarm is triggered.

The alarm settings

Initialize the alarm with alarm prohibited. Write "1" to RTCRESTR<RSTALM>.

It makes the alarm setting to be 00 minute, 00 hour, 01 day and Sunday.

Setting alarm for min., hour, date and day is done by writing data to the relevant PAGE1 register.

Enable the alarm with the RTCPAGER <ENAALM> bit. Enable the interrupt with the RTCPAGER <INTE-NA> bit.

The following is an example program for outputting an alarm from the ALARM pin at noon (12:00) on Monday 5th.

		7	6	5	4	3	2	1	0	
RTCPAGER	←	0	0	0	0	1	0	0	1	Disables alarm, sets PAGE1
RTCRESTR	←	1	1	0	1	0	0	0	0	Initializes alarm
RTCDAYR	←	0	0	0	0	0	0	0	1	Monday
RTCDATER	←	0	0	0	0	0	1	0	1	5th day
RTCHOURR	←	0	0	0	1	0	0	1	0	Sets 12 o'clock
RTCMINR	←	0	0	0	0	0	0	0	0	Sets 00 min
RTCPAGER	←	0	0	0	0	1	1	0	0	Enables alarm
RTCPAGER	$\leftarrow$	1	0	0	0	1	1	0	0	Enables interrupts

The above alarm works in synchronization with the low-speed clock. When the CPU is operating at high frequency oscillation, a maximum of one clock delay at fs (about  $30\mu s$ ) may occur for the time register setting to become valid.

Note: To make the alarm work repeatedly (e.g. every Wednesday at 12:00), next alarm must be set during the INTRTC interrupt routine that is generated when the time set for the alarm matches the RTC count.

# 16.5.2 1Hz cycle "Low" pulse1 Hz

The RTC outputs a "Low" pulse cycle of low-speed 1Hz clock to the  $\overline{\text{ALARM}}$  pin by setting RTCPAG-ER<INTENA>="1" after setting RTCPAGER<ENAALM>= "0", RTCRESTR<DIS1HZ>= "0" and <DIS16HZ>= "1". It generates an INTRTC interrupt simultaneously.

## 16.5.3 16Hz cycle "Low" pulse16 Hz

The RTC outputs a "Low" pulse cycle of low-speed 16Hz clock to the ALARM pin by setting RTCPAG-ER<INTENA>="1" after setting RTCPAGER<ENAALM>= "0", RTCRESTR<DIS1HZ>= "1" and <DIS16HZ>= "0". It generates an INTRTC interrupt simultaneously. 16. Real Time Clock (RTC)

#### 16.5 Alarm function

# 17. Flash Memory Operation

This section describes the hardware configuration and operation of the flash memory.

# 17.1 Flash Memory

## 17.1.1 Features

1. Memory capacity

The TMPM330FDFG/FYFG/FWFG devices contain flash memory. The memory sizes and configurations of each device are shown in the table below.

Independent write access to each block is available. When the CPU is to access the internal flash memory, 32-bit data bus width is used.

2. Write/erase time

Writing is executed per page. The TMPM330FDFG/TMPM330FYFG contain 128 words and the TMPM330FWFG contains 64 words in a page.

Page writing requires 1.25ms (typical) regardless of number of words.

A block erase requires 0.1 sec. (typical).

The following table shows write and erase time per chip.

Draduct Name	Memory Size		Block Cor	nfiguration	# = 510/= ==	\A/=:ta;	Erase	
Product Name		128 KB	64 KB	32 KB	16 KB	# of Words	Write Time	Time
TMPM330FDFG	512 KB	3	1	2	-	128	1.28 sec	0.4 sec
TMPM330FYFG	256 KB	1	1	2	-	128	0.64 sec	0.4 sec
TMPM330FWFG	128 KB	-	1	1	2	64	0.64 sec	0.2 sec

#### Note: The above values are theoretical values not including data transfer time. The write time per chip depends on the write method to be used by the user.

3. Programming method

There are two types of the onboard programming mode for the user to program (rewrite) the device while it is mounted on the user's board:

- The onboard programming mode
- a. User boot mode

The user's original rewriting method can be supported.

b. Single boot mode

The rewriting method to use serial data transfer (Toshiba's unique method) can be supported.

4. Rewriting method

The flash memory included in this device is generally compliant with the applicable JEDEC standards except for some specific functions. Therefore, if the user is currently using an external flash memory


device, it is easy to implement the functions into this device. Furthermore, the user is not required to build his/her own programs to realize complicated write and erase functions because such functions are automatically performed using the circuits already built-in the flash memory chip.

JEDEC compliant functions	Modified, added, or deleted functions
Automatic programming     Automatic chip erase     Automatic block erase	<modified> Block protect (only software protection is supported) <deleted> Erase resume - suspend function</deleted></modified>
Data polling/toggle bit	

#### 5. Protect/ Security Function

This device is also implemented with a read-protect function to inhibit reading flash memory data from any external writer device. On the other hand, rewrite protection is available only through command-based software programming; any hardware setting method to apply +12VDC is not supported. See the chapter "ROM protection" for details of ROM protection and security function.

# Note: If a password is set to 0xFF (erased data), it is difficult to protect data securely due to an easy-to-guess password. Even if Single Boot mode is not used, it is recommended to set a unique value as a password.

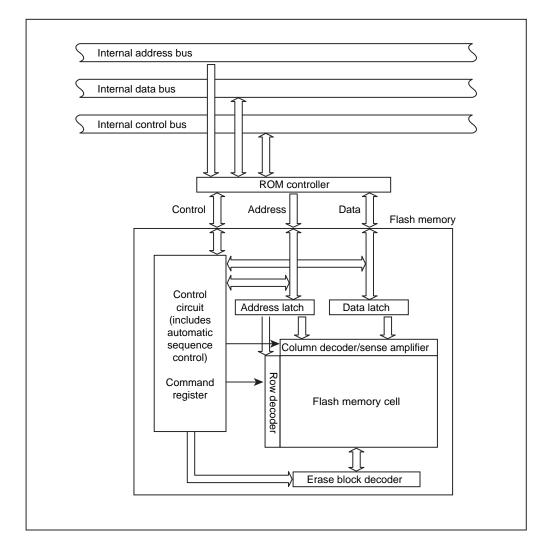

# 17.1.2 Block Diagram of the Flash Memory Section

Figure 17-1 Block Diagram of the Flash Memory Section

# 17.2 Operation Mode

This device has three operation modes including the mode not to use the internal flash memory.

Table 17-1 Operation Modes	
----------------------------	--


Operation mode		Operation details			
Sir	gle chip mode	After reset is cleared, it starts up from the internal flash memory.			
Normal mode		In this operation mode, two different modes, i.e., the mode to execute user application programs and the mode to rewrite the flash memory onboard the user's card, are defined. The former is referred to as "normal mode" and the latter "user boot mode.			
	User boot mode	The user can uniquely configure the system to switch between these two modes. For example, the user can freely design the system such that the normal mode is selected when the port "A0" is set to "1" and the user boot mode is selected when it is set to "0." The user should prepare a routine as part of the application program to make the decision on the selection of the modes.			
Single boot mode		After reset is cleared, it starts up from the internal Boot ROM (Mask ROM). In the Boot ROM, an algorithm to enable flash memory rewriting on the user's set through the serial port of this device is programmed. By connecting to an external host computer through the serial port, the internal flash memory can be programmed by transferring data in accordance with predefined protocols.			

Among the flash memory operation modes listed in the above table, the User Boot mode and the Single Boot mode are the programmable modes. These two modes, the User Boot mode and the Single Boot mode, are referred to as "Onboard Programming" modes where onboard rewriting of internal flash memory can be made on the user's card.

Either the Single Chip or Single Boot operation mode can be selected by externally setting the level of the  $\overline{\text{BOOT}}$  (PH0) pin while the device is in reset status.

Table 17-2 Operation	Mode Setting
----------------------	--------------

O second in second second	Pin			
Operation mode	RESET	BOOT (PH0)		
Single chip mode	$0 \rightarrow 1$	1		
Single boot mode	$0 \rightarrow 1$	0		

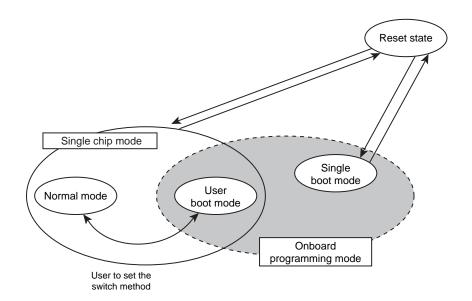

# Figure 17-2 Mode Transition Diagram

# 17.2.1 Reset Operation

To reset the device, ensure that the power supply voltage is within the operating voltage range, that the internal oscillator has been stabilized, and that the  $\overline{\text{RESET}}$  input is held at "0" for a minimum duration of 12 system clocks (0.3 µs with 40MHz operation; the "1/1" clock gear mode is applied after reset).

- Note 1: Regarding power-on reset of devices with internal flash memory; for devices with internal flash memory, it is necessary to apply "0" to the RESET inputs upon power on for a minimum duration of 700 microseconds regardless of the operating frequency.
- Note 2: While flash auto programming or deletion is in progress, at least 0.5 microseconds of reset period is required regardless of the system clock frequency. In this condition, it takes approx. 2 ms to enable reading after reset.

# 17.2.2 User Boot Mode (Single chip mode)

User Boot mode is to use flash memory programming routine defined by users. It is used when the data transfer buses for flash memory program code on the old application and for serial I/O are different. It operates at the single chip mode; therefore, a switch from normal mode in which user application is activated at the single chip mode to User Boot Mode for programming flash is required. Specifically, add a mode judgment routine to a reset program in the old application.

The condition to switch the modes needs to be set by using the I/O of TMPM330FDFG/FYFG/FWFG in conformity with the user's system setup condition. Also, flash memory programming routine that the user uniquely makes up needs to be set in the new application. This routine is used for programming after being switched to User Boot Mode. The execution of the programming routine must take place while it is stored in the area other than the flash memory since the data in the internal flash memory cannot be read out during delete/ writing mode. Once re-programming is complete, it is recommended to protect relevant flash blocks from accidental corruption during subsequent Single-Chip (Normal mode) operations. Be sure not to cause any exceptions including a non-maskable while User Boot Mode.


(1-A) and (1-B) are the examples of programming with routines in the internal flash memory and in the external memory. For a detailed description of the erase and program sequence, refer to "17.3 On-board Programming of Flash Memory (Rewrite/Erase)".

#### 17.2.2.1 (1-A) Method 1: Storing a Programming Routine in the Flash Memory

#### (1) Step-1


Determine the conditions (e.g., pin states) required for the flash memory to enter User Boot mode and the I/O bus to be used to transfer new program code. Create hardware and software accordingly. Before installing the TMPM330FDFG/FYFG/FWFG on a printed circuit board, write the following program routines into an arbitrary flash block using programming equipment.

(a) Mode judgment routine: (b) Programming routine:	Code to determine whether or not to switch to User Boot mode Code to download new program code from a host controller and re-program the flash memory
(c) Copy routine:	Code to copy the data described in (b) from the TMPM330FDFG/FYFG/FWFG flash memory to either the TMPM330FDFG/FYFG/FWFG on-chip RAM or external mem- ory device.

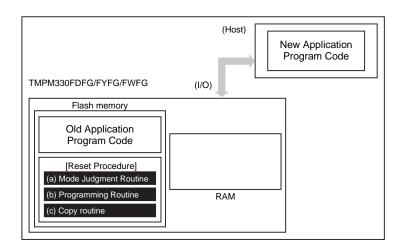


#### (2) Step-2

After RESET is released, the reset procedure determines whether to put the TMPM330FDFG/FYFG/ FWFG flash memory in User Boot mode. If mode switching conditions are met, the flash memory enters User Boot mode. (All interrupts including NMI must be disabled while in User Boot mode.)

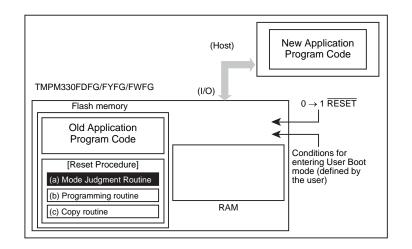


#### (3) Step-3

Once transition to User Boot mode is occurred, execute the copy routine (c) to copy the flash programming routine (b) to the TMPM330FDFG/FYFG/FWFG on-chip RAM.

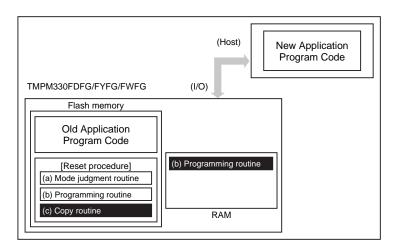


#### (4) Step-4

Jump program execution to the flash programming routine in the on-chip RAM to erase a flash block containing the old application program code.

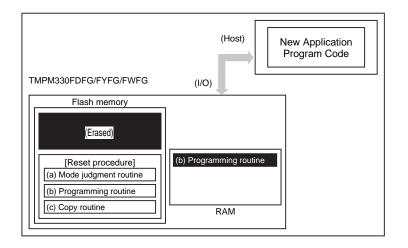

#### (5) Step-5


Continue executing the flash programming routine to download new program code from the host controller and program it into the erased flash block. When the programming is completed, the writing or erase protection of that flash block in the user's program area must be set.

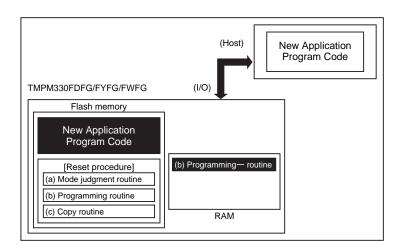

# TOSHIBA

# (6) Step-6

Set  $\overline{\text{RESET}}$  to "0" to reset the TMPM330FDFG/FYFG/FWFG. Upon reset, the on-chip flash memory is put in Normal mode. After  $\overline{\text{RESET}}$  is released, the CPU will start executing the new application program code.

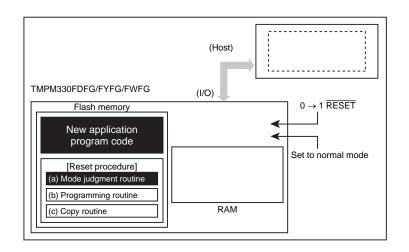

#### 17.2.2.2 (1-B) Method 2: Transferring a Programming Routine from an External Host


(1) Step-1

Determine the conditions (e.g., pin states) required for the flash memory to enter User Boot mode and the I/O bus to be used to transfer new program code. Create hardware and software accordingly. Before installing the TMPM330FDFG/FYFG/FWFG on a printed circuit board, write the following program routines into an arbitrary flash block using programming equipment.

(a) Mode judgment routine: Code to determine whether or not to switch to User Boot mode(b) Transfer routine: Code to download new program code from a host controller


Also, prepare a programming routine shown below on the host controller:

(c) Programming routine: Code to download new program code from an external host controller and re-program the flash memory

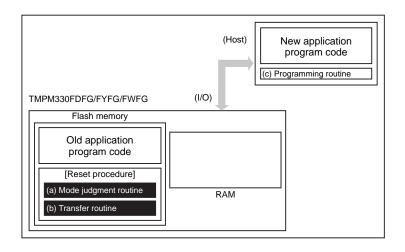


#### (2) Step-2

After RESET is released, the reset procedure determines whether to put the TMPM330FDFG/FYFG/ FWFG flash memory in User Boot mode. If mode switching conditions are met, the flash memory enters User Boot mode. (All interrupts including NMI must be disabled while in User Boot mode).

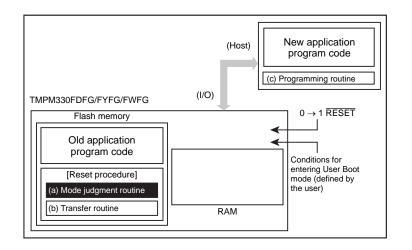


#### (3) Step-3

Once User Boot mode is entered, execute the transfer routine (b) to download the flash programming routine (c) from the host controller to the TMPM330FDFG/FYFG/FWFG on-chip RAM.

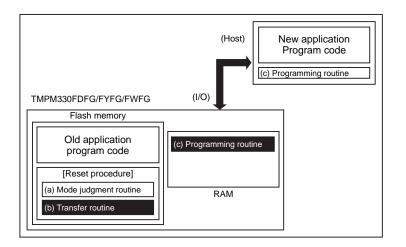


#### (4) Step-4

Jump program execution to the flash programming routine in the on-chip RAM to erase a flash block containing the old application program code.

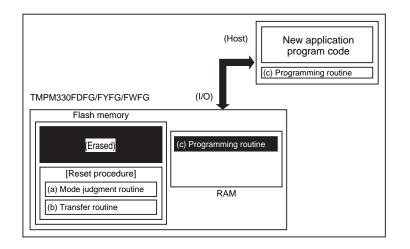

#### (5) Step-5


Continue executing the flash programming routine to download new program code from the host controller and program it into the erased flash block. When the programming is completed, the writing or erase protection of that flash block in the user program area must be set.

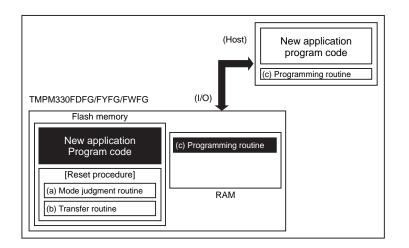

# TOSHIBA

#### (6) Step-6

Set  $\overline{\text{RESET}}$  to "0" low to reset the TMPM330FDFG/FYFG/FWFG. Upon reset, the on-chip flash memory is put in Normal mode. After  $\overline{\text{RESET}}$  is released, the CPU will start executing the new application program code.

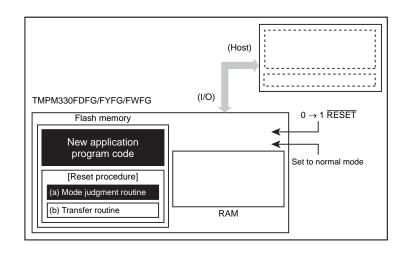

# 17.2.3 Single Boot Mode

In Single Boot mode, the flash memory can be re-programmed by using a program contained in the TMPM330FDFG/FYFG/FWFG on-chip boot ROM. This boot ROM is a masked ROM. When Single Boot mode is selected upon reset, the boot ROM is mapped to the address region including the interrupt vector table while the flash memory is mapped to an address region different from it.


Single Boot mode allows for serial programming of the flash memory. Channel 0 of the SIO (SIO0) of the TMPM330FDFG/FYFG/FWFG is connected to an external host controller. Via this serial link, a programming routine is downloaded from the host controller to the TMPM330FDFG/FYFG/FWFG on-chip RAM. Then, the flash memory is re-programmed by executing the programming routine. The host sends out both commands and programming data to re-program the flash memory. Communications between the SIO0 and the host must follow the protocol described later. To secure the contents of the flash memory, the validity of the application's password is verified before a programming routine is downloaded into the on-chip RAM. If password matching fails, the transfer of a programming routine itself is aborted. As in the case of User Boot mode, all interrupts including the non-maskable interrupt (NMI) must be disabled in Single Boot mode while the flash memory is being erased or programmed. In Single Boot mode, the boot-ROM programs are executed in Normal mode.

Once re-programming is complete, it is recommended to protect relevant flash blocks from accidental corruption during subsequent Single-Chip (Normal mode) operations.

### 17.2.3.1 (2-A) Using the Program in the On-Chip Boot ROM

#### (1) Step-1


The flash block containing the older version of the program code need not be erased before executing the programming routine. Since a programming routine and programming data are transferred via the SIO (SIO0), the SIO0 must be connected to a host controller. Prepare a programming routine (a) on the host controller.

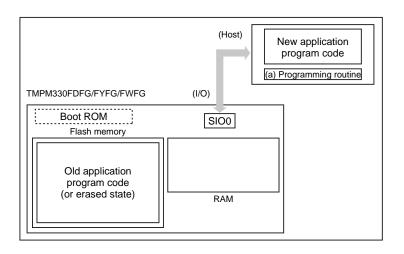

# TOSHIBA


### (2) Step-2

Set the  $\overline{\text{RESET}}$  pin to "1" to cancel the reset of the TMPM330FDFG/FYFG/FWFG when the  $\overline{\text{BOOT}}$  pin has already been set to "0". After reset, CPU reboots from the on-chip boot ROM. The 12-byte password transferred from the host controller via SIO0 is first compared to the contents of the special flash memory locations. (If the flash block has already been erased, the password is 0xFF).

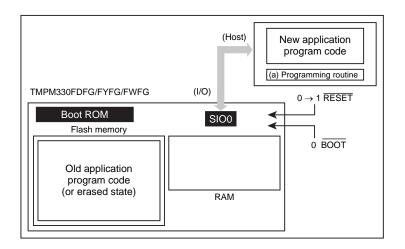


## (3) Step-3

If the password was correct, the boot program downloads, via the SIO0, the programming routine (a) from the host controller into the on-chip RAM of the TMPM330FDFG/FYFG/FWFG. The programming routine must be stored in the range from 0x2000\_0400 to the end address of RAM.

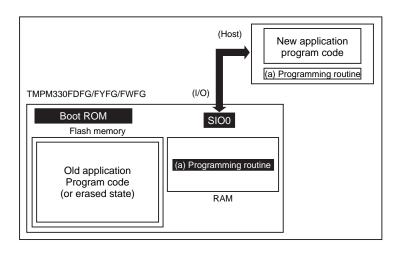

#### (4) Step-4


The CPU jumps to the programming routine (a) in the on-chip RAM to erase the flash block containing the old application program code. The Block Erase or Chip Erase command may be used.

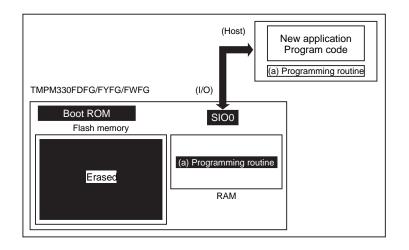

#### (5) Step-5


Next, the programming routine (a) downloads new application program code from the host controller and programs it into the erased flash block. When the programming is completed, the writing or erase protection of that flash block in the user's program area must be set.

In the example below, new program code comes from the same host controller via the same SIO0 channel as for the programming routine. However, once the programming routine has begun to execute, it is free to change the transfer path and the source of the transfer. Create board hardware and a programming routine to suit your particular needs.

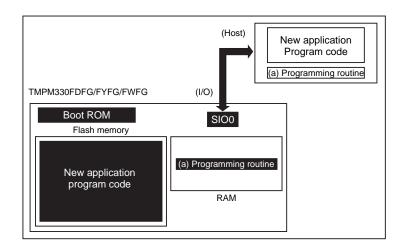

#### (6) Step-6

When programming of the flash memory is complete, power off the board and disconnect the cable leading from the host to the target board. Turn on the power again so that the TMPM330FDFG/FYFG/ FWFG re-boots in Single-Chip (Normal) mode to execute the new program.

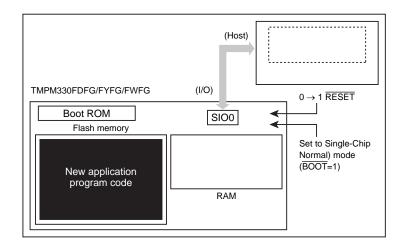

# 17.2.4 Configuration for Single Boot Mode

To execute the on-board programming, boot the TMPM330FDFG/FYFG/FWFG with Single Boot mode following the configuration shown below.

 $\overline{\text{BOOT}}(\text{PH0}) = 0$  $\overline{\text{RESET}} = 0 \rightarrow 1$ 

Set the  $\overline{\text{RESET}}$  input to "0", and set the each  $\overline{\text{BOOT}}$  (PH0) pins to values shown above, and then release RESET (high).

# 17.2.5 Memory Map

Figure 17-3 shows a comparison of the memory maps in Normal and Single Boot modes. In Single Boot mode, the internal flash memory is mapped to 0x3F80\_0000 and later addresses, and the Internal boot ROM (Mask ROM) is mapped to 0x0000\_0000 through 0x0000\_1FFF.

The internal flash memory and RAM addresses of each device are shown below.

Product Name	Flash Size	RAM Size	Flash Address (Single Chip/ Single Boot Mode)	RAM Address
TMPM330FDFG	512 KB	32 KB	0x0000_0000 to 0x0007_FFFF 0x3F80_0000 to 0x3F87_FFFF	0x2000_0000 to 0x2000_7FFF
TMPM330FYFG	256 KB	16 KB	0x0000_0000 to 0x0003_FFFF (0x0007_FF00 to 0x0007_FF80)(Note) 0x3F80_0000 to 0x3F83_FFFF (0x3F87_FF00 to 0x3F87_FF80) (Note)	0x2000_0000 to 0x2000_3FFF
TMPM330FWFG	128 KB	8 KB	0x0000_0000 to 0x0001_FFFF 0x3F80_0000 to 0x3F81_FFFF	0x2000_0000 to 0x2000_1FFF

Note: In addition to 256KB flash area, the TMPM330FYFG provides 128-word data/password area (1 page) for Show Product Information command.

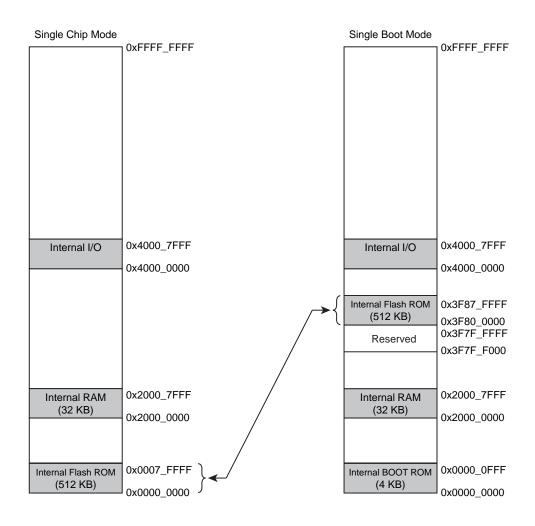


Figure 17-3 Memory Maps for TMPM330FDFG

# 17.2.6 Interface specification

In Single Boot mode, an SIO channel is used for communications with a programming controller. The same configuration is applied to a communication format on a programming controller to execute the on-board programming. Both UART (asynchronous) and I/O Interface (synchronous) modes are supported. The communication formats are shown below.

UART communication

Communication channel : SIO channel 0

Serial transfer mode : UART (asynchronous), half -duplex, LSB fast

Data length : 8 bit

Parity bits : None

STOP bits : 1 bit

Baud rate : Arbitrary baud rate

I/O interface mode

Communication channel : SIO channel 0

Serial transfer mode : I/O interface mode, full -duplex, LSB fast

Synchronization clock (SCLK0) : Input mode

Handshaking signal : PE4 configured as an output mode

Baud rate : Arbitrary baud rate

#### Table 17-3 Required Pin Connections

		Interface			
Pin	S	UART	I/O Interface Mode		
	RVDD3	0	0		
	AVDD	0	0		
Dewer evenly pine	DVDD3	0	0		
Power supply pins	RVSS	0	0		
	AVSS	0	0		
	DVSS3	0	0		
Mode-setting pin	BOOT (PH0)	0	0		
Reset pin	RESET	0	0		
	TXD0 (PE0)	0	0		
Communication	RXD0 (PE1)	0	0		
pins	SCLK0 (PE2)	×	o (Input mode)		
	PE4	×	o(Output mode)		

# 17.2.7 Data Transfer Format

Table 17-4 and Table 17-6 to Table 17-9 illustrate the operation commands and data transfer formats at each operation mode. In conjunction with this section, refer to "17.2.10 Operation of Boot Program".

Table 17-4	Sinale	Boot	Mode	Commands
	Single	2000	1110000	oommanao

Code	Command		
0x10	RAM transfer		
0x20	Show Flash Memory SUM		
0x30	Show Product Information		
0x40	Chip and protection bit erase		

## 17.2.8 Restrictions on internal memories

Single Boot Mode places restrictions on the internal RAM and ROM as shown in Table 17-5.

Memory	Details		
Internal RAM	A program contained in the BOOT ROM uses the area, through 0x2000_0000 to 0x2000_03FF as a work area.		
	Store the RAM transfer program from 0x2000_0400 through the end address of RAM.		
	The following addresses are assigned for storing software ID information and passwords. Storing program in these addresses is not recommendable.		
Internal ROM	TMPM330FDFG: 0x3F87_FF00 to 0x3F87_FF0F		
	TMPM330FYFG: 0x3F87_FF00 to 0x3F87_FF0F		
	TMPM330FWFG: 0x3F81_FF00 to 0x3F81_FF0F		

 Table 17-5 Restrictions in Single Boot Mode

# 17.2.9 Transfer Format for Single Boot Mode commands

The following tables shows the transfer format for each Single Boot Mode command. Use this section in conjunction with Chapter "17.2.10 Operation of Boot Program".

#### 17.2.9.1 RAM Transfer

	Byte	Data Transferred from the Controller to the TMPM330FDFG/FYFG/FWFG	Baud rate	Data Transferred from the TMPM330FDFG/ FYFG/FWFG to the Controller
Boot ROM	1 byte	Serial operation mode and baud rate For UART mode : 0x86 For I/O Interface mode : 0x30	Desired baud rate (Note 1)	-
	2 byte	-		ACK for the serial operation mode byte • For UART mode -Normal acknowledge : 0x86 (The boot program aborts if the baud rate can not be set correctly.) • For I/O Interface mode -Normal acknowledge :0x30
	3 byte	Command code (0x10)		-
	4 byte	-		ACK for the command code byte (Note 2) -Normal acknowledge : 0x10 -Negative acknowledge : 0xX1 -Communication error : 0xX8
	5 byte to 16 byte	Password sequence (12 bytes) 0x3F87_FF04 to 0x3F87_FF0F (FD/FY) 0x3F81_FF04 to 0x3F81_FF0F (FW)		-
	17 byte	Check SUM value for bytes 5 - 16		-
	18 byte	-		ACK for the checksum byte (Note 2) -Normal acknowledge : 0x10 -Negative acknowledge : 0xX1 -Communication error : 0xX8
	19 byte	RAM storage start address 31 to 24		-
	20 byte	RAM storage start address 23 to 16		-
	21 byte	RAM storage start address 15 to 8		-
	22 byte	RAM storage start address 7 to 0		-
	23 byte	RAM storage byte count 15 to 8		-
	24 byte	RAM storage byte count 7 to 0		-
	25 byte	Check SUM value for bytes 19 to 24		-
	26 byte	-		ACK for the checksum byte (Note 2) -Normal acknowledge : 0x10 -Negative acknowledge : 0xX1 -Communication error : 0xX8
	27 byte to m byte	RAM storage data		-
	m + 1 byte	Checksum value for bytes 27 ~ m		-
	m + 2 byte	-		ACK for the checksum byte (Note 2) -Normal acknowledge : 0x10 -Negative acknowledge : 0xX1 -Communication error : 0xX8
RAM	m + 3 byte	-		Jump to RAM storage start address

- Note 1: In I/O Interface mode, the baud rate for the transfers of the first and second bytes must be 1/16 of the desired baud rate.
- Note 2: In case of any negative acknowledge, the boot program returns to a state in which it waits for a command code (3rd byte). In I/O Interface mode, if a communication error occurs, a negative acknowledge does not occur.
- Note 3: The 19th to 25th bytes must be within the RAM address range from 0x2000\_0400 through the end address of RAM.
- Note 4: FD/FY/FW in the above table denotes the TMPM330FDFG, TMPM330FYFG and TMPM330FWFG respectively.

#### 17.2.9.2 Show Flash Memory SUM

#### Table 17-7 Transfer Format for the Show Flash Memory SUM Command

	Byte	Data Transferred from the Controller to the TMPM330FDFG/FYFG/FWFG	Baud rate	Data Transferred from the TMPM330FDFG/ FYFG/FWFG to the Controller
Boot ROM	1 byte	Serial operation mode and baud rate For UART mode : 0x86 For I/O Interface mode: 0x30	Desired baud rate (Note 1)	-
	2 byte	-		ACK for the serial operation mode byte • For UART mode -Normal acknowledge : 0x86 (The boot program aborts if the baud rate can not be set correctly.) • For I/O Interface mode -Normal acknowledge : 0x30
	3 byte	Command code (0x20)		-
	4 byte	-		ACK for the command code byte (Note 2) -Normal acknowledge : 0x20 -Negative acknowledge : 0xX1 -Communication error : 0xX8
	5 byte	-	]	SUM (upper byte)
	6 byte	-	]	SUM (lower byte)
	7 byte	-	]	Checksum value for bytes 5 and 6
	8 byte	(Wait for the next command code.)	]	-

Note 1: In I/O Interface mode, the baud rate for the transfers of the first and second bytes must be 1/16 of the desired baud rate.

Note 2: In case of any negative acknowledge, the boot program returns to a state in which it waits for a command code (3rd byte). In I/O Interface mode, if a communication error occurs, a negative acknowledge does not occur.

#### 17.2.9.3 Transfer Format for the Show Product Information

#### Table 17-8 Transfer Format for the Show Product Information Command

	Byte	Data Transferred from the Controller to the TMPM330FDFG/FYFG/FWFG	Baud rate	Data Transferred from the TMPM330FDFG/FYFG/ FWFG to the Controller
Boot ROM	1 byte	Serial operation mode and baud rate For UART mode : 0x86 For I/O Interface mode: 0x30	Desired baud rate (Note 1)	-
	2 byte	-		ACK for the serial operation mode byte • For UART mode -Normal acknowledge : 0x86 (The boot program aborts if the baud rate can not be set correctly.) • For I/O Interface mode -Normal acknowledge : 0x30
	3 byte	Command code (0x30)	-	-
	4 byte	-		ACK for the command code byte (Note 2) -Normal acknowledge : 0x30 -Negative acknowledge : 0xX1 -Communication error : 0xX8
	5 byte	-		Flash memory data at address 0x3F87_FF00 (FD/ FY) 0x3F81_FF00 (FW)
	6 byte	-		Flash memory data at address 0x3F87_FF01 (FD/ FY) 0x3F81_FF01 (FW)
	7 byte	-		Flash memory data at address 0x3F87_FF02 (FD/ FY) 0x3F81_FF02 (FW)
	8 byte	-		Flash memory data at address 0x3F87_FF03 (FD/ FY) 0x3F81_FF03 (FW)
	9 byte to 20 byte	-		Product name (12-byte ASCII code) From the 9th byte: TMPM330FD' (FD/ FY) TMPM330FW' (FW)
	21 byte to 24 byte	-		Password comparison start address (4 bytes) From the 21st byte: 0x04 , 0xFF, 0x87, 0x3F (FD/FY) 0x04 , 0xFF, 0x81, 0x3F (FW)
	25 byte to 28 byte	-		RAM start address (4 bytes) From the 25th byte: 0x00, 0x00, 0x00, 0x20 (FD/FY/FW)
	29 byte to 32 byte	-		Dummy data (4 bytes) From the 29th byte: 0x00, 0x00, 0x00, 0x00 (FD/FY/FW)
	33 byte to 36 byte	-		RAM end address (4 bytes) From the 33rd byte: 0xFF, 0x7F, 0x00, 0x20 (FD/FY) (Note 4) 0xFF, 0x1F, 0x00, 0x20 (FW)
	37 byte to 40 byte	-		Dummy data (4 bytes) From the 37th byte: 0x00, 0x00, 0x00, 0x00 (FD/FY/FW)
	41 byte to 44 byte	-		Dummy data (4 bytes) From the 41st byte: 0x00, 0x00, 0x00, 0x00 (FD/FY/FW)

Byte	Data Transferred from the Controller to the TMPM330FDFG/FYFG/FWFG	Baud rate	Data Transferred from the TMPM330FDFG/FYFG/ FWFG to the Controller
45 byte to 46 byte	-		Dummy data or Fuse information (2 bytes) From the 45th byte: 0x00, 0x00 (FD/FY/FW)
47 byte to 50 byte	-		Flash memory start address (4 bytes) From the 47th byte: 0x00, 0x00, 0x80, 0x3F (FD/FY/FW)
51 byte to 54 byte	-		Flash memory end address (4 bytes) From the 51st byte: 0xFF, 0xFF, 0x87, 0x3F (FD/FY) (Note 5) 0xFF, 0xFF, 0x81, 0x3F (FW)
55 byte to 56 byte	-		Flash memory block count (2 bytes) From the 55th byte: 0x06, 0x00 (FD/FY) 0x04, 0x00 (FW)
57 byte to 60 byte	-		Start address of a group of the same-size (16K) flast blocks (4 bytes)           From 57th byte:           0x00, 0x00, 0x00, 0x00 (FD/FY)           0x00, 0x00, 0x00, 0x3F (FW)
61 byte to 64 byte	-		Size (in halfwords) of the same-size (16K) flash block (4 bytes) From 61st byte: 0x00, 0x20, 0x00, 0x00 (FD/FY/FW)
65 byte	-		Number of flash blocks of the same size (16K) (1 byte) 0x00 (FD/FY) 0x02 (FW)
66 byte to 69 byte	-		Start address of a group of the same-size (32K) flas blocks (4 bytes) From 66th byte: 0x00, 0x00, 0x80, 0x3F (FD/FY) 0x00, 0x80, 0x80, 0x3F (FW)
70 byte to 73 byte	-		Size (in halfwords) of the same-size (32K) flash block (4 bytes) From 70th byte: 0x00, 0x40, 0x00, 0x00 (FD/FY/FW)
74 byte	-		Number of flash blocks of the same size (32K) (1 byte) 0x02 (FD/FY) 0x01 (FW)
75 byte to 78 byte	-		Start address of a group of the same-size (64K) flas blocks (4 bytes) From 75th byte: 0x00, 0x00, 0x81, 0x3F (FD/FY/FW)
79 byte to 82 byte	-		Size (in halfwords) of the same-size (64K) flash block (4 bytes) From 79th byte: 0x00, 0x80, 0x00, 0x00 (FD/FY/FW)

#### Table 17-8 Transfer Format for the Show Product Information Command

Byte	Data Transferred from the Controller to the TMPM330FDFG/FYFG/FWFG	Baud rate	Data Transferred from the TMPM330FDFG/FYFG/ FWFG to the Controller
83 byte	-		Number of flash blocks of the same size (64K) (1 byte) 0x01 (FD/FY/FW)
84 byte to 87 byte	-		Start address of a group of the same-size (128K) flash blocks (4 bytes) From 84th byte: 0x00, 0x00, 0x82, 0x3F (FD/FY) 0x00, 0x00, 0x00, 0x00 (FW)
88 byte to 91 byte	-		Size (in halfwords) of the same-size (128K) flash blocks (4 bytes) From 88th byte: 0x00, 0x00, 0x01, 0x00 (FD/FY/FW)
92 byte	-		Number of flash blocks of the same size (128K) (1 byte) 0x03 (FD/FY) (Note 6) 0x00 (FW)
93 byte	-		Checksum value for bytes 5 ~ 92
94 byte	(Wait for the next command code.)		-

#### Table 17-8 Transfer Format for the Show Product Information Command

Note 1: In I/O Interface mode, the baud rate for the transfers of the first and second bytes must be 1/16 of the desired baud rate.

Note 2: In case of any negative acknowledge, the boot program returns to a state in which it waits for a command code (3rd byte). In I/O Interface mode, if a communication error occurs, a negative acknowledge does not occur.

Note 3: FD/FY/FW in the above table denotes the TMPM330FDFG, TMPM330FYFG and TMPM330FWFG respectively.

Note 4: The RAM actual end address of the TMPM330FYFG is 0x2000\_3FFF.

Note 5: The flash memory actual end address of the TMPM330FYFG is 0x3F83\_FFFF. In addition to 256KB flash area, the TMPM330FYFG provides 128-word data/ password area (0x3F87\_FF00 to 0x3F87\_FF80, 1 page) for Show Product Information command.

Note 6: The actual number of the TMPM330FYFG flash blocks is one.

#### 17.2.9.4 Chip Erase and Protect Bit Erase

	Byte	Data Transferred from the Controller to the TMPM330FDFG/FYFG/FWFG	Baud rate	Data Transferred from the TMPM330FDFG/ FYFG/FWFG to the Controller
Boot ROM	1 byte	Serial operation mode and baud rate For UART mode : 0x86 For I/O Interface mode : 0x30	Desired baud rate (Note 1)	-
	2 byte	-		ACK for the serial operation mode byte • For UART mode -Normal acknowledge : 0x86 • For I/O Interface mode -Normal acknowledge : 0x30 (The boot program aborts if the baud rate can not be set correctly.)
	3 byte	Command code (0x40)	1	-
	4 byte	-		ACK for the command code byte (Note 2) -Normal acknowledge : 0x40 -Negative acknowledge : 0xX1 -Communication error : 0xX8
	5 byte	Chip erase command code (0x54)	-	-
	6 byte	-		ACK for the command code byte (Note 2) -Normal acknowledge : 0x54 -Negative acknowledge : 0xX1 -Communication error : 0xX8
	7 byte	-		ACK for the chip erase command code byte -Normal acknowledge : 0x4F -Negative acknowledge : 0x4C
	8 byte	(Wait for the next command code.)	]	-

#### Table 17-9 Transfer Format for the Chip and Protection Bit Erase Command

Note 1: In I/O Interface mode, the baud rate for the transfers of the first and second bytes must be 1/16 of the desired baud rate.

Note 2: In case of any negative acknowledge, the boot program returns to a state in which it waits for a command code (3rd byte). In I/O Interface mode, if a communication error occurs, a negative acknowledge does not occur.

## 17.2.10 Operation of Boot Program

When Single Boot mode is selected, the boot program is automatically executed on startup. The boot program offers these four commands, of which the details are provided on the following subsections.

1. RAM Transfer command

The RAM Transfer command stores program code transferred from a host controller to the on-chip RAM and executes the program once the transfer is successfully completed. The user program RAM space can be assigned to the range from  $0x2000_0400$  to the end address of RAM, whereas the boot program area ( $0x2000_0000 \sim 0x2000_03FF$ ) is unavailable. The user program starts at the assigned RAM address.

The RAM Transfer command can be used to download a flash programming routine of your own; this provides the ability to control on-board programming of the flash memory in a unique manner. The programming routine must utilize the flash memory command sequences described in Section 17.3. Before initiating a transfer, the RAM Transfer command verifies a password sequence coming from the controller against that stored in the flash memory.

## Note: If a password is set to 0xFF (erased data), it is difficult to protect data securely due to an easy-to-guess password. Even if Single Boot mode is not used, it is recommended to set a unique value as a password.

2. Show Flash Memory SUM command

The Show Flash Memory SUM command adds the entire contents of the flash memory together. The boot program does not provide a command to read out the contents of the flash memory. Instead, the Flash Memory SUM command can be used for software revision management.

3. Show Product Information command

The Show Product Information command provides the product name, on-chip memory configuration and the like. This command also reads out the contents of the flash memory locations at addresses shown below. In addition to the Show Flash Memory Sum command, these locations can be used for software revision management.

Product name	Area
TMPM330FDFG TMPM330FYFG	0x3F87_FF00 to 0x3F87_FF03
TMPM330FWFG	0x3F81_FF00 to 0x3F81_FF03

4. Chip and Protection Bit Erase command

This command erases the entire area of the flash memory automatically without verifying a password. All the blocks in the memory cell and their protection conditions are erased even when any of the blocks are prohibited from writing and erasing. When the command is completed, the FCSECBIT <SECBIT> bit is set to "1". This command serves to recover boot programming operation when a user forgets the password. Therefore password verification is not executed.

#### 17.2.10.1 RAM Transfer Command

See Table 17-6 for the transfer format of this command.

- 1. The 1st byte specifies which one of the two serial operation modes is used. For a detailed description of how the serial operation mode is determined, see "17.2.10.6 Determination of a Serial Operation Mode" described later. If it is determined as UART mode, the boot program then checks if the SIO0 is programmable to the baud rate at which the 1st byte was transferred. During the first-byte interval, the RXE bit in the SCOMOD register is cleared.
  - To communicate in UART mode

Send, from the controller to the target board, 0x86 in UART data format at the desired baud rate. If the serial operation mode is determined as UART, then the boot program checks if the SIO0 can be programmed to the baud rate at which the first byte was transferred. If that baud rate is not possible, the boot program aborts, disabling any subsequent communications.

To communicate in I/O Interface mode

Send, from the controller to the target board, 0x30 in I/O Interface data format at 1/16 of the desired baud rate. Also send the 2nd byte at the same baud rate. Then send all subsequent bytes at a rate equal to the desired baud rate.

In I/O Interface mode, the CPU sees the serial receive pin as if it were a general input port in monitoring its logic transitions. If the baud rate of the incoming data is high or the chip's operating frequency is high, the CPU may not be able to keep up with the speed of logic transitions. To prevent such situations, the 1st and 2nd bytes must be transferred at 1/16 of the desired baud rate; then the boot program calculates 16 times that as the desired baud rate. When the serial operation mode is determined as I/O Interface mode, the SIO0 is configured for SCLK Input mode. Beginning with the third byte, the controller must ensure that its AC timing restrictions are satisfied at the selected baud rate. In the case of I/O Interface mode, the boot program does not check the receive error flag; thus there is no such thing as error acknowledge (bit 3, 0x08).

- 2. The 2nd byte, transmitted from the target board to the controller, is an acknowledge response to the 1st byte. The boot program echoes back the first byte: 0x86 for UART mode and 0x30 for I/ O Interface mode.
  - UART mode

If the SIO0 can be programmed to the baud rate at which the 1st byte was transferred, the boot program programs the SC0BRCR and sends back 0x86 to the controller as an acknowledge. If the SIO0 is not programmable at that baud rate, the boot program simply aborts with no error indication. Following the 1st byte, the controller should allow for a time-out period of five seconds. If it does not receive 0x86 within the allowed time-out period, the controller should give up the communication. The boot program sets the RXE bit in the SC0MOD0 register to enable reception ("1") before loading the SIO transmit buffer with 0x86.

I/O Interface mode

The boot program programs the SC0MOD0 and SC0CR registers to configure the SIO0 in I/O Interface mode (clocked by the rising edge of SCLK0), writes 0x30 to the SC0BUF. Then, the SIO0 waits for the SCLK0 signal to come from the controller. Following the transmission of the 1st byte, the controller should send the SCLK clock to the target board after a certain idle time (several microseconds). This must be done at 1/16 the desire baud rate. If the 2nd byte, which is from the target board to the controller, is 0x30, then the controller should take it as a go-ahead. The controller must then deliver the 3rd byte to the target board at a rate equal to the desired baud rate. The boot program sets the RXE bit in the SC0MOD register to enable reception before loading the SIO transmit buffer with 0x30.

- 3. The 3rd byte transmitted from the controller to the target board is a command. The code for the RAM Transfer command is 0x10.
- 4. The 4th byte, transmitted from the target board to the controller, is an acknowledge response to the 3rd byte. Before sending back the acknowledge response, the boot program checks for a receive error. If there was a receive error, the boot program transmits 0xX8 (bit 3) and returns to the state

in which it waits for a command (the third byte) again. In this case, the upper four bits of the acknowledge response are undefined - they hold the same values as the upper four bits of the previously issued command. When the SIO0 is configured for I/O Interface mode, the boot program does not check for a receive error.

If the 3rd byte is equal to any of the command codes listed in Table 17-4, the boot program echoes it back to the controller. When the RAM Transfer command was received, the boot program echoes back a value of 0x10 and then branches to the RAM Transfer routine. Once this branch is taken, password verification is done. Password verification is detailed in a later section "Password". If the 3rd byte is not a valid command, the boot program sends back 0xX1 (bit 0) to the controller and returns to the state in which it waits for a command (the third byte) again. In this case, the upper four bits of the acknowledge response are undefined - they hold the same values as the upper four bits of the previously issued command.

5. The 5th to 16th bytes transmitted from the controller to the target board, are a 12-byte password. Each byte is compared to the contents of following addresses in the flash memory. The verification is started with the 5th byte and the smallest address in the designated area. If the password verification fails, the RAM Transfer routine sets the password error flag.

Product name	Area
TMPM330FDFG TMPM330FYFG	0x3F87_FF04 to 0x3F87_FF0F
TMPM330FWFG	0x3F81_FF04 to 0x3F81_FF0F

- 6. The 17th byte is a checksum value for the password sequence (5th to 16th bytes). To calculate the checksum value for the 12-byte password, add the 12 bytes together, drop the carries and take the two's complement of the total sum. Transmit this checksum value from the controller to the target board. The checksum calculation is described in details in a later section "Checksum Calculation".
- 7. The 18th byte, transmitted from the target board to the controller, is an acknowledge response to the 5th to 17th bytes. First, the RAM Transfer routine checks for a receive error in the 5th to 17th bytes. If there was a receive error, the boot program sends back 0x18 (bit 3) and returns to the state in which it waits for a command (i.e., the 3rd byte) again. In this case, the upper four bits of the acknowledge response are the same as those of the previously issued command (i.e., 1). When the SIO0 is configured for I/O Interface mode, the RAM Transfer routine does not check for a receive error.

Next, the RAM Transfer routine performs the checksum operation to ensure data integrity. Adding the series of the 5th to 16th bytes must result in 0x00 (with the carry dropped). If it is not 0x00, one or more bytes of data has been corrupted. In case of a checksum error, the RAM Transfer routine sends back 0x11 to the controller and returns to the state in which it waits for a command (i.e., the 3rd byte) again.

Finally, the RAM Transfer routine examines the result of the password verification. The following two cases are treated as a password error. In these cases, the RAM Transfer routine sends back 0x11 (bit 0) to the controller and returns to the state in which it waits for a command (i.e., the 3rd byte) again.

- Irrespective of the result of the password comparison, all the 12 bytes of a password in the flash memory are the same value other than 0xFF.
- Not the entire password bytes transmitted from the controller matched those contained in the flash memory.

When all the above verification has been successful, the RAM Transfer routine returns a normal acknowledge response (0x10) to the controller.

8. The 19th to 22nd bytes, transmitted from the controller the target board, indicate the start address of the RAM region where subsequent data (e.g., a flash programming routine) should be stored. The 19th byte corresponds to bits 31.24 of the address and the 22nd byte corresponds to bits 7.0 of the address.

- 9. The 23rd and 24th bytes, transmitted from the controller to the target board, indicate the number of bytes that will be transferred from the controller to be stored in the RAM. The 23rd byte corresponds to bits 15.8 of the number of bytes to be transferred, and the 24th byte corresponds to bits 7.0 of the number of bytes.
- 10. The 25th byte is a checksum value for the 19th to 24th bytes. To calculate the checksum value, add all these bytes together, drop the carries and take the two's complement of the total sum. Transmit this checksum value from the controller to the target board. The checksum calculation is described in details in a later section "Checksum Calculation".
- 11. The 26th byte, transmitted from the target board to the controller, is an acknowledge response to the 19th to 25th bytes of data. First, the RAM Transfer routine checks for a receive error in the 19th to 25th bytes. If there was a receive error, the RAM Transfer routine sends back 0x18 and returns to the command wait state (i.e., the 3rd byte) again. In this case, the upper four bits of the acknowledge response are the same as those of the previously issued command (i.e., 1). When the SIO0 is configured for I/O Interface mode, the RAM Transfer routine does not check for a receive error.

Next, the RAM Transfer routine performs the checksum operation to ensure data integrity. Adding the series of the 19th to 25th bytes must result in 0x00 (with the carry dropped). If it is not 0x00, one or more bytes of data has been corrupted. In case of a checksum error, the RAM Transfer routine sends back 0x11 to the controller and returns to the state in which it waits for a command (i.e., the 3rd byte) again.

• The RAM storage start address must be within the range of 0x2000\_0400 to the end address of RAM.

When the above checks have been successful, the RAM Transfer routine returns a normal acknowledge response (0x10) to the controller.

- 12. The 27th to mth bytes from the controller are stored in the on-chip RAM of the TMPM330FDFG/ FYFG/FWFG. Storage begins at the address specified by the 19th.22nd bytes and continues for the number of bytes specified by the 23rd.24th bytes.
- 13. The (m+1) th byte is a checksum value. To calculate the checksum value, add the 27th to mth bytes together, drop the carries and take the two's complement of the total sum. Transmit this checksum value from the controller to the target board. The checksum calculation is described in details in a later section "Checksum Calculation".
- 14. The (m+2) th byte is a acknowledge response to the 27th to (m+1) th bytes. First, the RAM Transfer routine checks for a receive error in the 27th to (m+1) th bytes. If there was a receive error, the RAM Transfer routine sends back 0x18 (bit 3) and returns to the state in which it waits for a command (i.e., the 3rd byte) again. In this case, the upper four bits of the acknowledge response are the same as those of the previously issued command (i.e., 1). When the SIO0 is configured for I/O Interface mode, the RAM Transfer routine does not check for a receive error.

Next, the RAM Transfer routine performs the checksum operation to ensure data integrity. Adding the series of the 27th to (m+1) th bytes must result in 0x00 (with the carry dropped). If it is not 0x00, one or more bytes of data has been corrupted. In case of a checksum error, the RAM Transfer routine sends back 0x11 (bit 0) to the controller and returns to the command wait state (i.e., the 3rd byte) again. When the above checks have been successful, the RAM Transfer routine returns a normal acknowledge response (0x10) to the controller.

15. If the (m+2) th byte was a normal acknowledge response, a branch is made to the address specified by the 19th to 22nd bytes.

#### 17.2.10.2 Show Flash Memory SUM Command

See Table 17-7 for the transfer format of this command.

1. The processing of the 1st and 2nd bytes are the same as for the RAM Transfer command.

- 2. The 3rd byte, which the target board receives from the controller, is a command. The code for the Show Flash Memory Sum command is 0x20.
- 3. The 4th byte, transmitted from the target board to the controller, is an acknowledge response to the 3rd byte. Before sending back the acknowledge response, the boot program checks for a receive error. If there was a receive error, the boot program transmits 0xX8 (bit 3) and returns to the command wait state again. In this case, the upper four bits of the acknowledge response are undefined they hold the same values as the upper four bits of the previously issued command. When the SIO0 is configured for I/O Interface mode, the boot program does not check for a receive error.

If the 3rd byte is equal to any of the command codes listed in Table 17-4, the boot program echoes it back to the controller. When the Show Flash Memory Sum command was received, the boot program echoes back a value of 0x20 and then branches to the Show Flash Memory Sum routine. If the 3rd byte is not a valid command, the boot program sends back 0xX1 (bit 0) to the controller and returns to the command wait state (the third byte) again. In this case, the upper four bits of the acknowledge response are undefined - they hold the same values as the upper four bits of the previously issued command.

- 4. The Show Flash Memory Sum routine adds all the bytes of the flash memory together. The 5th and 6th bytes, transmitted from the target board to the controller, indicate the upper and lower bytes of this total sum, respectively. For details on sum calculation, see a later section "17.2.10.8 Calculation of the Show Flash Memory Sum Command".
- 5. The 7th byte is a checksum value for the 5th and 6th bytes. To calculate the checksum value, add the 5th and 6th bytes together, drop the carry and take the two's complement of the sum. Transmit this checksum value from the controller to the target board.
- 6. The 8th byte is the next command code.

#### 17.2.10.3 Show Product Information Command

See Table 17-8 for the transfer format of this command.

- 1. The processing of the 1st and 2nd bytes are the same as for the RAM Transfer command.
- 2. The 3rd byte, which the target board receives from the controller, is a command. The code for the Show Product Information command is 0x30.
- 3. The 4th byte, transmitted from the target board to the controller, is an acknowledge response to the 3rd byte. Before sending back the acknowledge response, the boot program checks for a receive error. If there was a receive error, the boot program transmits 0xX8 (bit 3) and returns to the command wait state again. In this case, the upper four bits of the acknowledge response are undefined they hold the same values as the upper four bits of the previously issued command. When the SIO0 is configured for I/O Interface mode, the boot program does not check for a receive error.

If the 3rd byte is equal to any of the command codes listed in Table 17-4, the boot program echoes it back to the controller. When the Show Flash Memory Sum command was received, the boot program echoes back a value of 0x30 and then branches to the Show Flash Memory Sum routine. If the 3rd byte is not a valid command, the boot program sends back 0xX1 (bit 0) to the controller and returns to the state in which it waits for a command (the third byte) again. In this case, the upper four bits of the acknowledge response are undefined - they hold the same values as the upper four bits of the previously issued command.

4. The 5th to 8th bytes, transmitted from the target board to the controller, are the data read from addresses shown below in the flash memory. Software version management is possible by storing a software ID in these locations.

Product name	Area	
TMPM330FDFG TMPM330FYFG	0x3F87_FF00 to 0x3F87_FF03	
TMPM330FWFG	0x3F81_FF00 to 0x3F81_FF03	

5. The 9th to 20th bytes, transmitted from the target board to the controller, indicate the product name as shown below (where [] is a space) in ASCII code.

Product name	Code	
TMPM330FDFG TMPM330FYFG	T, M, P, M, 3, 3, 0, F, D, _, [ ], _	
TMPM330FWFG	T, M, P, M, 3, 3, 0, F, W, _, [ ], _	

6. The 21st to 24th bytes, transmitted from the target board to the controller, indicate the start address of the flash memory area containing the password. Each product has own start address shown below.

Product name	Address	
TMPM330FDFG TMPM330FYFG	0x04, 0xFF,0x 87, 0x3F	
TMPM330FWFG	0x04, 0xFF,0x 81, 0x3F	

- 7. The 25th to 28th bytes, transmitted from the target board to the controller, indicate the start address of the on-chip RAM, i.e., 0x00, 0x00, 0x00, 0x20.
- 8. The 29th to 32nd bytes, transmitted from the target board to the controller, are dummy data (0x00, 0x00, 0x00 and 0x00).
- 9. The 33rd to 36th bytes, transmitted from the target board to the controller, indicate the end address of the on-chip RAM. Each product has own end address shown below.

Product name	Address	
TMPM330FDFG TMPM330FYFG	0xFF, 0x7F, 0x00, 0x20	
TMPM330FWFG	0xFF, 0x1F, 0x00, 0x20	

#### Note: The RAM actual end address of the TMPM330FYFG is 0x2000\_3FFF.

- 10. The 37th to 40th bytes, transmitted from the target board to the controller, are 0x00, 0x00, 0x00 and 0x00. The 41st to 44th bytes, transmitted from the target board to the controller, are 0x00, 0x00, 0x00 and 0x00.
- 11. The 45th and 46th bytes transmitted are 0x00, 0x00.
- 12. The 47th to 50th bytes, transmitted from the target board to the controller, indicate the start address of the on-chip flash memory, are 0x00, 0x00, 0x80, and 0x3F.
- 13. The 51st to 54th bytes, transmitted from the target board to the controller, indicate the end address of the on-chip flash memory. Each product has own end address shown below.

Product name	Address
TMPM330FDFG TMPM330FYFG	0xFF, 0xFF, 0x87, 0x3F
TMPM330FWFG	0xFF, 0xFF, 0x81, 0x3F

- Note: The flash memory actual end address of the TMPM330FYFG is 0x3F83\_FFFF. In addition to 256KB flash area, the TMPM330FYFG provides 128-word data area (0x3F87\_FF00 . 0x3F87\_FF80, 1 page) for Show Product Information command and the password area.
  - 14. The 55th to 56th bytes, transmitted from the target board to the controller, indicate the

Product name	Number of flash blocks
TMPM330FDFG	0x06, 0x00
TMPM330FYFG	0x06, 0x00
TMPM330FWFG	0x04, 0x00

number of flash blocks available. Each product transmits own number shown below.

- 15. The 57th to 83rd bytes, transmitted from the target board to the controller, contain information about the flash blocks. Flash blocks of the same size are treated as a group. Information about the flash blocks indicate the start address of a group, the size of the blocks in that group (in halfwords) and the number of the blocks in that group. The 57th to 65th bytes are the information about the 16-kbyte blocks. The 66th to 74th bytes are the information about the 32-kbyte blocks. The 75th to 83rd bytes are the information about the 64-kbyte blocks. The 84th to 92nd bytes are the information about the 128-kbyte blocks. See Table 17-8 for the values of bytes transmitted.
- 16. The 66th byte, transmitted from the target board to the controller, is a checksum value for the 5th to 92nd bytes. The checksum value is calculated by adding all these bytes together, dropping the carry and taking the two's complement of the total sum.
- 17. The 94th byte is the next command code.

#### 17.2.10.4 Chip and Protection Bit Erase Command

See Table 17-9 for the transfer format of this command.

- 1. The processing of the 1st and 2nd bytes are the same as for the RAM Transfer command.
- 2. From the Controller to the TMPM330FDFG/FYFG/FWFG

The 3rd byte, which the target board receives from the controller, is a command. The code for the Show Product Information command is 0x40.

3. From the TMPM330FDFG/FYFG/FWFG to the Controller

The 4th byte, transmitted from the target board to the controller, is an acknowledge response to the 3rd byte.

Before sending back the acknowledge response, the boot program checks for a receive error. If there was a receive error, the boot program transmits 0xX8 (bit 3) and returns to the command wait state again. In this case, the upper four bits of the acknowledge response are undefined - they hold the same values as the upper four bits of the previously issued command.

If the 3rd byte is equal to any of the command codes listed in Table 17-4, the boot program echoes it back to the controller. When the Show Flash Memory Sum command was received, the boot program echoes back a value of 0x40. If the 3rd byte is not a valid command, the boot program sends back 0xX1 (bit 0) to the controller and returns to the state in which it waits for a command (the third byte) again. In this case, the upper four bits of the acknowledge response are undefined - they hold the same values as the upper four bits of the previously issued command.

4. From the Controller to the TMPM330FDFG/FYFG/FWFG

The 5th byte, transmitted from the target board to the controller, is the Chip Erase Enable command code (0x54).

5. From the TMPM330FDFG/FYFG/FWFG to the Controller

The 6th byte, transmitted from the target board to the controller, is an acknowledge response to the 5th byte.

Before sending back the acknowledge response, the boot program checks for a receive error. If there was a receive error, the boot program transmits 0xX8 (bit 3) and returns to the command wait state again. In this case, the upper four bits of the acknowledge response are undefined - they hold the same values as the upper four bits of the previously issued command.

If the 5th byte is equal to any of the command codes to enable erasing, the boot program echoes it back to the controller. When the Chip and Protection Erase command was received, the boot program echoes back a value of 0x54 and then branches to the Chip Erase routine. If the 5th byte is not a valid command, the boot program sends back 0xX1 (bit 0) to the controller and returns to the state in which it waits for a command (the third byte) again. In this case, the upper four bits of the acknowledge response are undefined - they hold the same values as the upper four bits of the previously issued command.

6. From the TMPM330FDFG/FYFG/FWFG to the Controller

The 7th byte indicates whether the Chip Erase command is normally completed or not. At normal completion, completion code (0x4F) is sent. When an error was detected, error code (0x4C) is sent.

7. The 9th byte is the next command code.

#### 17.2.10.5 Acknowledge Responses

The boot program represents processing states with specific codes. Table 17-10 to Table 17-13 show the values of possible acknowledge responses to the received data. The upper four bits of the acknowledge response are equal to those of the command being executed. Bit 3 of the code indicates a receive error. Bit 0 indicates an invalid command error, a checksum error or a password error. Bit 1 and bit 2 are always "0". Receive error checking is not done in I/O Interface mode.

#### Table 17-10 ACK Response to the Serial Operation Mode Byte

Return Value	Meaning
0x86	The SIO can be configured to operate in UART mode. (See Note)
0x30	The SIO can be configured to operate in I/O Interface mode.

Note: If the serial operation mode is determined as UART, the boot program checks if the SIO can be programmed to the baud rate at which the operation mode byte was transferred. If that baud rate is not possible, the boot program aborts, without sending back any response.

#### Table 17-11 ACK Response to the Command Byte

Return Value	Meaning
0x?8 (See Note)	A receive error occurred while getting a command code.
0x?1 (See Note)	An undefined command code was received. (Reception was completed normally.)
0x10	The RAM Transfer command was received.
0x20	The Show Flash Memory Sum command was received.
0x30	The Show Product Information command was received.
0x40	The Chip Erase command was received.

Note: The upper four bits of the ACK response are the same as those of the previous command code.

Table 17-12 ACK Response to the Checksum Byte

Return Value	Meaning
0xN8 (See Note)	A receive error occurred.
0xN1 (See Note)	A checksum or password error occurred.
0xN0 (See Note)	The checksum was correct.

Note: The upper four bits of the ACK response are the same as those of the operation command code. It is 1 (N; RAM transfer command data [7:4]) when password error occurs.

#### Table 17-13 ACK Response to Chip and Protection Bit Erase Byte

Return Value	Meaning
0x54	The Chip Erase enabling command was received.
0x4F	The Chip Erase command was completed.
0x4C	The Chip Erase command was abnormally completed.

#### 17.2.10.6 Determination of a Serial Operation Mode

The first byte from the controller determines the serial operation mode. To use UART mode for communications between the controller and the target board, the controller must first send a value of 0x86 at a desired baud rate to the target board. To use I/O Interface mode, the controller must send a value of 0x30 at 1/16 the desired baud rate. Figure 17-4 shows the waveforms for the first byte.

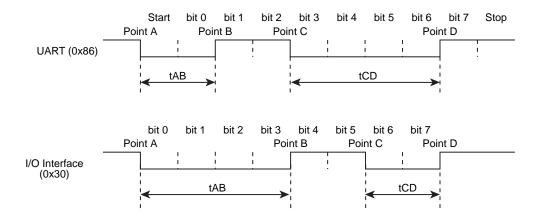


Figure 17-4 Serial Operation Mode Byte

After  $\overline{\text{RESET}}$  is released, the boot program monitors the first serial byte from the controller, with the SIO reception disabled, and calculates the intervals of tAB, tAC and tAD. Figure 17-5 shows a flowchart describing the steps to determine the intervals of tAB, tAC and tAD. As shown in the flowchart, the boot program captures timer counts each time a logic transition occurs in the first serial byte. Consequently, the calculated tAB, tAC and tAD intervals are bound to have slight errors. If the transfer goes at a high baud rate, the CPU might not be able to keep up with the speed of logic transitions at the serial receive pin. In particular, I/O Interface mode is more prone to this problem since its baud rate is generally much higher than that for UART mode. To avoid such a situation, the controller should send the first serial byte at 1/16 the desired baud rate.

The flowchart in Figure 17-5 shows how the boot program distinguishes between UART and I/O Interface modes. If the length of tAB is equal to or less than the length of tCD, the serial operation mode is determined as UART mode. If the length of tAB is greater than the length of tCD, the serial operation mode is determined as I/O Interface mode. Bear in mind that if the baud rate is too high or the timer operating frequency is too low, the timer resolution will be coarse, relative to the intervals between logic transitions. This becomes a problem due to inherent errors caused by the way in which timer counts are captured by software; consequently the boot program might not be able to determine the serial operation mode correctly. To prevent this problem, reset UART mode within the programming routine.

For example, the serial operation mode may be determined to be I/O Interface mode when the intended mode is UART mode. To avoid such a situation, when UART mode is utilized, the controller should allow for a time-out period within which it expects to receive an echo-back (0x86) from the target board. The controller should give up the communication if it fails to get that echo-back within the allowed time. When I/O Interface mode is utilized, once the first serial byte has been transmitted, the controller should send the SCLK clock after a certain idle time to get an acknowledge response. If the received acknowledge response is not 0x30, the controller should give up further communications.

When the intended mode is I/O interface mode, the first byte does not have to be 0x30 as long as tAB is greater than tCD as shown above. 0x91, 0xA1 or 0xB1 can be sent as the first byte code to determine the falling edges of Point A and Point C and the rising edges of Point B and Point D. If tAB is greater than tCD and SIO is selected by the resolution of the operation mode determination, the second byte code is 0x30 even though the transmitted code on the first byte is not 0x30 (The first byte code to determine I/O interface mode is described as 0x30).


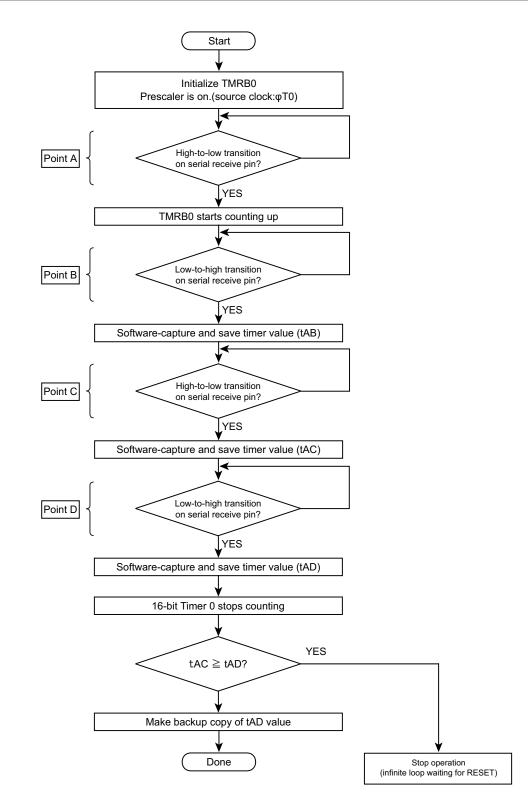


Figure 17-5 Serial Operation Mode Byte Reception Flowchart

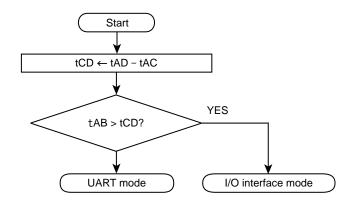

## Figure 17-6 Serial Operation Mode Determination Flowchart

#### 17.2.10.7 Password

The RAM Transfer command (0x10) causes the boot program to perform password verification. Following an echo-back of the command code, the boot program verifies the contents of the 12-byte password area within the flash memory. The following table shows the password area of each product.

Product name	Area
TMPM330FDFG TMPM330FYFG	0x3F87_FF04 to 0x3F87_FF0F
TMPM330FWFG	0x3F81_FF04 to 0x3F81_FF0F

# Note: If a password is set to 0xFF (erased data area), it is difficult to protect data securely due to an easy-to-guess password. Even if Single Boot mode is not used, it is recommended to set a unique value as a password.

If all these address locations contain the same bytes of data other than 0xFF, a password area error occurs as shown in Figure 17-7. In this case, the boot program returns an error acknowledge (0x11) in response to the checksum byte (the 17th byte), regardless of whether the password sequence sent from the controller is all 0xFFs.

The password sequence received from the controller (5th to 16th bytes) is compared to the password stored in the flash memory. All of the 12 bytes must match to pass the password verification. Otherwise, a password error occurs, which causes the boot program to reply an error acknowledge in response to the checksum byte (the 17th byte).

The password verification is performed even if the security function is enabled.

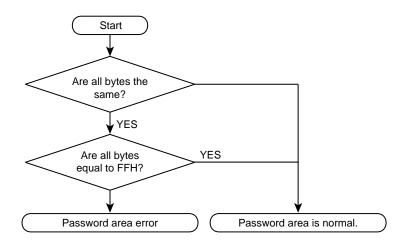


Figure 17-7 Password Area Verification Flowchart

#### 17.2.10.8 Calculation of the Show Flash Memory Sum Command

ī

The result of the sum calculation "byte + byte +  $\cdot \cdot \cdot$ " is responded by a word quantity. The Show Flash Memory Sum command adds all 512 Kbytes of the flash memory together and provides the total sum as a halfword quantity. The sum is sent to the controller, with the upper eight bits first, followed by the lower eight bits.

## Note: In the TMP330FYFG, the range from 256KB through the password area and from the password area through 0x007\_FFFF area are calculated as "0xFF".

Example)

0xA1	For the interest of simplicity, assume the depth of the flash
0xB2	memory is four locations. Then the sum of the four bytes is calculated as:
0xC3	0xA1 + 0xB2 + 0xC3 + 0xD4 = 0x02EA
0xD4	Hence, 0x02 is first sent to the controller, followed by 0xEA.
	1

#### 17.2.10.9 Checksum Calculation

The checksum byte for a series of bytes of data is calculated by adding the bytes together, dropping the carries, and taking the two's complement of the total sum. The Show Flash Memory Sum command and the Show Product Information command perform the checksum calculation. The controller must perform the same checksum operation in transmitting checksum bytes.

Example) Assume the Show Flash Memory Sum command provides the upper and lower bytes of the sum as 0xE5 and 0xF6. To calculate the checksum for a series of 0xE5 and 0xF6:

Add the bytes together


0xE5 + 0xF6 = 0x1DB


Take the two's complement of the sum, and that is the checksum byte.

0 - 0xDB = 0x25

## 17.2.11 General Boot Program Flowchart

Figure 17-8 shows an overall flowchart of the boot program.

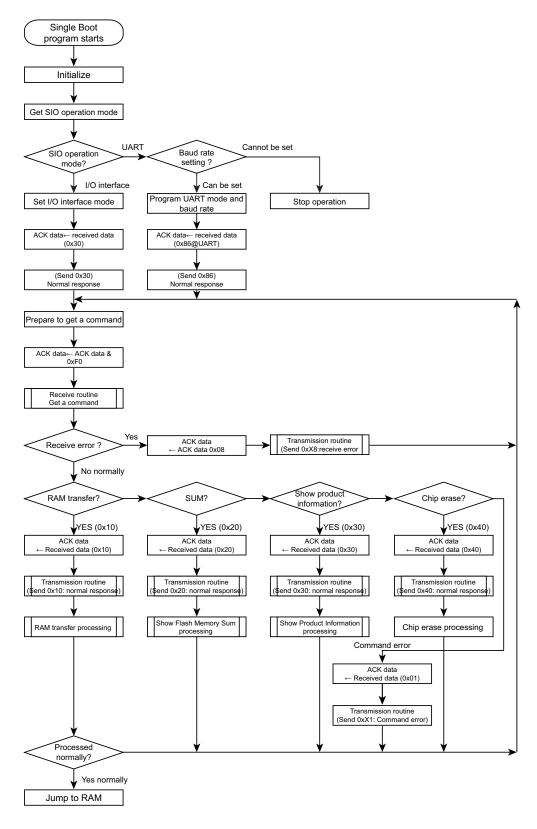



## 17.3 On-board Programming of Flash Memory (Rewrite/Erase)

In on-board programming, the CPU is to execute software commands for rewriting or erasing the flash memory. The rewrite/erase control program should be prepared by the user beforehand. Because the flash memory content cannot be read while it is being written or erased, it is necessary to run the rewrite/erase program from the internal RAM after shifting to the user boot mode.

## 17.3.1 Flash Memory

Except for some functions, writing and erasing flash memory data are in accordance with the standard JEDEC commands. In writing or erasing, use 32-bit data transfer command of the CPU to enter commands to the flash memory. Once the command is entered, the actual write or erase operation is automatically performed internally.

Table 17-1	4 Flash	Memory	Functions
	1 1 10011	internet y	

Major functions	Description			
Automatic page program	Writes data automatically per page.			
Automatic chip erase Erases the entire area of the flash memory automatically.				
Automatic block erase	Erases a selected block automatically.			
Protect function	The write or erase operation can be individually inhibited for each block.			

## 17.3.1.1 Block Configuration

## (1) TMPM330FDFG


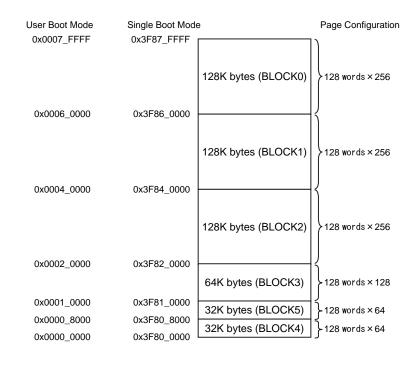


Figure 17-9 Block Configuration of Flash Memory (TMPM330FDFG)

### (2) TMPM330FYFG

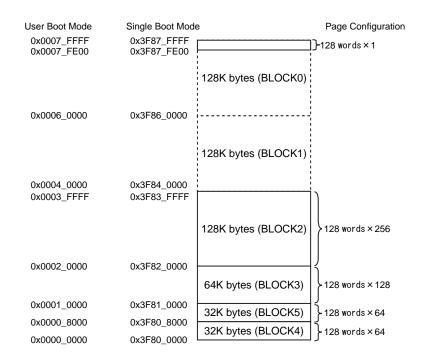

## Figure 17-10 Block Configuration of Flash Memory (TMPM330FYFG)

Note: In addition to 256KB flash area, the TMPM330FYFG provides 128-word data/password area (0x3F87\_FE00 . 0x3F87\_FFFF, 1 page) for Show Product Information command. To erase the content, execute the automatic chip erase command or assign block 0 with the automatic block erase command.

## (3) TMPM330FWFG

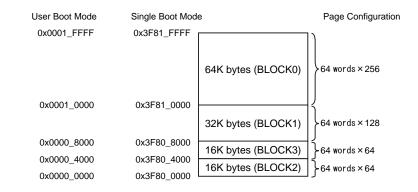


Figure 17-11 Block Configuration of Flash Memory (TMPM330FWFG)

#### 17.3.1.2 Basic operation

This flash memory device has the following two operation modes:

- The mode to read memory data (Read mode)
- The mode to automatically erase or rewrite memory data (Automatic operation)

Transition to the automatic mode is made by executing a command sequence while it is in the memory read mode. In the automatic operation mode, flash memory data cannot be read and any commands stored in the flash memory cannot be executed. In the automatic operation mode, any interrupt or exception generation cannot set the device to the read mode except when a hardware reset is generated. During automatic operation, be sure not to cause any exceptions other than reset and debug exceptions while a debug port is connected. Any exception generation cannot set the device to the read mode except when a hardware reset when a hardware reset is generated.

#### (1) Read

When data is to be read, the flash memory must be set to the read mode. The flash memory will be set to the read mode immediately after power is applied, when CPU reset is removed, or when an automatic operation is normally terminated. In order to return to the read mode from other modes or after an automatic operation has been abnormally terminated, either the Read/reset command (a software command to be described later) or a hardware reset is used. The device must also be in the read mode when any command written on the flash memory is to be executed.

• Read/reset command and Read command (software reset)

When ID-Read command is used, the reading operation is terminated instead of automatically returning to the read mode. In this case, the Read/reset command can be used to return the flash memory to the read mode. Also, when a command that has not been completely written has to be canceled, the Read/reset command must be used. The Read command is used to return to the read mode after executing 32-bit data transfer command to write the data "0x0000\_00F0" to an arbitrary address of the flash memory.

• With the Read/reset command, the device is returned to the read mode after completing the third bus write cycle.

#### (2) Command write

This flash memory uses the command control method. Commands are executed by executing a command sequence to the flash memory. The flash memory executes automatic operation commands according to the address and data combinations applied (refer to Command Sequence).

If it is desired to cancel a command write operation already in progress or when any incorrect command sequence has been entered, the Read/reset command is to be executed. Then, the flash memory will terminate the command execution and return to the read.

While commands are generally comprised of several bus cycles, the operation to apply 32-bit data transmit command to the flash memory is called "bus write cycle." The bus write cycles are to be in a specific sequential order and the flash memory will perform an automatic operation when the sequence of the bus write cycle data and address of a command write operation is in accordance with a predefined specific sequence. If any bus write cycle does not follow a predefined command write sequence, the flash memory will terminate the command execution and return to the read mode.

#### Note 1: Command sequences are executed from outside the flash memory area.

Note 2: Each bus write cycle must be sequentially executed by 32-bit data transmit command. While a command sequence is being executed, access to the flash memory is prohibited. Also, don't generate any interrupt (except debug exceptions when a debug port is connected).If such an operation is made, it can result in an unexpected read access to the flash memory and the command sequencer may not be able to correctly recognize the command. While it could cause an abnormal termination of the command sequence, it is also possible that the written command is incorrectly recognized.

- Note 3: For the command sequencer to recognize a command, the device must be in the read mode prior to executing the command. Be sure to check before the first bus write cycle that FCFLCS <RDY/BSY> is set to "1." It is recommended to subsequently execute a Read command.
- Note 4: Upon issuing a command, if any address or data is incorrectly written, be sure to perform a software reset to return to the read mode again.

#### 17.3.1.3 Reset(Hardware reset)

A hardware reset is used to cancel the operational mode set by the command write operation when forcibly termination during auto programming/ erasing or abnormal termination during automatic operation.

The flash memory has a reset input as the memory block and it is connected to the CPU reset signal. Therefore, when the RESET input pin of this device is set to VIL or when the CPU is reset due to any overflow of the watch dog timer, the flash memory will return to the read mode terminating any automatic operation that may be in progress. It should also be noted that applying a hardware reset during an automatic operation can result in incorrect rewriting of data. In such a case, be sure to perform the rewriting again.

Refer to Section "17.2.1 Reset Operation" for CPU reset operations. After a given reset input, the CPU will read the reset vector data from the flash memory and starts operation after the reset is removed.

#### 17.3.1.4 Commands

#### (1) Automatic Page Programming

Writing to a flash memory device is to make "1" data cells to "0" data cells. Any "0" data cell cannot be changed to a "1" data cell. For making "0" data cells to "1" data cells, it is necessary to perform an erase operation.

The automatic page programming function of this device writes data of each page. The TMPM330FDFG/ TMPM330FYFG contain 128 words and the TMPM330FWFG contains 64 words in a page. A 128 word block is defined by a same [31:9] address and it starts from the address [8:0] = 0x00 and ends at the address [8:0] = 0x1FF. A 64 word block is defined by a same [31:8] address and it starts from the address [7:0] = 0x00 and ends at the address [7:0] = 0xFF. This programming unit is hereafter referred to as a "page".

Writing to data cells is automatically performed by an internal sequencer and no external control by the CPU is required. The state of automatic page programming (whether it is in writing operation or not) can be checked by FCFLCS [0] <RDY/BSY>.

Also, any new command sequence is not accepted while it is in the automatic page programming mode. If it is desired to interrupt the automatic page programming, use the hardware reset function. If the operation is stopped by a hardware reset operation, it is necessary to once erase the page and then perform the automatic page programming again because writing to the page has not been normally terminated.

The automatic page programming operation is allowed only once for a page already erased. No programming can be performed twice or more times irrespective of the data cell value whether it is "1" or "0." Note that rewriting to a page that has been once written requires execution of the automatic block erase or automatic chip erase command before executing the automatic page programming command again. Note that an attempt to rewrite a page two or more times without erasing the content can cause damages to the device.

No automatic verify operation is performed internally to the device. So, be sure to read the data programmed to confirm that it has been correctly written.

The automatic page programming operation starts when the third bus write cycle of the command cycle is completed. On and after the fifth bus write cycle, data will be written sequentially starting from

the next address of the address specified in the fourth bus write cycle (in the fourth bus write cycle, the page top address will be command written) (32 bits of data is input at a time). Be sure to use the 32-bit data transfer command in writing commands on and after the fourth bus cycle. In this, any 32-bit data transfer commands shall not be placed across word boundary. On and after the fifth bus write cycle, data is command written to the same page area. Even if it is desired to write the page only partially, it is required to perform the automatic page programming for the entire page. In this case, the address input for the fourth bus write cycle shall be set to the top address of the page. Be sure to perform command write operation with the input data set to "1" for the data cells not to be set to "0." For example, if the top address of a page is not to be written, set the input data of the fourth bus write cycle to 0xFFFFFFF to command write the data.

Once the third bus cycle is executed, the automatic page programming is in operation. This condition can be checked by monitoring FCFLCS<RDY/BSY>. Any new command sequence is not accepted while it is in automatic page programming mode. If it is desired to stop operation, use the hardware reset function. Be careful in doing so because data cannot be written normally if the operation is interrupted. When a single page has been command written normally terminating the automatic page writing process, FCFLCS<RDY/BSY> is set to "1" and it returns to the read mode.

When multiple pages are to be written, it is necessary to execute the page programming command for each page because the number of pages to be written by a single execution of the automatic page program command is limited to only one page. It is not allowed for automatic page programming to process input data across pages.

Data cannot be written to a protected block. When automatic programming is finished, it automatically returns to the read mode. This condition can be checked by monitoring FCFLCS<RDY/BSY>. If automatic programming has failed, the flash memory is locked in the mode and will not return to the read mode. For returning to the read mode, it is necessary to execute hardware reset to reset the flash memory or the device. In this case, while writing to the address has failed, it is recommended not to use the device or not to use the block that includes the failed address.

## Note: Software reset becomes ineffective in bus write cycles on and after the fourth bus write cycle of the automatic page programming command.

#### (2) Automatic chip erase

The automatic chip erase operation starts when the sixth bus write cycle of the command cycle is completed.

This condition can be checked by monitoring FCFLCS<RDY/BSY>. While no automatic verify operation is performed internally to the device, be sure to read the data to confirm that data has been correctly erased. Any new command sequence is not accepted while it is in an automatic chip erase operation. If it is desired to stop operation, use the hardware reset function. If the operation is forced to stop, it is necessary to perform the automatic chip erase operation again because the data erasing operation has not been normally terminated.

Also, any protected blocks cannot be erased. If all the blocks are protected, the automatic chip erase operation will not be performed and it returns to the read mode after completing the sixth bus read cycle of the command sequence. When an automatic chip erase operation is normally terminated, it automatically returns to the read mode. If an automatic chip erase operation has failed, the flash memory is locked in the mode and will not return to the read mode.

For returning to the read mode, it is necessary to execute hardware reset to reset the device. In this case, the failed block cannot be detected. It is recommended not to use the device anymore or to identify the failed block by using the block erase function for not to use the identified block anymore.

#### (3) Automatic block erase (for each block)

The automatic block erase operation starts when the sixth bus write cycle of the command cycle is completed.

This status of the automatic block erase operation can be checked by monitoring FCFLCS  $\langle RDY \rangle$  BSY>. While no automatic verify operation is performed internally to the device, be sure to read the data to confirm that data has been correctly erased. Any new command sequence is not accepted while it is in an automatic block erase operation. If it is desired to stop operation, use the hardware reset function. In this case, it is necessary to perform the automatic block erase operation again because the data erasing operation has not been normally terminated.

Also, any protected blocks cannot be erased. If an automatic block erase operation has failed, the flash memory is locked in the mode and will not return to the read mode. In this case, execute hardware reset to reset the device.

#### (4) Automatic programming of protection bits (for each block)

This device is implemented with protection bits. This protection can be set for each block. See Table 17-18 for table of protection bit addresses. This device assigns 1 bit to 1 block as a protection bit. The applicable protection bit is specified by PBA in the seventh bus write cycle. By automatically programming the protection bits, write and/or erase functions can be inhibited (for protection) individually for each block. The protection status of each block can be checked by FCFLCS <BLPRO> to be described later. This status of the automatic programming operation to set protection bits can be checked by monitoring FCFLCS <RDY/BSY> . Any new command sequence is not accepted while automatic programming is in progress to program the protection bits. If it is desired to stop the programming operation, use the hardware reset function. In this case, it is necessary to perform the programming operation again because the protection bits may not have been correctly programmed. If all the protection bits have been programmed, all FCFLCS <BLPRO> are set to "1" indicating that it is in the protected state. This disables subsequent writing and erasing of all blocks.

Note: Software reset is ineffective in the seventh bus write cycle of the automatic protection bit programming command. FCFLCS <RDY/BSY> turns to "0" after entering the seventh bus write cycle.

#### (5) Automatic erasing of protection bits

Different results will be obtained when the automatic protection bit erase command is executed depending on the status of the protection bits and the security bits. It depends on the status of FCFLCS <BLPRO> whether all <BLPRO> are set to "1" or not if FCSECBIT<FCSECBIT> is 0x1. Be sure to check the value of FCFLCS <BLPRO> before executing the automatic protection bit erase command. See the chapter "ROM protection" for details.

#### Note: The TMPM330FYFG is configured with block 2 through 5. Block 0 and 1 require a programming of protection bits when using security function.

• When all the FCFLCS <BLPRO> are set to "1" (all the protection bits are programmed):

When the automatic protection bit erase command is command written, the flash memory is automatically initialized within the device. When the seventh bus write cycle is completed, the entire area of the flash memory data cells is erased and then the protection bits are erased. This operation can be checked by monitoring FCFLCS <RDY/BSY>. If the automatic operation to erase protection bits is normally terminated, FCFLCS will be set to "0x00000001". While no automatic verify operation is performed internally to the device, be sure to read the data to confirm that it has been correctly erased. For returning to the read mode while the automatic operation after the seventh bus cycle is in progress, it is necessary to use the hardware reset to reset the device. If this is done, it is necessary to check the status of

protection bits by FCFLCS <BLPRO> after retuning to the read mode and perform either the automatic protection bit erase, automatic chip erase, or automatic block erase operation, as appropriate.

When FCFLCS <BLPRO> include "0" (not all the protection bits are programmed):

If the automatic protection bit is cleared to "0", the protection condition is canceled. With this device, protection bits can be programmed to an individual block and performed bit-erase operation in the four bits unit as shown in Table 17-19. The target bits are specified in the seventh bus write cycle. The protection status of each block can be checked by FCFLCS <BLPRO> to be described later. This status of the programming operation for automatic protection bits can be checked by monitoring FCFLCS <RDY/BSY>. When the automatic operation to erase protection bits is normally terminated, the protection bits of FCFLCS <BLPRO> selected for erasure are set to "0".

In any case, any new command sequence is not accepted while it is in an automatic operation to erase protection bits. If it is desired to stop the operation, use the hardware reset function. When the automatic operation to erase protection bits is normally terminated, it returns to the read mode.

## Note: The FCFLCS <RDY/BSY> bit is "0" while in automatic operation and it turns to "1" when the automatic operation is terminated.

#### (6) ID-Read

Using the ID-Read command, you can obtain the type and other information on the flash memory contained in the device. The data to be loaded will be different depending on the address [15:14] of the fourth and subsequent bus write cycles (recommended input data is 0x00). On and after the fourth bus write cycle, when an arbitrary flash memory area is read, the ID value will be loaded. Once the fourth bus write cycle of an ID-Read command has passed, the device will not automatically return to the read mode. In this condition, the set of the fourth bus write cycle and ID-Read commands can be repetitively executed. For returning to the read mode, use the Read/reset command or hardware reset command.

### 17.3.1.5 Flash control/ status register

Base Address = 0x4004								
Register name	Address(Base+)							
Security bit register	FCSECBIT	0x0000						
Reserved	-	0x0004						
Flash control register	FCFLCS	0x0020						
Reserved	-	0x0024						
Reserved	-	0x0028						

Note: Access to the "Reserved" areas is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	BLPRO5	BLPRO4	BLPRO3	BLPRO2	BLPRO1	BLPR00
After reset	0	0	(Note2)	(Note2)	(Note2)	(Note2)	(Note2)	(Note2)
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7 6	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	RDY/BSY
After reset	0	0	0	0	0	0	0	1

### (1) FCFLCS (Flash control register)

Bit	Bit Symbol	Туре	Function
31-22	-	R	Read as 0.
21-16	BLPRO5 to BLPRO0	R	Protection for Block5 to 0 (Note 3) 0: disabled 1: enabled Protection status bits Each of the protection bits represents the protection status of the corresponding block. When a bit is set to "1," it indicates that the block corresponding to the bit is protected. When the block is protected, data cannot be written to it.
15-1	-	R	Read as 0.
0	RDY/BSY	R	Ready/Busy (Note 1) 0: Auto operating 1:Auto operation terminated Ready/Busy flag bit The RDY/BSY output is provided as a means to monitor the status of automatic operation. This bit is a function bit for the CPU to monitor the function. When the flash memory is in automatic operation, it outputs "0" to indicate that it is busy. When the automatic operation is terminated, it returns to the ready state and outputs "1" to accept the next command. If the automatic operation has failed, this bit maintains the "0" output. By applying a hardware reset, it returns to "1."

- Note 1: This command must be issued in the ready state. Issuing the command in the busy state may disable both correct command transmission and further command input. To exit from the condition, execute system reset. System reset requires at least 0.5 µs regardless of the system clock frequency. In this condition, it takes approx. 2 ms to enable reading after reset.
- Note 2: The value varies depending on protection applied.
- Note 3: The FCFLCS[21:20] of TMPM330FWFG have no function. They are read as "0".

(2)	FCSECBIT (Security bit register)
-----	----------------------------------

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0 0		0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	SECBIT
After reset	0	0	0	0	0	0	0	1

Bit	Bit Symbol	Туре	Function
31-1	-	R	Read as 0.
0	SECBIT	R/W	Security bits
			0:disabled
			1:enabled

Note: This register is initialized by cold reset.

### 17.3.1.6 List of Command Sequences

Table 17-15 shows the addresses and the data of each command of flash memory.

Bus cycles are "bus write cycles" except for the second bus cycle of the Read command, the fourth bus cycle of the Read/reset command, and the fifth bus cycle of the ID-Read command. Bus write cycles are executed by 32-bit (word) data transfer commands. (In the following table, only lower 8 bits data are shown.)

See Table 17-16 for the detail of the address bit configuration. Use a value of "Addr." in the Table 17-15 for the address [15:8] of the normal command in the Table 17-16.

Note: Always set "0" to the address bits [1:0] in the entire bus cycle.

	First bus cy- cle	Second bus cycle	Third bus cy- cle	Fourth bus cycle	Fifth bus cy- cle	Sixth bus cy- cle	Seventh bus cycle
Command sequence	Addr.	Addr.	Addr.	Addr.	Addr.	Addr.	Addr.
	Data	Data	Data	Data	Data	Data	Data
Deed	0xXX	-	-	-	-	-	-
Read	0xF0	-	-	-	-	-	-
Read/Reset	0x54XX	0xAAXX	0x54XX	RA	-	-	-
Read/Reset	0xAA	0x55	0xF0	RD	-	-	-
ID-Read	0x54XX	0xAAXX	0x54XX	IA	0xXX	-	-
ID-Read	0xAA	0x55	0x90	0x00	ID	-	-
Automatic page program-	0x54XX	0xAAXX	0x54XX	PA	PA	PA	PA
ming	0xAA	0x55	0xA0	PD0	PD1	PD2	PD3
Automatic ship anasa	0x54XX	0xAAXX	0x54XX	0x54XX	0xAAXX	0x54XX	-
Automatic chip erase	0xAA	0x55	0x80	0xAA	0x55	0x10	-
Auto Block erase	0x54XX	0xAAXX	0x54XX	0x54XX	0xAAXX	BA	-
Auto Block erase	0xAA	0x55	0x80	0xAA	0x55	0x30	-
Protection bit program-	0x54XX	0xAAXX	0x54XX	0x54XX	0xAAXX	0x54XX	PBA
ming	0xAA	0x55	0x9A	0xAA	0x55	0x9A	0x9A
Protection bit erase	0x54XX	0xAAXX	0x54XX	0x54XX	0xAAXX	0x54XX	PBA
Protection bit erase	0xAA	0x55	0x6A	0xAA	0x55	0x6A	0x6A

Table 17-15 Flash Memory Access from the Internal CPU

Supplementary explanation

- RA: Read address
- RD: Read data
- IA: ID address
- ID: ID data
- PA: Program page address
  - PD: Program data (32 bit data)

After the fourth bus cycle, enter data in the order of the address for a page.

- BA: Block address
- PBA: Protection bit address

#### 17.3.1.7 Address bit configuration for bus write cycles

Table 17-16 is used in conjunction with Table 17-15 "Flash Memory Access from the Internal CPU." Address setting can be performed according to the normal bus write cycle address configuration from the first bus cycle. "0" is recommended" in the Table 17-16 Address Bit Configuration for Bus Write Cycles can be changed as necessary.

## Table 17-16 Address Bit Configuration for Bus Write Cycles

Address	Addr [31:19]	Addr [18]	Addr [17]	Addr [16]	Addr [15]	Addr [14]	Addr [13:11]	Addr [10]	Addr [9]	Addr [8]	Addr [7:0]
	[51.13]	r	r	1.41	r	r	[13.11]	[]	[-]	r-1	[7.0]

## [TMPM330FDFG/FYFG/FWFG]

	Normal bus write cycle address configuration					
Normal com- mands	Flash area	"0" is recommended.	Command O		Addr[1:0]="0" (fixed) Others:0 (recommended)	
	IA: ID address (Set the fourth bus write cycle address for ID-Read operation)					
ID-READ	ID-READ Flash area "0" is rec		ID address	Addr[1:0]="0" (fixed) , Others:0 (recommended)		

#### [TMPM330FDFG/FYFG]

Dia di anno 1		ion)					
Block erase	Block selection (Table 17-17)			Addr[1:0]="0"	Addr[1:0]="0" (fixed) , Others:0 (recommended)		
Auto page		PA: Program pag	e address (S	et the fourth bus write cycle address fo	r page programmin	g operation)	
program- ming Page selection				Page selection     Addr[1:0]="0" (fixe       Others:0 (recomment			
	PBA: Protection bit address (Set the seventh bus erase cycle address for protection bit erasure)						
Protection bit program- ming	Flash area	Protection bit se (Table 17-1		Fixed to "0".	Protection bit selection (Table 17-18)	Addr[1:0]="0" (fixed) Others:0 (recommended)	
		PBA: Protection	n bit address	(Set the seventh bus erase cycle addre	ess for protection b	it erasure)	
Protection bit erase	Flash area	Protection bit selection (Table 17-19)		"0" is recommended.	Addr[1:0]="0" (fixed) Others:0 (recommended)		

## [TMPM330FWFG]

Block erase	Block selection (Table 17-17)		Addr[1:0]="0" (fixed) , Others:0 (recommended)				
		PA: Program page address (Set the fourth bus write cycle address for page programming operati					
Auto page program- ming	Page selection Addr[1:0]="0" (fix Others:0 (recommended						
	PBA: Protection bit address (Set the seventh bus write cycle address for protection bit programming						
Protection bit program- ming	Flash area	Protection bit selection (Table 17-18)	Fix	ed to "0".	Protection bit selection (Table 17-18)	Addr[1:0]="0" (fixed) Others:0 (recommen- ded)	
		PBA: Protectior	n bit address (Set the seven	th bus erase cycle address for pro	tection bit erasure	)	
Protection bit erase	Flash area	Protection bit selection (Table 17-19)	Fixed to "0".		:0]="0" (fixed) (recommended)		

## TOSHIBA

As block address, specify any address in the block to be erased.

Table 17-17 Block Address Table

Block Address (User boot mode)	Address (Single boot mode)	Size (Kbyte)
--------------------------------	----------------------------	-----------------

## [TMPM330FDFG/FYFG]

4	0x0000_0000 ~ 0x0000_7FFF	0x3F80_0000 ~ 0x3F80_7FFF	32
5	0x0000_8000 ~ 0x0000_FFFF	0x3F80_0000 ~ 0x3F80_FFFF	32
3	0x0001_0000 ~ 0x0001_FFFF	0x3F81_0000 ~ 0x3F81_FFFF	64
2	0x0002_0000 ~ 0x0003_FFFF	0x3F82_0000 ~ 0x3F83_FFFF	128
1	0x0004_0000 ~ 0x0005_FFFF	0x3F84_0000 ~ 0x3F85_FFFF	128
0	0x0006_0000 ~ 0x0007_FFFF	0x3F86_8000 ~ 0x3F87_FFFF	128

## [TMPM330FWFG]

2	0x0000_0000 ~ 0x0000_3FFF	0x3F80_0000 ~ 0x3F80_3FFF	16
3	0x0000_4000 ~ 0x0000_7FFF	0x3F80_4000 ~ 0x3F80_7FFF	16
1	0x0000_8000 ~ 0x0000_FFFF	0x3F80_8000 ~ 0x3F80_FFFF	32
0	0x0001_0000 ~ 0x0001_FFFF	0x3F81_0000 ~ 0x3F81_FFFF	64

## Note: As for the addresses from the first to the fifth bus cycles, specify the upper addresses of the blocks to be erased.

### Table 17-18 Protection Bit Programming Address Table

		The seventh bus write cycle address						
Block	Protection bit	Address [18]	Address [17]	Address [16]	Address [15:11]	Address [10]	Address [9]	Address [8]

## [TMPM330FDFG/FYFG]

Block0	<blpro[0]></blpro[0]>	0	0	1		0	0	
Block1	<blpro[1]></blpro[1]>	0	0	1		0	1	
Block2	<blpro[2]></blpro[2]>	0	0	1	Fixed to	1	0	"0" is rec-
Block3	<blpro[3]></blpro[3]>	0	0	1	"0".	1	1	ommen- ded.
Block4	<blpro[4]></blpro[4]>	0	1	0		0	0	
Block5	<blpro[5]></blpro[5]>	0	1	0		0	1	

## [TMPM330FWFG]

Block0	<blpro[0]></blpro[0]>	0	0	Fixed to "0".	0	0
Block1	<blpro[1]></blpro[1]>	0	0		0	1
Block2	<blpro[2]></blpro[2]>	0	0		1	0
Block3	<blpro[3]></blpro[3]>	0	0		1	1

Disch	Droto stien bit	The seventh bus write cycle address [18:17]		
Block	Protection bit	Address[18]	Address[17]	
Block0 to 3	<blpro[0:3]></blpro[0:3]>	0	0	
Block4 to 5	<blpro[4:5]></blpro[4:5]>	0	1	


Table 17-19 Protection Bit Erase Address Table

Note: The protection bit erase command cannot erase by individual block.


Table 17-20 The ID-Read command's fourth bus write cycle ID address (IA) and the data to be read by the following 32-bit data transfer command (ID)

IA[15:14]	ID[7:0]	Code
00b	0x98	Manufacturer code
01b	0x5A	Device code
10b	Reserved	-
11b	0x12 (TMPM330FDFG) 0x12 (TMPM330FYFG) 0x11 (TMPM330FWFG)	Macro code

## 17.3.1.8 Flowchart

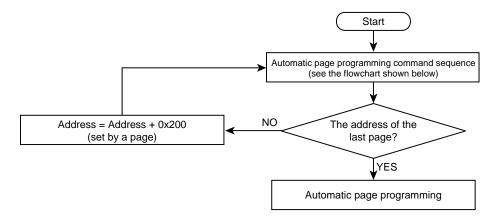

Automatic Page Programming Command Sequence (Address/ Command)

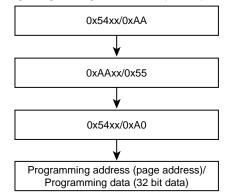


## Figure 17-12 Automatic Programming

Note: Command sequence is executed by 0x54xx or 0x55xx.

#### 17. Flash Memory Operation

17.3 On-board Programming of Flash Memory (Rewrite/Erase)

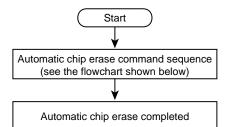



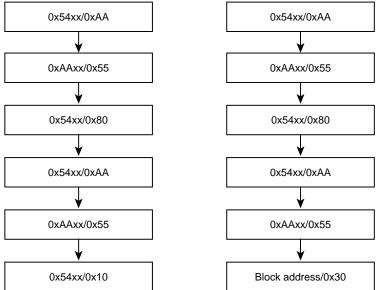


Figure 17-13 Automatic Erase

Note: Command sequence is executed by 0x54xx or 0x55xx.

## 18. ROM protection

## 18.1 Outline

The TMPM330FDFG/FYFG/FWFG offers two kinds of ROM protection/ security functions.

One is a write/ erase-protection function for the internal flash ROM data.

The other is a security function that restricts internal flash ROM data readout and debugging.

## 18.2 Future

## 18.2.1 Write/ erase-protection function

The write/ erase-protection function enables the internal flash to prohibit the writing and erasing operation for each block.

To activate the function, write "1" to the corresponding bits to a block to protect. Writing "0" to the bits cancels the protection.

The protection settings of the bits can be monitored by the FCFLCS <BLPRO[5:0]> bit. See the chapter "Flash" for programming details.

## 18.2.2 Security function

The security function restricts flash ROM data readout and debugging.

This function is available under the conditions shown below.

- 1. The FCSECBIT <SECBIT> bit is set to"1".
- 2. All the protection bits (the FCFLCS<BLPRO> bits) used for the write/erase-protection function are set to "1".

Note: The FCSECBIT <SECBIT> bit is set to "1" at a power-on reset right after power-on.

Note: The TMPM330FYFG is configured with block 2 through 5. Block 0 and 1 require a programming of protection bits when using security function.

Table 18-1 shows details of the restrictions by the security function.

Table 18-1 Restrictions by the security function

Item	Details		
1) ROM data readout	Data can be read from CPU.		
2) Debug port	Communication of JTAG/SW and trace are prohibited		
3) Command for flash memory	Writing a command to the flash memory is prohibited. An attempt to erase the contents in the bits used for the write/erase- protection erases all the protection bits.		

## 18.3 Register

Base Address = 0x4004\_0500

Register name	Address(Base+)		
Security bit register	FCSECBIT	0x0000	
Reserved	-	0x0004	
Flash control register	FCFLCS	0x0020	
Reserved	-	0x0024	
Reserved	-	0x0028	

Note: Access to the "Reserved" areas is prohibited.

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	BLPRO5	BLPRO4	BLPRO3	BLPRO2	BLPRO1	BLPR00
After reset	0	0	(Note2)	(Note2)	(Note2)	(Note2)	(Note2)	(Note2)
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	RDY/BSY
After reset	0	0	0	0	0	0	0	1

## 18.3.1 FCFLCS (Flash control register)

Bit	Bit Symbol	Туре	Function
31-22	-	R	Read as 0.
21-16	BLPRO5 to R BLPRO0		Protection for Block5 to 0 (Note 3) 0: disabled
			1: enabled
			Protection status bits Each of the protection bits represents the protection status of the corresponding block. When a bit is set to "1," it indicates that the block corresponding to the bit is protected. When the block is protected, data cannot be written to it.
15-1	-	R	Read as 0.
0	RDY/BSY	R	Ready/Busy (Note 1) 0: Auto operating 1:Auto operation terminated Ready/Busy flag bit The RDY/BSY output is provided as a means to monitor the status of automatic operation. This bit is a function bit for the CPU to monitor the function. When the flash memory is in automatic operation, it outputs "0" to indicate that it is busy. When the automatic operation is terminated, it returns to the ready state and outputs "1" to accept the next command. If the automatic operation has failed, this bit maintains the "0" output. By applying a hardware reset, it returns to "1."

- Note 1: This command must be issued in the ready state. Issuing the command in the busy state may disable both correct command transmission and further command input. To exit from the condition, execute system reset. System reset requires at least 0.5 ms regardless of the system clock frequency. In this condition, it takes approx. 2 ms to enable reading after reset.
- Note 2: The value varies depending on protection applied.
- Note 3: The FCFLCS[21:20] of TMPM330FWFG have no function. They are read as "0".

	31	30	29	28	27	26	25	24
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	23	22	21	20	19	18	17	16
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	15	14	13	12	11	10	9	8
bit symbol	-	-	-	-	-	-	-	-
After reset	0	0	0	0	0	0	0	0
	7	6	5	4	3	2	1	0
bit symbol	-	-	-	-	-	-	-	SECBIT
After reset	0	0	0	0	0	0	0	1

## 18.3.2 FCSECBIT(Security bit register)

Bit	Bit Symbol	Туре	ã@î\
31-1	-	R	Read as 0.
0	SECBIT	R/W	Security bit 0: Disabled 1: Enabled

Note: This register is initialized only by power-on reset.

## 18.4 Writing and erasing

## 18.4.1 Protection bits

Writing and erasing protection bits are available with a single chip mode, single boot mode and writer mode.

Writing to the protection bits is done on block-by-block basis.

Erasing of the protection bits is done by two groups of the blocks: block 0 through 3 and block 4 through 5. When the settings for all the blocks are "1", erasing must be done after setting the FCSECBIT <SECBIT> bit to "0". Setting "1" at that situation erases all the protection bits. To write and erase the protection bits, command sequence is used.

See the capter "Flash" for details

## 18.4.2 Security bit

The FCSECBIT <SECBIT> bit that activates security function is set to "1" at a power-on reset right after power-on.

The bit is rewritten by the following procedure.

- 1. Write the code 0xa74a9d23 to FCSECBIT register.
- 2. Write data within 16 clocks from the above.1.

Note: The above procedure is enabled only when using 32-bit data transfer command.

## 18.4 Writing and erasing

# <u>TOSHIBA</u>

# 19. Electrical Characteristics

## 19.1 Absolute Maximum Ratings

Para	meter	Symbol	Rating	Unit
		DVDD3	-0.3 to 3.9	
Supply voltage		AVDD3	-0.3 to 3.9	V
		RVDD3	-0.3 to 3.9	
Input voltage		V <sub>IN</sub>	-0.3 to VDD + 0.3	V
Low-level	Per pin	I <sub>OL</sub>	5	
output current	Total	ΣI <sub>OL</sub>	50	
High-level	Per pin	I <sub>OH</sub>	-5	mA
output current	Total	ΣI <sub>OH</sub>	-50	
Power consumption	(Ta = 85 °C)	PD	600	mW
Soldering temperatur	re(10 s)	T <sub>SOLDER</sub>	260	°C
Storage temperature		T <sub>STG</sub>	-40 to 125	°C
Operating Tempera-	Except during Flash W/E	T <sub>OPR</sub>	-20 to 85	°C
ture	During Flash W/E		0 to 70	

Note: Absolute maximum ratings are limiting values of operating and environmental conditions which should not be exceeded under the worst possible conditions. The equipment manufacturer should design so that no Absolute maximum rating value is exceeded with respect to current, voltage, power consumption, temperature, etc. Exposure to conditions beyond those listed above may cause permanent damage to the device or affect device reliability, which could increase potential risks of personal injury due to IC blowup and/or burning.

## 19.2 DC Electrical Characteristics (1/3)

							Ta = -	-20 to 85 °C
	Parameter	Symbol	Cor	ndition	Min	Typ. (Note 1)	Max	Unit
Supply volt- age	DVDD3 = AVDD3 = RVDD3 (Note2) DVSS = AVSS = 0V	DVDD3 AVDD3 RVDD3	f <sub>OSC</sub> = 8 to 10 M fsys = 1 to 40 M fs = 30 to 34 kH	1Hz	2.7	-	3.6	V
	PC0 to 3, PD4 to 7	V <sub>IL1</sub>					0.3 AVDD3	
	PD0 to 3	V <sub>IL2</sub>	2.7 V ≤ AVDD3 ≤ 3.6 V				0.2 AVDD3	
Low-level	PA2 to 7, PB0, PB3 to 7, PE0, PE4, PF0, PG7, PI0 to 5, PJ4 to 5,PK1 to 2	V <sub>IL3</sub>					0.3 DVDD3	
input volt- PE5 to 6, PF1 to 7, PG0 t		V <sub>IL4</sub>	2.7 V ≤ DVDD3	≤ 3.6 V	-0.3	-	0.2 DVDD3	V
	PK0	V <sub>IL5</sub>						
	X1	V <sub>IL6</sub>					0.1 DVDD3	
	PC0 to 3, PD4 to 7	V <sub>IH1</sub>			0.7 AVDD3		AVDD3 + 0.3	
	PD0 to 3	V <sub>IH2</sub>	2.7 V ≤ AVDD3	≤ 3.6 V	0.8 AVDD3			
PE4 to 5	PA2 to 7, PB0, PB3 to 7, PE0, PE4, PF0, PG7, PI0 to 5, PJ4 to 5,PK1 to 2	V <sub>IH3</sub>			0.7 DVDD3			
High-level input volt- age	PA0 to 1, PB1 to 2, PE1 to 3, PE5 to 6, PF1 to 7, PG0 to 6, PH0 to 7, PI6 to 7, PJ0 to 3, PJ6 to 7 RESET, NMI, MODE	V <sub>IH4</sub>	2.7 V ≤ DVDD3 ≤ 3.6 V		0.8 DVDD3	_	DVDD3 + 0.3	V
	PK0	V <sub>IH5</sub>					3.6	
	X1	V <sub>IH6</sub>			0.9 DVDD3		DVDD3 + 0.3	
Low-level out	tput voltage	V <sub>OL</sub>	I <sub>OL</sub> = 2 mA	DVDD3 ≥ 2.7 V	-	-	0.4	V
High-level ou	tput voltage	V <sub>OH</sub>	I <sub>OH</sub> = −2 mA	DVDD3 ≥ 2.7 V	2.4	-	-	V
Input leak- age current	Except PK0	I <sub>LI1</sub>	$0.0 \le V_{IN} \le DVE$ $0.0 \le V_{IN} \le AVE$		-	0.02	±5	
age current	PK0	I <sub>LI2</sub>	0.0 V ≤ V <sub>IN</sub> ≤ 3.	6 V				
Output leakage	Except PK0	I <sub>LO1</sub>	$0.2 \le V_{IN} \le DVE$ $0.2 \le V_{IN} \le AVE$		-	0.05	±10	μA
current	PK0	I <sub>LO2</sub> 0.2		0.2 V ≤ V <sub>IN</sub> ≤ 3.4 V				
Pull-up resist	er at Reset	RRST	DVDD3 = 2.7 V	to 3.6 V	30	50	150	kΩ
Hysteresis vo	oltage	VTH	2.7 V ≤ DVDD3	≤ 3.6 V	0.3	0.6	-	V
Programmab	le pull-up/pull-down resistor	РКН	DVDD3 = 2.7 V	to 3.6 V	-	50	150	kΩ
Pin capacitar	nce (Except power supply pins)	C <sub>IO</sub>	fc = 1 MHz		-	-	10	pF

Note 1: Ta = 25 °C, DVDD3 = RVDD3 = AVDD3 = 3.3 V, unless otherwise noted. Note 2: The same voltage must be supplied to DVDD3, AVDD3, and RVDD3.

Page 486

## 19.3 DC Electrical Characteristics (2/3)

#### DVDD3 = AVDD3 = RVDD3 = 2.7 V to 3.6 V, Ta = -20 to 85 °C

Parameter	Symbol	Condition	Min	Тур.	Max	Unit
	I <sub>OL</sub>	Per pin	-	-	2	mA
Low-level output current	ΣI <sub>OL1</sub>	Per group GrL1 = 6 to 12,89pin <pe3 5="" pg3,7="" ph4="" pj5="" pk2="" to=""> GrL2 = 15 to 37pin <pb3 2,4="" 4="" 6="" <br="" pe0="" to="">PF0 to 2,7, PG0 to 2,4 to 6 / PH0 to 3&gt; GrL3 = 15=61pin <pa0,1 2,5="" 7="" <br="" pb0="" to="">PF4 to 6 / Pl0 to 5 / PJ1,6,7 / PK0,1&gt; GrL4 = 15 to 37pin <pa2 7="" <br="" pf3="" ph6,7="" pi6,7="" to="">PJ0,2 to 4&gt;</pa2></pa0,1></pb3></pe3>	-	-	18	mA
	ΣI <sub>OL2</sub>	Total	-	-	35	mA
	I <sub>ОН</sub>	Per pin	-	-	-2	mA
High-level ΣI <sub>OH1</sub>		Per group GrL1 = 6 to 12,89pin <pe3 pg3,7="" ph4,5="" pj5="" pk2=""> GrL2 = 15 to 37pin <pb3,4 2,4="" 6="" <br="" pe0="" to="">PF0 to 2,7, PG0 to 2,4 to 6 / PH0 to 3&gt; GrL3 = 15=61pin <pa0,1 2,5="" 7="" <br="" pb0="" to="">PF4 to 6 / Pl0 to 5 / PJ1,6,7 / PK0,1&gt; GrL4 = 15 to 37pin <pa2 7="" <br="" pf3="" ph6,7="" pi6,7="" to="">PJ0,2 to 4&gt;</pa2></pa0,1></pb3,4></pe3>	-	-	-18	mA
	ΣI <sub>OH2</sub>	Total	-	-	-35	mA

Note: The same voltage must be supplied to DVDD3, AVDD3, and RVDD3.

## 19.4 DC Electrical Characteristics (3/3)

## 19.4.1 TMPM330FDFG/TMPM330FYFG

DVDD3 = AVDD3 = RVDD3 = 2.7 V to 3.6 V, Ta = -20 to 85 °C

		i	i			
Parameter	Symbol	Condition	Min	Typ. (Note1)	Max	Unit
NORMAL (Note2) Gear 1/1		fsys = 40 MHz	-	32	42	
IDLE (Note3)		(f <sub>OSC</sub> = 10 MHz)	-	8	13	mA
SLOW	I <sub>DD</sub>	fe - 00 700 kl l-	-	2.5	6	
SLEEP		fs = 32.768 kHz	-	55	950	
STOP		-	-	55	900	μA

Note 1: Ta = 25 °C, DVDD3 = AVDD3 = RVDD3 = 3.3 V, unless otherwise noted.

Note 2: I<sub>DD</sub> NORMAL: Measured with the dhrystone ver. 2.1 operated in FLASH. All functions operates excluding A/D.

Note 3: I<sub>DD</sub> IDLE: Measured with all functions stopped. The currents flow through DVDD3, AVDD3 and RVDD3 are included.

## 19.4.2 TMPM330FWFG

Parameter	Symbol	Condition	Min	Typ. (Note1)	Max	Unit
NORMAL (Note2) Gear 1/1		fsys = 40 MHz	-	26	32	
IDLE (Note3)		(f <sub>OSC</sub> = 10 MHz)	-	8	12.5	mA
SLOW	I <sub>DD</sub>	( 00 <b>7</b> 00 / / /	-	2.5	5.5	
SLEEP		fs = 32.768 kHz	-	55	900	
STOP		-	-	45	850	μA

DVDD3 = AVDD3 = RVDD3 = 2.7 V to 3.6 V, Ta = -20 to 85 °C

Note 1: Ta = 25 °C, DVDD3 = AVDD3 = RVDD3 = 3.3 V, unless otherwise noted.

Note 2: IDD NORMAL: Measured with the dhrystone ver. 2.1 operated in FLASH. All functions operates excluding A/D

Note 3: I<sub>DD</sub> IDLE: Measured with all functions stopped. The currents flow through DVDD3, AVDD3 and RVDD3 are included.

## 19.5 10-bit ADC Electrical Characteristics

DVDD3 = AVDD3 = RVDD3 = VREFH = 2.7 V to 3.6 V
AVSS = DVSS Ta = $-20$ to 85 °C

			·			5 = DV55, Ta =	20100000
Para	imeter	Symbol	Condition	Min	Тур.	Max	Unit
Analog reference	e voltage(+)	VREFH	-	2.7	3.3	3.6	V
Analog input voltage		VAIN	-	AVSS	-	VREFH	V
Power supply	AD conversion			-	2.5	5.5	mA
current of ana- log reference voltage	Non-AD con- version	IREF	DVSS = AVSS	-	±0.02	±5	μΑ
Supply current	AD conversion	-	Except IREF	-	-	3	mA
INL error				-	±2	±3	
DNL error Offset error			AIN resistance $\leq 600 \Omega$	-	±1	±2	
		-	<ul> <li>AIN load capacitance ≤ 30 pF</li> <li>Conversion time ≥ 1.15 µs</li> </ul>		±2	±4	
Full-scale error				-	±2	±4	
INL error				-	±2	±3	
DNL error			AIN resistance $\leq 600 \Omega$	-	±1	±2	1.05
Offset error		-	AIN load capacitance $\leq 0.1  \mu F$ Conversion time $\geq 1.15  \mu s$	-	±2	±4	LSB
Full-scale error				-	±2	±4	
INL error				-	±2	±3	
DNL error Offset error Full-scale error			AIN resistance $\leq$ 10 k $\Omega$		±1	±2	
		<ul> <li>AIN load capacitance ≥ 0.1 µF</li> <li>Conversion time ≥ 2.30 µs</li> </ul>		-	±2	±4	
				-	±2	±4	

Note: 1LSB = (VREFH - AVSS)/1024 [V]

Note: Peripheral functions are disable.

## 19.6 AC Electrical Characteristics

#### 19.6.1 AC measurement condition

The AC characteristics data of this chapter is measured under the following conditions unless otherwise noted

- Output levels: High =  $0.8 \times \text{DVDD3}$ , Low =  $0.2 \times \text{DVDD3}$
- Input levels: Refer to low-level input voltage and high-level input voltage in "DC Electrical Characteristics".
- Load capacity: CL = 30pF

### 19.6.2 Serial Channel (SIO/UART)

#### 19.6.2.1 I/O Interface mode

In the table below, the letter x represents the SIO operation clock cycle time which is identical to the fsys cycle time. It varies depending on the programming of the clock gear function.


Desemator	Ourschal	Equation	-	40	MHz	11
Parameter	Symbol	Min	Max	Min	Max	Unit
SCLK Clock High width (input)	t <sub>SCH</sub>	Зx	-	75	-	
SCLK Clock Low width (input)	t <sub>SCL</sub>	Зx	-	75	-	
SCLK cycle	t <sub>SCY</sub>	t <sub>SCH</sub> + t <sub>SCL</sub>	-	150	-	
Output Data ← SCLK rise or fall (Note 1)	toss	t <sub>SCY</sub> /2 − 3x− 45	-	-45 (Note2)	-	
SCLK rise → Output Data hold or fall(Note1)	toнs	t <sub>SCY</sub> /2	-	75	-	ns
Valid Data input ← SCLK rise or fall(Note1)	t <sub>SRD</sub>	30	_	30	_	
SCLK rise → Input Data hold or fall(Note1)	t <sub>HSR</sub>	x + 30	_	55	_	

#### (1) SCLK input mode

Note 1: SCLK rise or fall ... Measured relative to the programmed active edge of SCLK. Note 2: Keep this value positive by adjusting SCLK cycle.

#### (2) SCLK output mode

Denemeter	Ourseland	Equation	40	Unit			
Parameter	Symbol	Min	Max	Min	Max	Unit	
SCLK cycle (programmable)	t <sub>SCY</sub>	4x	-	100	-		
Output Data ← SCLK rise	t <sub>oss</sub>	t <sub>SCY</sub> /2 – 20	-	30	-		
SCLK rise $\rightarrow$ Output hold Data hold	t <sub>OHS</sub>	t <sub>SCY</sub> /2 – 20	-	30	-	ns	
Valid Data Input ← SCLK rise	t <sub>SRD</sub>	45	-	45	-		
SCLK rise $\rightarrow$ Input Data hold	t <sub>HSR</sub>	0	-	0	-		

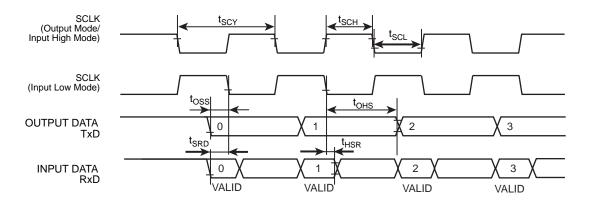

### 19.6.3 Serial Bus Interface(I2C/SIO)

#### 19.6.3.1 I2C Mode

In the table below, the letter x represents the I2C operation clock cycle time which is identical to the fsys cycle time. It varies depending on the programming of the clock gear function.

n denotes the value of n programmed into the SCK (SCL output frequency select) field in the SBIxCR.

Parameter	Cumbol	Equation		Standard Mode		Fast Mode		Unit
Parameter	Symbol	Min	Max	Min	Max	Min	Max	Unit
SCL clock frequency	t <sub>SCL</sub>	0	-	0	100	0	400	kHz
Hold time for START condition	t <sub>HD; STA</sub>	-	-	4.0	-	0.6	-	μs
SCL Low width (Input) (Note 1)	t <sub>LOW</sub>	-	-	4.7	-	1.3	-	μs
SCL High width (Input) (Note 2)	t <sub>HIGH</sub>	-	-	4.0	-	0.6	-	μs
Setup time for a repeated START condition	t <sub>SU; STA</sub>	(Note5)	-	4.7	-	0.6	-	μs
Data hold time (Input) (Note 3, 4)	t <sub>HD; DAT</sub>	-	-	0.0	-	0.0	-	μs
Data setup time	t <sub>SU; DAT</sub>	-	-	250	-	100	-	ns
Setup time for a STOP condition	t <sub>su; sто</sub>	-	-	4.0	-	0.6	-	μs
Bus free time between stop condition and start condition	t <sub>BUF</sub>	(Note5)	-	4.7	-	1.3	-	μs

Note 1: SCL clock Low width (output) = (2<sup>n-1</sup> + 58)/x


Note 2: SCL clock High width (output) = (2<sup>n-1</sup> + 12)/x On I2C-bus specification, Maximum Speed of Standard Mode is 100kHz, Fast mode is 400khz. Internal SCL Frequency setting should comply with Note1 & Note2 shown above.

Note 3: The output data hold time is equal to 12x of internal SCL.

Note 4: The Philips I2C-bus specification states that a device must internally provide a hold time of at least 300 ns for the SDA signal to bridge the undefined region of the falling edge of SCL. However, this SBI does not satisfy this requirement. Also, the output buffer for SCL does not incorporate slope control of the falling edges; therefore, the equipment manufacturer should design so that the input data hold time shown in the table is satisfied, including tr/tf of the SCL and SDA lines.

Note 5: Software -dependent

Note 6: The Philips I2C-bus specification instructs that if the power supply to a Fast-mode device is switched off, the SDA and SCL I/O pins must be floating so that they don't obstruct the bus lines. However, this SBI does not satisfy this requirement.

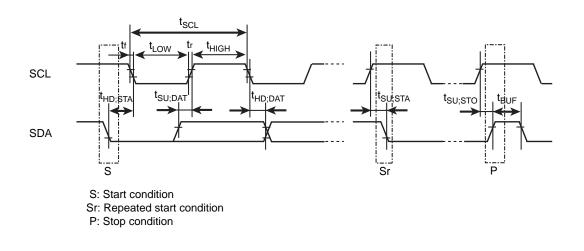

# TOSHIBA

#### 19.6.3.2 Clock-Synchronous 8-Bit SIO mode

In the table below, the letter x represents the I2C operation clock cycle time which is identical to the fsys cycle time. It varies depending on the programming of the clock gear function.


# (1) SCK Input Mode (The electrical specifications below are for an SCK signal with a 50% duty cycle.)

Deveration	Ourseland	Equation	40	Unit		
Parameter	Symbol	Min	Max	Min	Max	Unit
SCK Clock High width (input)	t <sub>SCH</sub>	4x	-	100	-	
SCK Clock Low width (input)	t <sub>SCL</sub>	4x	-	100	-	
SCK cycle	t <sub>SCY</sub>	t <sub>SCH</sub> + t <sub>SCL</sub>	-	200	-	
Output Data ← SCK rise	toss	t <sub>SCY</sub> /2 – 3x – 45	-	-20 (Note)	-	ns
SCK rise $\rightarrow$ Output Data hold	t <sub>OHS</sub>	t <sub>SCY</sub> /2 + x	-	125	-	
Valid Data input ← SCK rise	t <sub>SRD</sub>	30 – x	-	5	-	
SCK rise $\rightarrow$ Input Data hold	t <sub>HSR</sub>	30	-	30	-	

Note: Keep this value positive by adjusting SCK cycle.

(2) SCK Output Mode (The electrical specifications below are for an SCK signal with a 50% duty cycle.)

Parameter	Ourschal	Equation	40	Unit		
Parameter	Symbol	Min	Max	Min	Max	Unit
SCK cycle (programmable)	t <sub>SCY</sub>	16x	-	400	-	
Output Data ← SCK rise	toss	t <sub>SCY</sub> /2 – 20	-	180	-	
SCK rise $\rightarrow$ Output Data hold	t <sub>OHS</sub>	t <sub>SCY</sub> /2 – 20	-	180	-	ns
Valid Data input ← SCK rise	t <sub>SRD</sub>	45	-	45	-	
SCK rise $\rightarrow$ Input Data hold	t <sub>HSR</sub>	0	-	0	-	

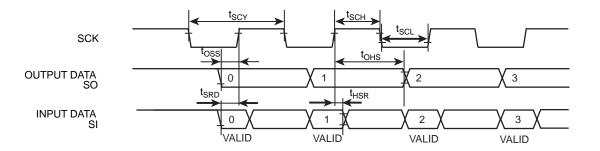

#### 19.6.4 Event Counter

In the table below, the letter x represents the TMRB operation clock cycle time which is identical to the fsys cycle time. It varies depending on the programming of the clock gear function.

Deservator	Cumb al	Equation		40 MHz		Linit	
Parameter	Symbol	Min	Max	Min	Max	Unit	
Clock Low pulse width	t <sub>VCKL</sub>	2x + 100	-	150	-	ns	
Clock High pulse width	t <sub>VCKH</sub>	2x + 100	-	150	-	ns	

#### 19.6.5 Capture

In the table below, the letter x represents the TMRB operation clock cycle time which is identical to the fsys cycle time. It varies depending on the programming of the clock gear function.

Decemeter	Equation			40	11	
Parameter	Symbol	Min	Max	Min	Max	Unit
Low pulse width	t <sub>CPL</sub>	2x + 100	-	150	-	ns
High pulse width	t <sub>CPH</sub>	2x + 100	-	150	-	ns

#### 19.6.6 External Interrupt

In the table below, the letter x represents the fsys cycle time.

1. Except STOP release interrupts

Deservator	O week al	Equation	1 4		MHz	Linit	
Parameter	Symbol	Min	Max	Min	Max	Unit	
INT0 to 7 low level pulse width	t <sub>INTAL</sub>	x + 100	-	125	-	ns	
INT0 to 7 high level pulse width	t <sub>INTAH</sub>	x + 100	-	125	-	ns	

2. STOP release interrupts

Parameter	Symbol	Min	Max	Unit
INT0 to 7 low level pulse width	t <sub>INTBL</sub>	125	-	ns
INT0 to 7 high level pulse width	t <sub>INTBH</sub>	125	-	ns


19.6.7 NMI

Parameter	Symbol	Min	Max	Unit
$\overline{\text{NIM}}$ low level pulse width	t <sub>INTCL</sub>	100	-	ns

## 19.6.8 SCOUT Pin AC Characteristic

Decemeter	Equatio		40 MHz		MHz	Linit	
Parameter	Symbol	Min	Max	Min	Max	Unit	
High pulse width	t <sub>SCH</sub>	0.5T <b>-</b> 5	-	7.5	-	ns	
Low pulse width	t <sub>SCL</sub>	0.5T – 5	-	7.5	-	ns	

Note: In the above table, the letter T represents the cycle time of the SCOUT output clock.




## 19.6.9 Debug Communication

#### 19.6.9.1 SWD Interface

Parameter	Symbol	Min	Max	Unit
CLK cycle	T <sub>dck</sub>	83.33	-	ns
CLK rise $\rightarrow$ Output data hold	T <sub>d1</sub>	4	-	ns
$CLK \ rise \to Output \ data \ valid$	T <sub>d2</sub>	-	30	ns
Input data valid ←CLK rise	T <sub>ds</sub>	20	-	ns
$CLK \ rise \to Input \ data \ hold$	T <sub>dh</sub>	15	-	ns


#### 19.6.9.2 JTAG Interface

Parameter	Symbol	Min	Max	Unit
CLK cycle	T <sub>dck</sub>	100	-	ns
CLK fall →Output data hold	T <sub>d3</sub>	4	-	ns
$CLK  fall \to Output  data  valid$	T <sub>d4</sub>	-	50	ns
Input data valid ←CLK rise	T <sub>ds</sub>	20	-	ns
$CLK \ rise \to Input \ data \ hold$	T <sub>dh</sub>	15	-	ns

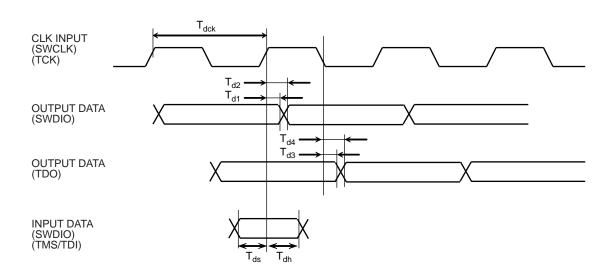

## 19.6.10 ETM Trace

Parameter	Symbol	Min	Max	Unit
TRACECLK cycle	t <sub>tclk</sub>	50	-	ns
TRACEDATA valid ← TRACECLK rise	t <sub>setupr</sub>	2	-	ns
$TRACECLK \ rise \to TRACEDATA \ hold$	t <sub>holdr</sub>	1	-	ns
TRACEDATA valid ← TRACECLK fall	t <sub>setupf</sub>	2	-	ns
TRACECLK fall $\rightarrow$ TRACEDATA hold	t <sub>holdf</sub>	1	-	ns



## 19.7 Flash Characteristics

## 19.7.1 Rewriting

Parameter	Condition	Min	Тур.	Max	Unit
Guarantee on Flash-memory rewriting	DVDD3 = AVDD3 = RVDD3 = 2.7 V to 3.6 V Ta = 0 to 70 °C	-	-	100	Times

## 19.8 Recommended Oscillation Circuit

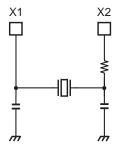


Figure 19-1 High-frequency oscillation connection

Note: To obtain a stable oscillation, load capacity and the position of the oscillator must be configured properly. Since these factors are strongly affected by substratepatterns, please evaluate oscillation stability using the substrate you use.

The TX03 has been evaluated by the oscillator vender below. Please refer this information when selecting external parts

#### 19.8.1 Ceramic oscillator

The TX03 recommends the high-frequency oscillator by Murata Manufacturing Co., Ltd. Please refer to the following URL for details.

http://www.murata.co.jp

#### 19.8.2 Crystal oscillator

The TX03 recommends the high-frequency oscillator by KYOCERA KINSEKI Corporation. Please refer to the following URL for details

http://www.kinseki.co.jp

## 19.9 Handling Precaution

### 19.9.1 Solderability

Test parameter	Test condition	Note
Coldershility	Use of Sn-37Pb solder Bath Solder bath temperature = 230°C, Dipping time = 5 seconds The number of times = one, Use of R-type flux	Pass:
Solderability	Use of Sn-3.0Ag-0.5Cu solder bath Solder bath temperature = 245°C, Dipping time = 5 seconds The number of times = one, Use of R-type flux	solderability rate until forming ≥ 95%

#### 19.9.2 Power-on sequence

The power supply must be raised (from 0V to 2.7V) at a speed of 0.37ms/V or slower. The power-on sequence must consider the time for the internal regulator and oscillator to be stable. In the TX03, the internal regulator requires at least 700  $\mu$ s to be stable.

The time required to achieve stable oscillation varies with system. At cold reset, the external reset pin must be kept "Low" for a duration of time sufficiently long enough for the internal regulator and oscillator to be stable.

Figure 19-2 shows the power-on sequence.

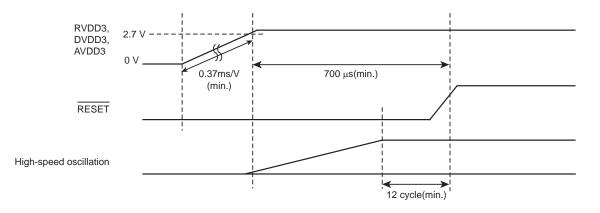


Figure 19-2 Power-on sequence

#### 19.9 Handling Precaution


# TOSHIBA

# 20. Port Section Equivalent Circuit Schematic


Basically, the gate symbols written are the same as those used for the standard CMOS logic IC [74HCXX] series.

The input protection resistance ranges from several tens of  $\Omega$  to several hundreds of  $\Omega$ . Damping resistors X2 and XT2 are shown with a typical value.


# 20.1 PA0, PB1 to 2, PE1 to 3, PE5 to 6, PF1 to 7, PG0 to 6, PH0 to 7, PI6 to 7, PJ0 to 3, PJ6 to 7

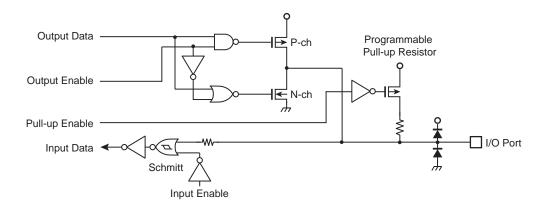


20.2 PA1

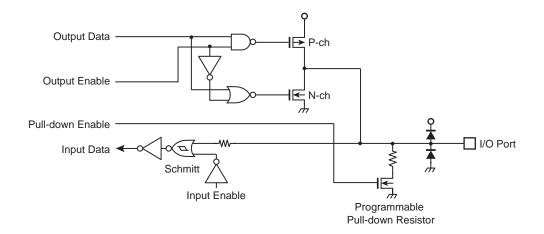


# 20.3 PA2 to 7, PB0, PB3 to 7, PE0, PE4, PF0, PG7, PI0 to 5, PJ4 to 5, PK1 to 2

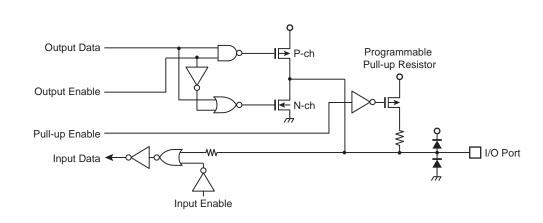

## 20.4 PC0 to 3, PD4 to 7

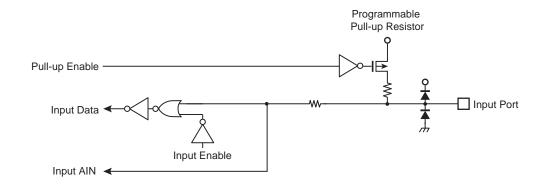


## 20.5 PD0 to 3

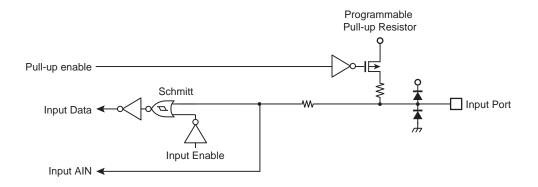

# TOSHIBA


## 20.6 PK0

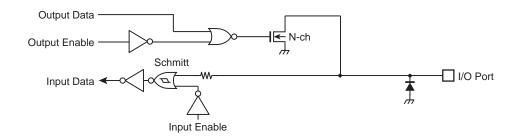


20.7 NMI, MODE




## 20.8 RESET




20.9 X1, X2

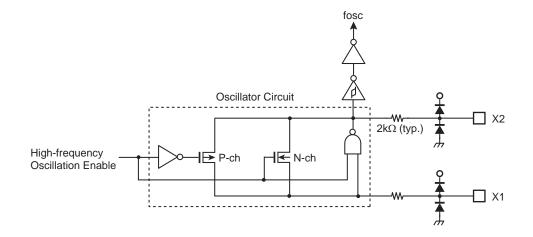

20.10 XT1, XT2

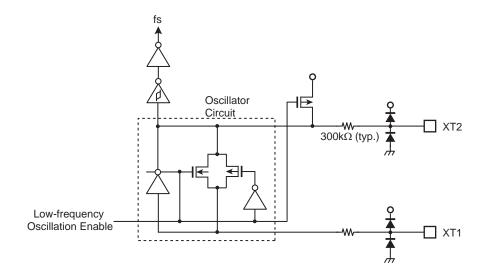

## 20.11 VREFH, AVSS

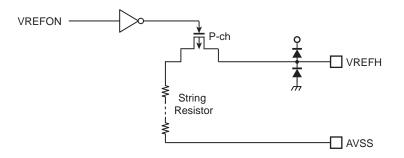



## 21. Package Dimensions

Type: LQFP100-P-1414-0.50H


#### Dimensions

Unit: mm

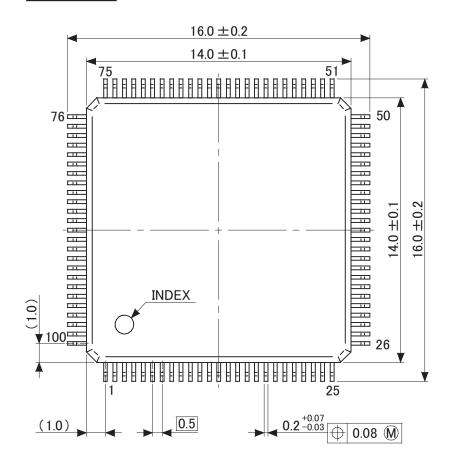

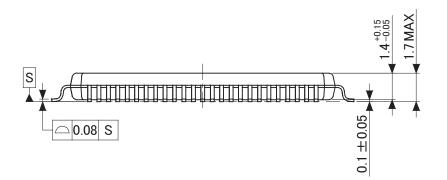

## Pin detail

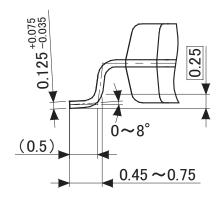

#### **RESTRICTIONS ON PRODUCT USE**

- Toshiba Corporation, and its subsidiaries and affiliates (collectively "TOSHIBA"), reserve the right to make changes to the information in this document, and related hardware, software and systems (collectively "Product") without notice.
- This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's written permission, reproduction is permissible only if reproduction is without alteration/omission.
- Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before customers use the Product, create designs including the Product, or incorporate the Product into their own applications, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the "TOSHIBA Semiconductor Reliability Handbook" and (b) the instructions for the application with which the Product will be used with or for. Customers are solely responsible for all aspects of their own product design or applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.
- Product is intended for use in general electronics applications (e.g., computers, personal equipment, office equipment, measuring equipment, industrial robots and home electronics appliances) or for specific applications as expressly stated in this document.

Product is neither intended nor warranted for use in equipment or systems that require extraordinarily high levels of quality and/or reliability and/or a malfunction or failure of which may cause loss of human life, bodily injury, serious property damage or serious public impact ("Unintended Use"). Unintended Use includes, without limitation, equipment used in nuclear facilities, equipment used in the aerospace industry, medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, devices related to electric power, and equipment used in finance-related fields. Do not use Product for Unintended Use unless specifically permitted in this document.

- Do not disassemble, analyze, reverse-engineer, alter, modify, translate or copy Product, whether in whole or in part.
- Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable laws or regulations.
- The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right is granted by this document, whether express or implied, by estoppel or otherwise.
- ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF SALE FOR PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR LOSS, INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION AND LOSS OF DATA, AND (2) DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS RELATED TO SALE, USE OF PRODUCT, OR INFORMATION, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY OF INFORMATION, OR NONINFRINGEMENT.
- Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). Product and related software and technology may be controlled under the Japanese Foreign Exchange and Foreign Trade Law and the U.S. Export Administration Regulations. Export and re-export of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and regulations.
- Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS
  compatibility of Product. Please use Product in compliance with all applicable laws and regulations that regulate the
  inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. TOSHIBA assumes no
  liability for damages or losses occurring as a result of noncompliance with applicable laws and regulations.