


# P-NUCLEO-6180X2

# Proximity, gesture, ambient light sensor expansion board based on VL6180X for STM32L053R8

Data brief

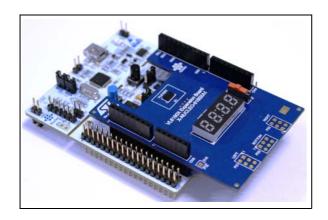

#### **Features**

- 1x VL6180X (proximity, gesture and ambient light sensing module) expansion board.
  - Slider switch controlling 2 functions:
    - Ranging measurement.
    - Ambient light sensing, up to 100KLux. (a)
  - 4-digit display, displaying either the distance of a target from the proximity sensor or the lux value from the ambient light sensing (ALS).
  - Excellent ranging accuracy, independent of the reflectance of the target.
- 1x NUCLEO-L053R8 board
- Power management access point
- Equipped with Arduino UNO R3 connector.
- RoHS compliant.
- Full system SW supplied, download from www.st.com/vl6180x in the folder "Design resources".
- 3x VL6180X satellite boards can be connected on the VL6180X expansion board, in order to

- integrate the VL6180X in customer's application.
- Basic gesture recognition application can be developed using the VL6180X sensor on the expansion board and/or up to three sensors on the satellite boards.

### Description

The P-NUCLEO-6180X2 is an evaluation pack that provides an introduction to the proximity, ranging and light sensing capabilities of the VL6180X sensor, combined with the ultra low power STM32L053R8 microcontroller.

The VL6180X is the latest product based on ST's patented FlightSense<sup>TM</sup> technology. This is a ground-breaking technology allowing absolute distance to be measured independent of target reflectance. Instead of estimating the distance by measuring the amount of light reflected back from the object (which is significantly influenced by color and surface), the VL6180X precisely measures the time the light takes to travel to the nearest object and reflect back to the sensor (Time-of-Flight).

The STM32 Nucleo board, NUCLEO-L053R8, provides an affordable and flexible way for users to try out new ideas and build prototypes with any STM32 microcontroller line, choosing from the various combinations of performance, power consumption and features.



VL6180X detects up to 100KLux but since the display is 4 digits only, maximum displayed value is limited to 9999 Lux

Ordering information P-NUCLEO-6180X2

### **Ordering information**

Table 1. Ordering code

Order code	Description
P-NUCLEO-6180X2	VL6180X expansion board and NUCLEO-L053R8 board
VL6180X-SATEL	Optional board: VL6180X satellite board

### **NUCLEO-L053R8** board

Information about NUCLEO-L053R8 board can be found at <a href="http://www.st.com/stm32nucleo">http://www.st.com/stm32nucleo</a>.

# VL6180X expansion board

The board allows the user to test the VL6180X functionality, to program it and to help understanding how to develop an application using VL6180X. It integrates:

- a 4-Digit display to render either the range value in mm or the ambient light value in Lux.
- a switch to select the value type to be displayed.
- a 2.8V regulator to supply the VL6180X.
- two level shifters to adapt the I/O level to the micro controller main board.
- the necessary connectivity for the application.

It is required to program the NUCLEO-L053R8 board in order to control the VL6180X expansion board. For the NUCLEO-L053R8 board, the required software suite is available on <a href="https://www.st.com">www.st.com</a>, on the P-NUCLEO-6180X2 page, and is composed of STSW-LINK008, STSW-LINK7 and the X-CUBE-6180XA1.

The VL6180X expansion board and the NUCLEO-L053R8 board are connected through Arduino compatible connectors CN5, CN6, CN8 and CN9 as shown in *Figure 1* and described in *Table 2* and *Table 3*.

The Arduino connectors on NUCLEO-L053R8 board support Arduino Uno Revision 3.

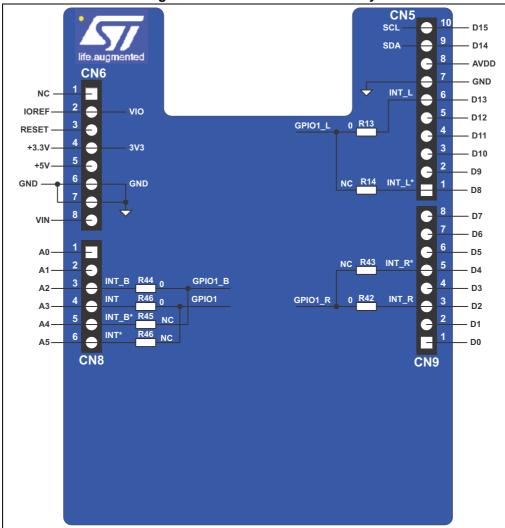


Figure 1. Arduino Uno connector layout

Table 2. Arduino Uno left connector on NUCLEO-L053R8 board

CN Nb	VL6180X board	Pin Nb	Pin name	MCU pin	VL6180X expansion board function
		1	NC		
	VIO	2	VIO		Level shifter reference (3.3V)
		3	NC		
CN6 Power	Power	4	+3V3		3.3V supply
CINO FOWER		5	NC		
	Gnd	6	Gnd	Gnd	Gnd
	Gnd	7	Gnd	Gnd	Gnd
		8	NC		-

Table 2. Arduino Uno left connector on NUCLEO-L053R8 board (continued)

CN Nb	VL6180X board	Pin Nb	Pin name	MCU pin	VL6180X expansion board function
		1	NC		
		2	NC		
	GPIO1_B	3	INT_B	PA4	Interrupt signal from VL6180X bottom satellite plug-in
CN8 Analog	GPIO1	4	INT	PB0	Interrupt signal from VL6180X on board soldered device
	GPIO1_B	5	INT_B*	PC1 or PB9 <sup>(1)</sup>	Interrupt signal from VL6180X bottom satellite plug-in
	GPIO1	6	INT*	PC1 or PB8 <sup>(1)</sup>	Interrupt signal from VL6180X on board soldered device

Depending on Nucleo board solder bridges, see details on Nucleo documentation. These interrupt signals
are duplicated, but not used, this offers hardware connection flexibility in case of conflict on MCU interface
management when expansion board is used superposed with other expansion boards, in this case
remove 0 ohm resistor from interrupt used and connect 0 ohm resistor in place of "do not mount" one.

Table 3. Arduino Uno right connector on NUCLEO-L053R8 board

CN Nb	VL6180X expansion board	Pin Nb	Pin name	MCU pin	VL6180X expansion board function
	SCL	10	D15	PB8	I2C1_SCL
	SDA	9	D14	PB9	I2C1_SDA
		8	NC		
	Gnd	7	Gnd	Gnd	Gnd
CNE Digital	GPIO1_L	6	INT_L	PA5	Interrupt signal from VL6180X left satellite plug-in
CN5 Digital		5	NC		
		4	NC		
		3	NC		
		2	NC		
	GPIO1_L	1	INT_L*	PA9	Interrupt signal from VL6180X left satellite plug-in <sup>(1)</sup>

4/8 DocID027625 Rev 3

CN Nb	VL6180X expansion board	Pin Nb	Pin name	MCU pin	VL6180X expansion board function
		8	NC		
		7	NC		
		6	NC		
ONO Divital	GPIO1_R	5	INT_R*	PB5	Interrupt signal from VL6180X right satellite plug-in <sup>(1)</sup>
CN9 Digital		4	NC		
	GPIO1_R	3	INT_R	PA10	Interrupt signal from VL6180X right satellite plug-in
		2	NC		
		1	NC		

Table 3. Arduino Uno right connector on NUCLEO-L053R8 board (continued)

# Optional VL6180X satellite board

The VL6180X expansion board allows connecting up to 3x VL6180X satellite boards (see *Figure 2*). This allows to develop applications controlling up to 4x VL6180X.

- I2C bus is common with the VL6180X on-board: I2C bus,
- each satellite can be connected through a dedicated connector to be soldered on the expansion board and has its own:
  - interrupt (GPIO1-x) pin, routed from each satellite connector to the Arduino connectors.
  - reset (GPIO0-y) pin, routed from each satellite connector to the GPIO expander device.

These interrupt signals are duplicated, but not used, this offers hardware connection flexibility in case of
conflict on MCU interface management when expansion board is used superposed with other expansion
boards, in this case remove 0 ohm resistor from interrupt used and connect 0 ohm resistor in place of "do
not mount" one.



Figure 2. Connections of VL6180X satellite boards

Note: VL6180X satellite boards can be ordered under the reference: VL6180X-SATEL.



Figure 3. VL6180X-SATEL

P-NUCLEO-6180X2 Laser consideration

### Laser consideration

The VL6180X contains a laser emitter and corresponding drive circuitry. The laser output is designed to remain within Class 1 laser safety limits under all reasonably foreseeable conditions including single faults in compliance with IEC 60825-1:2007. The laser output will remain within Class 1 limits as long as the STMicroelectronics recommended device settings are used and the operating conditions specified in the datasheet are respected. The laser output power must not be increased by any means and no optics should be used with the intention of focusing the laser beam.

Figure 4. Class 1 laser product label



### Compliance

Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.

# **ECOPACK**®

In order to meet environmental requirements, ST offers these devices in different grades of ECOPACK<sup>®</sup> packages, depending on their level of environmental compliance. ECOPACK<sup>®</sup> specifications, grade definitions and product status are available at: <a href="https://www.st.com">www.st.com</a>. ECOPACK<sup>®</sup> is an ST trademark.

## **Revision history**

**Table 4. Document revision history** 

Date	Revision	Changes
19-Mar-2015	1	Initial release.
05-May-2015	2	Add ST cube logo on first page
02-Jun-2015	3	Update Description section

#### **IMPORTANT NOTICE - PLEASE READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2015 STMicroelectronics - All rights reserved