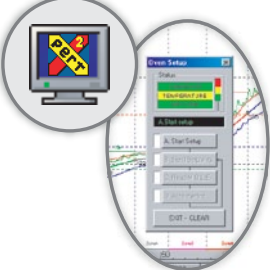
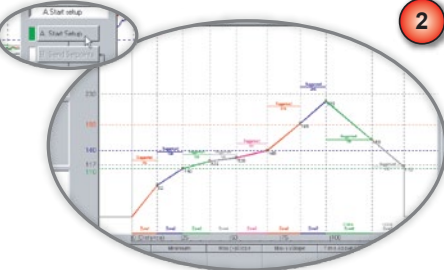
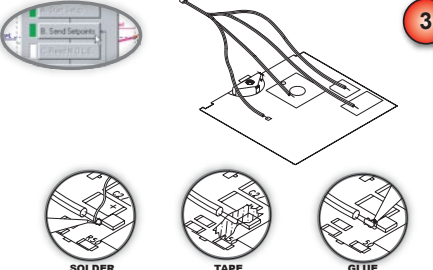
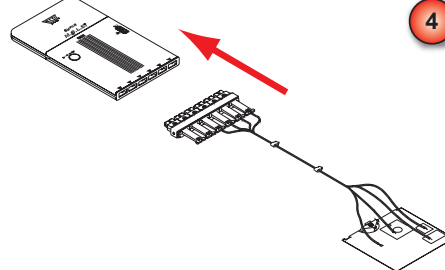

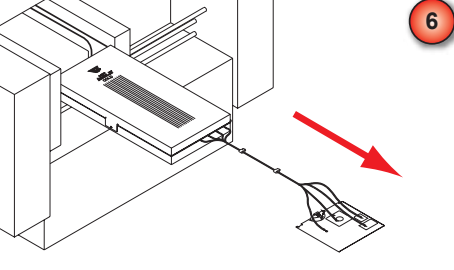
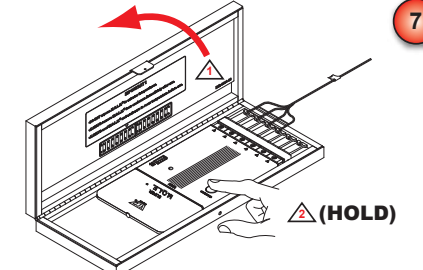
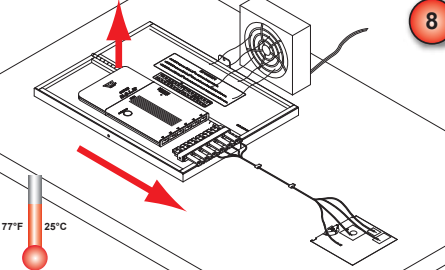
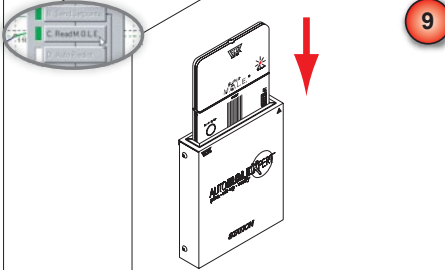
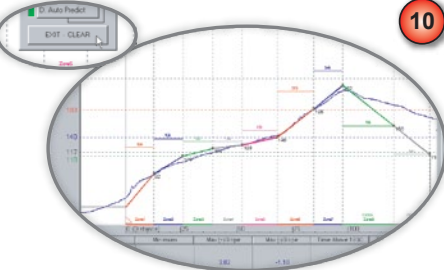
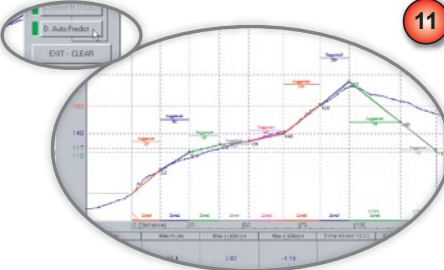
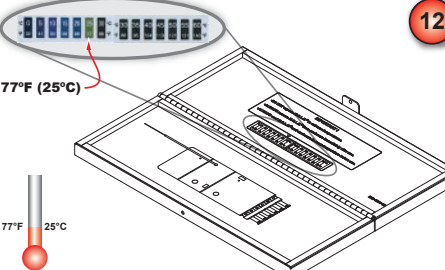


QUICK REFERENCE GUIDE

Set & Verify

 <p>1</p>	 <p>2</p>	 <p>3</p>	 <p>4</p>
<p>START THE AutoM.O.L.E.® XPERT2 SOFTWARE. SELECT THE SET & VERIFY WORKSHEET AND THE OVEN SETUP PALETTE WILL APPEAR.</p>	<p>SELECT THE "START SETUP" BUTTON AND LOAD A TARGET PROFILE .</p>	<p>SELECT THE "SEND SETPOINTS" BUTTON THEN ATTACH THE THERMOCOUPLES TO A TEST ASSEMBLY WHILE OVEN HEATS.</p>	<p>ATTACH THE MICRO THERMOCOUPLE CONNECTORS TO THE SuperM.O.L.E.® GOLD PROFILER.</p>
 <p>5</p>	 <p>6</p>	 <p>7</p>	 <p>8</p>
<p>LET THE OVEN STABILIZE AND PRESS THE START BUTTON TO START DATA COLLECTION.</p>	<p>USING PROTECTIVE GLOVES, RETRIEVE THE ASSEMBLY AND BARRIER FROM THE OVEN. PLACE NEAR A FAN FOR COOLING.</p>	<p>OPEN THE BARRIER THEN PRESS AND HOLD THE START/STOP BUTTON UNTIL THE STATUS LIGHT TURNS OFF TO STOP THE M.O.L.E.®.</p>	<p>REMOVE THE M.O.L.E.® FROM THE BARRIER AND DETACH THE MICRO THERMOCOUPLE CONNECTORS.</p>
 <p>9</p>	 <p>10</p>	 <p>11</p>	 <p>12</p>
<p>INSERT THE M.O.L.E.® INTO THE XPERT STATION AND SELECT THE "READ M.O.L.E.®" BUTTON.</p>	<p>IF THE PROFILE CLOSELY MATCHES THE TARGET PROFILE ACCEPT THE SET POINTS BY SELECTING THE "EXIT-CLEAR" BUTTON.</p>	<p>IF THE PROFILE DOES NOT CLOSELY MATCH THE TARGET PROFILE, SELECT THE "AUTO PREDICT" BUTTON.</p>	<p>AFTER THE M.O.L.E.® HAS BEEN REMOVED, THE BARRIER MUST BE COOLED TO ROOM TEMPERATURE.</p>



AUTOMOLEXPERT
plan · set-up · verify



ECD Inc.
4287-A S.E. International
Milwaukie, Oregon 97222-8825
e-mail: ecd@ecd.com Internet: www.ecd.com

Main: 503-659-6100
Service: 800-323-4548
Fax: 503-659-4422

Accessories and Value Added Options

Accessories:

Xpert Link & Barrier
Xpert Desktop Station
Thermocouples, three 0.005" Type K Color Coded (12")
Thermocouples, three 0.005" Type K Color Coded (18")
Oven Calibration Board (w/Mini connectors)
Oven Calibration Board (w/SMG Micro connectors)
Rechargeable Power Pack
Power Pack Charger, 110V
Power Pack Charger, 220V
Calendar/Clock Battery
SuperM.O.L.E. Gold to PC Interface Cable
USB to RS232 Serial Converter
Extended warranty, 1 year. Includes 1 calibration

Part Number:

E40-2875-08
E40-2875-52
E40-2875-65
E40-2875-68
Y40-2875-65
Y40-2875-60
E31-0900-30
E31-0900-25
E31-0900-21
F30-0041-00
Y20-2848-04
Y23-0872-10
A10-0900-00

Manuals & Software:

AutoM.O.L.E.® Xpert2 Operator's Manual
AutoM.O.L.E.® Xpert Installation Manual
AutoM.O.L.E.® Xpert2 Software Suite

Part Number:

A43-2875-23
A40-2875-10
Contact ECD