



4.2 Installing the USB Driver

A USB driver must be installed on the computer in advance to perform transfer using a USB cable. Connect the V9 series unit (with power on) to the computer using a USB cable.

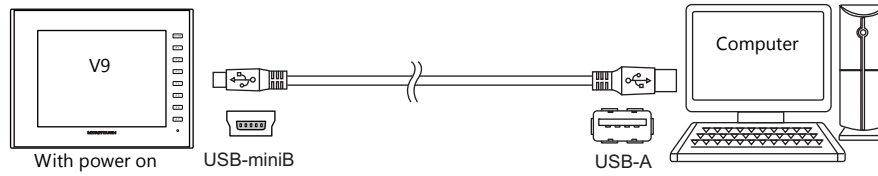


For Windows Vista, 7, 8 or 8.1

The USB driver is automatically installed.



For Windows XP


Install the USB driver by the following procedure.

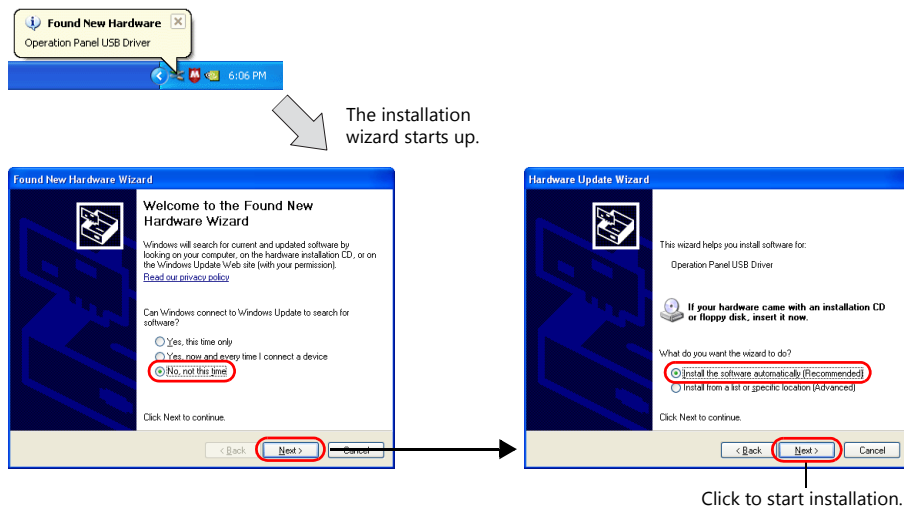


Confirming Successful Installation of the USB Driver

When the driver has been installed successfully, "Operation Panel - Operation Panel USB Driver" is displayed in the [Device Manager] window.

- Windows Vista, 7, 8, 8.1

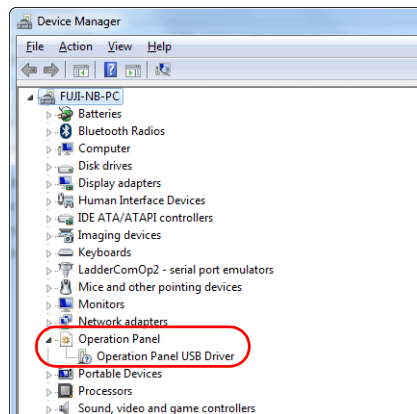

- Windows XP

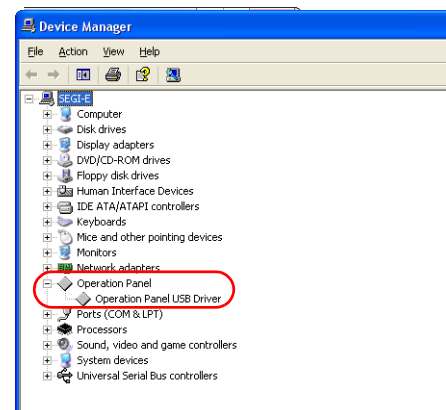


This item will disappear when the USB connection is disconnected. If [Other Device] or a mark other than shown above is displayed even while connected via USB, the USB driver is not recognized. If this happens, uninstall the USB driver and reinstall it.

4

When USB Driver Installation Fails

If installation of the USB driver has failed, reinstall it.



Install by double-clicking "USBDriverInstaller.exe" in the "C:\MONITOUCH\Common\Driver" folder.

