


INSTRUCTIONS: For more detailed information and instructions please refer to the product User Guide.

SANGAMO

RSTAT8 & 9 Programmable Thermostat Quick Reference Guide

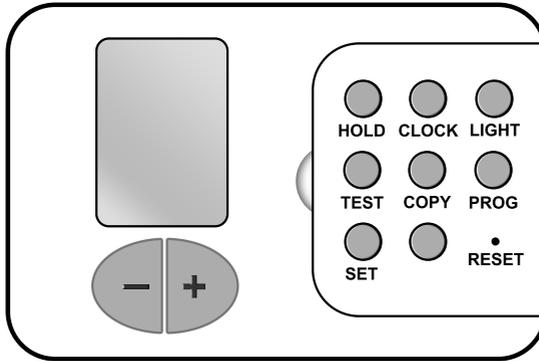


Set Time & Date

1. Press **CLOCK** to enter edit mode
2. Press ◀ or ▶ to adjust the Year
3. Press **CLOCK** to cycle to next option (Month)
4. Repeat steps 2 & 3 to set Month, Day, Hours & Minutes
5. Press **SET** to save & exit

Review Program

(view which programs are set over 7 days)

1. Press **PROG** to enter review mode
2. Pressing **PROG** again cycles through today's programs (P1-P6 on right of display)
3. Press ◀ or ▶ to change day (1-7 at top of display)
4. Press **SET** to exit

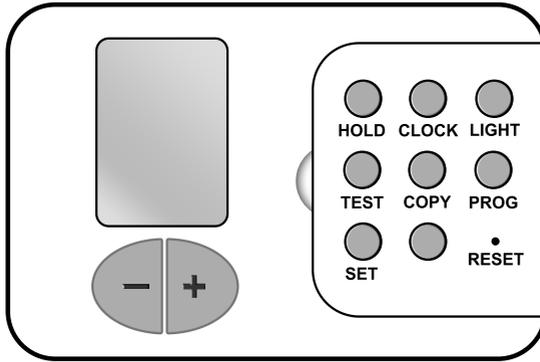

Adjust Program


(change programmed times)

1. Hold **SET** & press **PROG** to enter edit mode
2. Use ◀ or ▶ to select day (1-7 at top of display)
3. Press **PROG** to find setting (cycles P1 time, P1 temperature, P2 time, P2 temperature, ...)
4. Press ◀ or ▶ to adjust chosen setting
5. Press **PROG** to find next setting you want to change and repeat step 4
6. Press **SET** to save & exit

Copy Program

(copy one whole days settings to other days)

1. Hold **COPY** for 3 seconds (until display shows 'COPY')
2. Use ◀ or ▶ to select day to copy (1-7 at top of display, number will flash until a day is copied)
3. Press **COPY** to copy that days settings
4. Use ◀ or ▶ to select day you wish to copy to
5. Press **COPY** to confirm
6. Repeat steps 4 & 5 to copy to subsequent days
7. Press **SET** to save & exit

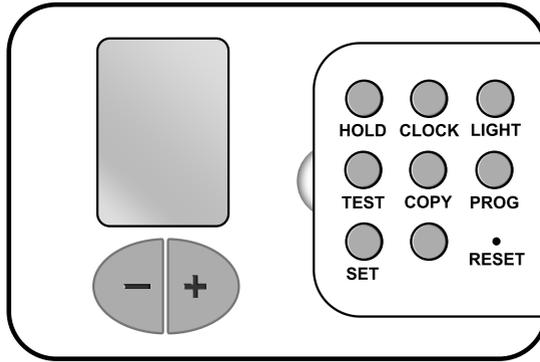

Permanent Hold


(temperature is held indefinitely until user cancels)

1. Press **HOLD** (key icon is displayed)
2. Use ◀ or ▶ to select temperature to hold at
3. Press **PROG** to confirm
4. Press **SET** to save & exit (to cancel press SET again, key icon disappears)

Hold Days

(temperature is held for a number of days before returning to the set programs)

1. Press **HOLD** for 3 seconds (d:01 and suitcase icon are displayed)
2. Use ◀ or ▶ to set number of days
3. Press **PROG** then **SET** to confirm
4. Use ◀ or ▶ to set temperature
5. To cancel hold press **SET** (suitcase disappears)

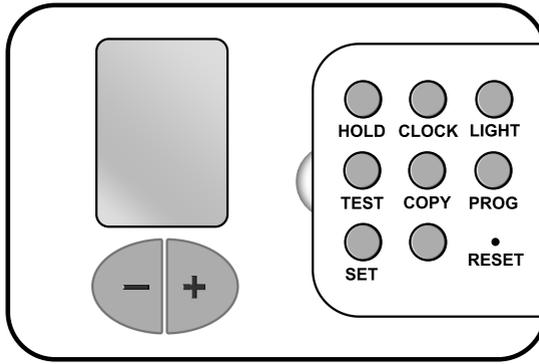

Hold Hours

(temperature is held for a number of hours before returning to the programs)

1. Press ◀ or ▶ to set the temperature
2. Press **CLOCK** (suitcase is displayed)
3. Use ◀ or ▶ to set number of hours (between 1-9)
4. Press **PROG** to confirm
5. Press **SET** to exit (display changes between time and XH:00 to countdown time until programs resume)
6. To cancel hold press **SET** (suitcase disappears)

Hold Until Next Program

(make a temporary change to the temperature)

1. Press ◀ or ▶ to set temperature (hand icon is displayed)
2. press **PROG** then **SET** to confirm
3. Press **SET** to exit (to cancel hold press **SET**)

If you have a problem or require any further information please contact our technical team on:

01475 745131

Sangamo Limited
Industrial Estate, Port Glasgow,
Renfrewshire, PA14 5XG

Tel: 01475 745131

Fax: 01475 744567

Email: enquiries@sangamo.co.uk

Web: www.sangamo.co.uk