

PIEZO DEMO KIT OPERATION INSTRUCTIONS

AEC's Piezo demo kit consists of a Piezo keypad and 6 Piezo switches.

To operate the demo kit, please follow the following instructions:

PIEZO KEYPAD

AEC's Smartswitch Piezo keypad is a one piece construction allowing maximum durability and easy operation.

By touching one of the keys on the keypad, a buzz sound would be heard and a Dark Green light on the second Piezo switch marked "B" would be turned on.

BUTTON "A"

To operate this button, simply touch the Piezo area in the middle of the ring of light.

As an indication that the switch has been activated a white light will be turned on.

To demonstrate a Basic Piezo Switch operation, simply touch the Piezo area in the middle of the ring of light again.

To demonstrate a Programmable Piezo switch operation wait until the time based operation of 15 seconds will be completed.

BUTTON "C"

To operate this button, simply touch the Piezo area in the middle of the ring of light.

As an indication that the switch has been activated a Blue light will be turned on.

To demonstrate a gradual transition of colors from Blue to Red touch button "F" for a number of times, each touch changing the color shown in the ring of light.

BUTTON "D"

To operate this button, simply touch the Piezo area in the middle of the ring of light.


As an indication that the switch has been activated a Red light will be turned on.

To demonstrate the different color options in the same switch follow the below:

First touch - a Red light will be turned on.

Second touch - a light Green light will be turned on.

Third touch - an Orange light will be turned on.

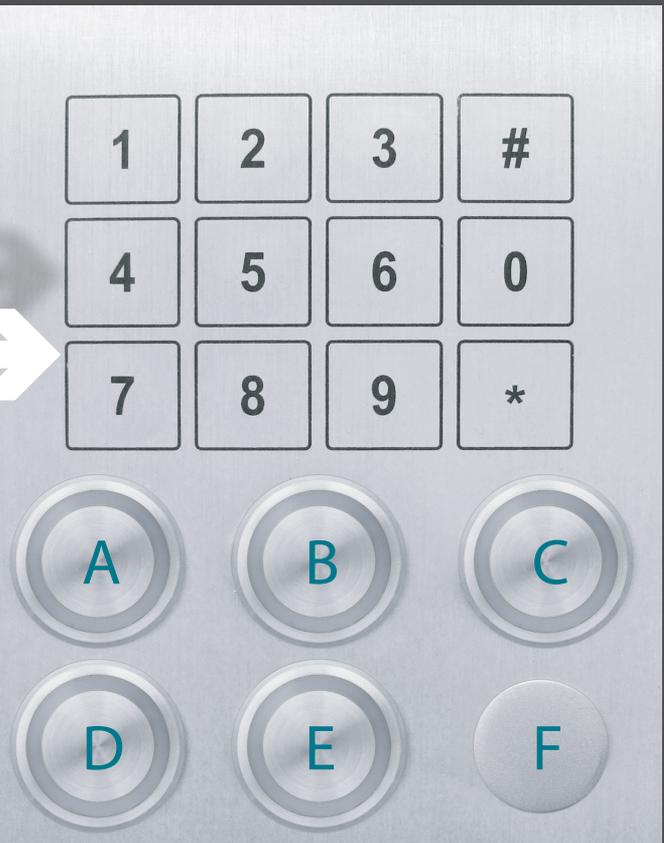

BUTTON "E"

To operate this button, simply touch the Piezo area in the middle of the ring of light.

As an indication that the switch has been activated a Blue light will be turned on.

To demonstrate a Basic Piezo Switch operation, simply touch the Piezo area in the middle of the ring of light again.

To demonstrate a Programmable Piezo switch operation wait until the time based operation of 15 seconds will be completed.

BUTTON "F"

To operate this button, simply touch the designated area at the Piezo switch.

As an indication that the switch has been activated a Red light will be turned on in button "C".

To demonstrate a gradual transition of colors from Red to Blue touch button "C" for a number of times, each touch changing the color shown in the ring of light.