

# **Low Cost Instrumentation Amplifier**

**Data Sheet** 

# AD622


#### FEATURES

Easy to use Low cost solution Higher performance than two or three op amp design Unity gain with no external resistor **Optional gains with one external resistor** (Gain range: 2 to 1000) Wide power supply range: ±2.6 V to ±15 V Available in 8-lead PDIP and 8-lead SOIC\_N packages Low power, 1.5 mA maximum supply current **DC** performance 0.15% gain accuracy: G = 1 125 µV maximum input offset voltage 1.0 µV/°C maximum input offset drift 5 nA maximum input bias current 66 dB minimum common-mode rejection ratio: G = 1 Noise 12 nV/√Hz @ 1 kHz input voltage noise 0.60 µV p-p noise: 0.1 Hz to 10 Hz, G = 10 AC characteristics 800 kHz bandwidth: G = 10 10  $\mu$ s settling time to 0.1% @ G = 1 to 100 1.2 V/µs slew rate

#### **APPLICATIONS**

Transducer interface Low cost thermocouple amplifier Industrial process controls Difference amplifier Low cost data acquisition

#### **PIN CONFIGURATION**



#### **GENERAL DESCRIPTION**

The AD622 is a low cost, moderately accurate instrumentation amplifier in the traditional pin configuration that requires only one external resistor to set any gain between 2 and 1000. For a gain of 1, no external resistor is required. The AD622 is a complete difference or subtractor amplifier system that also provides superior linearity and common-mode rejection by incorporating precision laser-trimmed resistors.

The AD622 replaces low cost, discrete, two or three op amp instrumentation amplifier designs and offers good commonmode rejection, superior linearity, temperature stability, reliability, power, and board area consumption. The low cost of the AD622 eliminates the need to design discrete instrumentation amplifiers to meet stringent cost targets. While providing a lower cost solution, it also provides performance and space improvements.

#### Table 1. Next Generation Upgrades for AD622

Part	Comment
AD8221	Better specs at lower price
AD8222	Dual channel or differential out
AD8226	Low power, wide input range
AD8220	JFET input
AD8228	Best gain accuracy
AD8295	+2 precision op amps or differential out
AD8421	Low noise, better specs

Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties that may result from its use. Specifications subject to change without notice. No license is granted by implication or otherwise under any patent or patent rights of Analog Devices. Trademarks and registered trademarks are the property of their respective owners.

# AD622\* PRODUCT PAGE QUICK LINKS

Last Content Update: 02/23/2017

### COMPARABLE PARTS

View a parametric search of comparable parts.

### EVALUATION KITS

AD62x, AD822x, AD842x Series InAmp Evaluation Board

### **DOCUMENTATION**

#### **Application Notes**

- AN-1401: Instrumentation Amplifier Common-Mode Range: The Diamond Plot
- AN-244: A User's Guide to I.C. Instrumentation Amplifiers
- AN-245: Instrumentation Amplifiers Solve Unusual Design
  Problems
- AN-282: Fundamentals of Sampled Data Systems
- AN-589: Ways to Optimize the Performance of a Difference Amplifier
- AN-671: Reducing RFI Rectification Errors in In-Amp Circuits

#### Data Sheet

AD622: Low Cost Instrumentation Amplifier Data Sheet

#### **Technical Books**

• A Designer's Guide to Instrumentation Amplifiers, 3rd Edition, 2006

#### **User Guides**

• UG-261: Evaluation Boards for the AD62x, AD822x and AD842x Series

### TOOLS AND SIMULATIONS $\square$

In-Amp Error Calculator

### REFERENCE MATERIALS

#### **Technical Articles**

- Auto-Zero Amplifiers
- High-performance Adder Uses Instrumentation Amplifiers
- Input Filter Prevents Instrumentation-amp RF-Rectification Errors
- The AD8221 Setting a New Industry Standard for Instrumentation Amplifiers

### DESIGN RESOURCES

- AD622 Material Declaration
- PCN-PDN Information
- Quality And Reliability
- Symbols and Footprints

### DISCUSSIONS

View all AD622 EngineerZone Discussions.

### SAMPLE AND BUY

Visit the product page to see pricing options.

### **TECHNICAL SUPPORT**

Submit a technical question or find your regional support number.

### DOCUMENT FEEDBACK 🖵

Submit feedback for this data sheet.

# TABLE OF CONTENTS

Features	1
Applications	1
Pin Configuration	1
General Description	1
Revision History	2
Specifications	3
Absolute Maximum Ratings	5
Thermal Resistance	5
ESD Caution	5
Typical Performance Characteristics	6

#### **REVISION HISTORY**

#### 6/12—Rev. D to Rev. E

Changes to General Description Section; Added Table 1 1
Changes to Theory of Operation Section and Figure 169
Changes to Table 5 10
Changes to Input Selection Section; Deleted Large Input
Voltages at Large Gains Section; Added Figure 18, Renumbered
Sequentially 11
Changes to Ordering Guide14
8/07—Rev. C to Rev. D
Updated FormatUniversal
Added Thermal Resistance Section 5
Added Figure 169

Theory of Operation	9
Make vs. Buy: A Typical Application Error Budget	9
Gain Selection 1	1
Input and Output Offset Voltage1	1
Reference Terminal 1	1
Input Protection 1	1
RF Interference 1	2
Ground Returns for Input Bias Currents 1	2
Outline Dimensions 1	3
Ordering Guide1	4

Added Large Input Voltages at Large Gains Section 1	1
Replaced RF Interference Section 1	1
Deleted Grounding Section 1	0
Deleted Figure 16 1	0
Changes to Ground Returns for Input Bias Currents Section 1	2
Updated Outline Dimensions 1	3
Changes to Ordering Guide 1	4
4/99—Rev. B to Rev. C	

8/98—Rev. A to Rev. B

2/97—Rev. 0 to Rev. A

1/96—Revision 0: Initial Version

# **SPECIFICATIONS**

 $T_{A}$  = 25°C,  $V_{S}$  = ±15 V, and  $R_{L}$  = 2 k $\Omega$  typical, unless otherwise noted.

#### Table 2.

Parameter	Conditions	Min	Тур	Max	Unit
GAIN	$G = 1 + (50.5 \text{ k/R}_G)$				
Gain Range		1		1000	
Gain Error <sup>1</sup>	$V_{OUT} = \pm 10 V$				
G = 1			0.05	0.15	%
G = 10			0.2	0.50	%
G = 100			0.2	0.50	%
G = 1000			0.2	0.50	%
Nonlinearity	$V_{OUT} = \pm 10 V$				
G = 1 to 1000	$R_L = 10 \ k\Omega$		10		ppm
G = 1 to 100	$R_L = 2 k\Omega$		10		ppm
Gain vs. Temperature	Gain = 1			10	ppm/°C
	$Gain > 1^1$			-50	ppm/°C
VOLTAGE OFFSET	Total RTI Error = $V_{OSI} + V_{OSO}/G$			30	ppin/ c
Input Offset, Vosi	$V_s = \pm 5 V \text{ to } \pm 15 V$		60	125	μV
Average Temperature Coefficient	$V_{s} = \pm 5 V \text{ to } \pm 15 V$ $V_{s} = \pm 5 V \text{ to } \pm 15 V$		00	1.0	μv μV/°C
Output Offset, Voso	$V_{s} = \pm 5 V \text{ to } \pm 15 V$ $V_{s} = \pm 5 V \text{ to } \pm 15 V$		600	1500	μν/ C μV
Average Temperature Coefficient	$V_{s} = \pm 5 V \text{ to } \pm 15 V$ $V_{s} = \pm 5 V \text{ to } \pm 15 V$		000	1500	μν μV/°C
Offset Referred to Input vs. Supply (PSR)	$V_{s} = \pm 5 V \text{ to } \pm 15 V$ $V_{s} = \pm 5 V \text{ to } \pm 15 V$			15	μν/ C
G = 1	$v_5 = \pm 5 v (0 \pm 15 v)$	80	100		dB
G = 1 G = 10		80 95	120		dB
G = 100		110	140		dB
G = 1000		110	140		dB
INPUT CURRENT			2.0	5.0	•
Input Bias Current			2.0	5.0	nA
Average Temperature Coefficient			3.0		pA/°C
Input Offset Current			0.7	2.5	nA
Average Temperature Coefficient			2.0		pA/°C
INPUT					
Input Impedance					
Differential			10  2		G Ω  pF
Common Mode			10  2		GΩ∥pF
Input Voltage Range <sup>2</sup>	$V_{s} = \pm 2.6 V \text{ to } \pm 5 V$	-Vs + 1.9		+Vs – 1.2	V
Over Temperature		-Vs + 2.1		+Vs – 1.3	V
	$V_s = \pm 5 V \text{ to } \pm 18 V$	$-V_{s} + 1.9$		+V <sub>s</sub> – 1.4	V
Over Temperature		-Vs + 2.1		+Vs – 1.4	V
Common-Mode Rejection Ratio	$V_{CM} = 0 V \text{ to } \pm 10 V$				
DC to 60 Hz with 1 k $\Omega$ Source Imbalance					
G = 1		66	78		dB
G = 10		86	98		dB
G = 100		103	118		dB
G = 1000		103	118		dB
OUTPUT					
Output Swing	$R_L = 10 \ k\Omega$				
	$V_s = \pm 2.6 \text{ V}$ to $\pm 5 \text{ V}$	-Vs + 1.1		+Vs - 1.2	V
Over Temperature		-Vs + 1.4		+Vs - 1.3	V
	$V_s = \pm 5 V \text{ to } \pm 18 V$	-Vs + 1.2		+Vs - 1.4	V
Over Temperature		-Vs + 1.6		+Vs - 1.5	v
Short Current Circuit			±18		mA

AD622

Parameter	Conditions	Min	Тур	Max	Unit
DYNAMIC RESPONSE					
Small Signal –3 dB Bandwidth					
G = 1			1000		kHz
G = 10			800		kHz
G = 100			120		kHz
G = 1000			12		kHz
Slew Rate			1.2		V/µs
Settling Time to 0.1%	10 V step				
G = 1 to 100			10		μs
NOISE					
Voltage Noise, 1 kHz	Total RTI Noise = $\sqrt{(e^{2}_{ni})} + (e_{no}/G)^{2}$				
Input Voltage Noise, eni			12		nV/√Hz
Output Voltage Noise, eno			72		nV/√Hz
RTI, 0.1 Hz to 10 Hz					
G = 1			4.0		μV p-p
G = 10			0.6		μV p-p
G = 100			0.3		μV p-p
Current Noise	f = 1 kHz		100		fA/√Hz
0.1 Hz to 10 Hz			10		рА р-р
REFERENCE INPUT					
R <sub>IN</sub>			20		kΩ
l <sub>in</sub>	$V_{IN+r}V_{REF}=0$		50	60	μA
Voltage Range		-Vs + 1.6		+Vs - 1.6	V
Gain to Output			$1 \pm 0.0015$		
POWER SUPPLY					
Operating Range <sup>3</sup>		±2.6		±18	V
Quiescent Current	$V_{s} = \pm 2.6 V \text{ to } \pm 18 V$		0.9	1.3	mA
Over Temperature			1.1	1.5	mA
TEMPERATURE RANGE		1			
For Specified Performance			-40 to +85		°C

 $^1$  Does not include effects of External Resistor R<sub>G</sub>.  $^2$  One input grounded, G = 1.  $^3$  Defined as the same supply range that is used to specify PSR.

## **ABSOLUTE MAXIMUM RATINGS**

#### Table 3.

Parameter	Rating
Supply Voltage	±18 V
Internal Power Dissipation <sup>1</sup>	650 mW
Input Voltage (Common Mode)	±Vs
Differential Input Voltage <sup>2</sup>	±25 V
Output Short Circuit Duration	Indefinite
Storage Temperature Range	–65°C to +125°C
Operating Temperature Range	-40°C to +85°C
Lead Temperature (Soldering, 10 sec)	300°C

<sup>1</sup>Specification is for device in free air; see Table 4.

<sup>2</sup>May be further restricted for gains greater than 14. See the Input Protection section for more information.

Stresses above those listed under Absolute Maximum Ratings may cause permanent damage to the device. This is a stress rating only; functional operation of the device at these or any other conditions above those indicated in the operational section of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

#### THERMAL RESISTANCE

 $\theta_{\text{JA}}$  is specified for the device in free air.

#### Table 4. Thermal Resistance

Package Type	θ」Α	Unit
8-Lead PDIP (N-8)	95	°C/W
8-Lead SOIC_N (R-8)	155	°C/W

#### **ESD CAUTION**



**ESD (electrostatic discharge) sensitive device.** Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

# **TYPICAL PERFORMANCE CHARACTERISTICS**

 $T_A = 25^{\circ}C$ ,  $V_S = \pm 15$  V,  $R_L = 2$  k $\Omega$ , unless otherwise noted.

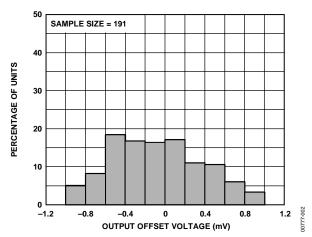


Figure 2. Typical Distribution of Output Offset Voltage

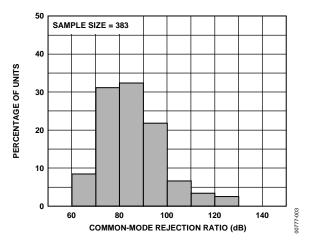


Figure 3. Typical Distribution of Common-Mode Rejection

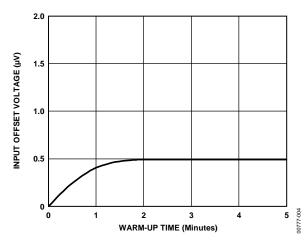


Figure 4. Change in Input Offset Voltage vs. Warm-Up Time

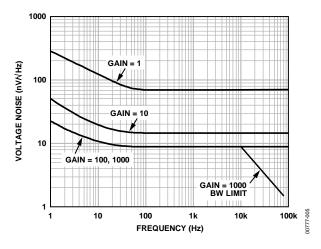


Figure 5. Voltage Noise Spectral Density vs. Frequency (G = 1 to 1000)

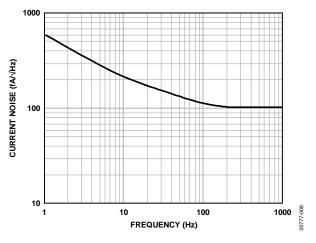


Figure 6. Current Noise Spectral Density vs. Frequency




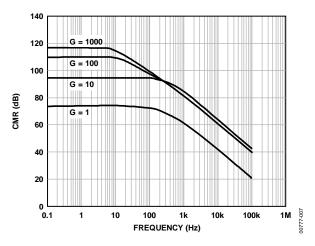


Figure 7. CMR vs. Frequency, RTI, 0 k $\Omega$  to 1 k $\Omega$  Source Imbalance

# **Data Sheet**

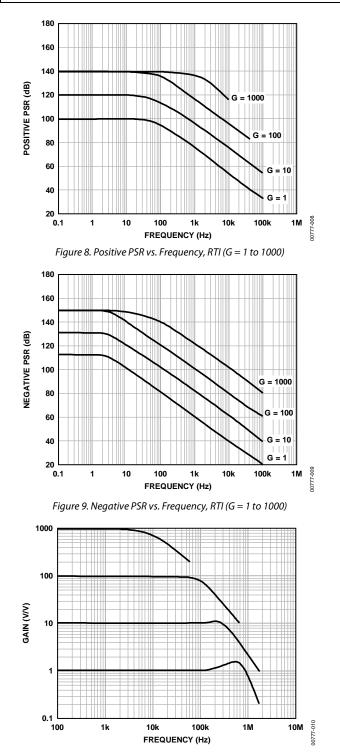



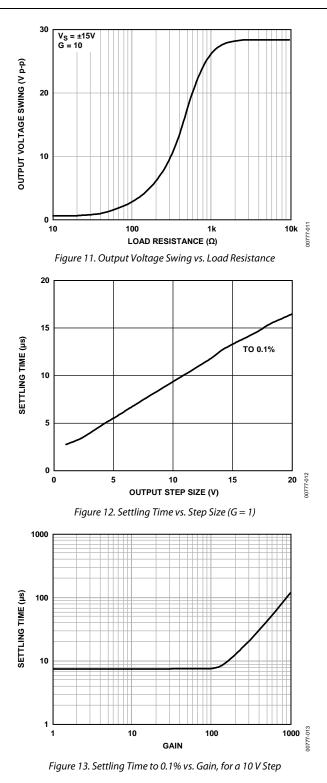

Rev. E | Page 7 of 16



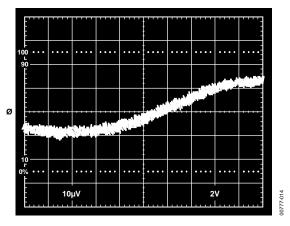


Figure 14. Gain Nonlinearity, G = 1,  $R_L = 10 k\Omega (20 \mu V = 2 ppm)$ 

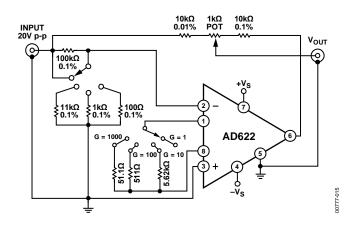



# THEORY OF OPERATION

The AD622 is a monolithic instrumentation amplifier based on a modification of the classic three op amp approach. Absolute value trimming allows the user to program gain accurately (to 0.5% at G = 1000) with only one resistor. Monolithic construction and laser wafer trimming allow the tight matching and tracking of circuit components, thus insuring AD622 performance.

Input Transistor Q1 and Input Transistor Q2 provide a single differential-pair bipolar input for high precision (see Figure 16). Feedback through the Q1-A1-R1 loop and the Q2-A2-R2 loop maintains constant collector current of the Q1 and Q2 input devices, thereby impressing the input voltage across External Gain-Setting Resistor R<sub>G</sub>. This creates a differential gain from the inputs to the A1 and A2 outputs given by  $G = (R1 + R2)/R_G + 1$ . Unity-Gain Subtractor A3 removes any common-mode signal, yielding a single-ended output referred to the REF pin potential.

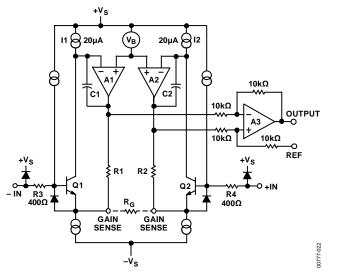


Figure 16. Simplified Schematic of the AD622

The value of  $R_G$  also determines the transconductance of the preamp stage. As  $R_G$  is reduced for larger gains, the transconductance increases asymptotically to that of the input transistors. This has the following three important advantages:

- Open-loop gain is boosted for increasing programmed gain, thus reducing gain-related errors.
- The gain-bandwidth product (determined by C1, C2, and the preamp transconductance) increases with programmed gain, thus optimizing frequency response.
- The input voltage noise is reduced to a value of 12 nV/√Hz, determined mainly by the collector current and base resistance of the input devices.

The internal gain resistors, R1 and R2, are trimmed to an absolute value of  $25.25 \text{ k}\Omega$ , allowing the gain to be programmed accurately with a single external resistor.

# MAKE vs. BUY: A TYPICAL APPLICATION ERROR BUDGET

The AD622 offers cost and performance advantages over discrete two op amp instrumentation amplifier designs along with smaller size and fewer components. In a typical application shown in Figure 17, a gain of 10 is required to receive and amplify a 0 to 20 mA signal from the AD694 current transmitter. The current is converted to a voltage in a 50  $\Omega$  shunt. In applications where transmission is over long distances, line impedance can be significant so that differential voltage measurement is essential. Where there is no connection between the ground returns of transmitter and receiver, there must be a dc path from each input to ground, implemented in this case using two 1 k $\Omega$  resistors. The error budget detailed in Table 5 shows how to calculate the effect of various error sources on circuit accuracy.

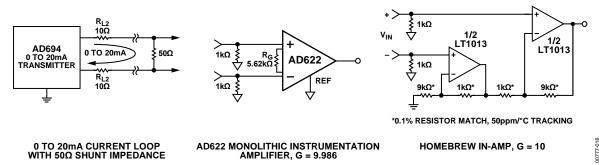


Figure 17. Make vs. Buy

# AD622

The AD622 provides greater accuracy at lower cost. The higher cost of the homebrew circuit is dominated in this case by the matched resistor network. One could also realize a homebrew design using cheaper discrete resistors that are either trimmed or hand selected to give high common-mode rejection. This level of common-mode rejection, however, degrades significantly

#### Table 5. Make vs. Buy Error Budget

over temperature due to the drift mismatch of the discrete resistors.

Note that for the homebrew circuit, the LT1013 specification for noise has been multiplied by  $\sqrt{2}$ . This is because a two op amp type instrumentation amplifier has two op amps at its inputs, both contributing to the overall noise.

			Total Error in ppm Relative to 1 V FS	
Error Source	AD622 Circuit Calculation	Homebrew Circuit Calculation	AD622	Homebrew
ABSOLUTE ACCURACY at $T_A = 25^{\circ}C$				
Total RTI Offset Voltage, μV	125 μV + 1500 μV/10	$800 \mu\text{V} \times 2$	275	1600
Input Offset Current, nA	$2.5 \text{ nA} \times 1 \text{ k}\Omega$	15 nA $\times$ 1 kΩ	2.5	15
CMR, dB	86 dB→50 ppm × 0.5 V	(0.1% Match × 0.5 V)/10 V	25	50
		Total Absolute Error	302.5	1665
DRIFT TO 85°C				
Gain Drift, ppm/°C	(50 ppm + 5 ppm) × 60°C	(50 ppm)/°C × 60°C	3300	3000
Total RTI Offset Voltage, μV/°C	(1 μV/°C + 15 μV/°C /10) × 60°C	$9 \mu\text{V/}^{\circ}\text{C} \times 2 \times 60^{\circ}\text{C}$	150	1080
Input Offset Current, pA/°C	$2 \text{ pA/°C} \times 1 \text{ k}\Omega \times 60^{\circ}\text{C}$	155 pA/°C $\times$ 1 k $\Omega$ $\times$ 60°C	0.12	9.3
		Total Drift Error	3450.12	4089.3
RESOLUTION				
Gain Nonlinearity, ppm of Full Scale	10 ppm	20 ppm	10	20
Typ 0.1 Hz to 10 Hz Voltage Noise, μV p-p	0.6 µV р-р	0.55 μV p-p × √2	0.6	0.778
		Total Resolution Error	10.6	20.778
		Grand Total Error	3763	5775

## **GAIN SELECTION**

The AD622 gain is resistor programmed by  $R_G$  or, more precisely, by whatever impedance appears between Pin 1 and Pin 8. The AD622 is designed to offer gains as close as possible to popular integer values using standard 1% resistors. Table 6 shows required values of  $R_G$  for various gains. Note that for G = 1, the  $R_G$  pins are unconnected ( $R_G = \infty$ ). For any arbitrary gain,  $R_G$  can be calculated by using the formula

$$R_G = \frac{50.5 \,\mathrm{k}\,\Omega}{G - 1}$$

To minimize gain error, avoid high parasitic resistance in series with  $R_G$ . To minimize gain drift,  $R_G$  should have a low temperature coefficient less than 10 ppm/°C for the best performance.

Table 6. Required Values of Gain Resistors

Desired Gain	1% Std Table Value of $R_{Gr}$ $\Omega$	Calculated Gain
2	51.1 k	1.988
5	12.7 k	4.976
10	5.62 k	9.986
20	2.67 k	19.91
33	1.58 k	32.96
40	1.3 k	39.85
50	1.02 k	50.50
65	787	65.17
100	511	99.83
200	255	199.0
500	102	496.1
1000	51.1	989.3

#### INPUT AND OUTPUT OFFSET VOLTAGE

The low errors of the AD622 are attributable to two sources: input and output errors. The output error is divided by G when referred to the input. In practice, the input errors dominate at high gains and the output errors dominate at low gains. The total  $V_{os}$  for a given gain is calculated as follows:

*Total Error RTI = input error + (output error/G)* 

*Total Error*  $RTO = (input error \times G) + output error$ 

#### **REFERENCE TERMINAL**

The reference terminal potential defines the zero output voltage and is especially useful when the load does not share a precise ground with the rest of the system. The reference terminal provides a direct means of injecting a precise offset to the output, with an allowable range of 2 V within the supply voltages. Parasitic resistance should be kept to a minimum for optimum CMR.

#### INPUT PROTECTION

The AD622 safely withstands an input current of  $\pm 60$  mA for several hours at room temperature. This is true for all gains and power on and off, which is useful if the signal source and amplifier are powered separately. For longer time periods, the input current should not exceed 6 mA.

For input voltages beyond the supplies, a protection resistor should be placed in series with each input to limit the current to 6 mA. These can be the same resistors as those used in the RFI filter. High values of resistance can impact the noise and AC CMRR performance of the system. Low leakage diodes (such as the BAV199) can be placed at the inputs to reduce the required protection resistance.

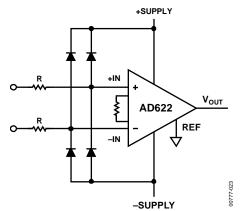


Figure 18. Diode Protection for Voltages Beyond Supply

19

#### **RF INTERFERENCE**

RF rectification is often a problem when amplifiers are used in applications where there are strong RF signals. The disturbance may appear as a small dc offset voltage. High frequency signals can be filtered with a low-pass, RC network placed at the input of the instrumentation amplifier, as shown in Figure 19. In addition, this RC input network also provides additional input overload protection (see the Input Protection section).

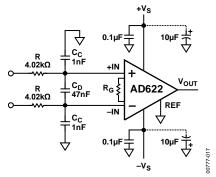


Figure 19. RFI Suppression Circuit for AD622 Series In-Amps

The filter limits the input signal bandwidth to the following cutoff frequencies:

$$FilterFreq_{DIFF} = \frac{1}{2\pi R(2C_D + C_C)}$$
$$FilterFreq_{CM} = \frac{1}{2\pi RC_C}$$

where  $C_D \ge 10C_C$ .

Figure 19 shows an example where the differential filter frequency is approximately 400 Hz, and the common-mode filter frequency is approximately 40 kHz. With this differential filter in place and operating at gain of 1000, the typical dc offset shift over a frequency range of 1 Hz to 20 MHz is less than 1.5  $\mu$ V RTI, and the RF signal rejection of the circuit is better than 71 dB. At a gain of 100, the dc offset shift is well below 1 mV RTI, and RF rejection is greater than 70 dB.

The input resistors should be selected to be high enough to isolate the sensor from the  $C_C$  and  $C_D$  capacitors but low enough not to influence system noise. Mismatch between  $R \times C_C$  at the positive input and  $R \times C_C$  at the negative input degrades the CMRR of the AD622. Therefore, the  $C_C$  capacitors should be high precision types such as NPO/COG ceramics. The tolerance of the  $C_D$  capacitor is less critical.

#### **GROUND RETURNS FOR INPUT BIAS CURRENTS**

Input bias currents are those currents necessary to bias the input transistors of an amplifier. There must be a direct return path for these currents; therefore, when amplifying floating input sources such as transformers or ac-coupled sources, there must be a dc path from each input to ground as shown in Figure 20, Figure 21, and Figure 22. Refer to the *Designer's Guide to Instrumentation Amplifiers* (free from Analog Devices, Inc.) for more information regarding in-amp applications.

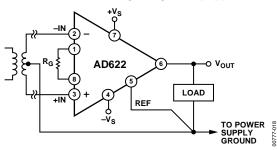


Figure 20. Ground Returns for Bias Currents with Transformer Coupled Inputs

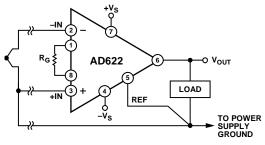


Figure 21. Ground Returns for Bias Currents with Thermocouple Inputs


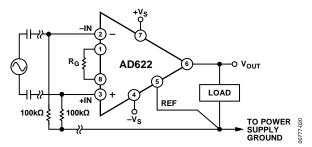


Figure 22. Ground Returns for Bias Currents with AC-Coupled Inputs

070606-A

## **OUTLINE DIMENSIONS**

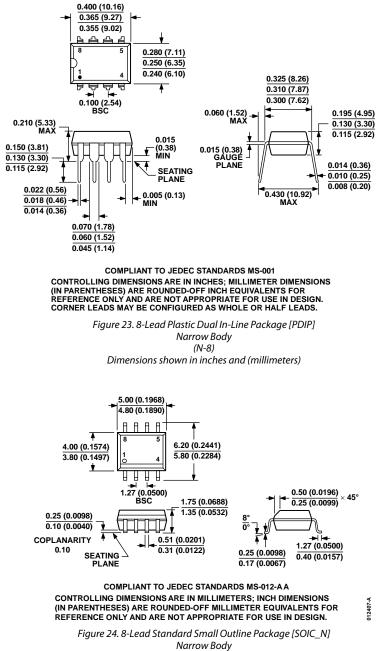

(R-8)

Dimensions shown in millimeters and (inches)

### **ORDERING GUIDE**

Model <sup>1</sup>	Temperature Range	Package Description	Package Option
AD622ANZ	-40°C to +85°C	8-Lead PDIP	N-8
AD622AR	-40°C to +85°C	8-Lead SOIC_N	R-8
AD622AR-REEL	-40°C to +85°C	8-Lead SOIC_N	R-8
AD622AR-REEL7	-40°C to +85°C	8-Lead SOIC_N	R-8
AD622ARZ	-40°C to +85°C	8-Lead SOIC_N	R-8
AD622ARZ-RL	-40°C to +85°C	8-Lead SOIC_N	R-8
AD622ARZ-R7	-40°C to +85°C	8-Lead SOIC_N	R-8

 $^{1}$  Z = RoHS Compliant Part.

# NOTES

# AD622

# NOTES



www.analog.com

©1996–2012 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners. D00777-0-6/12(E)