

REJ03F0032-0100Z Rev.1.0 Sep.16.2003

Description

The M59330P is an integrated circuit for two-line LAN transceivers, conforming to J1850 specifications.

The chip incorporates bus line anomaly detection functions; anomalous behavior causes the ERR signal to go to "L". A selector causes a normal bus signal to be output to R_x .

By setting the standby signal to "L", a low consumption current state is maintained. At this time, the drivers BUS (+) and BUS (-) are both turned off.

In standby mode, on input of "H" level to the ERR pin, error output reset occurs.


Features

- Conforms to SAE J1850 specifications
- Internal bus line anomaly detection function

Applications

• LAN transceiver for automotive use, generic LAN transceiver, transceiver for other communication applications

Block Diagram

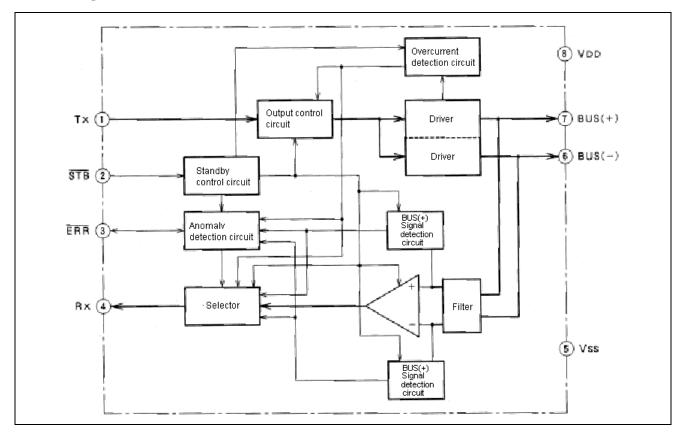



Pin Configuration (Top View)

Datainput Standby input Erroor I/O Deta input	Tx 1 STB 2 ERR 3 Rx 4	M59330P	7 В. 6 В.	US(+)	Power supply Bus line I/O GND
	Р	ackage 8	P4		

Explanation of Functions

Pin Deiscription

Pin no.	Pin name	I/O	Function
1	Тх	Ι	Data signal input pin
2	STB	Ι	Standby signal input pin; L: standby mode, H: normal operation
3	ERR	I/O	Error signal output pin and error reset input pin; on detection of anomaly in transmission channel, outputs "L" level; in standby mode, error reset on input of "H" level
4	Rx	0	Pin for output of signal from transmission channel
5	Vss	Ι	Clamping pin
6	Bus(–)	I/O	Pin for signal output to transmission channel and for input of signal from transmission channel (negative logic)
7	Bus(+)	I/O	Pin for signal output to transmission channel and for input of signal from transmission channel (positive logic)
8	V _{DD}	Ι	Power supply pin



Transmission Channel Anomaly Detection and Communication Functions

The M59330P uses driver overcurrent detection functions and transmission signal logic error detection functions to detect anomalies in the transmission channel, and outputs an error signal (ERR (pin 3) = "L") accordingly. Also, by switching the signal output to pin R_X (pin 4) according to the anomalous state, communication is possible after anomaly occurrence.

(1) Overcurrent detection

The drivers of the BUS(+) pin (pin 7) and BUS(-) pin (pin 6) of the M59330P are provided with overcurrent detection circuits. When excessive current flows in a driver, the driver is turned off, and an error signal (ERR (pin 3) = "L") is output. When overcurrent is detected, the driver is maintained in the off state until error reset.

The drivers for the BUS(+) pin (pin 7) and the BUS(-) pin (pin 6) are independent; depending on the circumstances of the anomaly, both may be turned off.

A filter is incorporated to prevent erroneous operation due to transient currents when a driver is turned on, and an overcurrent state is not detected for a short period of time (several hundred ns). The detection current is set at approx. 180 mA.

(2) Logical anomaly detection

M59330P transmission signals operate at opposite phases, and by comparing the signals, anomalies in the transmission channel are detected. The signals are compared at a preset time relative to an edge of the signals of the transmission channels (BUS(+), BUS(-)), and if they do not coincide, it is assumed that an anomaly has occurred in one of the transmission channels, and an error signal (ERR (pin 3) ="L") is output. When the next edge is detected within the preset time, this edge is taken as a new reference for timing, and if noncoincidence continues for longer than the preset time, an anomaly is detected. The time is set to approx. 4.2 μ s.

Logical anomaly detection does not support multiple error modes.

When only a logical anomaly is detected, the driver is not turned off. A driver is turned off upon anomaly detection only when overcurrent is detected.



(3) Communication functions

The M59330P normally outputs differential signals on BUS (+) (pin 7) and BUS (-) (pin 6), but when an anomaly is detected, switches signal output to the R_x pin (pin 4) according to the anomaly state.

When overcurrent is detected, an anomaly with the driver or transmission channel for which the overcurrent was detected is assumed, and an error signal is output; at the same time, the signal for the other transmission channel is output to the R_X output (pin 4). As explained in (1) above, in some cases both drivers may be turned off; in such cases, the R_X output (pin 4) is fixed at "L".

When a logical anomaly is detected, an error signal (ERR (pin 3) = "L") is output, and at the same time the R_X output (pin 4) is driven to "L". After error signal output, a transmission channel for which a transmission signal edge is detected is regarded as normal, and the signal for the channel is output to the R_X output (pin 4).

Overcurrent detection takes precedence over logical anomaly detection in operations to switch the error signal output and R_X output.

	Anomaly mode		Error output	Communication after anomaly detection	Method of anomaly detection
1	Bus(+)	GND short	Y	Y	(2)
2	-	VDD short	Y	Y	(1), (2)
3	_	Open	Y	Y	(2)
4	Bus(–)	GND short	Υ	Y	(1), (2)
5	-	VDD short	Y	Y	(2)
6	_	Open	Y	Y	(2)
6	BUS(+), BUS(–) short		Y	Ν	(1)

Table 1. Anomaly modes and anomaly detection functions

Error Reset

After standby mode is entered (the STB pin (pin 2) ="L"), the M59330P error output is reset by inputting level "H" to the ERR pin (pin 3). In this case, all operations relating to anomaly detection, such as overcurrent detection and R_X output switching, are canceled.


Standby Mode

By driving the STB pin (pin 2) to "L" level, the M59330P can be put into a low consumption current mode.

In standby mode, the driver and overcurrent detection functions do not operate, but the logical anomaly detection function continues to operate, and except for overcurrent detection, detection of anomalies is possible. However, there is only error signal output, and R_x output signal switching is not performed.

In standby mode, the R_X output is the logical sum of the BUS(+) signal and the BUS(-) signal.

Input/Output Equivalent Circuits

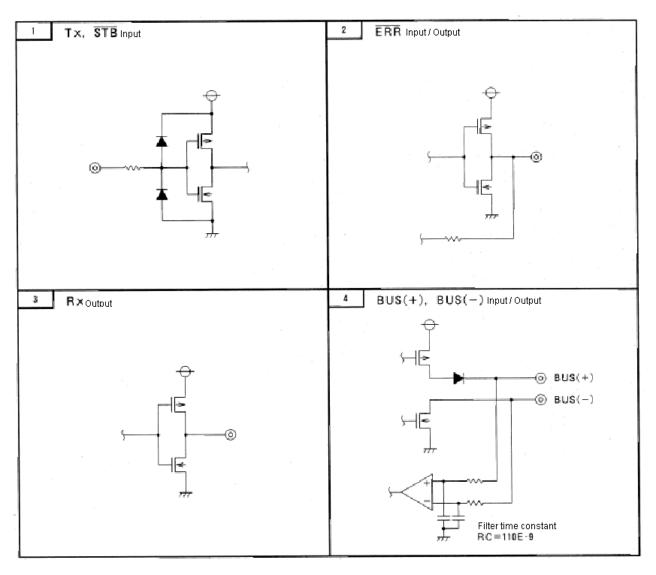



Electrical Characteristics

				(unless otherwise noted, Ta				
Symbol	Quantity Conditions		Rate	d value		Unit		
		Min.	Тур.	Max.				
I _{DD} 1	Power supply current 1	RBUS = 105 Ω, Tx = "L", STB = "H"			5.0	mA		
I _{DD} 2	Power supply current 2	RBUS = 105 Ω, Tx = "H", STB = "H"			55	mA		
I _{DD} 3	Power supply current 3	RBUS = 105 Ω, Tx = STB = "H"			200	μA		
V _{TH1}	"H" input threshold voltage 1	ERR	2.2		3.2	V		
V _{TH2}	"H" input threshold voltage 2	Tx, STB	2.3		3.5	V		
VTL	"L" input threshold voltage	Tx, STB	1.6		2.8	V		
VHYSL	Hysteresis width	Tx, STB	0.4		1.0	V		
V _{CIN}	BUS input voltage range	BUS(+), BUS(-)	Vss		V _{DD} -2.0	V		
VHYS8	Input hysteresis width	BUS(+), BUS(-) differential input	70		300	mV		
I _{IPP1}	BUS(+) leakage current 1	with power supply off ($V_{DD} = 0V$), BUS(+) = 0V			100	μA		
I _{IPP1}	BUS(+) leakage current 2	with power supply off ($V_{DD} = 0V$), BUS(+) = 5V			100	μA		
I _{IPP2}	BUS(+) leakage current 3	with power supply onBUS(-) = 5V	-20			μA		
I _{IDP2}	BUS(+) leakage current 4	with power supply onBUS(-) = 0V			100	μΑ		
I _{IPM1}	BUS(-) leakage current 1	with power supply off–50mA			100	μA		
I _{IDM1}	BUS(-) leakage current 2	with power supply off+50mA			100	μA		
I _{IPM2}	BUS(-) leakage current 3	with power supply on			20	μA		
V _{IDM2}	BUS(-) leakage current 4	with power supply on			100	μA		
V _{DROP1}	Driver drop voltage	IBUS(+) = -50mA			1.0	V		
V _{DROP2}		IBUS(-) = +50mA			0.6	_		
V _{OH1}	"H" output voltage 1	R _X pin I _{OH} = –1mA	4.5		5.0	V		
V _{OL1}	"L" output voltage 1	$R_X pin I_{OL} = +1mA$			0.6	V		
V _{OH2}	"H" output voltage 2	ERR pin I _{OH} = –1mA	4.5		5.0	V		
IPD	ERR pull-down current	ERR pin V _{OH} = 3.0V		350	700	μA		
C _{I1}	Input capacitance 1	power supply OFF ($V_{DD} = 0V$)			150	pF		
C _{I2}	Input capacitance 2	power supply ON			150	pF		
VTH1	Ground offset voltage	across two nodes			1.0	V		



Absolute Maximum Ratings

Symbol	Quantity	Conditions	Rated	Unit		
			Min.	Тур.	Max.	-
V _{DD}	Power supply voltage		-0.3		6.5	V
V ₁	Input voltage		-0.3		V _{DD} +0.3	V
V ₀	Output voltage		-0.3		V _{DD} +0.3	V
lo	Driver output current	BUS(+)			50	mA
		BUS(-)	-50			
P _{mex}	Allowable power consumption				200	mW
T _{stg}	Storage temperature		-50		125	°C

Note: All voltages use the circuit V_{SS} pin as reference; maximum and minimum values are absolute values; and currents are positive when flowing into a circuit, and negative (preceded by a minus sign) when flowing outward.

Recommended Operating Conditions

			(unless othe	40 to 85°C			
Symbol	Quantity	Conditions	Rated	Rated value			
			Min.	Тур.	Max.	-	
V_{DD}	Power supply voltage		4.75		5.25	V	
RBUS	BUS resistance	transmission rate = 41.6Kbps	105			Ω	
		transmission rate = 125Kbps	105			_	
CBUS	BUS capacitance	transmission rate = 41.6Kbps RBUS = 378 Ω			10000	pF	
		transmission rate = 125Kbps, RBUS = 378 Ω			3000	-	
Topr	Operating ambient temperature		-40		85	°C	

Timing Characteristics

(unless otherwise noted, $Ta = 25^{\circ}C$, $V_{DD}=5.0$ V, during normal operation)


Symbol	Quantity	Conditions	Rated value			Unit
			Min.	Тур.	Max.	-
T_{dTBr}	$T_X \rightarrow BUS$ output delay time	CBUS = 10000pF,		0.25		μs
		RBUS = 378 Ω				
		transmission rate =41.6Kbps				
T _{dTRr}	$T_X \rightarrow R_X$ rise delay time	CBUS = 10000pF,		0.6		μs
		RBUS = 378 Ω				
		transmission rate =41.6Kbps				
T _{dBRf}	$T_X \rightarrow R_X$ fall delay time	CBUS = 10000pF,		3.0		μs
		RBUS = 378 Ω				
		transmission rate =41.6Kbps				
T _{dBRr}	$BUS \to R_{X} rise delay time$	transmission rate = 41.6Kbps		0.35		μs
T_{dBRf}	$BUS \to R_X$ fall delay time	transmission rate = 41.6Kbps		0.33		μs
TwS	Minimum STB input pulse width	standby mode	3.0			μs
TsS	STB input setup time	on error reset	1.0			μs
ThS	STB input hold time	on error reset	100			ns
TwE	ERR input pulse width	on error reset	200			ns




M59330P

Timing Charts

Timing Waveforms

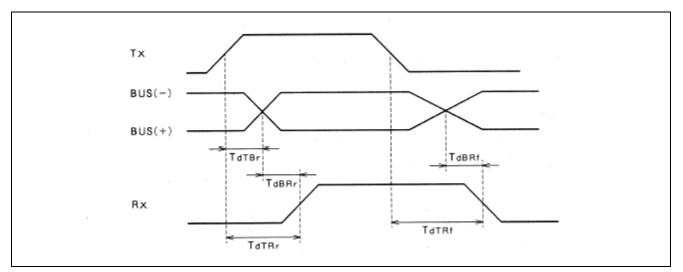


Error Reset Timing

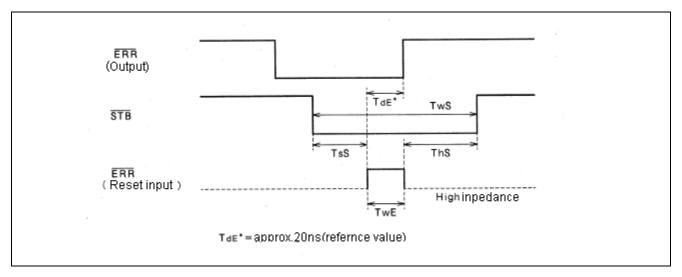




Application Circuit Example (One implementation example, which should be studied carefully)



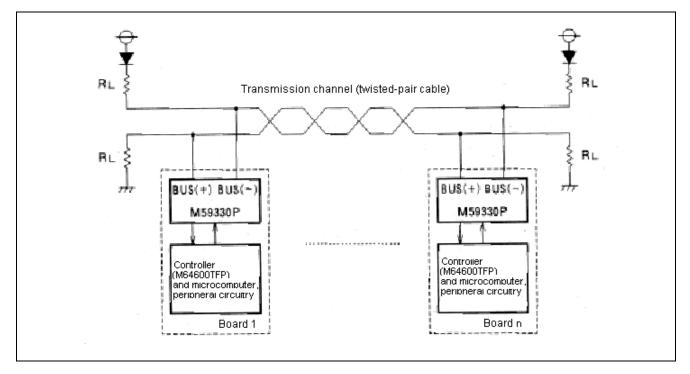


Peripheral Circuit Example

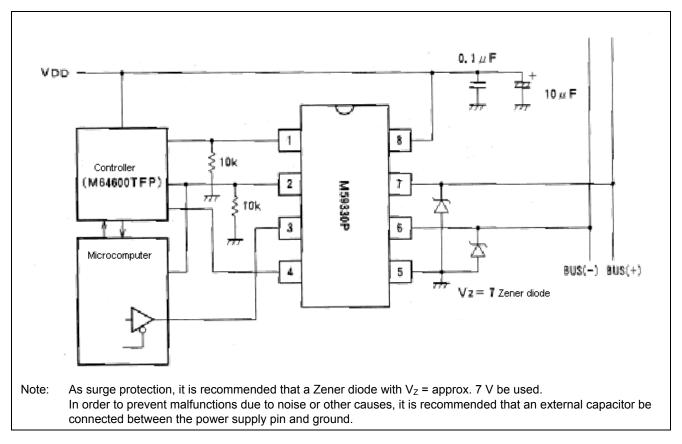



Package Dimensions

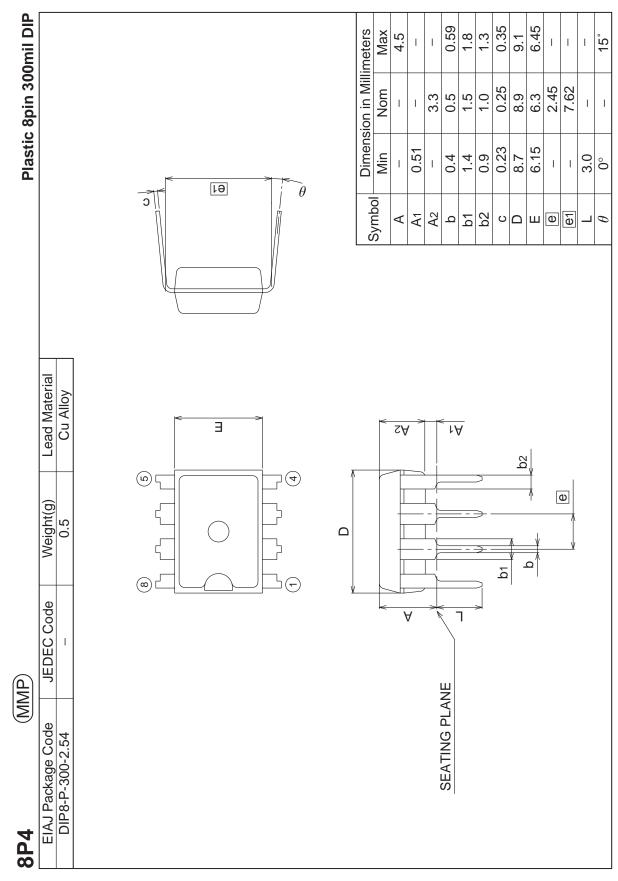

RENESAS

RenesasTechnology Corp. Sales Strategic Planning Div. Nippon Bldg., 2-6-2, Ohte-machi, Chiyoda-ku, Tokyo 100-0004, Japan

Keep safety first in your circuit designs!

- The party inst in your circuit designs:
 1. Renesas Technology Corp. puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage.
 Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

- Notes regarding these materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corp. product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corp. or a third party.
 Renesas Technology Corp. assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
 All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corp. without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor for the latest product information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corp. assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors. Please also pay attention to information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corp. assumes no responsibility for any damage or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product.
 4. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to eva use.
- use. 6. The prior written approval of Renesas Technology Corp. is necessary to reprint or reproduce in whole or in part these materials. 7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited. 8. Please contact Renesas Technology Corp. for further details on these materials or the products contained therein.



http://www.renesas.com

RENESAS SALES OFFICES

Renesas Technology America, Inc. 450 Holger Way, San Jose, CA 95134-1368, U.S.A Tel: <1> (408) 382-7500 Fax: <1> (408) 382-7501

Renesas Technology Europe Limited.

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, United Kingdom Tel: <44> (1628) 585 100, Fax: <44> (1628) 585 900

Renesas Technology Europe GmbH Dornacher Str. 3, D-85622 Feldkirchen, Germany Tel: <49> (89) 380 70 0, Fax: <49> (89) 929 30 11

Renesas Technology Hong Kong Ltd. 7/F., North Tower, World Finance Centre, Harbour City, Canton Road, Hong Kong Tel: <852> 2265-6688, Fax: <852> 2375-6836

Renesas Technology Taiwan Co., Ltd. FL 10, #99, Fu-Hsing N. Rd., Taipei, Taiwan Tel: <886> (2) 2715-2888, Fax: <886> (2) 2713-2999

Renesas Technology (Shanghai) Co., Ltd. 26/F., Ruijin Building, No.205 Maoming Road (S), Shanghai 200020, China Tel: <86> (21) 6472-1001, Fax: <86> (21) 6415-2952

Renesas Technology Singapore Pte. Ltd. 1, Harbour Front Avenue, #06-10, Keppel Bay Tower, Singapore 098632 Tel: <65> 6213-0200, Fax: <65> 6278-8001