

EEPROM Memory Programming Specification

This document includes the programming specifications for the following devices:

- PIC16F627
- PIC16F628
- PIC16LF627
- PIC16LF628

1.0 PROGRAMMING THE PIC16F62X

The PIC16F62X is programmed using a serial method. The serial mode will allow the PIC16F62X to be programmed while in the users system. This allows for increased design flexibility. This programming specification applies to PIC16F62X devices in all packages.

PIC16F62X devices may be programmed using a single +5 volt supply (low voltage programming mode).


1.1 Hardware Requirements

The PIC16F62X requires one programmable power supply for VDD (4.5V to 5.5V) and a VPP of 12V to 14V, or VPP of 4.5V to 5.5V, when using low voltage. Both supplies should have a minimum resolution of 0.25V.

1.2 Programming Mode

The programming mode for the PIC16F62X allows programming of user program memory, data memory, special locations used for ID, and the configuration word.

Pin Diagram

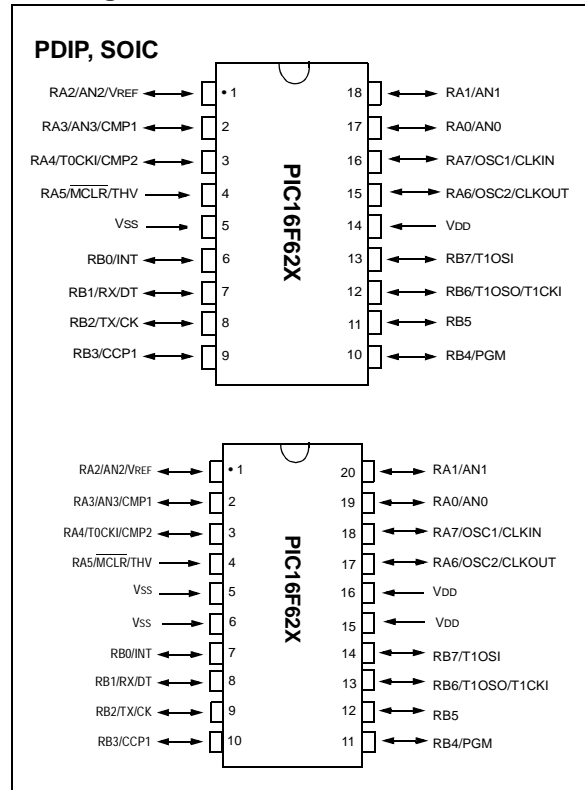

PIN DESCRIPTIONS (DURING PROGRAMMING): PIC16F62X

Pin Name	During Programming		
	Function	Pin Type	Pin Description
RB4	PGM	I	Low voltage programming input if configuration bit equals 1
RB6	CLOCK	I	Clock input
RB7	DATA	I/O	Data input/output
MCLR	VTEST MODE	P*	Program Mode Select
VDD	VDD	P	Power Supply
Vss	VSS	P	Ground

Legend: I = Input, O = Output, P = Power

* In the PIC16F62X, the programming high voltage is internally generated. To activate the programming mode, high voltage needs to be applied to MCLR input. Since the MCLR is used for a level source, this means that MCLR does not draw any significant current.

PIC16F62X

2.0 PROGRAM MODE ENTRY

2.1 User Program Memory Map

The user memory space extends from 0x0000 to 0x7FFF. In programming mode, the program memory space extends from 0x0000 to 0x3FFF, with the first half (0x0000-0x7FFF) being user program memory and the second half (0x2000-0x3FFF) being configuration memory. The PC will increment from 0x0000 to 0x7FFF and wrap to 0x000, 0x2000 to 0x3FFF and wrap around to 0x2000 (not to 0x0000). Once in configuration memory, the highest bit of the PC stays a '1', thus always pointing to the configuration memory. The only way to point to user program memory is to reset the part and reenter program/verify mode as described in Section 2.3.

In the configuration memory space, 0x2000-0x200F are physically implemented. However, only locations 0x2000 through 0x2007 are available. Other locations are reserved. Locations beyond 0x200F will physically access user memory (See Figure 2-1).


2.2 ID Locations

A user may store identification information (ID) in four ID locations. The ID locations are mapped in [0x2000 : 0x2003]. It is recommended that the user use only the four least significant bits of each ID location. In some devices, the ID locations read-out in an unscrambled fashion after code protection is enabled. For these devices, it is recommended that ID location is written as "11 1111 1000 bbbb" where 'bbbb' is ID information.

In other devices, the ID locations read out normally, even after code protection. To understand how the devices behave, refer to Table 4-1.

To understand the scrambling mechanism after code protection, refer to Section 3-1.

FIGURE 2-1: PROGRAM MEMORY MAPPING

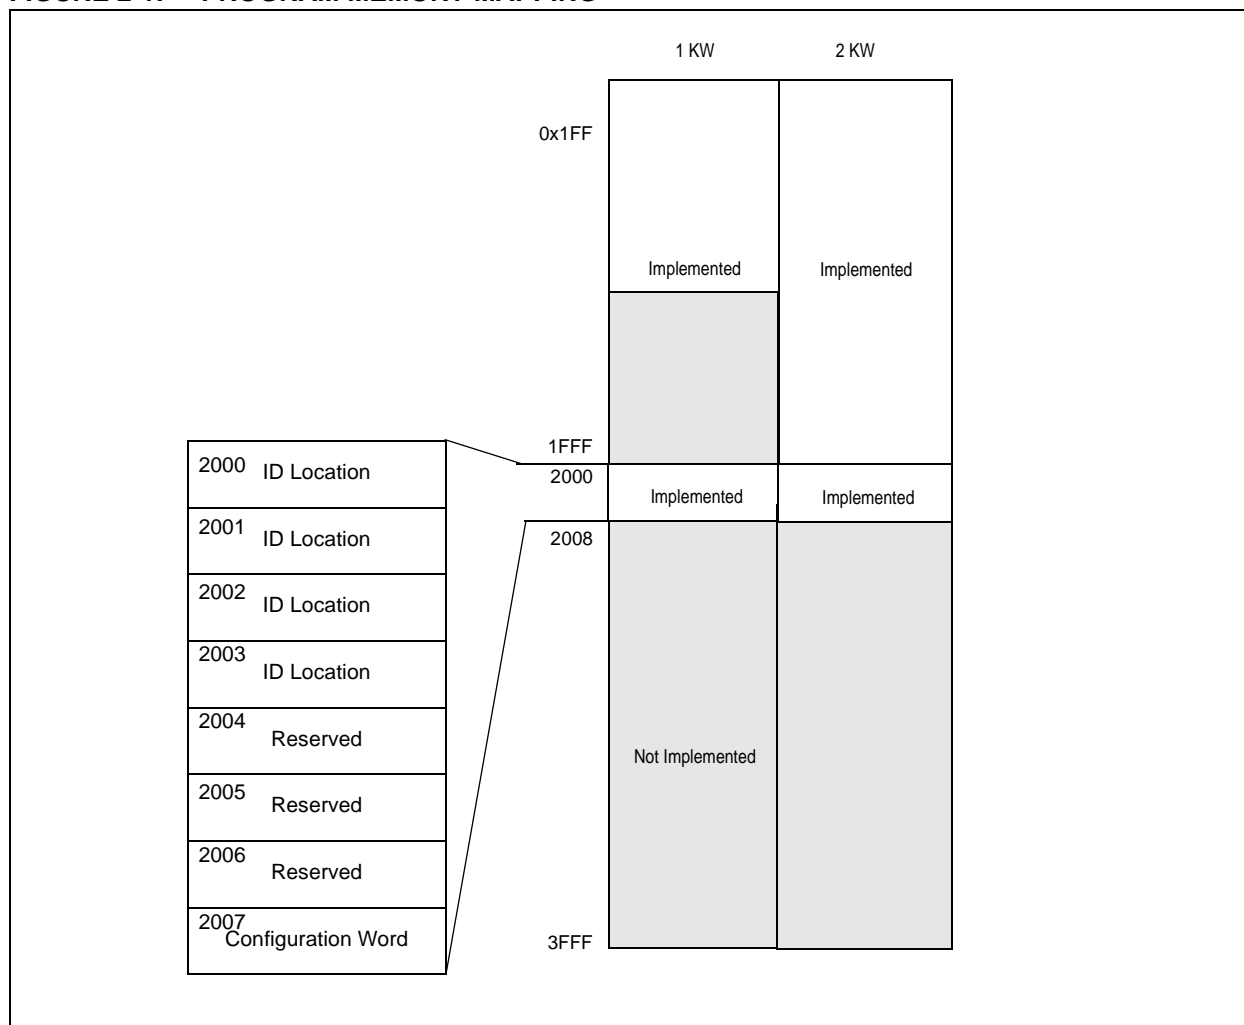

2.3 Program/Verify Mode

The program/verify mode is entered by holding pins RB6 and RB7 low while raising $\overline{\text{MCLR}}$ pin from V_{IL} to V_{IH} (high voltage), or by applying V_{DD} to $\overline{\text{MCLR}}$ and raising RB3 from V_{IL} to V_{DD} . Once in this mode, the user program memory and the configuration memory can be accessed and programmed in serial fashion. The mode of operation is serial, and the memory that is accessed is the user program memory. RB6 and RB7 are Schmitt Trigger Inputs in this mode.

Note: The OSC must not have 72 osc clocks while the device $\overline{\text{MCLR}}$ is between V_{IL} and V_{IH} .

The sequence that enters the device into the programming/verify mode places all other logic into the RESET state (the $\overline{\text{MCLR}}$ pin was initially at V_{IL}). This means that all I/O are in the RESET state (high impedance inputs).

The normal sequence for programming is to use the load data command to set a value to be written at the selected address. Issue the begin programming command followed by read data command to verify, and then increment the address.

A device RESET will clear the PC and set the address to 0. The "increment address" command will increment the PC. The "load configuration" command will set the PC to 0x2000. The available commands are shown in Table 2-1.

2.3.1 LOW VOLTAGE PROGRAMMING MODE

When LVP bit is set to '1', the low voltage programming entry is enabled. Since the LVP configuration bit allows low voltage programming entry in its erased state, an erased device will have the LVP bit enabled at the factory. While LVP is '1', $\overline{\text{RB4}}$ is dedicated to low voltage programming. Bring $\overline{\text{MCLR}}$ to V_{DD} and then RB4 to V_{DD} to enter programming mode. All other specifications for high voltage ICSP™ apply.

To disable low voltage mode, the LVP bit must be programmed to '0'. This must be done while entered with high voltage entry mode (LVP bit = 1). RB4 is now a general purpose I/O pin.

2.3.2 SERIAL PROGRAM/VERIFY OPERATION

The RB6 pin is used as a clock input pin, and the RB7 pin is used for entering command bits and data input/output during serial operation. To input a command, the clock pin (RB6) is cycled six times. Each command bit is latched on the falling edge of the clock with the least significant bit (LSb) of the command being input first. The data on pin RB7 is required to have a minimum setup and hold time (see AC/DC specifications), with respect to the falling edge of the clock. Commands that have data associated with them (read and load) are specified to have a minimum delay of 1 μs between the command and the data. After this delay, the clock pin is cycled 16 times with the first cycle being a Start bit and the last cycle being a Stop bit. Data is also input and output LSb first.

Therefore, during a read operation the LSb will be transmitted onto pin RB7 on the rising edge of the second cycle, and during a load operation the LSb will be latched on the falling edge of the second cycle. A minimum 1 μs delay is also specified between consecutive commands.

All commands are transmitted LSb first. Data words are also transmitted LSb first. The data is transmitted on the rising edge and latched on the falling edge of the clock. To allow for decoding of commands and reversal of data pin configuration, a time separation of at least 1 μs is required between a command and a data word (or another command).

The commands that are available are:

2.3.2.1 LOAD CONFIGURATION

After receiving this command, the program counter (PC) will be set to 0x2000. By then applying 16 cycles to the clock pin, the chip will load 14-bits in a "data word," as described above, to be programmed into the configuration memory. A description of the memory mapping schemes of the program memory for normal operation and configuration mode operation is shown in Figure 2-1. After the configuration memory is entered, the only way to get back to the user program memory is to exit the program/verify test mode by taking $\overline{\text{MCLR}}$ low (V_{IL}).

PIC16F62X


2.3.2.2 LOAD DATA FOR PROGRAM MEMORY

After receiving this command, the chip will load in a 14-bit “data word” when 16 cycles are applied, as described previously. A timing diagram for the load data command is shown in Figure 5-1.

TABLE 2-1: COMMAND MAPPING FOR PIC16F627/PIC16F628


Command	Mapping (MSb ... LSb)						Data
Load Configuration	X	X	0	0	0	0	0, data (14), 0
Load Data for Program Memory	X	X	0	0	1	0	0, data (14), 0
Read Data from Program Memory	X	X	0	1	0	0	0, data (14), 0
Increment Address	X	X	0	1	1	0	
Begin Erase Programming Cycle	0	0	1	0	0	0	
Begin Programming Only Cycle	0	1	1	0	0	0	
Load Data for Data Memory	X	X	0	0	1	1	0, data (14), 0
Read Data from Data Memory	X	X	0	1	0	1	0, data (14), 0
Bulk Erase Program Memory	X	X	1	0	0	1	
Bulk Erase Data Memory	X	X	1	0	1	1	

FIGURE 2-2: PROGRAM FLOW CHART - PIC16F62X PROGRAM MEMORY

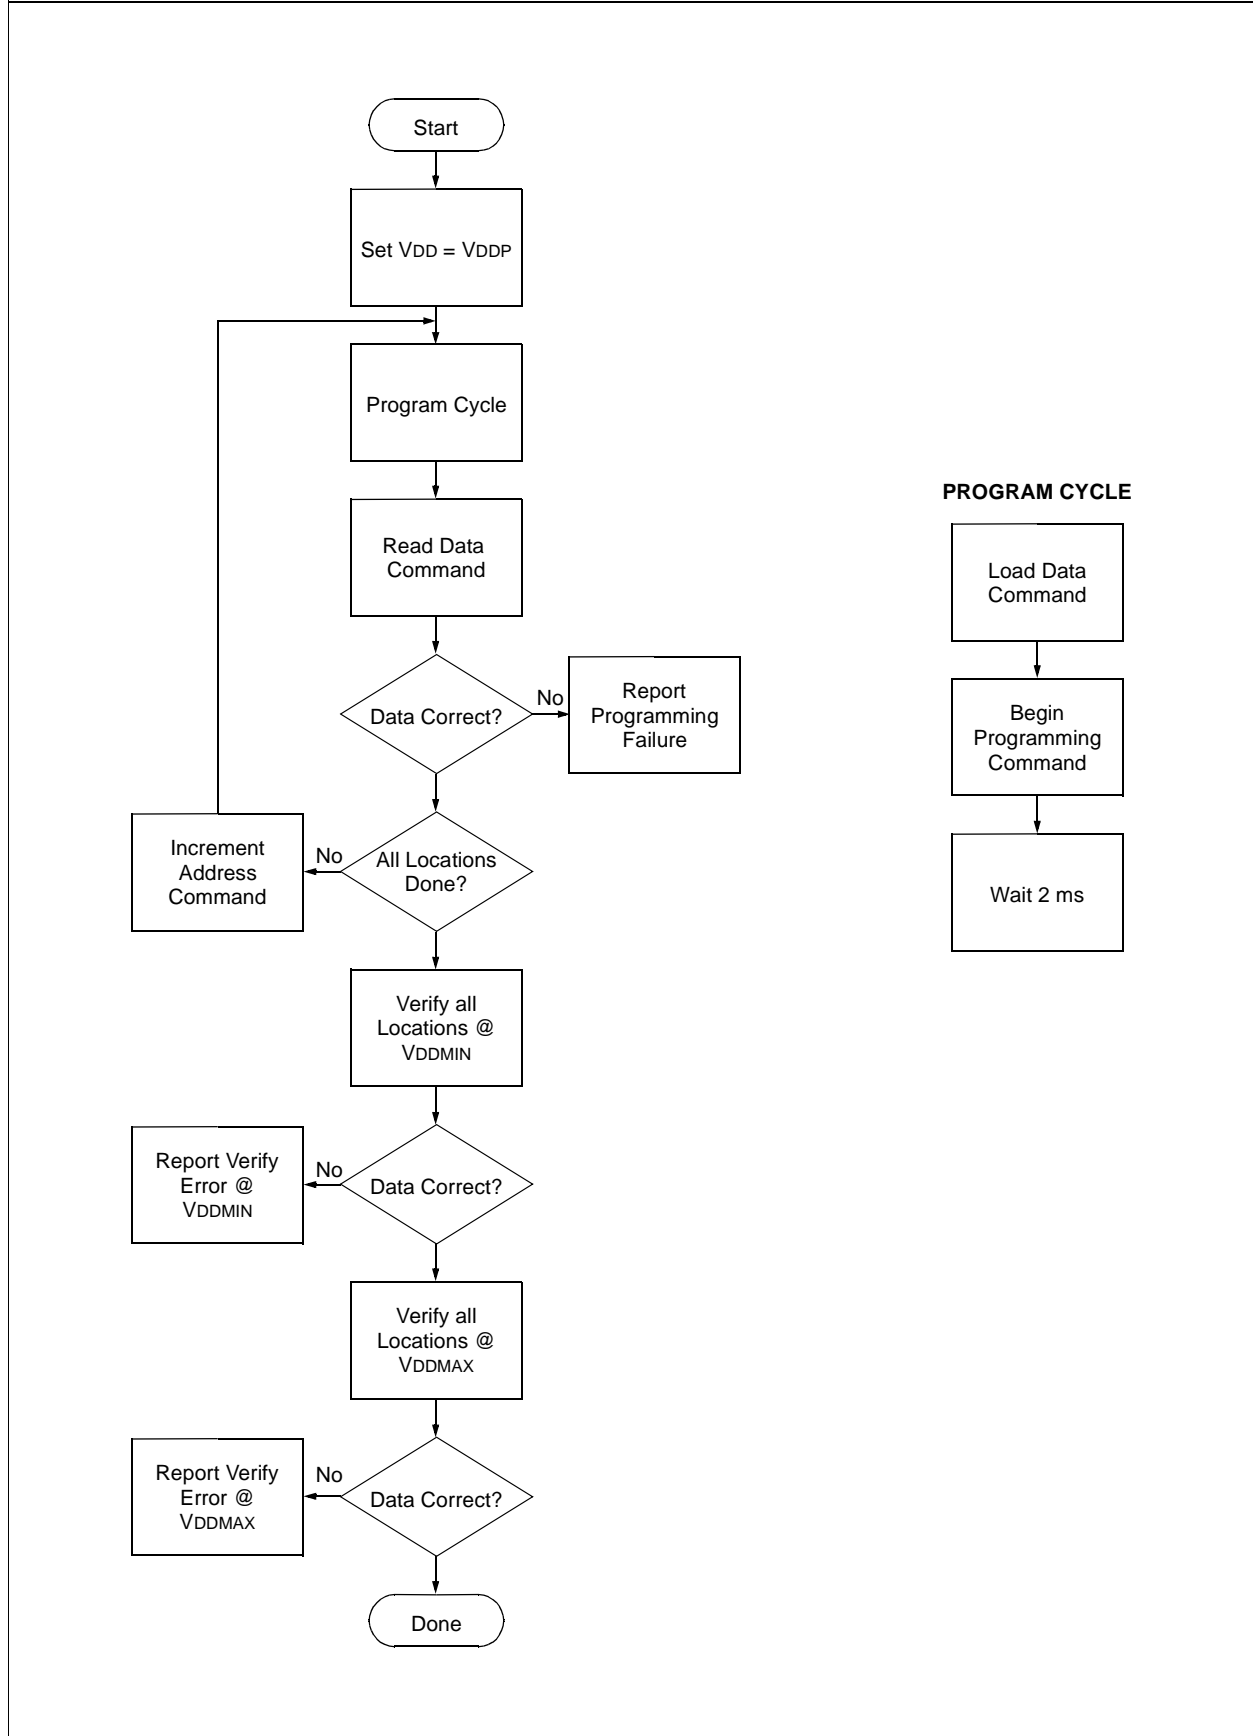

PIC16F62X

FIGURE 2-3: PROGRAM FLOW CHART - PIC16F62X CONFIGURATION MEMORY

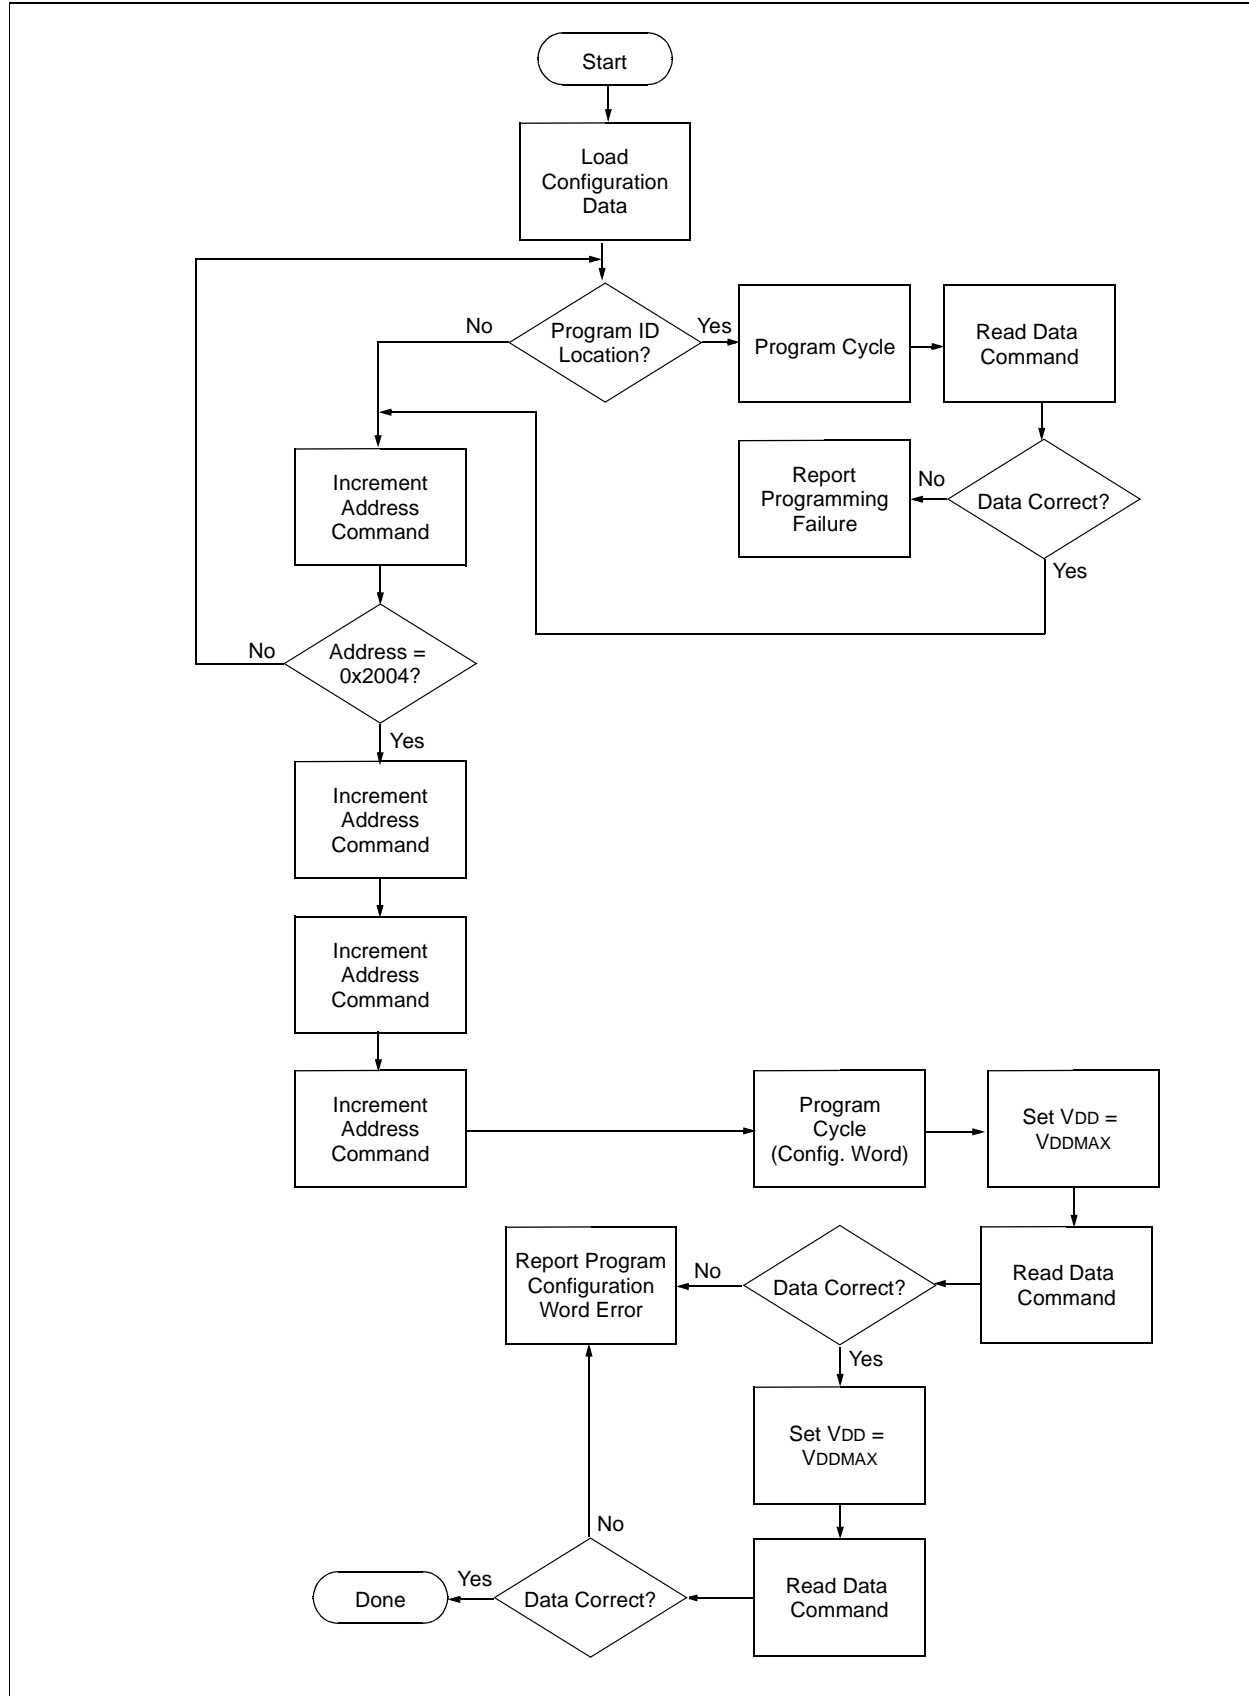

2.3.2.3 LOAD DATA FOR DATA MEMORY

After receiving this command, the chip will load in a 14-bit “data word” when 16 cycles are applied. However, the data memory is only 8-bits wide, and thus only the first 8-bits of data after the Start bit will be programmed into the data memory. It is still necessary to cycle the clock the full 16 cycles in order to allow the internal circuitry to reset properly. The data memory contains 64 words. Only the lower 8-bits of the PC are decoded by the data memory, and therefore, if the PC is greater than 0x3F, it will wrap around and address a location within the physically implemented memory. If the device is code protected, the data is read as all zeros.

2.3.2.4 READ DATA FROM PROGRAM MEMORY

After receiving this command, the chip will transmit data bits out of the program memory (user or configuration) currently accessed, starting with the second rising edge of the clock input. The RB7 pin will go into output mode on the second rising clock edge, and it will revert back to input mode (hi-impedance) after the 16th rising edge. A timing diagram of this command is shown in Figure 5-2.

2.3.2.5 READ DATA FROM DATA MEMORY

After receiving this command, the chip will transmit data bits out of the data memory starting with the second rising edge of the clock input. The RB7 pin will go into output mode on the second rising edge, and it will revert back to input mode (hi-impedance) after the 16th rising edge. As previously stated, the data memory is 8-bits wide, and therefore, only the first 8-bits that are output are actual data.

2.3.2.6 INCREMENT ADDRESS

The PC is incremented when this command is received. A timing diagram of this command is shown in Figure 5-3.

2.3.2.7 BEGIN ERASE/PROGRAM CYCLE

A load command must be given before every begin programming command. Programming of the appropriate memory (test program memory, user program memory or data memory) will begin after this command is received and decoded. An internal timing mechanism executes an erase before write. The user must allow for both erase and programming cycle times for programming to complete. No “end programming” command is required.

2.3.2.8 BEGIN PROGRAMMING

A load command must be given before every begin programming command. Programming of the appropriate memory (test program memory, user program memory or data memory) will begin after this command is received and decoded. An internal timing mechanism executes a write. The user must allow for program cycle time for programming to complete. No “end programming” command is required.

This command is similar to the ERASE/PROGRAM CYCLE command, except that a word erase is not done. It is recommended that a bulk erase be performed before starting a series of programming only cycles.

2.3.2.9 BULK ERASE PROGRAM MEMORY

After this command is performed, the next program command will erase the entire program memory.

To perform a bulk erase of the program memory, the following sequence must be performed.

1. Do a “Load Data All 1’s” command.
2. Do a “Bulk Erase User Memory” command.
3. Do a “Begin Programming” command.
4. Wait 10 ms to complete bulk erase.

If the address is pointing to the test program memory (0x2000 - 0x200F), then both the user memory and the test memory will be erased. The configuration word will not be erased, even if the address is pointing to location 0x2007.

Note: If the device is code-protected, the BULK ERASE command will not work.

2.3.2.10 BULK ERASE DATA MEMORY

To perform a bulk erase of the data memory, the following sequence must be performed.

1. Do a “Load Data All 1’s” command.
2. Do a “Bulk Erase Data Memory” command.
3. Do a “Begin Programming” command.
4. Wait 10 ms to complete bulk erase.

Note: All BULK ERASE operations must take place at 4.5 to 5.5 VDD range.

PIC16F62X

2.4 Programming Algorithm Requires Variable VDD

The PIC16F62X uses an intelligent algorithm. The algorithm calls for program verification at VDDMIN as well as VDDMAX. Verification at VDDMIN guarantees good “erase margin”. Verification at VDDMAX guarantees good “program margin”.

The actual programming must be done with VDD in the VDDP range (See Table 5-1).

VDDP = VCC range required during programming.

VDDMIN = minimum operating VDD spec for the part.

VDDMAX = maximum operating VDD spec for the part.

Programmers must verify the PIC16F62X at its specified VDDMAX and VDDMIN levels. Since Microchip may introduce future versions of the PIC16F62X with a broader VDD range, it is best that these levels are user selectable (defaults are ok).

<p>Note: Any programmer not meeting these requirements may only be classified as “prototype” or “development” programmer, but not a “production” quality programmer.</p>

3.0 CONFIGURATION WORD

The PIC16F62X has several configuration bits. These bits can be set (reads '0'), or left unchanged (reads '1'), to select various device configurations.

3.1 Device ID Word

The device ID word for the PIC16F62X is located at 2006h.

TABLE 3-1:

Device	Device ID Value	
	Dev	Rev
PIC16F627	00 0111 111	x xxxx
PIC16F628	00 0111 001	x xxxx

FIGURE 3-1: CONFIGURATION WORD FOR PIC16F627/628

CP1	CP0	CP1	CP0	-	CPD	LVP	BODEN	MCLRE	FOSC2	PWRT \overline{E}	WDTE	FOSC1	FOSC0	Register Address	CONFIG 2007h
bit13													bit0		
bit 13-10: CP1:CP0 : Code Protection bits ⁽²⁾															
Code protection for 2K program memory 11 = Program memory code protection off 10 = 0400h-07FFh code protected 01 = 0200h-07FFh code protected 00 = 0000h-07FFh code protected Code protection for 1K program memory 11 = Program memory code protection off 10 = Program memory code protection off 01 = 0200h-03FFh code protected 00 = 0000h-03FFh code protected															
bit 8: CPD : Data Code Protection bit ⁽³⁾															
1 = Data memory code protection off 0 = Data memory code protected															
bit 7: LVP : Low Voltage Programming Enable															
1 = RB4/PGM pin has PGM function, low voltage programming enabled 0 = RB4/PGM is digital I/O, HV on MCLR must be used for programming															
bit 6: BODEN : Brown-out Detect Reset Enable bit ⁽¹⁾															
1 = BOD Reset enabled 0 = BOD Reset disabled															
bit 5: MCLRE : RA5/MCLR Pin Function Select															
1 = RA5/MCLR pin function is MCLR 0 = RA5/MCLR pin function is digital I/O, MCLR internally tied to VDD															
bit 3: PWRT\overline{E} : Power-up Timer Enable bit ⁽¹⁾															
1 = PWRT disabled 0 = PWRT enabled															
bit 2: WDTE : Watchdog Timer Enable bit															
1 = WDT enabled 0 = WDT disabled															
bit 4,1-0: FOSC2:FOSC0 : Oscillator Selection bits ⁽⁴⁾															
111 = ER oscillator: CLKOUT function on RA6/OSC2/CLKOUT pin, Resistor on RA7/OSC1/CLKIN															
110 = ER oscillator: I/O function on RA6/OSC2/CLKOUT pin, Resistor on RA7/OSC1/CLKIN															
101 = INTRC oscillator: CLKOUT function on RA6/OSC2/CLKOUT pin, I/O function on RA7/OSC1/CLKIN															
100 = INTRC oscillator: I/O function on RA6/OSC2/CLKOUT pin, I/O function on RA7/OSC1/CLKIN															
011 = ExtCLK: I/O function on RA6/OSC2/CLKOUT pin, CLKIN on RA7/OSC1/CLKIN															
010 = HS oscillator: High speed crystal/resonator on RA6/OSC2/CLKOUT and RA7/OSC1/CLKIN															
001 = XT oscillator: Crystal/resonator on RA6/OSC2/CLKOUT and RA7/OSC1/CLKIN															
000 = LP oscillator: Low power crystal on RA6/OSC2/CLKOUT and RA7/OSC1/CLKIN															
Note 1: Enabling Brown-out Reset automatically enables Power-up Timer (PWRT) regardless of the value of bit PWRT \overline{E} . Ensure the Power-up Timer is enabled any time Brown-out Reset is enabled.															
2: All of the CP1:CP0 pairs have to be given the same value to enable the code protection scheme listed. The entire program EEPROM will be erased if the code protection is reduced.															
3: The entire data EEPROM will be erased when the code protection is turned off. The calibration space in the test memory is not erased.															
4: When MCLR is asserted in INTRC or ER mode, the internal clock oscillator is disabled.															

4.0 CODE PROTECTION

For PIC16F62X devices, once code protection is enabled, all program memory locations read all 0's. The ID locations and the configuration word read out in an unscrambled fashion. Further programming is disabled for the entire program memory, as well as data memory. It is possible to program the ID locations and the configuration word.

4.1 Disabling Code Protection

It is recommended that the following procedure be performed before any other programming is attempted. It is also possible to turn code protection off (code protect bit = 1) using this procedure; however, ***all data within the program memory and the data memory will be erased when this procedure is executed, and thus, the security of the data or code is not compromised.***

4.2 Embedding Configuration Word and ID Information in the Hex File

To allow portability of code, the programmer is required to read the configuration word and ID locations from the hex file when loading the hex file. If configuration word information was not present in the hex file, then a simple warning message may be issued. Similarly, while saving a hex file, configuration word and ID information must be included. An option to not include this information may be provided.

Specifically for the PIC16F62X, the EEPROM data memory should also be embedded in the hex file (see Section 5.1).

Microchip Technology Inc. feels strongly that this feature is important for the benefit of the end customer.

Procedure to disable code protect:

- a) Execute load configuration (1111111).
- b) Increment to configuration word location (0x2007).
- c) Execute command (000001).
- d) Execute command (000111).
- e) Execute 'Begin Programming' (001000).
- f) Wait 10 ms.
- g) Execute command (000001).
- h) Execute command (000111).

4.3 Checksum Computation

4.3.1 CHECKSUM

Checksum is calculated by reading the contents of the PIC16F62X memory locations and adding up the opcodes up to the maximum user addressable location, e.g., 0x1FF for the PIC16F62X. Any carry bits exceeding 16-bits are neglected. Finally, the configuration word (appropriately masked) is added to the checksum. Checksum computation for each member of the PIC16F62X devices is shown in Table 4-1.

The checksum is calculated by summing the following:

- The contents of all program memory locations
- The configuration word, appropriately masked
- Masked ID locations (when applicable)

The least significant 16 bits of this sum is the checksum.

The following table describes how to calculate the checksum for each device. Note that the checksum calculation differs depending on the code protect setting. Since the program memory locations read out differently depending on the code protect setting, the table describes how to manipulate the actual program memory values to simulate the values that would be read from a protected device. When calculating a checksum by reading a device, the entire program memory can simply be read and summed. The configuration word and ID locations can always be read.

Note that some older devices have an additional value added in the checksum. This is to maintain compatibility with older device programmer checksums.

TABLE 4-1: CHECKSUM COMPUTATION

Device	Code Protect	Checksum*	Blank Value	0x25E6 at 0 and max address
PIC16F627	OFF	SUM[0x0000:0x3FFF] + CFGW & 0x3DFF	0x39FF	0x05CD
	0x200 : 0x3FF	SUM[0x0000:0x01FF] + CFGW & 0x3DFF + SUM_ID	0x4DFE	0xFFB3
	ALL	CFGW & 0x3DFF + SUM_ID	0x3BFE	0x07CC
PIC16F628	OFF	SUM[0x0000:0x07FF] + CFGW & 0x3DFF	0x35FF	0x01CD
	0x400 : 0xFFFF	SUM[0x0000:0x03FF] + CFGW & 0x3DFF +SUM_ID	0x5BFE	0x0DB3
	0x200 : 0x7FF	SUM[0x0000:0x01FF] + CFGW & 0x3DFF + SUM_ID	0x49FE	0xFBB3
	ALL	CFGW & 0x3DFF + SUM_ID	0x37FE	0x03CC

Legend: CFGW = Configuration Word

SUM[a:b] = [Sum of locations a to b inclusive]

SUM_ID = ID locations masked by 0xF then made into a 16-bit value with ID0 as the most significant nibble.

For example, ID0 = 0x1, ID1 = 0x2, ID3 = 0x3, ID4 = 0x4, then SUM_ID = 0x1234

*Checksum = [Sum of all the individual expressions] **MODULO** [0xFFFF]

+ = Addition

& = Bitwise AND

PIC16F62X

5.0 PROGRAM/VERIFY MODE ELECTRICAL CHARACTERISTICS

5.1 Embedding Data EEPROM Contents in Hex File

The programmer should be able to read data EEPROM information from a hex file and conversely (as an option), write data EEPROM contents to a hex file along with program memory information and fuse information.

The 64 data memory locations are logically mapped starting at address 0x2100. The format for data memory storage is one data byte per address location, LSB aligned.

**TABLE 5-1: AC/DC CHARACTERISTICS
TIMING REQUIREMENTS FOR PROGRAM/VERIFY MODE**

Standard Operating Conditions (unless otherwise stated)						
Operating Temperature: $0^{\circ}\text{C} \leq T_A \leq +70^{\circ}\text{C}$						
Operating Voltage: $4.5\text{V} \leq V_{DD} \leq 5.5\text{V}$						
Characteristics	Sym	Min	Typ	Max	Units	Conditions/Comments
General						
VDD level for word operations, program memory	VDD	2.0		5.5	V	
VDD level for word operations, data memory	VDD	2.0		5.5	V	
VDD level for bulk erase/write operations, program and data memory	VDD	4.5		5.5	V	
High voltage on $\overline{\text{MCLR}}$ and RA4/T0CKI for test mode entry	V _{IHH}	V _{DD} + 3.5		13.5	V	
$\overline{\text{MCLR}}$ rise time (V _{SS} to V _{HH}) for test mode entry	t _{VHHR}			1.0	μs	
Hold time after V _{PP} ↑	T _{PPDP}	5			μs	
(RB6, RB7) input high level	V _{IH1}	0.8V _{DD}			V	Schmitt Trigger input
(RB6, RB7) input low level	V _{IL1}	0.2V _{DD}			V	Schmitt Trigger input
RB<7:4> setup time before $\overline{\text{MCLR}}$ ↑ (test mode selection pattern setup time)	t _{set0}	100			ns	
RB<7:4> hold time after $\overline{\text{MCLR}}$ ↑ (test mode selection pattern setup time)	thld0	5			μs	
Serial Program/Verify						
Data in setup time before clock↓	t _{set1}	100			ns	
Data in hold time after clock↓	thld1	100			ns	
Data input not driven to next clock input (delay required between command/data or command/command)	tdly1	1.0			μs	
Delay between clock↓ to clock↑ of next command or data	tdly2	1.0			μs	
Clock↑ to data out valid (during read data)	tdly3	80			ns	
Erase cycle time	tera		2	5	ms	
Programming cycle time	tprog		2	5	ms	
Time delay from program to compare (HV discharge time)	t _{dis}	0.5			μs	

FIGURE 5-1: LOAD DATA COMMAND (PROGRAM/VERIFY)

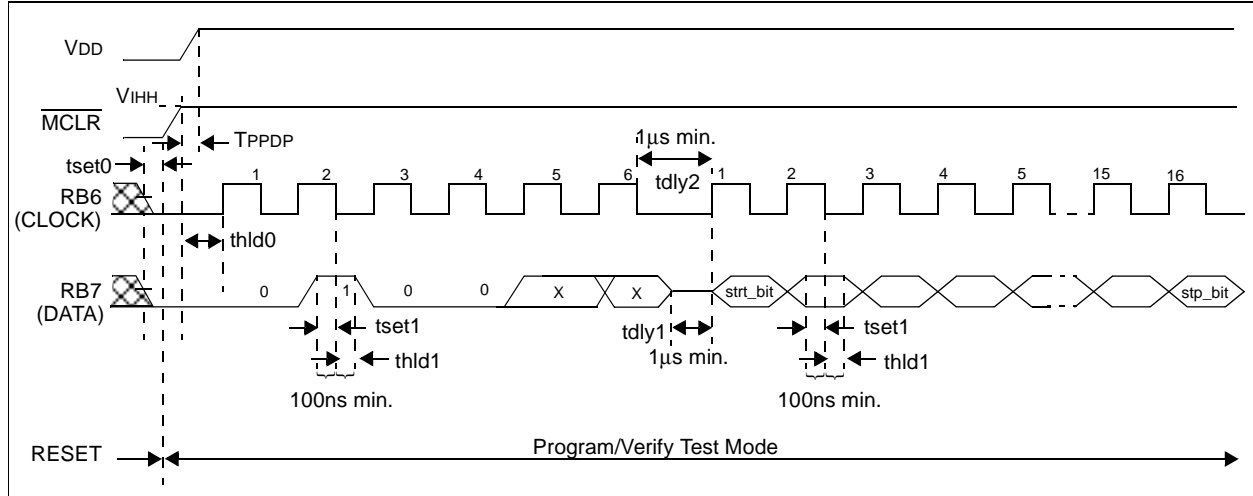


FIGURE 5-2: READ DATA COMMAND (PROGRAM/VERIFY)


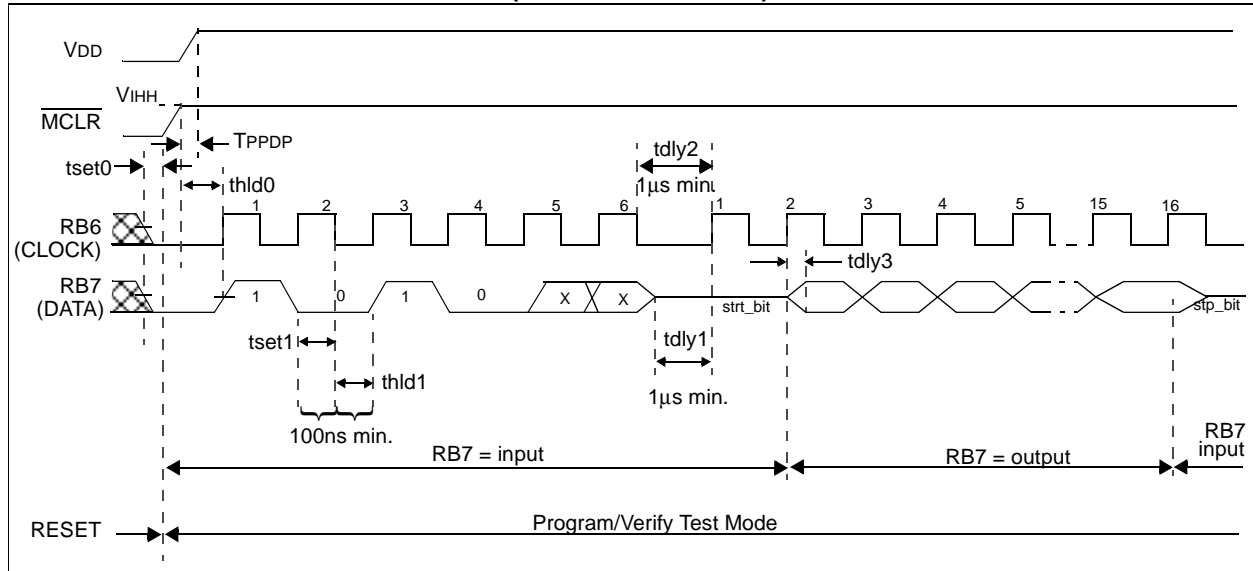


FIGURE 5-3: INCREMENT ADDRESS COMMAND (PROGRAM/VERIFY)



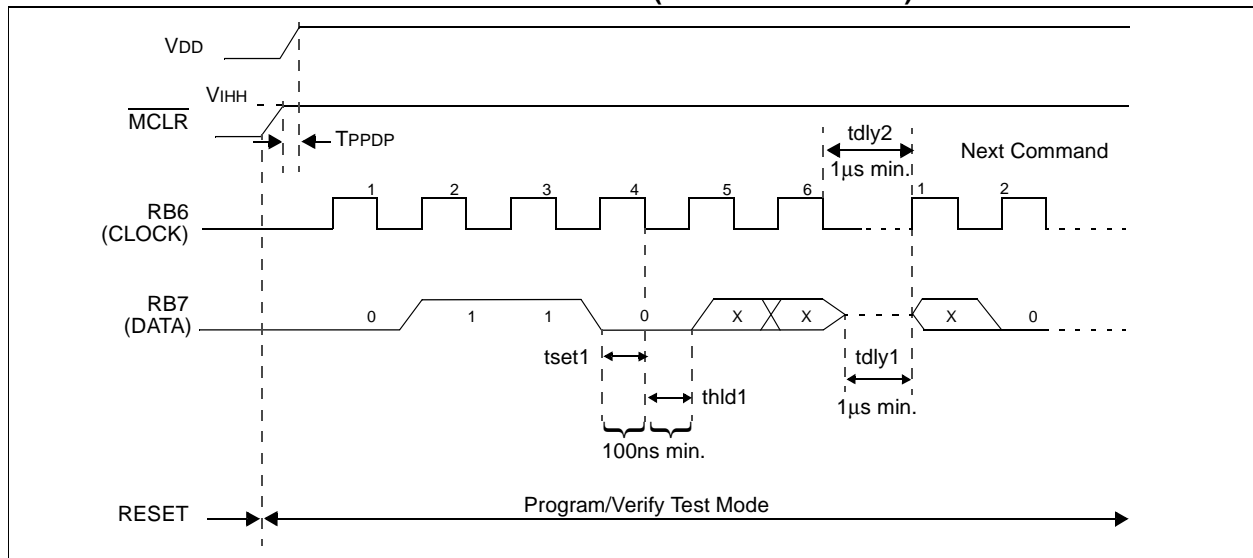

WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office

Microchip Technology Inc.
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-786-7200 Fax: 480-786-7277
Technical Support: 480-786-7627
Web Address: <http://www.microchip.com>

Atlanta

Microchip Technology Inc.
500 Sugar Mill Road, Suite 200B
Atlanta, GA 30350
Tel: 770-640-0034 Fax: 770-640-0307

Boston

Microchip Technology Inc.
2 LAN Drive, Suite 120
Westford, MA 01886
Tel: 508-480-9990 Fax: 508-480-8575

Chicago

Microchip Technology Inc.
333 Pierce Road, Suite 180
Itasca, IL 60143
Tel: 630-285-0071 Fax: 630-285-0075

Dallas

Microchip Technology Inc.
4570 Westgrove Drive, Suite 160
Addison, TX 75001
Tel: 972-818-7423 Fax: 972-818-2924

Dayton

Microchip Technology Inc.
Two Prestige Place, Suite 150
Miamisburg, OH 45342
Tel: 937-291-1654 Fax: 937-291-9175

Detroit

Microchip Technology Inc.
Tri-Atria Office Building
32255 Northwestern Highway, Suite 190
Farmington Hills, MI 48334
Tel: 248-538-2250 Fax: 248-538-2260

Los Angeles

Microchip Technology Inc.
18201 Von Karman, Suite 1090
Irvine, CA 92612
Tel: 949-263-1888 Fax: 949-263-1338

New York

Microchip Technology Inc.
150 Motor Parkway, Suite 202
Hauppauge, NY 11788
Tel: 631-273-5305 Fax: 631-273-5335

San Jose

Microchip Technology Inc.
2107 North First Street, Suite 590
San Jose, CA 95131
Tel: 408-436-7950 Fax: 408-436-7955

AMERICAS (continued)

Toronto

Microchip Technology Inc.
5925 Airport Road, Suite 200
Mississauga, Ontario L4V 1W1, Canada
Tel: 905-405-6279 Fax: 905-405-6253

ASIA/PACIFIC

China - Beijing

Microchip Technology, Beijing
Unit 915, 6 Chaoyangmen Bei Dajie
Dong Erhuan Road, Dongcheng District
New China Hong Kong Manhattan Building
Beijing, 100027, P.R.C.
Tel: 86-10-85282100 Fax: 86-10-85282104

China - Shanghai

Microchip Technology
Unit B701, Far East International Plaza,
No. 317, Xianxia Road
Shanghai, 200051, P.R.C.
Tel: 86-21-6275-5700 Fax: 86-21-6275-5060

Hong Kong

Microchip Asia Pacific
Unit 2101, Tower 2
Metroplaza
223 Hing Fong Road
Kwai Fong, N.T., Hong Kong
Tel: 852-2-401-1200 Fax: 852-2-401-3431

India

Microchip Technology Inc.
India Liaison Office
Divyasree Chambers
I Floor, Wing A (A3/A4)
No. 11, O'Shaugnessey Road
Bangalore, 560 027, India
Tel: 91-80-207-2165 Fax: 91-80-207-2171

Japan

Microchip Technology Intl. Inc.
Benex S-1 6F
3-18-20, Shinyokohama
Kohoku-Ku, Yokohama-shi
Kanagawa, 222-0033, Japan
Tel: 81-45-471-6166 Fax: 81-45-471-6122

Korea

Microchip Technology Korea
168-1, Youngbo Bldg. 3 Floor
Samsung-Dong, Kangnam-Ku
Seoul, Korea
Tel: 82-2-554-7200 Fax: 82-2-558-5934

ASIA/PACIFIC (continued)

Singapore

Microchip Technology Singapore Pte Ltd.
200 Middle Road
#07-02 Prime Centre
Singapore, 188980
Tel: 65-334-8870 Fax: 65-334-8850

Taiwan

Microchip Technology Taiwan
11F-3, No. 207
Tung Hua North Road
Taipei, 105, Taiwan
Tel: 886-2-2717-7175 Fax: 886-2-2545-0139

EUROPE

Denmark

Microchip Technology Denmark ApS
Regus Business Centre
Lautrup høj 1-3
Ballerup DK-2750 Denmark
Tel: 45 4420 9895 Fax: 45 4420 9910

France

Arizona Microchip Technology SARL
Parc d'Activite du Moulin de Massy
43 Rue du Saule Trapu
Batiment A - ler Etage
91300 Massy, France
Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany

Arizona Microchip Technology GmbH
Gustav-Heinemann-Ring 125
D-81739 München, Germany
Tel: 49-89-627-144 0 Fax: 49-89-627-144-44


Italy

Arizona Microchip Technology SRL
Centro Direzionale Colleoni
Palazzo Taurus 1 V. Le Colleoni 1
20041 Agrate Brianza
Milan, Italy
Tel: 39-039-65791-1 Fax: 39-039-6899883

United Kingdom

Arizona Microchip Technology Ltd.
505 Eskdale Road
Winnersh Triangle
Wokingham
Berkshire, England RG41 5TU
Tel: 44 118 921 5858 Fax: 44-118 921-5835

8/01/00

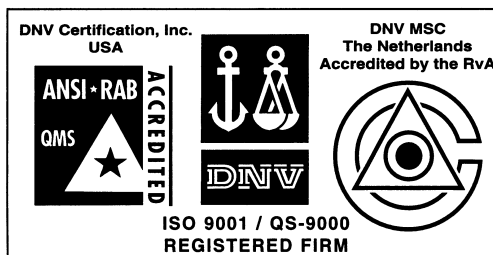

Microchip received QS-9000 quality system certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona in July 1999. The Company's quality system processes and procedures are QS-9000 compliant for its PICmicro® 8-bit MCUs, KEELoc® code hopping devices, Serial EEPROMs and microperipheral products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001 certified.

All rights reserved. © 2000 Microchip Technology Incorporated. Printed in the USA. 8/00 Printed on recycled paper.

Information contained in this publication regarding device applications and the like is intended through suggestion only and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. No representation or warranty is given and no liability is assumed by Microchip Technology Incorporated with respect to the accuracy or use of such information, or infringement of patents or other intellectual property rights arising from such use or otherwise. Use of Microchip's products as critical components in life support systems is not authorized except with express written approval by Microchip. No licenses are conveyed, implicitly or otherwise, except as maybe explicitly expressed herein, under any intellectual property rights. The Microchip logo and name are registered trademarks of Microchip Technology Inc. in the U.S.A. and other countries. All rights reserved. All other trademarks mentioned herein are the property of their respective companies.