

JUMO digiLine T

Intelligent electronics with digital interface or analog output for temperature sensors



Operating Manual



20270530T90Z001K000

V2.00/EN/00648548

1	Safety information	5
1.1	Safety signs	5
1.1.1	Warning symbols	5
1.1.2	Note symbols	5
1.2	Intended use	6
1.3	Qualification of personnel	6
2	Acceptance of goods, storage, and transport	7
2.1	Checking the delivery	7
2.2	Important information about storage and transport	7
2.3	Returning goods	7
2.3.1	Accompanying letter for repair	7
2.3.2	Decontamination Statement	7
2.3.3	Protection against electrostatic discharge	8
2.4	Disposal	8
3	Device Description	9
3.1	Introduction	9
3.2	Block diagram	10
3.3	Device setup	11
3.4	Description	12
4	Identifying the device version	13
4.1	Order details	13
4.2	Accessories	13
5	Mounting	15
5.1	Mounting site and climatic conditions	15
5.2	Dimensions	15
5.3	Mounting	16
6	Electrical connection	19
6.1	Installation notes	19
6.2	Connection diagram	19
6.2.1	Galvanic isolation	20
6.2.2	Connection examples	21
7	Startup	27
7.1	Functional test	28

8	Troubleshooting in the event of faults	29
9	Sensor information	31
9.1	General Information	31
9.2	Sensor details	31
9.3	Process values	32
9.4	Operating data	33
10	Configuration	35
10.1	General Information	35
10.2	Important information	35
10.3	Input	35
10.3.1	Temperature input	35
10.4	Analog output	35
10.5	Sensor.	36
10.6	Measuring point info	36
10.7	Digital interface	36
11	Operation, maintenance and care	39
11.1	Sensor replacement	39
11.1.1	Sensor replacement while the digiLine mode is active	39
11.1.2	Sensor replacement while the Modbus mode is active	40
12	Technical data	41
12.1	Digital interface	41
12.2	pH/ORP/T inputs	41
12.3	Analog output of 4 to 20 mA (only with M12 plug connector, 8-pole)	42
12.4	Digital input (only with M12 plug connector, 8-pole)	42
12.5	Electrical data	42
12.6	Case	42

1.1 Safety signs

1.1.1 Warning symbols



DANGER!

This symbol indicates that **personal injury caused by electrical shock** may occur if the respective precautionary measures are not carried out.



WARNING!

This symbol in connection with the signal word indicates that **personal injury** may occur if the respective precautionary measures are not carried out.



CAUTION!

This symbol in connection with the signal word indicates that **material damage or data loss** will occur if the respective precautionary measures are not taken.



CAUTION!

This symbol indicates that **components could be destroyed** by electrostatic discharge (ESD = Electro Static Discharge) if the respective cautionary measures are not taken.

Only use the ESD packages intended for this purpose to return device inserts, assembly groups, or assembly components.



READ THE DOCUMENTATION!

This symbol, which is attached to the device, indicates that the associated **documentation for the device** must be **observed**. This is necessary to identify the nature of the potential hazard, and to take measures to prevent it.

1.1.2 Note symbols



NOTE!

This symbol refers to **important information** about the product, its handling, or additional use.



REFERENCE!

This symbol refers to **additional information** in other sections, chapters, or other manuals.



FURTHER INFORMATION!

This symbol is used in tables and indicates that **further information** is provided after the table.



DISPOSAL!

At the end of its service life, the device and any batteries present do not belong in the trash! Please ensure that they are **disposed of** properly and in an **environmentally friendly** manner.

1 Safety information

1.2 Intended use

The device described in these instructions is used to measure analytical process variables in liquids in an industrial environment as specified in the technical data. Other uses beyond those defined are not viewed as intended uses.

The device is built according to the relevant standards and directives as well as to the applicable safety regulations. Nevertheless, improper use, incorrect installation or configuration can result in erroneous measurements. Depending on the plant, this may cause unwanted control actions (e. g. overmetering) in the plant. Personal injury and property damage must be prevented through appropriate safety measures and safety devices provided by the customer.

To avoid danger, only use the device:

- for the intended use
- when in good order and condition
- In compliance with these instructions



WARNING!

Error during installation, mounting, or configuration of JUMO sensors with digiLine electronics can disrupt proper execution of the downstream process or cause damage.

- ▶ For this reason, it is always necessary to provide safety devices that are independent of the device and to allow settings to be made only by technical personnel.
-



CAUTION!

JUMO sensors with digiLine electronics must be calibrated correctly to prevent measurement errors.

1.3 Qualification of personnel

This manual contains the necessary information for the intended use of the device described therein.

It is meant for technically qualified individuals who have been specially trained or have the appropriate know-how in the field of automation technology (measurement and control instrumentation).

Understanding and technically correct observance of the safety instructions and warnings contained in this manual are prerequisites for safe mounting, installation, and startup as well as safety during operation of the described device. Only qualified individuals have the required technical knowledge to interpret and put into practice the safety instructions and warnings used in this manual in any given situation.

2 Acceptance of goods, storage, and transport

2.1 Checking the delivery

- On delivery, ensure that the packaging and its contents are undamaged.
- Check the delivery for completeness against the packing slip and order confirmation.

Proceed as follows if external transport damage is visible:

- Do not accept the delivery or only conditionally.
- Note the extent of damage on the transport documents or on the delivery note of the freight forwarder.
- File a complaint.

2.2 Important information about storage and transport

- Store the device in a dry, clean environment. Observe the admissible ambient conditions (see "Technical data" chapter 12.6 "Case", page 42).
- Protect the device from shock during transport. The original packaging offers optimal protection.

2.3 Returning goods

If repairs are needed, return the device in clean condition and in its entirety.

Use the original packaging when returning the device.

2.3.1 Accompanying letter for repair

Please include the completed accompanying letter for repair when returning goods. Do not forget to state the following:

- Description of the application
- Description of the error that has occurred

The accompanying letter for repair is linked to www.jumo.de on the Internet under the heading Service & Support as follows:

Product Service > Repair Service > Returning Electrodes

2.3.2 Decontamination Statement

As a certified company and in compliance with legal requirements, JUMO is required to handle all incoming products that come into contact with liquids in compliance with statutory regulations.

Before returning a device for repair or calibration:

- Remove all adhering residues of the substance measured.
Pay special attention to grooves for seals and cracks where residues of the material being measured may adhere. This is especially important when the material being measured is a hazardous substance.

In addition to the accompanying repair letter, include the following in the return shipment:

- The completed and signed "Declaration Statement". Only then can the returned device be accepted.
The decontamination statement can be found on the last page of the above-mentioned accompanying repair letter.
- Special handling instructions, if these are necessary, e.g. a safety data sheet.

2 Acceptance of goods, storage, and transport

2.3.3 Protection against electrostatic discharge

(ESD = electro static discharge)

To prevent damage from ESD, electronic assemblies, or components with a high internal resistance must be handled, packaged, and stored in an environment that protects against ESD. Measures that protect against electrostatic discharge and electric fields are described in DIN EN 61 340-5-1 and DIN EN 61 340-5-2 "Electrostatics – Part 5-2 – Protection of electronic devices from electrostatic phenomena".

If you are returning electronic assemblies or components for repair:

- Pack sensitive components only in an environment providing protection against ESD. Workspaces such as this divert electrostatic charges to ground in a controlled manner and prevent static charges due to friction.
- Use only packaging intended specifically for ESD-sensitive assemblies/components. These must consist of conductive plastics.

Keep in mind that the manufacturer assumes no liability for damage caused by ESD.



CAUTION!

Electrostatic charges occur in non-ESD-protected environments.

Electrostatic discharges can damage modules or components.

- ▶ For transport purposes, use only the ESD packaging provided.
-

2.4 Disposal

Disposing of the device

DISPOSAL!

Devices and/or replaced parts should not be placed in the refuse bin at the end of their service life as they consist of materials that can be recycled by specialist recycling plants.

Dispose of the device and the packaging material in a proper and environmentally friendly manner.

For this purpose, observe the country-specific laws and regulations for waste treatment and disposal.



Disposing of the packaging material

The entire packaging material (cardboard packaging, inserts, plastic film, and plastic bags) is fully recyclable.

3.1 Introduction

General information

JUMO digiLine electronics permit transmission of the measured value from the sensor to the measuring or automation device via digital bus communication or as an analog signal. The digital device version has a 5-pole, the analog version an 8-pole M12 plug connector. The 5-pole digiLine electronics supports plug & play operation on the JUMO AQUIS touch S/P or in Modbus operation on the JUMO mTRON T. Several sensors continuously transmit their measurement data over the bus to a master. As an alternative, the 8-pole device version can also be used. It is designed as a 2-wire transmitter with analog output and transmits measured values in the form of a scalable standard signal (4 to 20 mA). The 8-pole device version features a digital input that can be configured as a hold signal for the analog output value and the measurement input.

Mounting and connecting

The JUMO digiLine electronics is available with N-connection for the JUMO compensation thermometer type 201085 and is simply attached to the sensor and screwed tight. If it is necessary to replace the sensor because of a defect or wear, the transmitter can be unscrewed and used again on the new sensor. The threaded connection between the sensor and transmitter guarantees protection type IP66 and IP67 to prevent malfunctions caused by ingress of moisture. The electrical connection is established easily and quickly by attaching (plug in and screw on) a preassembled bus cable (available from JUMO).


Configuration, parameterization and calibration

Normally, the 5-pole JUMO digiLine electronics are configured and parameterized via operation on the JUMO AQUIS touch S/P. The 8-pole device version is configured and parameterized via the JUMO DSM software. With the USB-RS485 interface (part no.: 00638346), the electronics must be connected to a PC.


3 Device Description

3.2 Block diagram

5-pole version

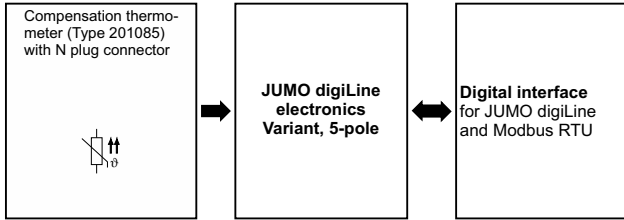


8-pole version

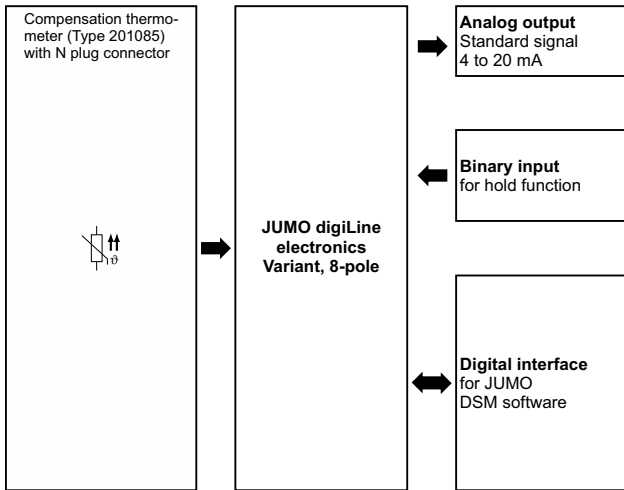

3.3 Device setup

JUMO digiLine electronics with N connection

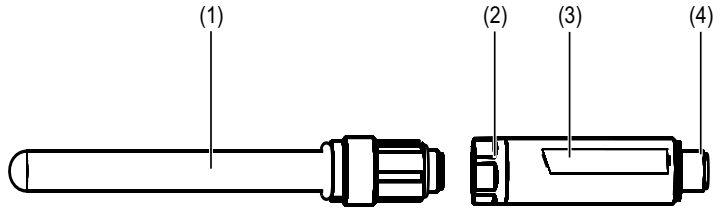

- (1) Sensor with N-connection
- (2) N-connection of digiLine electronics
- (3) JUMO digiLine electronics
- (4) M12 plug connector, 5 or 8-pole (see order details)

3 Device Description

3.4 Description

Digital interface

The digital interface is the heart of the JUMO digiLine electronics. This interface handles communication over the bus by means of the JUMO digiLine protocol. The plug & play support for the JUMO digiLine electronics simplifies sensor startup considerably. After connecting to the JUMO AQUIS touch S/P, the JUMO digiLine electronics are configured automatically and ready for use immediately.

As an alternative to JUMO digiLine operation with plug & play support on the JUMO AQUIS touch S/P, Modbus operation (Modbus-RTU) on the JUMO mTRON T with access to the measured data is also possible. The JUMO digiLine electronics are then configured via the JUMO DSM software.

analog output

The device version with an 8-pole M12 plug connector has an analog output for operation as a 2-wire transmitter. The analog output provides the measured temperature value as a freely scalable standard signal of 4 to 20 mA. The RS485 interface serves to connect to the PC in order to configure the 8-pole JUMO digiLine electronics using the JUMO DSM software.

Digital input

The digital input (available only in the variant with 8-pole M12 plug connector) can be configured for the following functions:

- Activation of hold function for the analog output
- Activation of hold function for the measuring input signal

Sensor information

Numerous data such as type information, operating data, information on measuring point identification etc. are stored in the JUMO digiLine electronics. This information allows clear identification and optimal management of each sensor. All these data can be viewed on the JUMO AQUIS touch S/P or using the JUMO DSM software.

JUMO Digital Sensor Management Software for the PC

The JUMO DSM software (DSM stands for **D**igital **S**ensor **M**anagement) can be used to manage, calibrate, and test JUMO digiLine electronics on the PC. It also serves as a configuration tool for JUMO digiLine electronics in the 8-pole device version (2-wire transmitter with analog output). The connection to the PC is achieved via a USB-RS485 interface (part no.: 00655787). The JUMO DSM software adds data from the memory of JUMO digiLine electronics to its sensor database. The sensor database holds calibration logbook entries, histories about replaced sensors and configuration changes to the JUMO digiLine electronics. If the JUMO digiLine electronics are to be mounted to a new sensor, data for the new sensor can be reset via the JUMO DSM software and the information from the old sensor archived on the PC.

4 Identifying the device version

4.1 Order details

(1) Basic type	
202705/10	JUMO digiLine pH value, temperature
202705/20	JUMO digiLine redox
202705/30	JUMO digiLine temperature
(2) Electrical connection input	
86	Cable socket N
90	VP socket
(3) Output	
530	RS-485 Modbus
888	Actual value output, configurable

	(1)	-	(2)	-	(3)
Order code					
Order example	202705/10		90		530

4.2 Accessories

Accessories

Basic type	Part no.
JUMO M12 digiLine master connecting cable ^a 5-pole, A-coded, 10 m long	00638341
JUMO M12-digiLine master connecting cable ^a 5-pole, A-coded 5 m long	00638337
JUMO M12-digiLine master connecting cable ^a 5-pole, A-coded 1.5 m long	00638333
JUMO M12 connecting cable 5-pole 15 m	00638324
JUMO M12 connecting cable 5-pole 10 m	00638322
JUMO M12 connecting cable 5-pole 5 m	00638315
JUMO M12 connecting cable 5-pole 1.5 m	00638313
JUMO M12 connecting cable 5-pole 0.5 m	00638312
JUMO Y-splitter 5-pole	00638327
JUMO digiLine hub	00646871
JUMO power supply unit for JUMO digiLine hub	00661597
JUMO M12 terminating connector	00461591
JUMO M12 adapter cable 8-pole socket to 5-pole connector, A-coded	00638325
M12 cable socket, 8-pole	00444312
M12 cable socket, 8-pole, shielded	00486503
digiLine USB-RS485 interface	00638346
JUMO DSM software (D igital S ensor M anagement)	00655787

^a For connection to masters with screw or spring-cage terminals; prepare one end of the cable with a 5-pole M12 plug and the other end with ferrules.

4 Identifying the device version


5.1 Mounting site and climatic conditions

The installation site should be, as far as possible, free from vibration. Electromagnetic fields, caused by equipment such as motors and transformers, should be avoided. The ambient temperature at the mounting site and the relative humidity must correspond to the technical data. Aggressive gases and vapors have a negative effect on the operating life of the device.

5.2 Dimensions

The following dimensioned drawings give the dimensions of sensors with JUMO digiLine electronics. The insertion length varies and depends on the type of sensor to which the digiLine electronics are connected.

Dimensions of sensor with JUMO digiLine electronics with N-connection

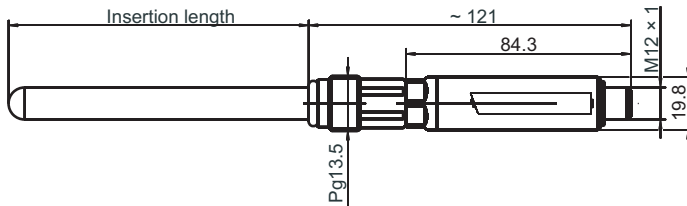


5 Mounting

5.3 Mounting


JUMO digiLine electronics are simply attached to the N or Variopin plug connector of a JUMO sensor and screwed to the sensor using the union nut of the digiLine electronics. The sensor with attached digiLine electronics is mounted on the fitting provided for this purpose. For correct mounting of the sensor, refer to the installation instructions for your fitting. Tighten the union nuts on the M12 cable sockets of the connecting table to a maximum torque of 0.5 Nm.

Installation examples in the flow fittings

N-connection

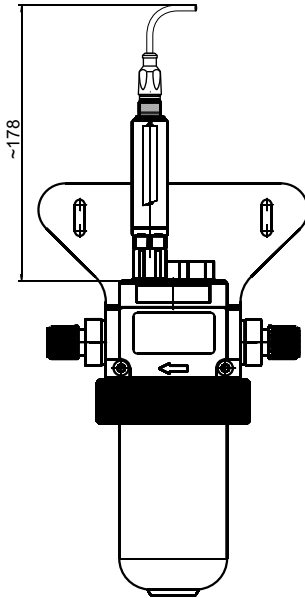

Variopin

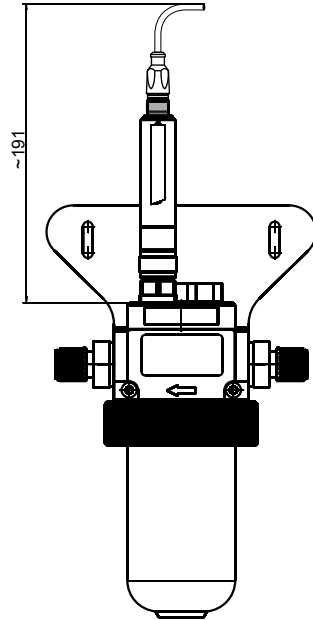

5 Mounting

6.1 Installation notes



CAUTION!

Disconnecting the digiLine bus line and/or removing the terminating resistors and terminating connectors during operation will disrupt the digiLine bus

Possible consequences include bus problems with loss of the sensor values on the bus involved and damage to the associated serial interface on the master.

- ▶ Before changing the bus cable and disconnecting the bus termination, the master should be switched off.

6.2 Connection diagram

General information

The line connections of JUMO sensors with digiLine electronics are, with few exceptions, made using preassembled bus connecting cables. The union nuts on the cable connecting sockets are tightened to a maximum torque of 0.5 Nm. The pin assignment shown here is intended primarily to provide an overview and serve as an aid when troubleshooting.

Situations where wiring activities are needed include:



- The connection to the serial interface of a JUMO AQUIS touch S/P or JUMO mTRON T with the JUMO M12-digiLine master connecting cable
⇒ chapter 4.2 "Accessories", page 13
- Connection of an 8-pole JUMO digiLine electronics as a 2-wire transmitter; in this case, the customer must provide an 8-pole, A-coded M12 socket with a piece of cable. ⇒ "Variant with 8-pole M12 plug connector, A-coded", page 20

Variant with 5-pole M12 plug connector, A-coded

Pin	Potential	Symbol
1	+5 V (supply to digiLine electronics)	
2	not connected	
3	GND	
4	RS485 B (RxD/TxD-)	
5	RS485 A (RxD/TxD+)	
<p>The connection to the serial interface of a master with screw or spring-cage terminals is made with the aid of the JUMO digiLine device connection cable (see Accessories)</p>		<p>Socket</p>

6 Electrical connection


Variant with 8-pole M12 plug connector, A-coded

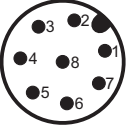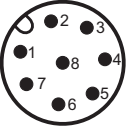Pin	Potential	Plug connector symbol
1	+5 V (supplied only when connected to PC) ^a	<p>Connector</p>  <p>Socket</p> 
2	Not used	
3	GND	
4	RS485 B (RxD/TxD-)	
5	RS485 A (RxD/TxD+)	
6	Digital input for potential-free contact to GND	
7	Analog output of 4 to 20 mA ⁺ b	
8	Analog output of 4 to 20 mA ⁻ b	
<p>For connection as a 2-wire transmitter with a standard signal (4 to 20 mA), a connecting cable with 8-pole M12 cable socket must be provided by the customer.</p>		

^a The supply of DC 5 V is allowed only when connected to a PC for configuring with the JUMO DSM software, and is provided from the USB-RS485 interface.

^b In the 2-wire transmitter mode, the transmitter is supplied solely via the current loop (pins 7 and 8). Refer to the appropriate connection examples. The voltage supply for the current loop must be galvanically isolated.


6.2.1 Galvanic isolation

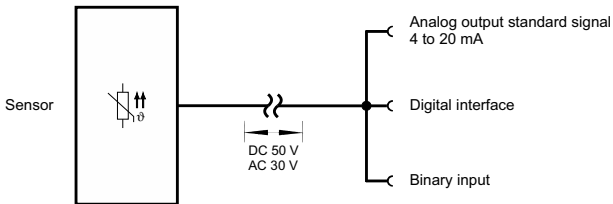

6.2.2 Connection examples

JUMO digiLine mode

The installation example of a neutralization system is displayed. 3 sensors (pH, ORP, and temperature) with JUMO digiLine electronics are connected to a JUMO AQUIS touch S. JUMO Y-splitters are used to attach the connections on the sensors to the JUMO digiLine electronics. Appropriate fittings are available from JUMO for mounting the sensors.

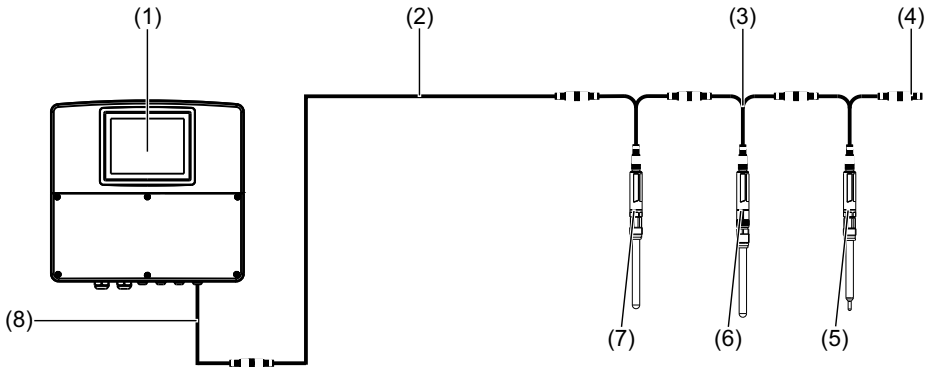


- (1) JUMO AQUIS touch S with RS485 bus terminator in the device
- (2) JUMO M12 connecting cable, 5-pole and A-coded;
the required total line length between master and sensors can be achieved by combining several M12 connecting cables. When planning the line lengths, heed the information regarding cable planning in the Annex of the operating manual for the JUMO AQUIS touch S/P.
- (3) JUMO Y-splitter, 5-pole with 2× M12 cable sockets and 1× M12 connector, each of which is A-coded
- (4) JUMO M12 terminating connector, 5-pole for bus termination
- (5) JUMO compensation thermometer with 5-pole JUMO digiLine electronics
Order example: Compensation thermometer 201085/89-1005-21-120 with JUMO digiLine-T: 202705/30/86-530
- (6) JUMO pH sensor with 5-pole JUMO digiLine electronics
Order example: pH sensor 201021/10/12-04-22-120/000 with JUMO digiLine pH: 202705/10/86-530
- (7) JUMO redox sensor with 5-pole JUMO digiLine electronics
Order example: redox sensor 201026/10/22-04-22-120 with JUMO digiLine-ORP: 202705/20/86-530
- (8) JUMO digiLine master connecting cable with exposed wire ends at one end for connection to devices with screw or spring-cage terminals (see Accessories); connection is described in the operating manual of the JUMO AQUIS touch S/P.

6 Electrical connection

Modbus mode


The figure shows the connection of 2 sensors with JUMO digiLine electronics with 5-pole M12 plug connection on a JUMO mTRON T as the Modbus master. Up to 31 digital sensors per RS485 interface can be integrated. Optionally, a JUMO mTRON T central processing unit can be equipped with up to 2 RS485 interfaces (see order data for JUMO mTRON T).

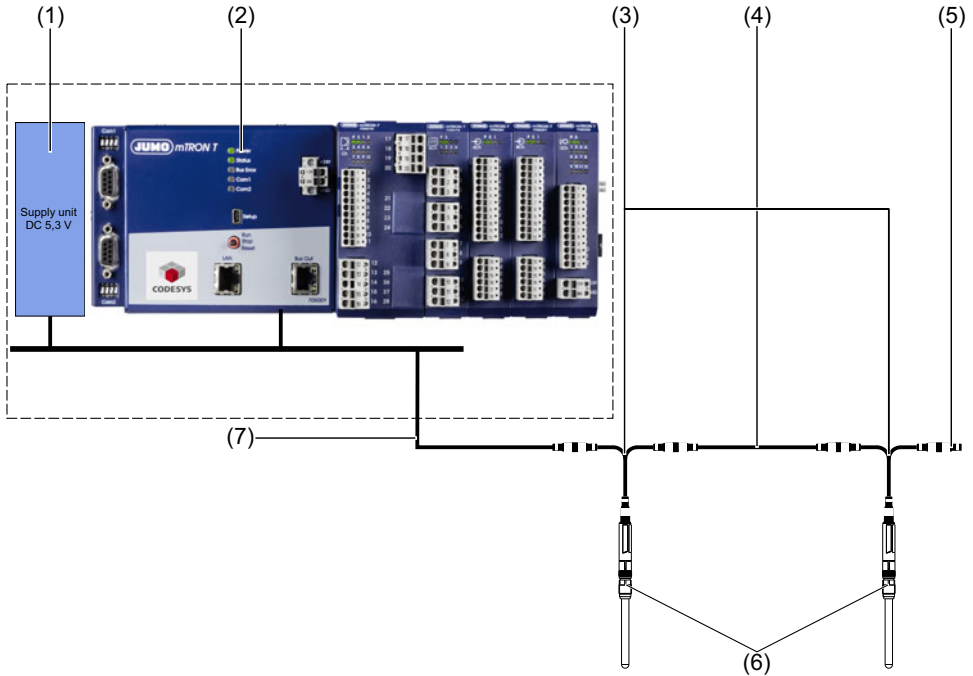

- (1) Stabilized power supply unit with DC 5.3 V output for feeding the digital sensors
- (2) JUMO mTRON T central processing unit with activated PLC function and RS422/485 Modbus RTU (see order data for JUMO mTRON T)
- (3) JUMO Y-splitter, 5-pole with 2× M12 cable sockets and 1× M12 connector, each of which is A-coded
- (4) JUMO M12 connecting cable, 5-pole and A-coded
- (5) JUMO M12 terminating connector, 5-pole for bus termination
- (6) JUMO sensors with 5-pole JUMO digiLine electronics
- (7) JUMO digiLine master connecting cable with open wire ends at one end for connection to devices with screw or spring-cage terminals (see Accessories); for connection to the Modbus system, refer to the wiring diagram in the following.

6 Electrical connection


Wiring diagram for Modbus mode

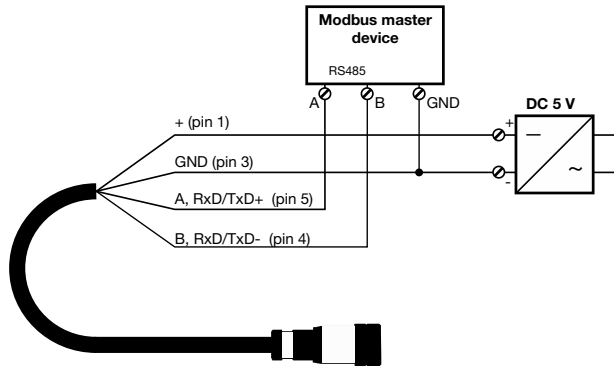

6 Electrical connection

8-pole version for operation with 2-wire transmitter (standard signal 4 to 20 mA)


The figure shows the connection of 1 sensor with JUMO digiLine electronics with 8-pole M12 plug connector on a measuring or automation device as 2-wire transmitter with standard signal of 4 to 20 mA. In addition a potential-free contact, in the receiving automation device, which controls activation of the hold function or selection of the function of the analog output via the digital input on the JUMO digiLine electronics. In this way, it is possible to toggle the measured value, e. g. with a PLC. The 8-pole device version is intended primarily for use as a 2-wire transmitter with standard signal of 4 to 20 mA.

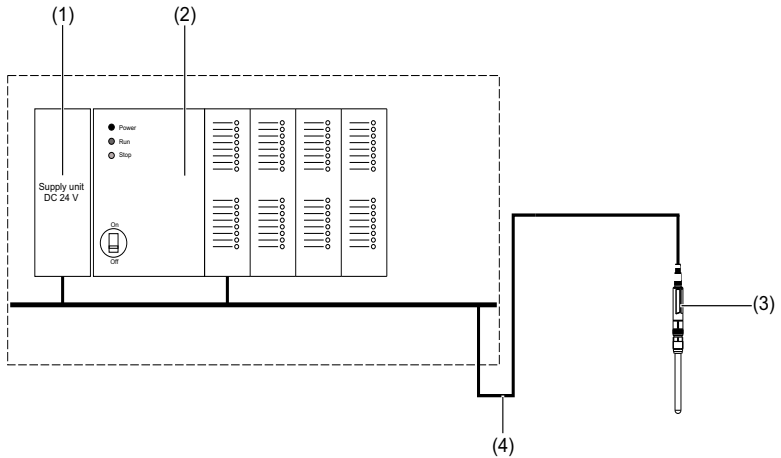

- (1) Stabilized power supply unit with DC 24 V output to supply the automation system and the current loop (standard signal of 4 to 20 mA) and the JUMO digiLine electronics
- (2) Measuring or automation device with analog input for the standard signal of 4 to 20 mA and control contact for toggling the measured value in the JUMO digiLine electronics of the sensor; the current loop for the standard signal must be supplied with an output voltage of DC 12 to 30 V by a stabilized power supply unit.
- (3) JUMO sensor with 8-pole JUMO digiLine electronics
- (4) Customer-provided connecting cable with 8-pole M12 cable socket for connecting to the JUMO digiLine electronics; for the connector assignment, refer to the wiring diagram in the following.

6 Electrical connection

Wiring diagram for 2-wire transmitter mode

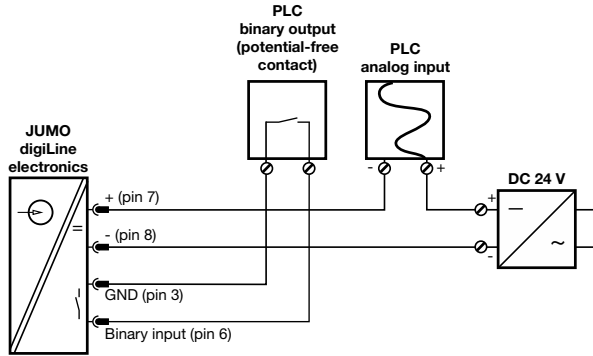

6 Electrical connection

General information

Startup of the JUMO sensor with digiLine electronics in the 3 possible versions is described below:

- Sensor with digiLine electronics on a JUMO AQUIS touch S/P
- Sensor with digiLine electronics on a Modbus master
- Sensor with digiLine electronics as 2-wire transmitter for a standard signal of 4 to 20 mA



WARNING!

Error during installation, mounting, or configuration of sensors with digiLine electronics can disrupt proper execution of the downstream process or cause damage.

- ▶ For this reason, it is always necessary to provide safety devices that are independent of the device and to allow settings to be made only by technical personnel.

Startup on a JUMO AQUIS touch S/P

The startup of JUMO sensors with digiLine electronics on a JUMO AQUIS touch S/P is largely automatic thanks to plug & play support. Newly connected digiLine electronics, however, must be assigned a device function by the user. The startup procedure consists essentially of the following stations:

- **Sensor Scan:** The first step involves searching for newly connected sensors with digiLine electronics. This is initiated either by a device restart or manual starting of the sensor scan by the user.
- **Sensor Link:** Known sensors with digiLine electronics are then assigned to the desired input functions of the JUMO AQUIS touch S/P by the user.
Status after a successful Sensor Link step: NotInstalled
Status after a failed Sensor Link step: NoLink
- **Sensor Install:** The JUMO AQUIS touch S/P synchronizes configuration data with the digiLine electronics and puts them into service.
Status after a successful Sensor Install step: LinkActive
- **Sensor Transfer:** The digiLine electronics have been set up successfully and put into service

The exact procedure for performing startup is described in detail in the operating manual and installation instructions for the JUMO AQUIS touch S/P.

7 Startup

Startup with a JUMO mTRON T as the Modbus master

A JUMO mTRON T has no plug & play mechanisms. The settings of the digital interface to the digiLine electronics must be made prior to connection with the JUMO DSM software in accordance with the interface settings of the Modbus master.

- **Device address:** The user assigns to the digiLine electronics a device address that identifies it uniquely in the Modbus system. Duplicate device addresses are not allowed in a Modbus system; otherwise, malfunctions result.
- **Baud rate:** The baud rate must match that of the Modbus master.
- **Data Format:** The data format (data bits - stop bits - parity) must match the settings on the Modbus master.
- **Minimum Response Time:** The minimum response time provides an intentional response delay for the digiLine electronics in order to solve timing problems in the bus communication with slow Modbus masters. This setting can be changed if necessary.

The JUMO digiLine electronics are then configured on the PC via the JUMO DSM software. It is also possible, with write access to configuration parameters in the Modbus address table, to change the configuration parameters of the digiLine electronics. A detailed description of how to use the Modbus protocol can be found in the interface description.

- ⇒ JUMO DSM software operating manual
- ⇒ Modbus interface description B 202705.2.0

When correctly wired and configured, the JUMO digiLine electronics start operating immediately after the measuring or automation device to which it was connected is put into service.

Startup as a 2-wire transmitter

When correctly wired and configured, the JUMO digiLine electronics start operating immediately after the measuring or automation device is put into service and deliver the measured value as an analog standard signal (4 to 20 mA). Configuration takes place on the PC with the JUMO DSM software.

- ⇒ JUMO DSM software operating manual

7.1 Functional test

Functional check on the PC

The JUMO DSM software enables a sensor with JUMO digiLine electronics to be checked for proper operation. The software provides the ability to display current measured values on a PC.

- ⇒ JUMO DSM software operating manual

Functional check on a JUMO AQUIS touch S/P

On a JUMO AQUIS touch S/P, a JUMO sensor with digiLine electronics is displayed as "linked" as soon as it has been recognized correctly and set up. Further information can be found in the operating manual and installation instructions of the JUMO AQUIS touch S/P.

8 Troubleshooting in the event of faults

Faults during operation in the JUMO digiLine or Modbus mode

In the event of bus faults in JUMO digiLine or Modbus systems, check the following items:

- All plug-in and terminal connections in the bus must be made correctly and be tight. As long as bus communication in general is not disrupted (e.g. as the result of disconnected or short-circuited bus cables or missing terminating resistors), JUMO digiLine electronics which have been disconnected from the bus can be identified within the "Reference table" for the device software of the the JUMO AQUIS touch S/P. Further information in this regard can be found in the operating manual of the respective device.
- The ends of bus cables with line topology must have terminating resistors or terminating connectors (part no. 00461591). Stub lines do not require termination.
- The bus must be supplied correctly with DC 5 V (cf. chapter 6.2 "Connection diagram", page 19).

Faults during operation in the 2-wire transmitter mode

If faults occur during operation of 8-pole JUMO digiLine electronics a 2-wire transmitter, check the following items:

- All plug-in and terminal connections must be made correctly and be tight.
- The maximum load resistance for the current loop must not be exceeded.
⇒ chapter 12.3 "Analog output of 4 to 20 mA (only with M12 plug connector, 8-pole)", page 42
- The digiLine electronics must be supplied correctly with DC 12 TO 30 V (cf. chapter 6.2 "Connection diagram", page 19).

8 Troubleshooting in the event of faults

9.1 General Information

The JUMO digiLine electronics saves sensor information. The information saved includes sensor type, manufacturer, measuring point and operating conditions. These data can be viewed on the JUMO AQUIS touch S/P or using the JUMO DSM software.

9.2 Sensor details

The sensor details provide an overview of sensor characteristics and settings. No data can be edited here.

Data point	Explanation	
Manufacturer	Article information on the sensor mounted on the digiLine electronics is entered in these fields by the manufacturer during production. The data are displayed in the JUMO DSM software. In the Modbus mode, these data can also be retrieved for viewing only. The user can refer to these data when reordering.	
Customer order number		
VK job number		
Part number		
Customer type		
Order code		
Customer item number		
Customer number		
Serial number		
Hardware address		
Date of manufacture		
Sensor type		These fields hold data on the sensor type currently in use. The type of sensor being used is selected in the configuration. The data are used for startup in the digiLine mode. They are used by the JUMO AQUIS touch S/P for identifying and "linking" JUMO sensors with digiLine electronics. In the Modbus mode, these data can also be retrieved for viewing only. Here, they serve only to provide information.
Sensor subtype		
Active pH component		
Diaphragm		
Connection		
Insertion length		
Measuring range start		
Measuring range end		
Pressure		
Minimum temperature		
Maximum temperature		
Approval		
TAG number	The "TAG number" identifies the measuring point with a unique ID assigned by the user. With the aid of the "TAG number", digiLine electronics can be assigned to a designated digital sensor input of a specific digiLine master. When "TAG check" is activated in the digiLine master, matching of the sensor's "TAG number" and the digital sensor input is checked by the JUMO AQUIS touch S/P. If there is no match, the digiLine electronics are not linked to the master. The "TAG number" of the digiLine electronics can be edited only with the JUMO DSM software.	
Description	Text field for a description of the measuring point. The description can be edited only with the JUMO DSM software.	
Sensor origin	The "Sensor origin" is assigned to the transmitter by the digiLine master to which the digiLine electronics were last connected and provides information about the device on which the digiLine electronics were last connected.	

9 Sensor information

9.3 Process values

The operating data includes signals such as alarms, measured values and sensor monitoring data. The status of sensor operation can be viewed with the JUMO DSM software or on the JUMO AQUIS touch S/P.

Data point	Explanation
Temperature	Current measured value from the integrated temperature sensor
Resistance value	
Temperature alarm signal	In the event of a fault during the temperature measurement (e. g. as the result of a measuring range violation or compensation error), this alarm is triggered and generates a corresponding signal on the JUMO AQUIS touch S/P. It can also be queried by a Modbus master (JUMO mTRON T).

9.4 Operating data

Data point	Explanation
Operating hours counter	The operating hours counter records the total operating time of the digiLine electronics to the second. It cannot be configured or reset.
Sensor replacement counter	The sensor replacement counter records how often the electrode of the sensor was replaced. It provides a history on the PC of archived sensor information and calibration logbook entries for every sensor with which the digiLine electronics were operated. The sensor replacement counter is incremented by the JUMO DSM software. ⇒ JUMO DSM software operating manual
Initial startup date	Date of the initial startup on a JUMO AQUIS touch S/P
Operating hours counter reading at initial startup	Operating hours counter reading at startup on a digiLine master
Drag indicator for temperature	
Lowest temperature value	Data on the highest or lowest temperature values that occurred in the course of operation to date
Highest temperature value	
Time of lowest temperature value	The measured temperature value is obtained from the signal source set in the configuration data as the "Temperature compensation signal".
Time of highest temperature value	
Operating hours counter reading at lowest temperature	After a sensor on the digiLine electronics with the sensor replacement function has been replaced, the drag indicator data are reset with the JUMO DSM software.
Operating hours counter reading at highest temperature value	⇒ JUMO DSM software operating manual

9 Sensor information

10.1 General Information

The configuration of sensors with digiLine electronics can either be performed on a JUMO AQUIS touch S/P or on a PC using the JUMO DSM software. Further information can be found in the operating manual and installation instructions of the JUMO AQUIS touch S/P and/or the JUMO DSM software.

The tables in this chapter explain all of the configuration parameters of the JUMO digiLine electronics.

10.2 Important information



CAUTION!

Incorrect configurations can cause sensor malfunctions.

The consequence may be erroneous measured values.

► Prior to startup, check all information in the configuration.

10.3 Input

10.3.1 Temperature input

Configuration item	Selection/setting option	Explanation
Filter time constant	0.0 to 25.0 s	Optimization of measured value updating The larger the value of the filter time constant, the slower is the change in measured value at the output.
Offset	-10 to +10 °C	Correction value added to measured value
Digital input function	Inactive Hold	only for 8-pole variant: Activates the hold function of the digital input The hold function freezes the measured value (e. g. during maintenance work). The hold function is On-active (the measured value is held when contact between digital input and GND is closed).

10.4 Analog output

Configuration item	Selection/setting option	Explanation
Signal	4 to 20 mA 20 to 4 mA	Type of analog output signal
digital input function	Inactive Hold	Selects the function of the digital input for the analog output Inactive: No function Hold: The hold function freezes the measured value (e. g. during maintenance work). The hold function is On-active (the measured value is held when contact between digital input and GND is closed).
Response at hold	low (4 mA) high (20 mA) Frozen Replacement value	Selects the analog value response at hold

10 Configuration

Configuration item	Selection/setting option	Explanation
Response in case of a fault	low (4 mA) high (20 mA) Namur low (3.6 mA) Namur high (22 mA) Frozen Replacement value	Selects the analog value response in case of a fault (e. g. over-range)
Substitute value for temperature	3.6 to 22 mA	Specifies an analog value that the output assumes at hold or in case of a fault
Scale start for temperature	-20 to +150 °C	Temperature value that corresponds to the lower limit of the standard signal range generated (4 mA)
Scale end for temperature	-20 to +150 °C	Temperature value that corresponds to the upper limit of the standard signal range generated (20 mA)

10.5 Sensor

Configuration item	Selection/setting option	Explanation
Sensor part no.	Selection list	The sensor to which the digiLine electronics are connected must be selected here. In addition, some of the technical data for the selected sensor are displayed.

10.6 Measuring point info

Configuration item	Selection/setting option	Explanation
Tag number	up to 19 text characters (UTF8)	Name of the measuring point at which the sensor is used
Description	up to 63 text characters (UTF8)	Space for information, comments and notes about the measuring point

10.7 Digital interface



NOTE!

The settings for the digital interface are obtained automatically in the digiLine mode and may then no longer be changed.

Make sure that the interface settings are not changed inadvertently with the JUMO DSM software. For operation on the JUMO mTRON T, the settings must be made in advance with the JUMO DSM software.

Configuration item	Selection/setting option	Explanation
Baud rate	9600 19200 38400	Transmission speed (symbol rate) of the RS485 interface

10 Configuration

Configuration item	Selection/setting option	Explanation
Data format	8 - 1 - no parity 8 - 2 - no parity 8 - 1 - odd parity 8 - 1 - even parity	Transmission format of the RS485 interface
Floating-point format	Standard IEEE754_LITTLE IEEE754_BIG	Selectable transmission format for float values (floating-point numbers)
Hardware address	-	non-configurable, permanently assigned address of the digiLine electronics for unique identification (required for plug & play)
Device address	1 to 247	Bus user identification for the digiLine electronics
Min. response time	0 to 500 ms	Minimum time from receipt of a query to sending of the response This parameter is used to adjust the response speed of the digiLine electronics to slower bus users.

10 Configuration

11.1 Sensor replacement

Replacement of the sensor with retention of the JUMO digiLine electronics

The sensor can be disconnected from the digiLine electronics by unscrewing it. If the sensor needs to be replaced, the JUMO digiLine electronics can be screwed to a new sensor and re-inserted. The "Sensor replacement function" must be used in this case to reset the corresponding data in the digiLine electronics and increment the "sensor counter".

⇒ JUMO DSM software operating manual

Replacing, disconnecting, and re-connecting JUMO sensors with digiLine electronics

The replacement, disconnection, and re-connection of digiLine electronics to a bus system for maintenance purposes can be carried out with the bus master switched off or also during operation. During replacement of digiLine electronics, it has to be put into operation on the digiLine master.

⇒ chapter 7 "Startup", page 27

If a sensor is disconnected from the bus and then reconnected, it resumes service automatically once the master is switched on again. If "sensor information" or "interface configuration" were changed in the sensor prior to reconnection with the JUMO DSM software on the PC, ensure the following:

- In the Modbus mode, ensure that the interface configuration is correct. Otherwise, the sensor will not resume service.
- In the digiLine mode, a change of the "sensor information" requires "linking" the sensor in the JUMO AQUIS touch S/P (cf. chapter 7 "Startup", page 27).

11.1.1 Sensor replacement while the digiLine mode is active

Disconnection and reconnection of JUMO sensors with digiLine electronics while the digiLine mode is active

If JUMO sensors with digiLine electronics are disconnected from the digiLine bus for cleaning or calibration while the system is operating and then reconnected with no changes to the configuration and sensor information, the JUMO AQUIS touch S/P detects the sensors again and links them automatically. The sensors then resume service automatically.

Replacement of JUMO sensors with digiLine electronics while the digiLine mode is active

If an **individual sensor** with digiLine electronics is replaced with a new sensor of the same kind, it is linked automatically and assigned in the JUMO AQUIS touch S/P to the previous function of the removed sensor. When several sensors are being replaced, it is necessary to ensure that multiple sensors are not disconnected from the bus at the same time. If several sensors with digiLine electronics are disconnected from a digiLine bus, the individual replacement sensors might not be linked automatically and a complete startup of each new sensor is required again. It is therefore advisable to replace sensors with digiLine electronics in succession.

When replacing sensors, proceed as follows :

1. Disconnect from the bus **one individual** sensor that is being replaced.

NOTE!

Ensure that except for the sensor being replaced no additional sensor is disconnected from the bus until the replacement sensor has been connected and put back into service. This could lead to problems with the automatic linking of the new sensors in the JUMO AQUIS touch S/P.



2. Connect the replacement sensor.
3. If the old and replacement sensors are identical in terms of type, the JUMO AQUIS touch S/P can automatically assign the previous function of the old sensor to the replacement sensor and link it automatically.

11 Operation, maintenance and care

4. Check on the JUMO AQUIS touch S/P whether the new sensor has been linked and resumed service. The procedure is described in the operating manual and installation instructions of the JUMO AQUIS touch S/P.

When several sensors need to be replaced, follow this procedure for each individual sensor separately.



NOTE!

The terms "Linking" and "Sensor scan" mentioned here are steps in the startup of JUMO digiLine electronics. For a more detailed explanation, see chapter 7 "Startup", page 27

11.1.2 Sensor replacement while the Modbus mode is active

Disconnection and reconnection of JUMO sensors with digiLine electronics while the Modbus mode is active

If JUMO sensors with digiLine electronics are disconnected from the Modbus system for cleaning or calibration while the system is operating and then reconnected, always ensure that the interface configuration was not changed. In contrast to digiLine, Modbus does not support plug & play and cannot configure the interface automatically. It is also necessary to ensure that the user is in possession of all parameters that can be written over the Modbus. The automatic linking and installation available with digiLine do not exist here. A detailed description of the Modbus functionality of JUMO digiLine-electronics can be found in the description of its Modbus (B 202705.2.0).

12.1 Digital interface

Protocol	digiLine ^a or Modbus RTU ^b
Device address	1 to 247
Data formats ^c	8 - 1 - no parity 8 - 2 - no parity 8 - 1 - odd parity 8 - 1 - even parity
Baud rates	9600 baud 19200 baud 38400 baud
Minimum response time	0 to 500 ms

^a The digiLine protocol assigns the interface parameters automatically during startup (plug & play).

^b The Modbus RTU protocol is used to operate the digiLine electronics on a JUMO mTRON T CPU. For operation on a JUMO mTRON T, the interface parameters must be set prior to initial commissioning with the JUMO DSM software.

^c Specification in useful bit - stop bit - parity format.

12.2 pH/ORP/T inputs

Input	Measuring range	Connection type	Measuring accuracy	Ambient temperature influence
Primary measurement input ^a				
pH	-2 to 16 pH		±0.5 % of MR ^b	0.3 % / 10 K
Redox	-1500 to +1500 mV		±0.5 % of MR ^b	0.3 % / 10 K
Temperature measurement input ^c	-20 to 150 °C	Pt1000 in 2-wire electrical circuit	±0.2 % of MR ^b	≤ 100 ppm/K

^a Measurand depends on basic type extension (see order details)

^b MR: measuring range span

^c Temperature input (for temperature compensation) may be used only with JUMO digiLine-pH with VP plug connector and JUMO digiLine-T

12 Technical data

12.3 Analog output of 4 to 20 mA (only with M12 plug connector, 8-pole)

Signal range	4 to 20 mA
Voltage supply	DC 12 to 30 V
Maximum load resistance	$R_b = (U_b - 2.5 \text{ V}) \div 0.022 \text{ A}^a$
Accuracy	0.25 %
Ambient temperature influence	100 ppm/K

^a R_b: Load resistance, U_b: Supply voltage

12.4 Digital input (only with M12 plug connector, 8-pole)

Signal type	Switching thresholds	
	On	Off
Potential-free contact	< 100 Ω	> 100 kΩ

12.5 Electrical data

Voltage supply ^a	SELV or PELV
digiLine mode	DC 4.2 to 5.5 V
2-wire transmitter mode (analog output of 4 to 20 mA)	DC 12 to 30 V
Power/current consumption	
digiLine mode	75 mW / 15 mA (at 5 V)
2-wire transmitter mode (analog output of 4 to 20 mA)	270 mW / 22 mA (at 12 V) 530 mW / 22 mA (at 24 V) 660 mW / 22 mA (at 30 V)
Electromagnetic compatibility (EMC)	DIN EN 61326-1
Interference emission	Class B
Interference immunity	Industrial requirements
Protection rating	Protection rating III

^a The voltage supply for the digiLine bus must be rated as SELV or PELV.

12.6 Case

Ambient temperature	
5-pole device version (digiLine mode)	-10 to +120 °C
8-pole device version (2-wire transmitter mode)	-10 to +85 °C
Storage temperature	-10 to +85 °C
Resistance to climatic conditions	Relative humidity < 92% annual average, no condensation
Protection type	IP66 and IP67



JUMO GmbH & Co. KG

Street address:
Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Delivery address:
Mackenrodtstraße 14
36039 Fulda, Germany

Postal address:
36035 Fulda, Germany

Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow, Essex CM 20 2DY, UK

Phone: +44 1279 63 55 33
Fax: +44 1279 62 50 29
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road
East Syracuse, NY 13057, USA

Phone: +1 315 437 5866
Fax: +1 315 437 5860
Email: info.us@jumo.net
Internet: www.jumousa.com