

SXGA096 DESIGN REFERENCE BOARD

For Use with all eMagin SXGA096 OLED Microdisplays

USER'S MANUAL VERSION 1.0

TABLE OF CONTENTS

D01-501152-01 SXGA096 Design Reference Board User's Manual

1. INTR	ODUCTION	1
2. KIT C	CONTENTS	1
	FURES Software Features	
4.1. S	FEM REQUIREMENTS & SPECIFICATIONS System Requirements SXGA096 Design Reference Board	2
5.1. S 5.2. C 5.3. S 5.4. F 5.5. F	RFACE CONNECTIONS & SETUP Setup Flow Chart	3 3 4 5
6.1. S 6.1.1.	Downloading New Firmware Versions to the Design Reference Board	5 8 8
7. ADV 7.1. M 7.2. I ² 7.3. W 7.4. E 7.5. W	ANCED USER INFORMATION	9 900001222
8. REVI	SION HISTORY1	5

List of Figures

Figure 3-1 SXGA096 Design Reference Board	2
Figure 4-1 DRK Setup Flow Chart	3
Figure 5-1 Firmware download utility	9

1. INTRODUCTION

The SXGA096 Design Reference Kit (A01-501369) provides the user with a compact and portable means of operating and testing an eMagin SXGA096 OLED Microdisplay. This product was designed to deliver a complete tool for developers to evaluate and integrate eMagin SXGA096 microdisplays into new products. The included software package provides access to the microdisplay's on-board register settings from any Windows-based PC through a USB port and supports all four different types of SXGA096 OLED Microdisplays:

- SXGA096 Monochrome White OLED-XL with glass cover
- SXGA096 Color OLED-XL with glass cover
- SXGA096 Monochrome White OLED-XLS with glass cover
- SXGA096 Color OLED-XLS with glass cover

2. KIT CONTENTS

- SXGA096 Design Reference Board (A01-501369)
- 7V Power Supply
- USB-A to USB-B Cable
- DVI to HDMI Cable
- CD with schematics, firmware, User's Manual, Supporting Software (Windows)

3. FEATURES

- HDMI Video Input
- USB interface allows access to microdisplay registers
- Supporting Software (Windows)
- ON/OFF power switch

3.1. Software Features

- Read/write capabilities allow adjustments of microdisplay register settings to fine-tune image characteristics
- Software register control over the microdisplay's brightness
- Download and install new firmware files into your SXGA096 Design Reference Board for easy upgrades and expanded functionality
- Save feature stores custom register settings for convenience

4. SYSTEM REQUIREMENTS & SPECIFICATIONS



4.1. System Requirements

- For digital RGB inputs: A PC capable of producing a digital video output compliant with the DVI or HDMI standard.
- Support software requires a Windows PC with a USB port

4.2. SXGA096 Design Reference Board

The SXGA096 Design Reference Board is shown in figure 3-1 below. The major components are labeled for easier identification. The minimum requirements for displaying video on the SXGA096 Design Reference Board are: a USB cable directly connected to PC, a digital video source connected to HDMI connector and a SXGA096 OLED connected to the display connector.

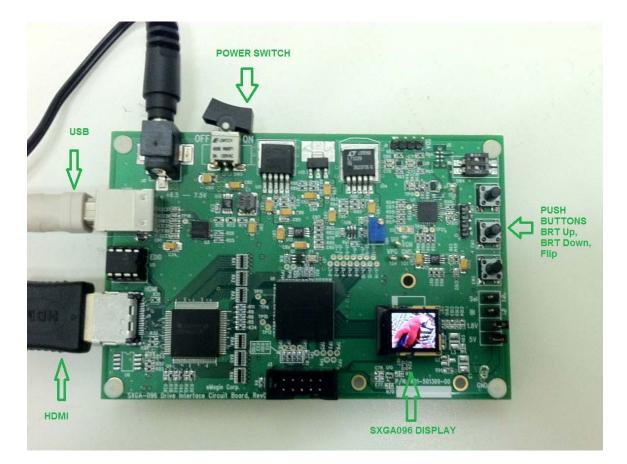


Figure 3-1 SXGA096 Design Reference Board

5. INTERFACE CONNECTIONS & SETUP

5.1. Setup Flow Chart

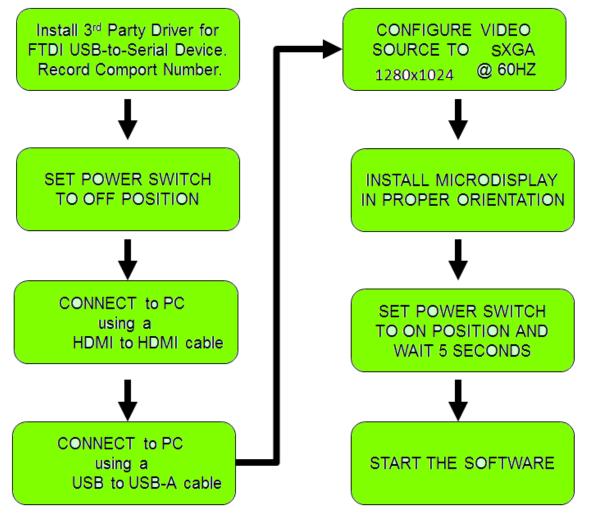


Figure 4-1 DRK Setup Flow Chart

5.2. Connect Display to the Design Reference Board

The microdisplay connects to the Design Reference Board via a 40-pin board-toboard connector. The present version of the connector is <u>NOT</u> keyed so it is important to correctly orient the display. Refer to the picture below for the proper orientation. The Display Carrier board is connected as shown in figure 4-2 below.

Note: The SXGA096 OLED can be damaged if it is not connected properly.



Figure 4-2 Display Carrier Board Connection Orientation

Lift the display by its sides and take care not to press on the glass lid or leave fingerprint marks on it. Insert the display into the Design Reference Board.

5.3. Setup PC for Proper Video Output

- The default compatible resolution is SXGA (1280x1024) with a refresh rate of 60 Hz. If you are using this input set the video resolution for 1280x1024 in your PC's display properties.
- Ensure that the refresh rate to set to 60 Hz, or other supported refresh rate per the display specification.
- If you are using a laptop PC, you may need to export the video signal to an external monitor. This is usually accomplished through a key press including the Fn key + a designated function key. See your PC's operation instructions for more information.

5.4. Power Up

• Set the power switch to the ON position.



5.5. Power Down

• Set the power switch to the OFF position.

5.6. Brightness

eMagin strongly recommends that you drive the microdisplay at the minimum luminance necessary for your application. This will extend the lifetime of the display to its maximum possible lifetime. As OLED microdisplays are emissive devices, driving the microdisplay at high bias levels will decrease its overall lifetime.


6. USING THE SXGA096 DESIGN REFERENCE BOARD SOFTWARE

The SXGA096 Design Reference Board includes a support software suite with the following functionality.

- Perform software microdisplay brightness adjustments
- Download and install new versions of the SXGA096 Design Reference Board firmware to update or provide new functionality using an USB (RS-232) connection
- Read/write register values to the microdisplay to control various characteristics (see your microdisplay's User Specification for more information)

6.1. SXGA096 Design Reference Board Software Utility

- 1. Connect the USB cable to the SXGA096 Design Reference Board
- 2. Connect the video source to the SXGA096 Design Reference Board
- 3. Turn on the SXGA096 Design Reference Board
- 4. Check under the PC's "Device Manager" window to determine serial COM PORT number as shown below:

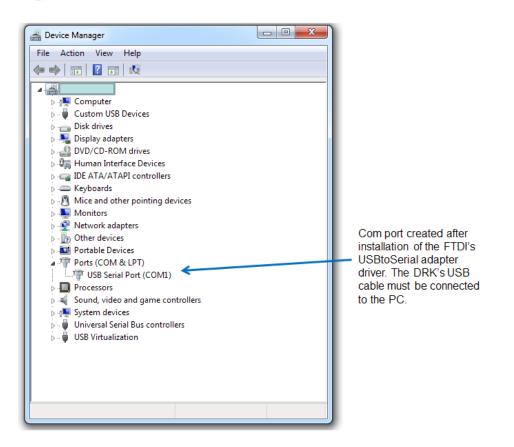

5. Start the **SXGA096_SW.exe** application, enter the correct COM Port number and a screen should appear like that shown below:

eMagin SXGA096 G	UI S04-501103-00		
	Product	Avail Comm Ports	Registers
bconroy	SXGA096	COM52 -	OLED Registers Gamma Boot Loader
3. Brightness Contr	rol		00h: STATUS 00 15h: TMPOFF 54 2Ah: SKSLW 0F 3Fh: RES 00
IDRF			01h: VINMODE 07 16h: TUPDTE 10 2Bh: SYNCMD 02 40h: RES 00
<	۱.	OK	02h: DISPMODE 20 17h: TEMPOUT 9E 2Ch: LUT_ADR FF 41h: RES 30
DIMCT	L		03h: LFTPOS 06 18h: ANGPRDN 00 2Dh: LUTDL F2 42h: RES 64
٠ 📃	•	OK	04h: RGTPOS 06 19h: SYSPRDN 00 2Eh: LUTDH 03
			05h: TOPPOS 06 1Ah: TPMODE 00 2Fh: LUT_UP 07
OLED EEPROM			06h: BOTPOS 06 1Bh: TPLNWTH 00 30h: RES 00
	FXXXXX		07h: ROWRSTL 00 1Ch: TPCOLSP 00 31h: RES 05
Lot No.	E	Write	08h: ROWRSTH 00 1Dh: TPROWSP 00 32h: RES 00
Wafer No.	9999		09h: RAMPCTL 01 1Eh: TPCOLOR 00 33h: RES 04
		Read	0Ah: RAMPCM 44 1Fh: DLYSEL AA 34h: RES 99
Serial No.	XAAAA	Reau	0Bh: VDACMX 80 20h: LVDSCTL 04 35h: RES 99
			0Ch: BIASN 01 21h: SKEW0L FF 36h: RES 00
Temperature Calil	bration		0Dh: GAMMST 00 22h: SKEW0H FF 37h: RES 00
remperature cam			0Eh: VCOMMDE 04 23h: SKEW1L FF 38h: RES 00
1. Enter Room ten	nperature. 2	5 C	0Fh: VCOMCTL 3D 24h: SKEW1H FF 39h: RES 00
2. Wait for Device	to soak at Temp.		10h: VGMAX 0D 25h: SKEW2L FF 3Ah: RES FF
3. Click Calibrate	Button		11h: VCOM 51 26h: SKEW2H FF 3Bh: RES 00
			12h: IDRF 80 27h: SKEW3L FF 3Ch: RES 00
Calibrate	Read	С	13h: DIMCTL 65 28h: SKEW3H FF 3Dh: RES 03
			14h: TREFDV 17 29h: SKFST 0F 3Eh: RES 00
	Read A2D		ReadBRT Read Write Load Defaults Store Defaults
Comm Settings			Mesq
Com Port COM52			
Baud Rate 9600			
baud Rate 5000			

Figure 5-1 SXGA096 Design Reference Board Software Utility



- 6. The application communicates with the PIC on the SXGA096 Design Reference Board.
- 7. The read/write buttons shown in the "OLED Registers" panel will read/write the register settings in their corresponding boxes from/to the OLED microdisplay.
- 8. The Gamma read/write buttons displayed in the "GAMMA" panel will read/write the Gamma values used in generating a Gamma table that resides in the display
- 9. The FPGA read/write buttons displayed in the "GAMMA" panel will read/write the FPGA values stored in the FPGA.
- 10. The VGN read/write buttons displayed in the "GAMMA" panel will read the VGN values from the Oled.

6.1.1. Hardware Protocol

- 1 stop bit, no parity
- 9600 baud
- No hardware handshake

6.2. Downloading New Firmware Versions to the Design Reference Board

The ability to download new versions of the firmware ensures that you will have the latest functionality without having to send your SXGA096 Design Reference Board for reprogramming. A utility that downloads and installs new firmware versions is included in the software package.

6.2.1. Using the Firmware Download Utility

Firmware files can be downloaded as hex files. Before attempting to download and install new firmware versions make sure that you have received a firmware hex file from an eMagin source.

To load your firmware files, follow the following steps:

- 1. Connect the USB cable to the PC and to the RS232 connector on the SXGA096 Design Reference Board
- 2. Connect the power cable to the SXGA096 Design Reference Board.
- 3. Connect your video source to the SXGA096 Design Reference Board.
- 4. Start the **SXGA096_SW.exe** application. Select the "Bootloader" tab at the top of the form. A window should appear like that below:

Pagin SXGA096 GUI S04-501103-00	
bconroy Product Avail Comm Ports COM52	Registers OLED Registers Gamma Boot Loader
3. Brightness Control IDRF COK DIMCTL COK	Program
OLED EEPROM Lot No. EXXXXX Write Wafer No. 9999 Serial No. XAAAA Read	
Temperature Calibration 1. Enter Room temperature. 25 C 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Calibrate Read C	
Read A2D Comm Settings Com Port COM52 Baud Rate 9600	Mesg

Figure 5-1 Firmware download utility

- 5. Click the "Program" button to find the hex file you wish to install. Note: The power on the SXGA096 Design Reference Board should be off while setting up your download. Only turn on the power to the SXGA096 Design Reference Board when you are ready to write your new firmware to the PIC.
- 6. When you turn on the SXGA096 Design Reference Board the hex file should begin to upload.
- 7. When the upload is complete, the SXGA096 Design Reference Board will run.

7. ADVANCED USER INFORMATION

7.1. Microcontroller

The SXGA096 Design Reference Board utilizes a Microchip PIC18F2523 microcontroller. This is a CMOS Flash microcontroller in a 28 pin package. Provisions are on the circuit board for in circuit reprogramming. Please refer to the Microchip PIC18F2523 datasheet available from Microchip Technology Inc. for additional information about the microcontroller and programming.

The main function of the microcontroller is to communicate with the OLED display. All communication is over the internal I^2C bus and the microcontroller acts as the bus master. On power up the registers of the OLED is initialized with

the default settings programmed into the microcontroller. After initialization the microcontroller scans for user input and monitors the OLED.

7.2. **I²C bus**

The microcontroller is the bus master and communication occurs at the standard 100 KHz clock rate. The maximum speed allowed for I^2C bus communication is 400 KHz. Please refer to the Philips I^2C bus specification available on the Philips website for detailed information.

7.3. Voltages

The power supply section of the SXGA096 Design Reference Board consists of several voltage regulators, some of which are adjustable with potentiometers. Table 6-1 below describes the voltages and their purpose.

Voltage	Range	Typical	Purpose
Vinput	+5.0 Volts	+5Volts	Main Supply
(USB)			
V5	5Volts ±10% (fixed)	5 Volts	LEDS, DAC
V3.3	3.3Volts ±10% (fixed)	3.3 Volts	DVI, RS232
V2.5	2.5Volts ±10% (fixed)	2.5 Volts	
VAN	5.0V	5.0 Volts	OLED Anode
VPG	-1.8V	-1.8V	OLED Bias
VDD	1.8V ±10% (fixed)	1.8V	OLED

Table 6-1 shows the board's various power supplies and their purposes

7.4. Bias Control

BIASN: Normal board – BIASN=3 gives the best results.

7.5. VCOM Mode

VCOMMODE:

Dimming: use register VCOM to set brightness level in Manual mode.

7.6. Gamma

To compensate for the non-linear dependency of luminance on the voltage of the OLED diode, the R, G and B signals include internal gamma correction to linearize the pixel response as a function of the input video signal. This gamma correction takes place in the PIC microcontroller.

The gamma correction consists of a nine segment piece-wise-linear function whose parameters are set from the pull-down menu or via registers in the "Gamma" panel on the windows software. All three color channels have the same PWL shape.

There are multiple ways to set the Gamma using the windows software. The Gamma section of the software is shown below.

Paul Data 9600	eMagin SXGA096 GUI \$04-501103-00	
3. Brighness Control DRF OK DIMCTL OK OLED EEPROM Lot No. EXXXXX Write Wafer No. 9999 Serial No. XAAAA Read Temperature Calibration 1. Enter Room temperature. 25 C 2. Wait for Device to soak at Temp. 3. Cick Calibrate Button. Calibrate Read C Read A2D Com Port COM52 Part Data 9600	Avail Comm Por	
DRF OK DIMCTL OK OLED EEPROM OK OLED EEPROM OBh: Lot No. EXXXXX Write 9999 Serial No. XAAAA Read Write PGA PGA Attin to pevice to soak at Temp. 3. Click Calibrate Button. Calibrate Read Read Com Port COMS2 Read	3 Brightness Control	
DIMCTL OK 02h: 02h: 637 2 630 01 01h: 00 03h: 664 3 654 01 01h: 00 04h: 688 4 703 02h: 02h: 02h: 02h: 637 2 630 01 01h: 00 03h: 00 03h: 664 4 703 01 01h: 00 04h: 688 4 703 6 830 7 910 8 1023 8	IDRF	
DINCTL OK OLED EEPROM 00 Lot No. EXXXXX Write Wafer No. 9999 Serial No. XAAAA Read 1. Enter Room temperature. 25 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Calibrate Read A2D Mesg	DIMOTI	
OLED EEPROM 00 05h: 784 5 762 Lot No. EXXXXX Write 06h: 888 6 830 Wafer No. 99999 Read Read 6 830 7 910 8 1023 Temperature Calibration I. Enter Room temperature. 25 C Update Defaults 3. Click Calibrate Button. Set I Set I Www. Read Comm Settings Mesg Mesg Mesg Mesg Mesg Mesg		
Lot No. EXXXXX Write Wafer No. 9999 Serial No. XAAAA Read Read Temperature Calibration I. Enter Room temperature. 1. Enter Room temperature. 25 C 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Calibrate Read Comm Settings Com Port COM52 Pend Data		
Lot No. EXXXXX Write Wafer No. 99999 Read Serial No. XAAAA Read Temperature Calibration 1. Enter Room temperature. 25 C 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Calibrate Read CC Read C Read C Mesg	OLED EEPROM	
Wafer No. 9999 Serial No. XAAAA Read Temperature Calibration 1. Enter Room temperature. 25 C 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Calibrate Read AzD Mesg	Lot No. EXXXXX Write	
Serial No. XAAAA Read Temperature Calibration 1. Enter Room temperature. 25 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Calibrate Read Comm Settings Com Port COM52 Pend Dete		
Serial No. XAAAA Itedu Temperature Calibration I. Enter Room temperature. 25 C 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Set II Calibrate Read C Read C Read C Mesg		Read Write
Temperature Calibration 1. Enter Room temperature. 25 C 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Calibrate Read C Read A2D Comm Settings Com Port COM52 Perud Data 9600	Serial No. XAAAA Read	
Temperature Calibration 1. Enter Room temperature. 25 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Calibrate Read A2D Comm Settings Com Port COM52 Pend Part 9600		neau
1. Enter Room temperature. 25 C 2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Set Calibrate Read C Read C WW A2D Wasg Comm Settings Mesg Com Port COM52 Pend Path 9600	Temperature Calibration	
2. Wait for Device to soak at Temp. 3. Click Calibrate Button. Calibrate Read C Read A2D Comm Settings Com Port COM52 Perud Data 9600	1. Enter Room temperature. 25 C	
3. Click Calibrate Button. Calibrate Read C Read A2D Comm Settings Com Port COM52 Pend Data 9600		
Calibrate Read C Read A2D Comm Settings Com Port COM52 Pend Data 9600		Set
Comm Settings Com Port COM52 Perul Data 9600		
Comm Settings Mesg Com Port COM52 Read 9600	Calibrate	
A2D		
Com Port COM52	A2D	
Revel Data 9600		Mesg
Baud Rate 9600	Com Port COM52	*
	Baud Rate 9600	*

Figure 6-5 Gamma Section of the Software

7.6.1.Gamma Coefficients GC(0-8)

The 9 boxes in the Gamma section represent the 9 segment piece-wise-linear function that defines the gamma curve. These 9 values are used to calculate the 256 element look-up-table (LUT) that is required to transform input video data into a gamma-corrected data signal for the microdisplay input port. The "Read" button will retrieve the current 9 values from the microcontroller. The user can change any of the 9 values and see the resulting gamma corrected video by pressing the "Write" button.



7.6.2. Using "Update LUT" Button for Auto-Gamma Correction

The software allows for the immediate update of the gamma tables with the push of a button, "Update LUT". This button, located in the center of the software form, tells the firmware to calculate the Gamma coefficients using the VGN signal provided by the SXGA096 microdisplay. This feature allows the display gamma to be automatically adjusted for any operating conditions of temperature and brightness. The firmware calculates the 9 Gamma coefficients and then the full 256 value lookup table. This lookup table is then loaded, by the firmware, into the SXGA096 Microdisplay.

7.6.3.Loading the LUT from a file

The software allows for the loading of the gamma tables from a text file. The format is as follows;

1023

Each of the 256 values is on a separate line. This lookup table is then loaded, by the firmware, into the display.

7.6.4.The "Read LUT" Button

The software allows for the reading of the full 256 values of the LUT using this button. The result is displayed in the message box at the bottom of the software. The user can scroll through all the values or select and save to a text file. These LUT values are the values before being gray-coded.

7.6.5.System Gamma

The software allows for the overall System Gamma to be set between 0.5 and 2.5 when using the Auto-Gamma feature. This System Gamma can be used to compensate for the gamma of the input video. For example, if the source video is gamma corrected to 2 then setting the System Gamma to 1.9 and pressing the "Set" button will give a better overall gamma response. This does not mean that there is a 1 to 1 relationship between input gamma and the System Gamma.

Figures 6-6 to 6-8 show the grayscale response for a display at several luminance settings obtained by using the "Update LUT" feature and the System Gamma set to 1.

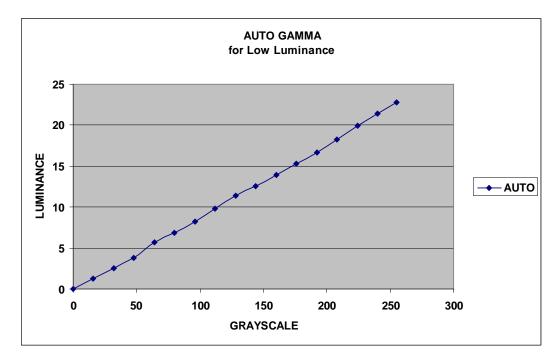


Figure 6-6 Luminance Response for Auto Gamma at Low Luminance

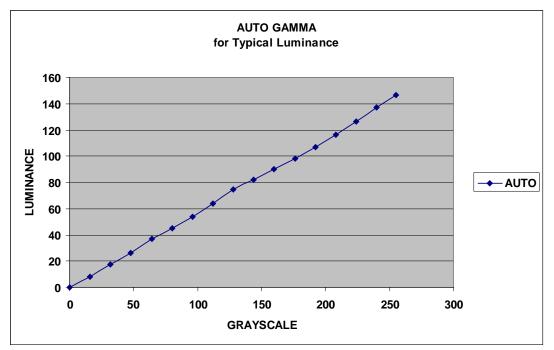


Figure 6-7 Luminance Response for Auto Gamma at Typical Luminance

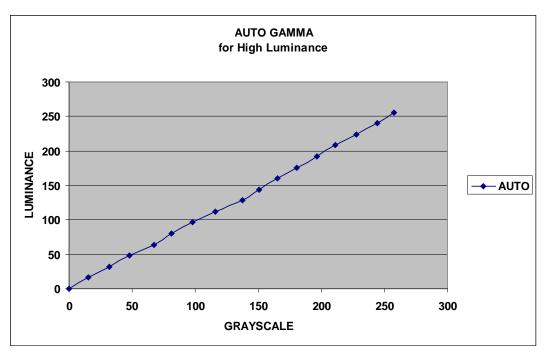


Figure 6-8 Luminance Response for Auto Gamma at High Luminance

8. REVISION HISTORY

Revision Level	Date	ECN	Description
00	10/6/2014		Initial draft
01	4/24/2015	2015-55	Updated for New DRK
01	6/9/2015	2015-72	Updated cover, minor changes, retain Rev 01